



ZX-895 Operation Guide Diagram





The water volume should be near to the highest water level when cleaning, and should not exceed the highest water level.

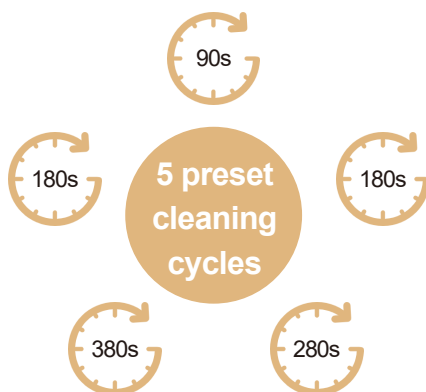

After power on, the screen is preset to work for 90S. By short press  key, you can set the cleaning time period to 90S, 180S, 280S, 380S, 480S.



You can choose to press the **CLEAN** key or the **DEGAS** key. Short press the **CLEAN** key, the ultrasonic cleaner starts working, and countdown timer clearly shows remaining cleaning time.



You can see the ripples formed on the surface of water In the washing state.



Short press **DEGAS** key, the ultrasonic cleaner machine will enter the cleaning cycle of working for 2s and pausing for 1s, which separates the oxygen produced during cleaning, and protects the products from being oxidized. It will be continuously cleaning until the end of the set cleaning time countdown.



Press and hold the **TIME ON/OFF** key for 2 seconds to turn the sonic jewelry cleaner machine on or off.



The right way to pour out the water after Cleaning.



Dry with a dry cloth.



Polishing with polishing cloth.