 


ProBreeze®

Instruction Manual

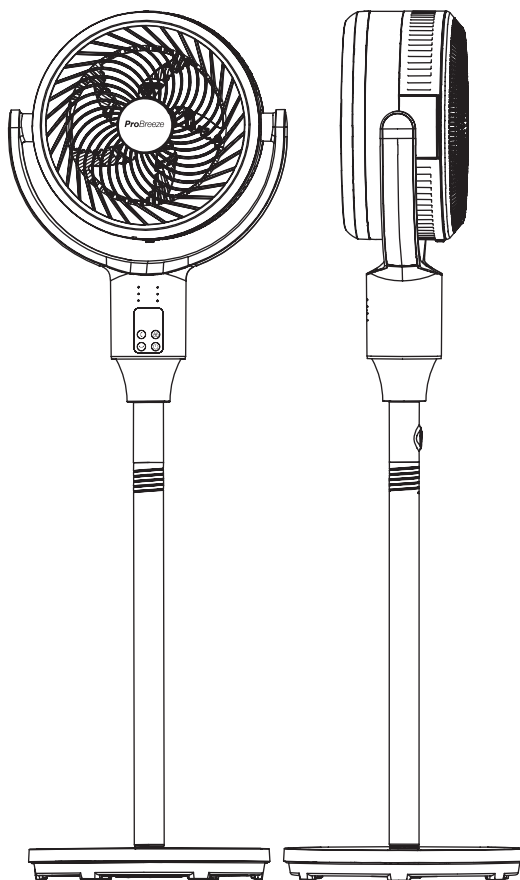

Model PB-F-26W-W

43" Hybrid Pedestal Fan with Smart App

IMPORTANT INSTRUCTIONS
– RETAIN FOR FUTURE USE

CONTENTS

EN	Safety Instructions.....	Page 3
	Batteries	Page 5
	Specifications.....	Page 6
	Symbols Explained	Page 6
	Parts	Page 7
	Assembly.....	Page 7
	Control Panel Explained	Page 8
	Display Panel Explained	Page 9
	Remote Control.....	Page 10
	Choosing a Mode.....	Page 11
	Setting a Timer.....	Page 11
	Adding a Scent with the Aroma Diffuser Pad	Page 12
	Pro Breeze App Setup	Page 12
	Cleaning and Storage.....	Page 12
	Troubleshooting	Page 14
	Recycling and Disposal.....	Page 14

ProBreeze®

**43" HYBRID PEDESTAL FAN WITH
SMART APP | MODEL PB-F-26W-W**

Thank you for choosing to purchase a product from Pro Breeze. Please read the entire manual carefully prior to first use and keep in a safe place for future reference.

SAFETY INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons including the following:

⚠ WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, FIRE OR INJURY TO PEOPLE, ALWAYS MAKE SURE THE APPLIANCE IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE RELOCATING SERVICING OR CLEANING IT.

- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to person.
- Do not cover the fan whilst in use.
- Always unplug the appliance when not in use.
- Keep the fan out of reach of children and pets.
- Do not leave children alone or unattended in the area where the fan is in use.
- Children shall not play with the fan.
- Cleaning and user maintenance shall not be made by children without supervision.
- This fan can be used by children aged from 8 years and above and persons with reduced, physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the fan in a safe way and understand the hazards involved.
- The fan must have a minimum 50cm clearance around all sides of the fan. Take care the curtains or other

- objects are not sucked into the fan during operation.
- Never leave the fan unattended while in use. Always turn the fan off and disconnected from the power supply when not in use.
 - Avoid placing the power cord in areas where it can become a tripping hazard. Do not place the power cord under carpeting or cover it with rugs, runners or similar.
 - Place the fan on a flat, stable surface. Operating the fan in any other position could cause a hazard. Avoid soft surfaces or stacking the fan on top of other appliances. Do so may cause the fan to operate improperly.
 - Never place anything on top of the fan.
 - Ensure the mains supply (including voltage, frequency and power) complies with the rating label of the fan.
 - There may be trace of odour during the first few minutes of initial use. This is normal and will quickly disappear.
 - Do not cover the fan or restrict the air flow of the inlet or exhaust grills whilst in use.
 - Do not use this fan to dry clothes.
 - Do not use this fan in high humidity or steam filled rooms.
 - Do not operate the fan with wet hands.
 - Do not use this fan near water or in the immediate surrounding of a bath, shower or a swimming pool.
 - Never place the fan where it may fall into a bathtub or other water container.
 - Do not allow water or other liquid to run into the interior of the fan, as this could create a fire and/or electrical hazard.
 - The fan is intended for indoor household use and similar applications. Do not use outdoors.
 - Do not use the fan while sleeping or place it near a person who is sleeping.
 - Do not use the fan near petrol, paints, flammable gases, ovens, or other heating sources.
 - The mains cable should not hang down from the surface on which the fan is placed in order to prevent the fan from being pulled down.
 - To avoid a circuit overload when using this fan, do not operate another high-wattage appliance on the same

electrical circuit.

- Always plug the fan directly into a wall socket. Avoid using extension leads where possible as they may overheat and cause a risk of fire.
- Do not use this fan with an external programmer, timer switch or any other device which would switch the fan on automatically unless this has already been pre-built into the appliance by the manufacturer.
- Do not pull on the power cord and plug around the fan, as this may cause the insulation to weaken or split, particularly where it enters the appliance.
- Do not operate the fans with any safety guards removed.
- Do not operate the fan if there are any signs of damage to the fan or accessories supplied.
- Do not attempt to repair or adjust any electrical or mechanical elements in the fan. Doing so may be unsafe and will void your warranty.
- The appliance is only to be used with the power adapter provided. Do not use other chargers or power adapters as this may damage the appliance.

BATTERIES

—

This product is supplied with 2 x AAA disposable batteries.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

BATTERY WARNING: KEEP OUT OF REACH OF CHILDREN.

Choking hazard. Do not swallow. Harmful if swallowed. Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. **If you suspect your child has swallowed a battery seek medical attention immediately.**






- This product only uses a AAA battery. It is not compatible with other battery types.

- Do not allow children to handle batteries.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- Ensure that the battery is installed with the correct polarity (+ and -).
- Remove exhausted battery promptly.
- Always inspect new batteries before use. Damaged or weak batteries may leak acid. Discontinue use if batteries show signs of leakage, damage, or weakness at any time.
- Ensure the battery compartment is correctly and securely closed after installing the batteries.
- Wash hands after handling batteries.
- Disposable batteries are not rechargeable and must be recycled or disposed of separately from household waste. Always dispose of batteries at an official collection point and according to your local environmental laws and guidelines.

SPECIFICATIONS

Model:	PB-F-26W-W-UK, PB-F-26W-W-EU		
Voltage:	24V ---	Power:	32W
Product Dimensions (LxWxH):	64.7 x 23.4 x 41cm	Net Weight:	4.65kg
Power Adapter Voltage Input:	100-240V~ 50/60Hz 1.5A		
Power Adapter Voltage Output:	24V--- 1.5A		


SYMBOLS EXPLAINED

	For indoor use only.		Please read instruction manual and retain for future use.
	Equipment complies with the applicable UK safety requirements and regulations.		Equipment complies with the applicable EU safety requirements and regulations.
	Class II Double Insulated / Reinforced Insulation Equipment.		

PARTS

- 1. Rear Grille with Built-In Filter Screen
- 2. Fan Head/Display Panel
- 3. Pole
- 4. Base
- 5. Remote Control x 1
- 6. Adapter x 1
- 7. Battery x 2

 
These images are for reference only, please refer to your product.

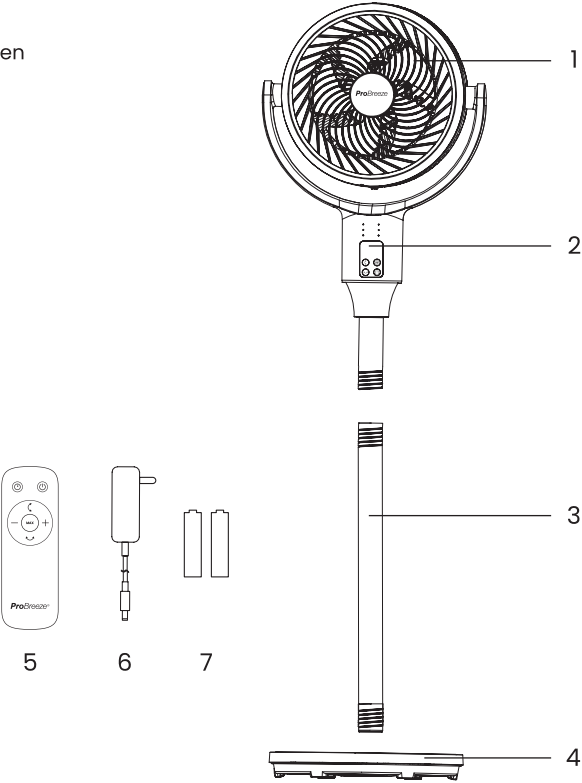

ASSEMBLY

Unbox the fan and all accessories and ensure you have all parts listed above.

 
- 1. Connect the pole to the base by aligning both parts, rotate clockwise to tighten and secure.

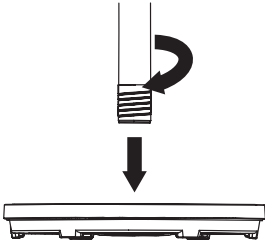

- 2. To connect the fan head to the pole align both parts rotate clockwise to tighten and secure.


Note: To Assemble as a desk fan by connecting the fan head directly to the base of the fan.

 CONTROL PANEL EXPLAINED

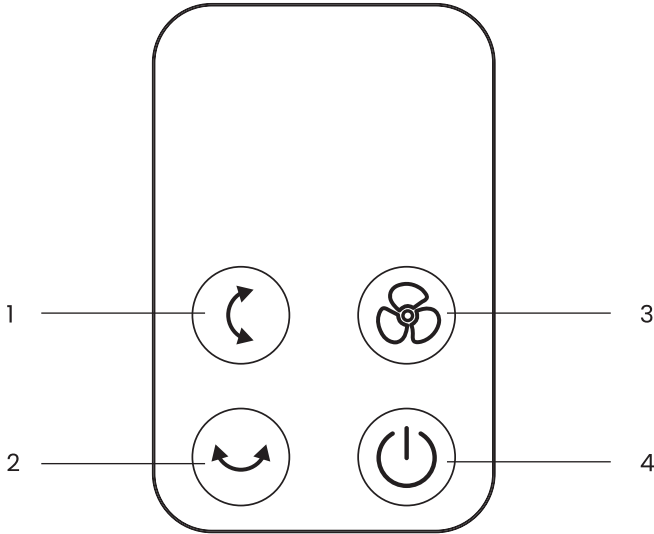


1		Vertical oscillation button	Press this button to cycle through 30°, 60°, 135° vertical oscillation settings. Hold this button down for 3 secs to access the timer and cycle through 1-9hr increments for the timer.
2		Horizontal oscillation button	Press this button to activate horizontal oscillation settings. Hold this button down for 3 seconds to activate Wi-Fi pairing mode.
3		Wind speed button	Press this button to cycle through fan speeds 1-9. Hold this button down for 3 seconds to enter circulation mode (vertical and horizontal oscillation with max wind speed).
4		Turn on/standby button	Press this button to turn the fan on/off.

 DISPLAY PANEL EXPLAINED

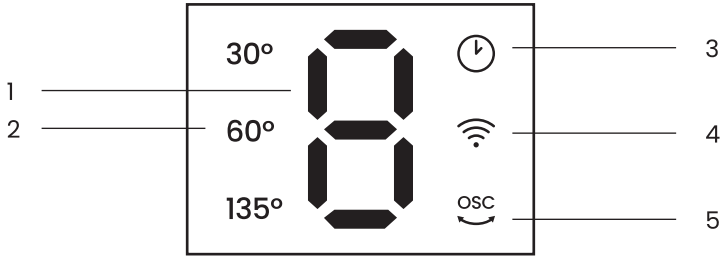

1		This number indicates the wind speed and hours when setting a timer
2	30° 60° 135°	Vertical oscillation angle indicator
3		Timer indicator
4		Wi-Fi indicator
5		Horizontal oscillation indicator

 REMOTE CONTROL

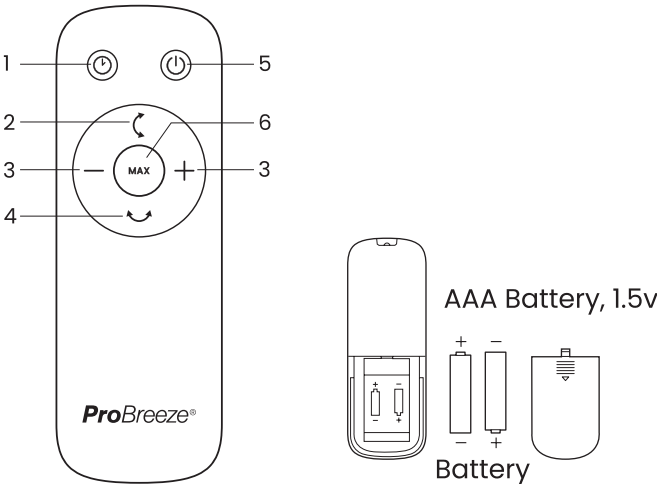

1		Press this button to activate the timer.
2		Press this button to cycle through 30°, 60°, 135° vertical oscillation settings.
3		Press these buttons to increase/decrease the wind speed/timer length.
4		Press this button to activate horizontal oscillation settings.
5		Press this button to turn the fan on/off.
6		Turn on/off circulation mode (vertical and horizontal oscillation with max wind speed).

CHOOSING A MODE

- Your fan has two cooling modes, fan mode and circulation mode.
- Fan mode has fan speeds of 1-9 that works with horizontal and vertical oscillation.
- Circulation mode automatically sets the fan speed to maximum 9 and turns on the horizontal and vertical oscillation to even distribute and circulate cool air around you room.
- To choose between these modes on the control panel press the fan speed button to cycle through fan speeds 1-9. Hold this button down for 3 seconds to enter circulation mode (vertical and horizontal oscillation with max wind speed).

Oscillation

Your fan has vertical and horizontal oscillation modes.

Vertical Oscillation

Press the vertical oscillation button to cycle through 30°, 60°, 135° vertical oscillation settings.

Horizontal Oscillation

Press the horizontal oscillation button to activate horizontal oscillation.

Resetting Your Fan's Oscillation Angle

Press both fan speed and vertical oscillation buttons at the same time to reset your fan's vertical oscillation.

SETTING A TIMER

To Set a Turn Off Timer

1. When the unit is on hold down the vertical oscillation button for 3 secs or press the timer button on the remote to activate the timer function.
2. Then press the vertical oscillation button or the +/- buttons on the remote to choose when you want the fan to turn off from 1-9hrs.
3. Once you have chosen your desired timer length wait for 5 seconds and the timer indicator will light up on the control panel and your timer will be set.

To cancel your timer set the timer hour to 0.

To Set a Turn On Timer

1. When the unit is off hold down the vertical oscillation button for 3 secs or press the timer button on the remote to activate the timer function.

2. Then press the vertical oscillation button or the +/- buttons on the remote to choose when you want the fan to turn on from 1-9hrs.
3. Once you have chosen your desired timer length wait for 5 seconds and the timer indicator will light up on the control panel and your timer will be set.

To cancel your timer set the timer hour to 0.

ADDING A SCENT WITH THE AROMA DIFFUSER PAD

1. Twist the circle in the centre of the fan (with the ProBreeze logo on) counter-clockwise to remove.
2. Place a few drops of any essential oil.

Replace the centre of the fan ensuring the ProBreeze logo is facing the right way up.

 
PRO BREEZE APP SETUP

Scan the QR code below to download our Pro Breeze app for smart device management. Control your unit from the app, set up schedules to turn your unit on and off.

Note: Ensure your Wi-Fi network is set to 2.4GHz for successful pairing.

Pair Your Device in 4 Steps:

1. **Register:** Download the app on the Google Play or Apple app store. Sign in/register for an account.
2. **Prepare your device:** Once you're all signed in hold down the horizontal oscillation button for 5 seconds then after a few seconds the WiFi indicator will show on the control panel.
3. **Add your device:** Once the unit is in Wi-Fi pairing mode, open the Pro Breeze app press "+" in the top right corner and press "add device".
4. **Pair your device:** Then the app will scan for devices and then your unit (if it is in pairing mode) will show up as shown below. Press add. Then type in the password for the Wi-Fi your phone is on.

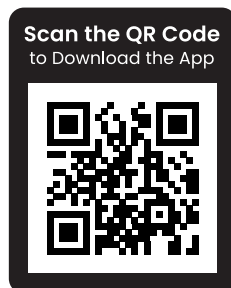

Now your unit is connected to the Pro Breeze app.

CLEANING AND STORAGE

⚠ WARNING: ALWAYS TURN THE FAN OFF AND UNPLUG THE POWER CORD FROM THE ELECTRICAL OUTLET BEFORE HANDLING OR CLEANING IT.

⚠ CAUTION: DO NOT ALLOW WATER OR OTHER LIQUIDS TO RUN INTO THE INTERIOR OF THE FAN AS THIS COULD CREATE A FIRE AND/OR ELECTRICAL HAZARD.

⚠ CAUTION: DO NOT USE ANY ABRASIVE CLEANERS OR SOLVENT, AS THIS CAN DAMAGE THE FAN.

- Do not attempt to clean the appliance in any other way than that detailed by the manufacturer.
- Clean the exterior surface of the appliance by wiping it with a soft, damp cloth. Dry the appliance with a soft, clean cloth.
- Clean the vents and openings of the appliance regularly with a vacuum cleaner, using the brush attachment to avoid any dust build-up.
- Store the appliance in a safe, clean and dry place, away from direct sunlight and out of reach of children when not in use.
- To store your product, we recommend using the original or a similar-sized box.

To extend the lifecycle of your pedestal fan we recommend you clean the built-in filter screen every 6 months.

To clean the pre-filter




1. Unscrew the screw at the base of the rear grille of the fan head with a Phillips head screwdriver.
2. Remove the rear grille of the fan.
3. Take out the built-in filter screen and clean it with a vacuum cleaner, using the brush attachment.
4. Replace the rear grille of the fan and retighten the screw at the base of the fan head.

TROUBLESHOOTING

Problem	Cause	Solution
The fan is not working.	The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the socket.
The remote does not work.	The battery needs replacing.	Replace the battery.
	The remote is being used more than 5m away from the machine.	Use the remote closer to the machine and make sure it is pointing directly at the control panel.

RECYCLING AND DISPOSAL

Waste electrical and electronic products (WEEE), batteries, accumulators and packaging should not be disposed of with general household waste. This is to prevent possible harm to the environment and human well-being, and to help conserve our natural resources. Most electrical products with a plug, battery, or cable can be recycled. Contact your local council, household waste disposal service, or the store where you purchased the product for information regarding the collection schemes in your area.

	Waste Electrical and Electronic Equipment (WEEE)	This symbol on the product and/or packaging indicates that Waste Electrical products (WEEE) under Directive 2012/19/ EU which governs used electrical and electronic appliances, should not be disposed of with general household waste.
	Waste Batteries and Rechargeable Batteries	This symbol on the batteries supplied with your product indicates that Waste Batteries under Directive 2006/66/EC which governs used batteries and accumulators should not be disposed of with general household waste. If the battery contains more than 0.004% lead, the battery symbol will be accompanied by the letters (PB).
	The Mobius Loop	This symbol indicates that the product or packaging is capable of being recycled.

Take-Back Scheme

Waste electrical products (WEEE) can be sent to One Retail Group for recycling and disposal when you purchase a new product from One Retail Group, on a like-for-like basis. For more information on how to recycle this product please visit www.probreeze.com . The end-user of electrical and electronic products (WEEE) is responsible for separating old batteries and lamp bulbs before they are handed over to a designated disposal and recycling service. Waste batteries can also be disposed of in collection bins, which can be found in most local supermarkets and household waste recycling centres.

Personal Data Protection

Electrical and electronic products (WEEE) may contain personal user data, depending on the type of product. This may include app-linked products that connect to wifi. The end-user is responsible for deleting the data on the waste electrical and electronic products prior to disposal.



www.probreeze.com

One Retail Group, Ryland House,
24a Ryland Road, London, NW5 3EH, United Kingdom

EU Authorised Representative: One Retail Group EU Ltd.,
No. 1, Ent. A, St. Racho Dimchev 1, Sofia, 1000, Bulgaria
Compliance Contact: compliance-eu@oneretailgroup.com

© Copyright 2025