


VILINICE

Introduction



Over-ear bluetooth headphone

Appearance Profile

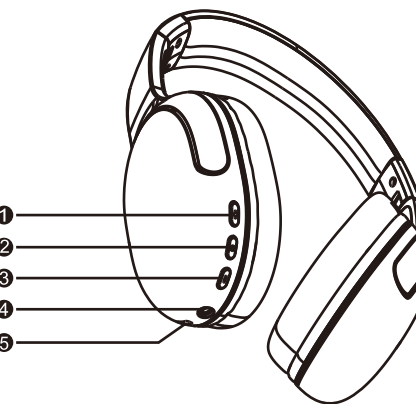

- 1 Volume+/Long press the next song

2 Power (Multi-function)

3 Volume-/Long press the previous song
- 4 AUX audio input

5 Type-C charging

Turn on

To turn on the headphones, press and hold the power (multi-function) button for 2 seconds. The blue indicator light will flash, accompanied by the sound "power on".

Turn off

To turn off the headphones, press and hold the power (multi-function) button for 3 seconds. The red indicator light will blink three times, accompanied by the sound "power off".

- 🔋 Automatically shut down when the battery is low (voltage below 3.2V).
- 🔋 Automatically shut down while charging.
- 🔋 When powered on, it will reconnect for 10 seconds, then enter pairing mode. If there's no connection within 5 minutes, the headphones will automatically shut down.

Bluetooth Connection

After turning on the headphones, it will automatically reconnect to the last used device if a device record exists; otherwise, it enters pairing mode. To pair, ensure the device needing connection is within 1 meter, activate its Bluetooth search function, and locate "A3" to pair. Upon successful pairing, you'll hear a "Connected" sound. If the headphones moves out of your device's Bluetooth range, it disconnects, emitting a "disconnected" sound after 3 minutes. It automatically reconnects upon returning within range. If no device connects within 5 minutes, it shuts down automatically.

Music

- Play: Click multi-function 1 time

Pause: Click multi-function 1 time

Previous song: Long press "-"

Next song: Long press "+"
- Volume up: Click "+"

Volume down: Click "-"

Calling Function

- Answer: Click multi-function 1 time
- Hang up: Click multi-function 1 time
- Reject incoming calls: Press and hold multi-function for 2 seconds

AUX Mode

Connect the AUX cable to the AUX port to activate AUX mode automatically. If the cable is plugged in while the headset is on, it will shut down automatically, accompanied by a "Power off" sound."

Charging Mode

Use a charging adapter rated at 5V-1A. Charging will cease if the adapter voltage exceeds 6.2V; the maximum adapter voltage should not exceed 36V."

Function List

General Functions

- 1) Power On: Press and hold the multi-function button for 2 seconds to turn on. The blue indicator light will illuminate, accompanied by a "POWER ON" prompt.
- 2) Power Off: Press and hold the multi-function button for 3 seconds to turn off. The red indicator light will flash three times, and a "POWER OFF" prompt will sound.
- 3) Pairing: In Bluetooth mode, enable Bluetooth on your phone, search for and connect to "A3". The indicator light will flash.
- 4) Bluetooth Connection: Bluetooth will automatically reconnect 10 seconds after disconnection. The indicator light will extinguish, and a "connected" tone will play.
- 5) Bluetooth Disconnection: Upon disconnection, the red indicator light will illuminate, accompanied by a "disconnected" prompt."
- 6) Low Battery Alert:

When the voltage drops below 3.3V, the headset emits a "Low Battery" prompt sound, and the red indicator light flashes slowly.

Charging:

Plug the charging cable into the Type-C charging port; the red indicator light remains on. When fully charged, the light turns green.

Safety Alert:

When headphones volume exceed 85dB, a prompt warns "Volume exceeds safe limit."

Maximum Volume Alert:

Press "+" to increase volume. Upon reaching the maximum, a prompt signals "Max Volume."

Product Specifications

Product Model	A3
Pairing Name	A3
Bluetooth version	V5.4
Supporting Agreement	HSP/HFP/A2DP/AVRCP
Audio Decoding	SBC/AAC
Bluetooth Effective Distance	>10M
CyCharging Interface	Type-C
Headphone Battery Capacity	300mAh
Battery Time	20 Hours

Packaging Accessories

• Bluetooth headphones *1
• AUX charging cable*1
• Type-C cable*1
• Instruction manual*1
•
•
•
•

Safety Instructions

Please read the instructions carefully before use

- Do not use headphones while driving or cycling for safety.
- Supervise children when using this device; it is not a toy.
- Keep device and accessories away from children to prevent swallowing hazards.
- Avoid prolonged high-volume listening to prevent hearing damage.
- Use only manufacturer-specified attachments/accessories.
- Seek manufacturer's repair for any device modifications.
- Cease charging if port is damaged, exposed to liquid, or debris; avoid rain or moisture exposure.
- Non-replaceable battery; seek professional assistance for battery replacement.
- Avoid prolonged exposure to sunlight for the device's lithium battery.
- Keep device away from heat or fire sources.
- Operate device within -10℃ to +50℃ temperature range to prevent equipment failure.
- Interference may affect wireless performance in environments with many 2.4G frequency devices.
- Tingling sensation in dry conditions is due to static electricity; device is not damaged.
- Earphones have level five waterproofing but avoid heavy rain or immersion in water.
- Clean device with a dry cloth only.

FCC Warning

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equip ment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - - Reorient or relocate the receiving antenna.
 - - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.