



# SEEMEE 150 TWINPACK USER MANUAL

## **ACCESSORY/STRUCTURE**









SEEMEE 150 FL

SEEMEE 150 TL

Saddle mount

Micro USB Cable



 


 
Seat post mount (15°)

# **HOW TO INSTALL**

### SEEMEE 150 FL:







### SEEMEE 150 TL:









Scheme 2:





## **CHARGING/POWER INDICATOR**

When the light is off, click the switch to activate battery indicator for 3 seconds.

### CHARGING

Charging: Flash red

Fully charge : Constant green for 3 minutes

# POWER INDICATOR

0%-10% : Flash red 11%-20% : Constant red 21%-100% : Constant green



### **OPERATION INSTRUCTIONS**



When the brake sensor is on, the taillight will enter to the sleep mode after 5 minutes of inaction and auto activated on any vibrations.

When the brake sensor detects braking, the taillight will light up with maximum output.

The brake sensor is not included in the front light.

#### TURN THE BRAKE FUNCTION ON:

When the light is off , press and hold the switch for 3s until the light lights up constantly at highest output.

### TURN THE BRAKE FUNCTION OFF:

When the light is off, press and hold the switch for 3s until the light keeps flashing quickly at highest output.

#### ON/OFF:

Press and hold the switch to turn the light on/off , the default output is the last mode when turned off.

#### **CHANGE MODE:**

When the light is on , single click the switch to cycle through Low-High-Flash-Group Ride-Smart-Low...And the front light is without smart mode.

#### MEMORY FUCTION:

Mode memory features will save the last selected brightness level automatically.

#### LOW POWER MODE:

When the remaining battery power is low, the switch starts flashing and the lighting mode changes to ECO mode. The brake function is disabled during this period.

## **OUTPUT/RUNTIME**

SEEMEE 150 TL	MODE	LOW	HIGH	FLASH	GROUP RIDE/ECO	SMART	
						DAY	NIGHT
	OUTPUT(LM)	8	45	45/0	8/0	150/0	45/8
	RUNTIME (HH:MM)	27:00	5:40	16:20	44:00	13:10	12:30
SEEMEE 150 FL	MODE	LOW	HIGH	FLASH	ECO		
	OUTPUT(LM)	45	150	150/0	8/0		
	RUNTIME (HH:MM)	5:30	2:10	5:30	31:40		

# **⚠ WARNING**





\*All performance measurements in accordance with ANSI/NEMA FL1-2009 Standard. The tests are performed indoors under a room temperature of 25 degrees Celsius with 25KM/H wind conditions. The runtime may vary depending on the external temperature and ventilation conditions, and these biases may affect the results of testing.

\*The stated runtime of each mode excludes the brake function. When the brake function is on,the runtime will vary depending on the frequency of braking.

Tel: (+86) 755-295 536 69 Fax: (+86)755-275 897 77

E-mail: support@magicshine.com (order from Magicshine.com

service@magicshine.com (order from other sales channels)