

Washing Machine

User manual

WA7*T4****/WA6*T4****/WA8*T4****



DC68-04373A-04

SAMSUNG

Contents

Safety information	3
What you need to know about the safety instructions	3
Important safety symbols	3
Important safety precautions	4
Instructions about the WEEE	12
Installation	13
What's included	13
Installation requirements	14
Step-by-step installation	15
Before you start	22
The basics	22
Smart Check	24
Laundry guidelines	25
Operations	29
Control panel	29
Simple steps to start	30
Auto cycles	31
Manual cycles	32
Special features	33
Maintenance	34
Cleaning	34
Troubleshooting	38
Checkpoints	38
Information codes	42
Specifications	44
Specification sheet	44
Terms of Warranty	46
Warranty not applicable in any of the following cases	46



DC68-04373A-04


2 English

Installation

Follow these instructions carefully to ensure proper installation of the washing machine and to prevent accidents when doing laundry.

What's included

Make sure all the parts are included in the product package. If you have missing or defective parts, contact a local Samsung customer centre or the retailer.

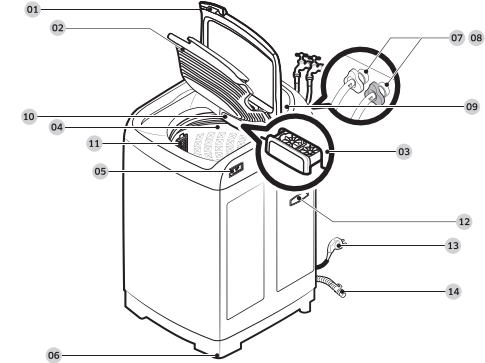


- | | | |
|----------------------|-----------------------|------------------------|
| 01 Door | 02 Built-in sink * | 03 Wing distributor * |
| 04 Tub | 05 Water Jet * | 06 Levelling feet |
| 07 Water hose (Cold) | 08 Water hose (Hot) * | 09 Control panel |
| 10 Detergent box | 11 Lint filter | 12 Handle (for moving) |
| 13 Power cord | 14 Drain hose | |

English 13

Installation

CAUTION

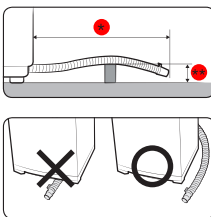

STEP 5 Power on

Plug the power cord into a wall socket featuring an AC 220-240 V / 50 Hz approved electrical outlet protected by a fuse or circuit breaker. Then, press **POWER** to turn on the washing machine.

WARNING

Make sure the end of the drain hose is not submerged by water. Otherwise, the washing machine may suffer serious damage.

English 21

Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine. Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

⚠ WARNING

Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage**

⚠ CAUTION

Hazards or unsafe practices that may result in **personal injury and/or property damage**

📌 NOTE

Indicates that a risk of personal injury or material damage exists. These warning signs are here to prevent injury to yourself and others. Please follow them explicitly.

After reading this manual, store it in a safe place for future reference. Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

English 3

damaged, and this may result in electric shock or fire.

10. This appliance is intended to be used in household only and it is not intended to be used such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

English 7

Installation

Step-by-step installation

 
STEP 1 Select a location

Location requirements:

- Solid, level surface without carpeting or flooring that may obstruct ventilation
- Away from direct sunlight
- Adequate room for ventilation and wiring
- The ambient temperature is always higher than the freezing point (0°C)
- Away from a heat source



Assembling the rat protection panel (applicable models only)

Tilt the washing machine a little, insert the shutter and finally fix the shutter with screw to the base as shown in the picture.



English 15

 Detergent Box

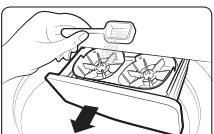

English 23

Safety information

Important safety precautions

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience

Safety information

Critical installation warnings

⚠ WARNING

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

Plug the power cord into a wall socket or higher and use the socket for this appliance only. Never use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.
- Plug the power plug into the wall socket so that the cord is running towards the floor. If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.














Do not install this appliance near a heater or any inflammable material. Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

English 5

STEP 2 Adjust the levelling feet

UNPACK the product package.

             1. Gently slide the washing machine into position. Excessive force may damage the levelling feet (A).
2. Level the washing machine by manually adjusting the levelling feet.



and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

3. Children should be supervised to ensure that they do not play with the appliance.

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

5. The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

English 5

Safety information

Do not install this appliance in a location exposed to low temperatures.

- Frost may cause the tubes to burst.

Do not use an electric transformer.

- This may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord, or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

- Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

Installation cautions

⚠ CAUTION

This appliance should be positioned in such a way that the power plug is easily accessible.

- Failure to do so may result in electric shock or fire due to electric leakage.

Critical usage warnings

⚠ WARNING

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.


















- Do not touch the power plug with wet hands.
- Failure to do so may result in electric shock.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest Samsung Customer Service.

- Failure to do so may result in electric shock or fire.

English 9

                 Installation



English 25

6. For washing machines having ventilation openings in the base, the installation instructions shall state that the openings must not be obstructed by a carpet.

7. For use in Europe: Children of less than 3 years should be kept away unless continuously supervised.

8. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

9. CAUTION: Do not use the water to exceed 50°C when using the hot water in your washing machine. Plastic parts may be deformed or

Safety information

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.

A spark may result in an explosion or fire.

Do not let children play in or on the washing machine. In addition, when disposing of the appliance, remove the lid.

- If trapped inside the product, children may suffocate to death.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.

- This may result in electric shock, fire, or an explosion.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not insert your hand or a metal object under the washing machine while an operation is in progress.

- This may result in injury.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.

When the appliance needs to be repaired or reinstalled, contact your nearest service centre.

- Failure to do so may result in electric shock, fire, problems with the product, or injury.

In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from doing it.



















Unplug the power plug when the appliance is not being used for long periods of time or during a thunder or lightning storm.

- Failure to do so may result in electric shock or fire.

Do not put your hand into the spinning tub during the spin cycle.

- This may result in injury. If the tub does not stop spinning within 15 seconds after you open the lid, contact your nearest Samsung Customer Service.

                  English 10




English 26

CAUTION

For inflatable items such as blankets, microfibre quilts, and waterproof materials, use the laundry net to fully soak the laundry in water.

- Inflatable items may cause damage to the laundry or the machine during the wash or drying process.
- Regardless of the size, blankets or quilts are safer and cleaner to wash one item at a time. Two different-sized blankets in the same load may compromise the drying performance due to unbalanced loads.

Fold the blanket into the blanket-specific net (A) as shown, and then insert the net in the tub below the plastic area (B) of the tub.

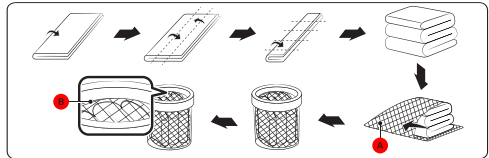


- To remove stains and dirt on collars, sleeves, hems, and pockets, apply detergent lightly and brush off.
- Use powder or liquid detergents. Do not use soap, as this may remain on the tub after washing.
- Prewash white socks, sleeves, and collars with a little detergent and a brush.

- Any exposed part of the laundry may cause damage to the machine or the laundry itself, or a water leak.
- Do not overload the tub. Make sure no part of the laundry is exposed outside of the tub.

Cleaning the lint filter

Clean the filter net often to keep the washing machine clean.

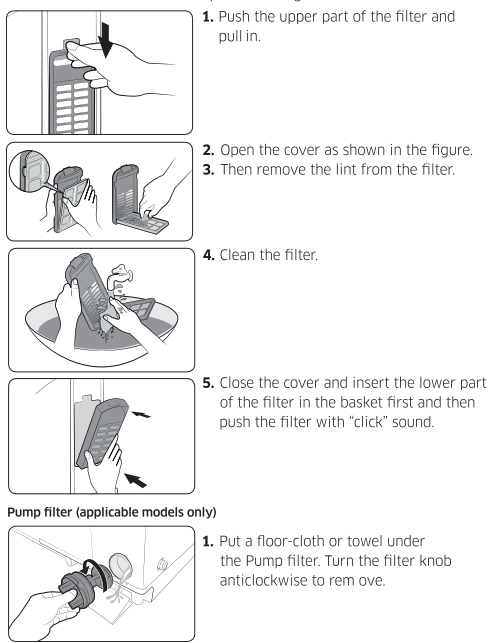

	Child Lock is activated unexpectedly. While the information code blinks at a 0.5 second intervals, water drains with an alarm. To clear the error information, close the door when draining is complete, and then restart the washing machine by pressing the START/PAUSE button.
CL-0C	
LC	Check the error code of the drain hose is placed on the floor. (the hose should be hung over the pump - hose guide). Check if the drain hose is clogged by any foreign substances. If the error message remains, call the customer care.
8C	Check the MEMS sensor. - Power the washer off. Wait 2-3 minutes, power the washer and restart the wash cycle. - If the problem continues, call for service.
	The electronic control needs to be checked (Over Voltage Error). - Check if power is supplied properly. - Check if the washer is plugged in, wait one minute, and then plug the washer again. If the information code remains, contact a Samsung customer service center.
9C1	
	Low voltage detector. - Check if the power cord is plugged in. - Check if the washer is plugged in, wait one minute, and then plug the washer again. If the information code remains, contact a Samsung customer service center.
9C2	

If any information code keeps appearing on the screen, contact a local Samsung service centre.

Type		Top loading washing machine	
		WA65145***	WA65142***
	Max load (kg)	6.5	
Power consumption (W)	AC 220-240 V / 50 Hz	200-250 W	
Dimensions (mm)		W540×D556×H995	
Net weight (kg)		29.3	28.8
Water pressure (Mpa (kg-f/cm ²))		0.03 - 0.78 (0.3 - 8.0)	
Water level (L)	Washing type	S	
	1	52	
	4	58	
	2	49	
	3	40	
Water usage (L)	1	21	
	Spin speed (rpm)	1600	

- Asterisk (*) mean variant model and can be varied (0-9) or (A-Z).
- The design and specifications are subject to change without notice for quality improvement purposes.
- The energy label specifications have been determined by using the following program according to IEC 60456.
- The program is

WA65T45****	: Energy saving course, Water Level 5
WA65T42****	: Energy saving course, Water Level 5

Do not overload the washing machine. Overloading may cause the washing machine to not wash properly.

When washing bedding or bedding covers, the wash time may be lengthened or the spin efficiency may be reduced. For bedding or bedding covers, the recommended load capacity is 3.0 kg or less.

STEP 6 Apply a proper detergent type

The type of detergent depends on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.

- Use an appropriate amount of detergent. Excess amounts of detergent do not produce much improvement in washing results but cause damage to the laundry due to deteriorated rinsing performance.

- Use a longer or added rinse cycle when using powder detergent that is very likely to remain on the laundry and cause bad odours after washing is complete.
- If an excessive amount of detergent is used especially in cold water, the detergent doesn't dissolve well, ending up with contaminated laundry, hoses, and/or tub.
- In case of timed washing, do not apply detergent directly to laundry or the tub. The laundry may be discoloured. Use the detergent box.
- When washing wool using the Wool cycle, use only a neutral detergent to avoid discolouring the laundry.

- Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your local area. If you are not sure about the water hardness, contact a local water authority.
- Do not use detergent that tends to be hardened or solidified. This detergent may remain after the rinse process, blocking the drain outlet.

[illegible]

03	Start/PAUSE	• Start: To stop the current operation, press START/PAUSE. • Display: Displays the current cycle information and estimated time remaining, or an information code if the washing machine needs to be checked. • Delay End: Defines the end of any cycle for up to 24 hours in one-hour increments. The display window indicates the time the cycle will end. When draining is complete, the washing machine turns off automatically.
06	Drain	• Drain button: is enabled only in Standby state. • When draining is in process, the START/PAUSE button will be disabled.
07	Water Level	The water level is adjusted according to the cycle. However, you can change the level manually.
08	Wash Time	Press to run a wash cycle, or to select a washing time between 6 minutes and 30 minutes. To run a wash-only cycle, press and hold this button for 3 seconds.

Detergent Box

1. Open the door and then the Built-in sink to reveal the detergent box.
2. Pull out the detergent box, and then lift up with both hand to remove.
3. Clean the detergent box as well as the wing distributors with running water and a soft brush.
4. When complete, reinsert the wing distributors. Then, reinsert the detergent box to the washing machine.

Helpline - Call : 1800 44 SAMSUNG (7267864) / 1800 5 SAMSUNG (7267864)

This warranty card gives the key points related to warranty claim. for further details log on to www.samsung.com/in/support.

Warranty Card (Only Applicable to India)

***TERMS & CONDITIONS**

1. Proof of purchase is a pre-requisite to claim warranty.
2. The product should have been purchased from an authorised Samsung Sales Dealer in India.
3. Warranty can be claimed only if the repair was carried out by the Samsung authorised service center.
4. Carry-in service or In-Home service applicability depends on the product category and Samsung policy.
5. Free installation or demo of the product, if applicable, can be availed only once and within 6month from the date of purchase. In case of installation, any additional material required over and above the standard installation kit shall be on the chargeable basis.
6. In case of defective accessory, only the accessory will be repaired or replaced.
7. Cosmetic/ Aesthetic / Plastic / Glass Parts/Bulbs / Cable Wiring / Piping/ Consumables are not covered under warranty.
8. The defective parts/ products which were replaced by Samsung under this warranty shall be the property of Samsung.

17. In case of defect arising out of installation done by party other than Samsung authorised party, the limited warranty will be applicable as per revised T&C as Samsung shall deem fit.
18. Regular upkeep, maintenance and cleaning of parts are necessary in certain products. Such periodic maintenance shall be on chargeable basis unless otherwise provided and not covered under warranty.
19. In the event of any unforeseen circumstances, and spares not being available Samsung's prevailing depreciation rules will be binding on the purchaser and the purchaser shall be considered as a commercial solution in lieu of repairs.
20. Defects arising out of the following are not covered under warranty like Mishandling/Abuse, Improper ventilation, Improper voltage, Use of external material, Normal wear and tear, Physical damage and / or electrical damage caused by physical impact.
21. Complaints related to playability, networkability, compatibility with external accessories, software, file systems, third party applications, CODES, signals, Network& ISP bandwidth shall not be considered as defect in product and not covered under warranty.
22. This warranty covers only the defects in products arising out of manufacturing or faulty workmanship.
23. This warranty covers repair/replacement of parts.
24. Warranty period of parts & accessories may vary from product to product.
25. Maximum liability out of this warranty is limited to the product purchase value/MRP.
26. No warranty on certain parts/conditions/types of product failures.
27. Under certain conditions where warranty obligations cannot be met, depreciation will be applicable on the existing product.

CUSTOMER DETAILS CUM WARRANTY CARD	
Model No: _____	Customer copy (to be retained by customer): _____
Product Serial No: _____	Date of Purchase: _____
Name: _____	
Address in Full: _____	
Telephone No: _____	Model No: _____
Dealer Name & Address : _____	
Customer's Signature & Date (I accept the Terms & Conditions of warranty)	Dealer's Signature with rubber stamp

1. Press **POWER** to turn on the washing machine.
2. Press **Cycle** to select the desired cycle.
3. Change the cycle settings (**Water Level**, **Wash Time**, **Rinse Times**, and/or **Spin Time**) as necessary.
4. To add an option such as **Intensive Wash**, **Soak**, and **Monsoon**, press the correcting button.
5. Press **START/PAUSE**.

To change the cycle during operation

1. Press **START/PAUSE** to stop operation.
2. Select a different cycle, and repeat steps 2-4 above if necessary.
3. Press **START/PAUSE** again to start the new cycle.

Cycle	Description
NORMAL	For most fabrics including cottons, linens, and normally soiled items.
SPUR CLEAN	Select this if you want to produce powerful cleaning performance.
QUICK WASH	Select this for less soiled clothes, such as towels, in reduced time.
DELICATES	Select this for delicate items such as sweaters, cardigans, or wool clothes.
JEANS	Suitable for denim clothes. Requires a thorough wash.
ENERGY SAVING	Use this course to save energy.
RINSE+SPIN	For loads that need rinsing only or to add rinse-aided fabric softener to: • Select this to clean the tub. The powerful spinning force removes impurities and bad odours from inside the tub.
ECO TUB CLEAN	• A blinking reminds you that it is time to clean the tub using ECO Tub Clean. For details, see the Cleaning section in this manual.
AQUA PRESERVE	Use this if you want to save the water to use. The water used in the rinse process will be reused for the next process.

Symptom	Action
After a cycle, detergent remains in the automatic dispenser.	- Make sure the washing machine is running with sufficient water pressure. - Make sure the detergent box is properly inserted. - Remove and clean the detergent box, and then try again.
Vibrates excessively or makes noise.	- Make sure the washing machine is set on a level floor. If the floor is not level, use the leveling feet to adjust the washing machine. - Make sure the washing machine is not contacting any other object. - Make sure the laundry load is balanced. - Make sure the laundry is spread evenly in the wash machine. Spread out the laundry evenly and start again. - Make sure the space around the washing machine is free of objects. - Humming is produced normally during operation. - Objects such as coins can cause noise. Remove these objects from the washing machine after washing is complete.
Stops.	- Plug the power cord into a live electrical outlet. - Check the fuse or reset the circuit breaker. - Close the door, and press or tap Start/Pause to start the washing machine. For your safety, the washing machine will not spin unless the door is closed. - Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and does a quick drain. - There may be a pause or soak period in the cycle. Wait briefly and the washing machine may start. - Make sure the inlet hose screens at the taps are not clogged. Periodically clean the screens. - This symptom occurs temporarily due to low voltages, and will be solved when power recovers.

(Only Applicable to its)

The Warranty shall be null and void in any of the following cases, and in such cases Samsung may at its sole discretion repair the equipment on a chargeable basis. The decision of Samsung, whether a complaint falls in any of these categories or not shall be binding on the Purchaser.

- The duly filled warranty card/proof of purchase is not presented to the service engineer at the time of repairs being undertaken / requested;
- The original serial number of the product is removed, altered or obliterated from the product.
- The product purchased is not used as per the rated power conditions or instructions mentioned in the INSTRUCTION MANUAL.
- The product is being used for commercial purpose OR if the product has been used excessively and beyond reasonable usage as permitted within the product instruction manual.
- Site (premises where the product is used) conditions that do not conform to the recommended operations of the product.
- Defects caused due to exposure to moisture/dampness/extreme thermal or environmental conditions or rapid changes in such conditions/corrosions/oxidations/spilling of food/liquid/influence of Chemical substances.
- Defects due to causes beyond control like flooding, abnormal voltage, spikes, external sources (ex: cable/set top box connections), fire, water logging, natural calamities, commotion, riots, theft, anti-social action, acts of God or while in transit.
- Defects caused by household pets, rats, cockroaches, ants, pests, fungi or any other animal/birds/insects.
- Defects caused due to the removal of the Purchaser on account of periodic maintenance(s)/periodic servicing as mentioned in the instruction manual of the product.
- Defects caused due to usage of third party material (non/Samsung Authorized Consumables).
- Any modifications, including but not limited to, rooting attempts, reverse engineering, unlocking, jail-breaking etc. of the original firmware(s) or software(s) of the product.
- Repair due to misuse/third party repair attempts are not covered in warranty.
- Warranty does not cover repair due to external factors/mediums/data types.
- Warranty shall apply only if the product is used as per its usage specifications (ex: personal, commercial etc.)
- Warranty shall be void if product has failed under certain conditions/types (ex: water logging, misuse, etc.)

All disputes arising out of this warranty are subject to Delhi jurisdiction only.

Warranty period commences from the date of purchase of the product unless specified otherwise.

Product Group	Product Description	Warranty Period (Months)	Parts/Acc
---------------	---------------------	--------------------------	-----------

 
AC	Room Split Air Conditioner/ Floor Standing Air Conditioners (FAC)	12	Compressor : 60 months (120 months for Digital Inverter Compressor) * Condenser : 60 months (12 months for Fin & Tube type) *
	Window Air Conditioner	12	60 Months on Compressor*
	Duct Type Air Conditioner	15*	36 Months on Compressor*
	Cassette Air Conditioner	15*	
	FIM	15*	
		Indoor DVM & Outdoor DVM	12**
Ventilation	ERV	12**	
	Dish Washer	12	
	Microwave	12	120 Months on Ceramic Enamel Cavity*
Refrigerator	Refrigerator	12	Compressor : 60 months (240 months for Digital Inverter Compressor) *
	Semi Automatic	24	Wash Motor : 60 months on Semi Automatic Wash Motor *
Washing Machine	Rear control panel Top Loading Fully Automatic	24	AC Motor : 120 months * Digital Inverter Motor : 240 months *
	Front control panel Top Loading Fully Automatic	24	(Applicable for Rear & Front Control Panel models with Wobble Pulsator) *
	Fully Auto Front Loading	24	Universal motor : 60 months * Digital Inverter Motor : 240 months *
Vacuum Cleaner	Vacuum Cleaner	12	Digital Inverter Motor : 120 months (except for POWERbot series) * Battery : 24 months (Let Bot series and BESPOKE Jet series) *
Air Cleaner	Air Cleaner	12	Warranty not applicable on Air Purifier Filters
Dryer	Dryer	12	Digital Inverter Motor : 240 months *

* 15 Months from date of purchase or 12 months from installation, whichever ends earlier. **12 Months from date of commissioning.
 * In case of parts warranty, labour cost and gas charging cost (applicable) will be chargeable as per the applicable rates.
 * Correct disposal of the product (Waste Electrical & Electronic Equipment)

 This marking on the product, accessories or literature indicates that the electronic accessories (e.g. charger, headset, and USB cable) should not be disposed with other household waste at the end of their working life.

For more information on safe disposal and recycling visit our website or contact number.

SAMSUNG INDIA ELECTRONICS PRIVATE LIMITED
 Registered Address: 8th Floor, DLF - Centre, Sansad Marg, New Delhi-110001, Visit : www.samsung.com/in
Samsung Helpline - Call : 1800 450 3868 (Toll free), 1800 5 SAMSUNG (Toll free)



6801-001984-23

Special Features	
Child Lock	
Child Lock is designed to prevent accidents by children or infants, such as draining in the tub. To activate the Child Lock Press and hold Wash Time and Rinse Time simultaneously for 3 seconds. The CL indicator blinks. To deactivate the Child Lock Press and hold Wash Time and Rinse Time simultaneously for 3 seconds. The CL indicator turns off. If the tub has contained water, simply restart the machine and the Wash Time and Rinse Time simultaneously for 3 seconds to deactivate the Child Lock.	With the Child Lock enabled You can still manipulate on the control panel while the door is closed. If you open the door, an information code (CL, dC) appears with an alarm. Then, the machine starts forced draining after 30 seconds in order to prevent accidents. If the door is left open for 30 seconds with the tub containing water, the machine drains the water with the "CL" code, which you cannot stop.

You can set the washing machine to finish a cycle later. The hour display indicates the time the wash will finish.

1. Select a cycle. Then, change the cycle settings if necessary.
2. Press **Delay End** repeatedly until a desired end time is set.
3. Press **START/PAUSE**. The lamp indicator next to the **Delay End** button turns on, and the timer starts.
4. To cancel **Delay End**, restart the washing machine by pressing **POWER**.
Real-life case

You want to finish a two-hour cycle 3 hours from now. To do this, add the **Delay End** option to the current cycle with a 3-hour setting, and then press **START/PAUSE** at 2:00 p.m. The washing machine starts operating at 3:00 p.m. and ends at 5:00 p.m. Provided below is the timeline for this example.

Symptom	Action
Load is wet at the end of the cycle.	• Use the High or Extra High spin speed. (Applicable model only) • Use high efficiency (HE) detergent to reduce oversudsing. • Load is too small. Small loads (one or two items) may become unbalanced and not spin completely. • Make sure all hose connections are tight. • Make sure the water supply hose and drain hose packing is in the correct position. Squeeze tightly again. • Make sure the end of the drain hose is correctly inserted and secured to the drain system. • Avoid overloading. • Use high efficiency (HE) detergent to prevent oversudsing.
Leaks water.	• Use high efficiency (HE) detergent to prevent oversudsing. • Make sure the water supply hose is not kinked. • If the water supply is too strong, water may leak. • Close the water tap. • Make sure water is not leaking from the water tap. • If so repair the water tap. • Use high efficiency (HE) detergent to prevent oversudsing. • Reduce the detergent amount for soft water, small loads, or lightly soiled loads. • Non-HE detergent is not recommended. • Use warm water to disconnect the water supply hose and drain hose. Soak them in warm water. • Fill the spin basket with warm water, then wait for about 10 minutes. • Put a hot towel on the water hose connector. • Reconnect the water supply hose and drain hose, and check if water is supplied properly. • Make sure the drain hose is not clogged, and is hung over the drain hose. • Turn the spin basket halfway with water, and try spinning again. • Lift the end of the drain hose to prevent water from draining off the spin basket halfway with water, and then run spinning after releasing the drain hose.
The spin basket or drain/supply hose is frozen.	
Water drains out immediately.	

Cleaning

Keep the washing machine clean to prevent deteriorated performance and to preserve its life cycle.

Exterior

Clean the control panel with a soft, damp cloth. Do not use abrasive powders or cleaning pads. Do not spray cleaners directly on the panels.

Eco Tub Clean

Regularly run this cycle to clean the tub and to remove bacteria from it.

1. Make sure the tub is completely empty.
2. Press **POWER** to turn on the washing machine.
3. Press **Cycle** to select **ECO TUB CLEAN**.
4. You can also use **Delay End** with Eco Tub Clean.
5. Press **START/PAUSE**.

CAUTION

Only run Eco Tub Clean when the tub is completely empty. This may cause damage to the laundry or a problem with the washing machine.

ECO Tub Clean reminder

The **LED** indicator reminds you of cleaning the tub when necessary. If you happen to see the indicator blinking after washing is complete, remove the laundry and run the **ECO TUB CLEAN** cycle.

You can ignore this reminder and continue to run cycles normally because the reminder is a system failure. However, the reminder remains active for 6 consecutive cycles immediately after each cycle is complete.

- The reminder is activated once every 1-3 months, depending on the cycle count.
- To keep the tub clean, it is recommended to run ECO TUB CLEAN on a regular basis.

Built-in sink

2. Press the **WaterSet** button to supply water to the board. Use this water to rinse the board.

Symptom	Action
Water drains out immediately.	Make sure the drain hose is installed correctly. See the installation section of this user manual and adjust the position of the drain hose as instructed.
Stains on clothes	- Clean the magic filter. - Excessive suds collect in recesses and can cause foul odours. - Run cleansing cycles to sanitize periodically.
Has odours.	Dry the washing machine interior after a cycle has finished.

If a symptom continues to happen, contact a local Samsung service centre.

Information codes

If the washing machine fails to operate, you may see an information code on the display. Check the table below and try the suggestions.

Code	Action
5C	Water does not drain. - Make sure the drain hose is not bent, frozen, or clogged. - If the water does not drain in 30 minutes, an alarm will sound with the information code of "5C" on the display.
4C	Water is not supplied. - Make sure the water tap is opened. - Make sure the water hose is not bent, frozen, or clogged. - If the water supply is not finished in 1 hour or the water level does not change in 4-10 minutes after the water supply has started, an alarm will sound with the information code of "4C" on the display.
Ub	The spinning process does not operate. - Make sure the laundry is spread out evenly in the tub. - Make sure the washing machine is levelled on a flat surface.
1C, 1C	Water overflows. - Run the spinning process to drain water, and restart the machine. - If the information code continues to appear, call for service.

SAMSUNG

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
INDIA	1800 40 SAMSUNG (1800 40 7267864)(Toll-Free) 1800 5 SAMSUNG (1800 5 7267864)(Toll-Free)	www.samsung.com/in/support
NEPAL	16600172667 (Toll Free for NTC Only) 9801572667	www.samsung.com/in/support
BANGLADESH	09612300300 0800300300 (Toll free)	www.samsung.com/in/support

This product is RoHS compliant.