

fingers[®]



Quick Start Guide

2Mic-ThunderBox



Quick Start Guide

I. Important - Warnings and Safety

1. Do not place the speaker near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the speaker/Mic once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

 
II. In the box

1 x FINGERS 2Mic-ThunderBox Speaker	1 x Remote Control
2 x FINGERS Freedom Mic-39 Wireless Microphones	4 x AA Battery for Mic
1 x AUX Cable	2 x AAA Battery Remote Control
1 x Type-C Charging Cable	1 x Quick Start Guide
	1 x Brand Note

III. On-board Controls

A. Speaker

Volume Knob | Previous Track | Play-Pause | Next Track | Mode | RGB Lights | EQ | Repeat | Mic PRI | Record | Bluetooth

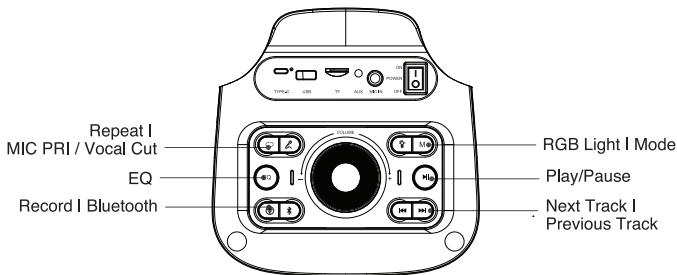


Function	What to do
Volume Knob	Rotate the knob to increase or decrease the volume
	Single Short Press the Volume Knob and rotate the Knob to increase or decrease the Mic Volume
	Double Short Press the Volume Knob to increase and Decrease the Mic ECHO Volume
Repeat	To repeat the song in USB and MicroSD mode
	One - To repeat single song
	All - To repeat the all songs
MIC PRI/Vocal Cut	Short Press to change the Mic in Priority Mode
	Long Press to select Vocal Cut
Mode	Short Press to switch modes from BT/FM/ USB/MicroSD/AUX
LED M.	Short Press to change the RGB Light modes (6 Changeable modes)
Play/Pause I TWS	
Play/Pause Music	Short Press to Play or Pause the music
TWS	Long Press to establish TWS connection between 2 speakers Short Press on any one of the speaker to disconnect TWS Mode
Search/ Save FM Channel	Long Press in the FM Mode
Previous Track	Short Press to navigate previous track
Next Track	Short Press to navigate next track
EQ	Short Press to change the Equalizer Modes
REC	Short Press to record the Mic Voice
	Note: It will only record when USB is inserted
	Long Press to delete the recording
Bluetooth	Short press to directly go to Bluetooth Mode
	Again short press to disconnect Bluetooth Mode

B. Microphone (Freedom Mic-39)

Function	Description
1. Power On/Off	Short Press to switch it on or off
2. Display On	The Mic is at working state

 Backlight ○
On-Off Switch ○

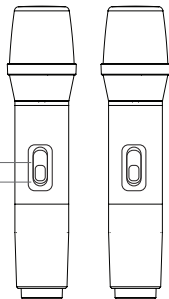


a. For Wireless Microphone

- When the speaker and microphone are switched on at the same time the 2.4 GHz wireless signal is automatically paired.
- At this time, the user can start using the microphone and can operate the buttons according to their own preferences.

b. For Wired Microphone

- Plug the Wired microphone to Mic Port for Connection.
- At this time, you can start using the microphone and can operate to your own preferences.

 IV. Connections

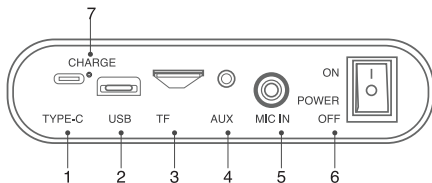

No.	Connection	Function
1.	Type-C Port	To charge the speaker
2.	USB Interface	Insert a USB drive and then play
3.	MicroSD Slot (TF)	Insert the MicroSD card and then play
4.	AUX	Plug in an AUX cable
5.	Mic Interface	For Wired/Wireless Mic connection
6.	On-Off Switch	For Power On-Off
7.	LED Indicator	For Charging Indication

V. Charging the speaker

- Connect the speaker with provided or available Type-C cable.
- When LED indicator is in red, it indicates that the speaker is in Charging mode.
- When fully charged, the LED indicator turns off.

VI Modes

You can enjoy your music in the following ways:

- i. Bluetooth
- ii. FM Radio
- iii. MicroSD
- iv. USB
- v. AUX

i. Bluetooth Mode

- When the device is switched on, it automatically goes to BT mode.
- If any source is connected (USB, MicroSD or AUX), press “MODE” till BT Mode is heard. Alternatively, you can directly switch to Bluetooth mode by pressing Bluetooth switch on the speaker.
- Make sure that Bluetooth is enabled on your device. Find the device list and select “FINGERS 2Mic-ThunderBox”. A sound prompt of “Connected” is heard and it is ready to play.



TWS Setting

1. To begin pairing, bring two FINGERS 2Mic-ThunderBox Speaker between proximity of each other and switch ON the power.
2. Long press play-pause switch of both the speaker to enable the TWS Mode. These two speakers will get automatically interconnected successfully.
3. Find the device list and select 'FINGERS 2Mic-ThunderBox'. After successfully connection with one of the portable speakers, the second one automatically gets connected.

Note: TWS function can only be enabled to pair two FINGERS 2Mic-ThunderBox portable speakers in Bluetooth mode.

ii. FM Radio

- Press on the “M” Button till the voice prompt of the word “FM Mode” is heard.
- Long press “▶” to scan the stations automatically. You can again press the same Button to stop the Scan
- Once the FM radio is tuned, you can long press “▶▶” and “◀◀” to select the desired FM Channel.
- Short press “▶|” to mute the FM.

iii. MicroSD

- Insert the MicroSD in provided Slot.
- You can then play your favourite track directly from the MicroSD Card.

iv. USB

 
- Insert the USB device (Pen Drive) in the provided port.
- You can then play your favourite tracks directly from the USB

v. AUX

- Insert the AUX external audio cable and the audio system will automatically play back with priority and prompt tone.

VII. REMOTE CONTROL

1. **On-Off:** To switch On and Off the Speaker.
2. **Mode:** To navigate among different Modes of BT, USB, MicroSD, AUX and FM radio
3. **Stop:** To stop the current playback.
4. **Play/Pause:** Single press to play and pause the playlist.
5. **Mute:** Short press to enable mute; press again to disable mute.
6. **Vol+:** Short press to increase the volume.
7. **Next Track:** Short press to change the next track.
8. **Prev Track:** Short press to change the previous track.
9. **Vol-:** Short press to decrease the volume.
10. **RPT:** To repeat the track in two ways in USB/MicroSD card mode in order of One-All
One: Repeats the current track.
All: Plays all songs repeatedly.
11. **EQ:** Short press to change the EQ modes.
12. **.0 to 9:** To select desired track/saved FM Channel in USB, MicroSD and FM Modes.

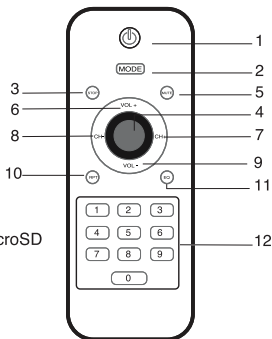

VIII. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use a soft cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings



IX. Product Specifications

Parameters	2Mic-ThunderBox
Wireless Protocol	Bluetooth v5.3
Peak Output Power	40 W (Peak - 50 W)
Power Rating	DC 5 V / 2 A
Driver unit	6.5" 4Ω, 40W + 6Ω 10 Wx1(Treble)
Effective Range	Wireless range up to 10 m
Battery	4000 mAh / 7.4 V
Charging Time	Up to 4 hours
Playback Time	Up to 6.5 hours
Playback Options	Bluetooth® FM Radio MicroSD USB AUX
Microphone	Mic Type: Wireless Mic (Mic name: FINGERS Freedom Mic-39) Connector Diameter: 6.35 mm Polar Pattern: Uni-Directional V-Band (Mic Type: Moving coil) Power Source: 2 x AA size batteries Battery Backup: Up to 10 hours Distance Support: 15 - 25 m
Dimensions Microphone	Speaker: 244 (L) x 240 (W) x 337 (H) mm Microphone: 258 (L) x 55 (W) x 55 (W) mm
Weight	Speaker: 3.70 kg Microphone: 216 g
Colours	Rich Black

*Tested under ideal conditions and in BT playback mode. Playback time may vary depending on usage, playback mode and volume levels.

• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice.
• All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website www.fingers.co.in

