ViviCam S048 Digital Camera

User Manual





© 2016 All Rights Reserved.

Windows and the Windows logo are registered trademarks of Microsoft Corporation.

All other trademarks are the property of their respective companies.

TABLE OF CONTENTS

Introduction	2
Getting to Know Your Camera	2
What's Included	3
Parts of the Camera	4
Initial Camera Setup	5
Main Camera Modes	10
Camera Technical Specifications	11
Computer System Requirements	12
Powering the Camera On/Off	13
Changing Camera Mode	14
Navigating the Menus	15
Camera Features: ViviLink, Flash, Macro, Display	16
Photo Capture Mode	19
Photo Playback Mode	34
Video Capture Mode	43
Video Playback Mode	56
Installing the Software	62
Transferring Images from my Camera to my Computer Manually	66
Camera Maintenance	68
Warranty Card	68
Technical Support	69
Troubleshooting	69

Introduction

Thank you for purchasing this camera. Everything you need to take quality digital photos and videos is included with your camera.

Vivitar makes capturing those special moments as easy as possible.

Please read this manual carefully first in order to get the most out of your digital camera.

NOTE:

- Your camera requires a Micro SD Memory card (up to 32GB) for normal use. Micro SD Memory cards are not included and need to be purchased separately.
- This camera is a Plug and Play device. You can download the pictures and videos captured by your camera without the software by directly accessing the camera's memory card from your computer. It is recommended however that you install the Vivitar Experience Image Manager Software to enjoy the full Vivitar experience.



IMPORTANT:

- Do not open the battery door underwater.
- Close the battery door properly for best water sealing.
- Rinse the camera with clean water after use and keep dry for storage.

Getting to Know Your Camera

- 3M Waterproof up to 10 ft. (3.0 meters)
- 16 Mega Pixels
- Digital Still Camera
- Digital Video Recorder
- **Built-in Flash**
- 5x Digital Zoom
- Super Wide Angle Dual LCD Screen: 2.7" (Rear) + 1.8" (Front) TFT Color Display
- Micro SD Memory Card Support
- Slide Lock Battery Door
- 2x AAA Alkaline Batteries


What's Included



- 1. Digital Camera
- 2. USB Cable
- Vivitar Experience Image Manager
 Software Installation CD
- 4. Wrist Strap

NOTE: Micro SD Memory Card and batteries not included.

Parts of the Camera

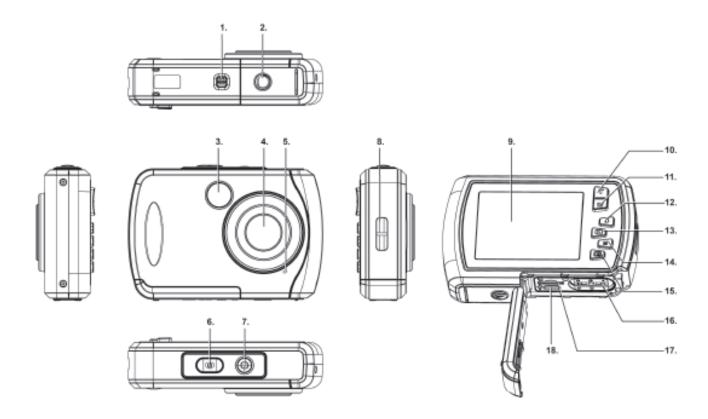


- 1. Battery Door Lock
- 2. Tripod Connector
- 3. Flash Light
- 4. Lens
- 5. Microphone
- 6. Shutter Button
- 7. Power Button
- 8. Wrist Strap Connector
- 9. LCD Screen

- 10. UP / Zoom In (Tele) Button
- 11. DOWN / Zoom Out (Wide) Button
- 12. LEFT / Flash Light Button
- 13. RIGHT/ Playback Button
- 14. MODE Button
- 15. MENU Button
- 16. Battery Compartment
- 17. Micro SC Memory Card Slot
- 18. USB Interface


Initial Camera Setup

INSERTING THE BATTERIES

1) Move the Lock/Unlock Switch on the battery cover to unlock the cover.

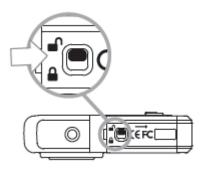

2) Slide open the battery cover according to the arrow direction.

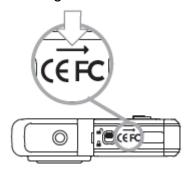

3) Insert 2 x AAA (1.5V) batteries. Alkaline batteries recommended (not included). Close the battery cover, replace the Lock/Unlock Switch to lock the cover.



NOTE:

- Remove the batteries from the camera when not in use for an extended period.
- Do not mix alkaline and non-alkaline batteries.
- Some features, such as Flash, will not work if the battery power level is low.
- When the battery power is low the battery icon turns red and the camera will automatically turn off a few seconds later.

• The energy status of the power is displayed on LCD as shown below:

Full battery power Medium battery power Low battery power

MICRO SD MEMORY CARD

Make sure a Micro SD Memory card (up to 32BG) has been properly inserted into your camera. Micro SD Memory card Class 4 or higher is required. Micro SD Memory card not included.



To properly insert the Memory Card:

- 1) Make sure the camera is powered off.
 - Move the Lock/Unlock Switch on the battery cover to unlock the cover.
 - Open the battery/memory card compartment door.
- Insert the Micro SD Card into the slot in the direction shown on the camera (see SD icon by the Micro SD card slot).
- 3) Push the Micro SD Card until you hear a slight clicking sound. This indicates the memory card has been inserted correctly.
- 4) Close the battery cover, replace the Lock/Unlock Switch to lock the cover.

NOTE:

- There is only one right direction to insert the Micro SD memory card into the slot. Do not force
 the card into the memory card slot, since it may damage both the camera and the Micro SD
 memory card.
- After the camera is powered on, a memory card icon will appear on the LCD display. If you do
 not see the SD icon on the display, please check if the card was inserted properly.



IMPORTANT:

The Micro SD memory card must be formatted before taking photographs.

NOTE: If you have previously captured images saved on your memory card and would like to keep them, please download the files to your computer before formatting the memory card.

Formatting the Micro SD Memory Card:

- Press the MENU button in Photo Capture or Video Capture mode. 1)
- Press the **DOWN (W)** button to highlight and select the 'Format' and press the **MENU** 2) button to confirm.
- The following options appear: 'Yes', 'Cancel'. 3) 'Yes' will format your memory card and 'No' will exit without formatting your card.
- To format the Micro SD Memory Card, select 'Yes' and press the **MENU** button. 4) You will be asked to confirm. The following options appear: 'Yes', 'No'.
 - To format the Micro SD Memory Card, select 'Yes' and press the EMENU button. All data on the memory card will be deleted.
 - To exit the menu without formatting the SD Memory Card select 'No' then press the MENU button.

POWER ON



Press the **U** POWER button to turn on the camera.

FIRST TIME INITIAL SETUP

After powering the camera ON for the first time the camera will take you through the initial camera setup.


Setting the Camera Language

- You will first be prompted to select a language for the camera. The Language selection menu will appear. Select the language of your choice by pressing the UP and DOWN direction control buttons.
- 2) Then press the **MENU** button to confirm the selection.
- 3) After selecting a language, you will be asked if you would like to continue with the initial camera setup. A message will appear: "Continue with Camera Setup?" Select "Yes" to continue or "No" to exit the setup.

Note: If you select "No" and decide to leave the camera setup, the camera will be set to its default settings. These settings can be adjusted at any time manually through the menus in the camera.

Setting the Date and Time

The next step in the initial camera setup is to set the date and time on the camera.

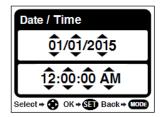

- 1) Press the **UP/DOWN** button to change and set the specific time/date settings.
- 2) Press the **RIGHT/LEFT** button to move to a different part of the time/date setting options.
- 3) Once you have set the date and time as desired press the MENU button to confirm the setting and move to the next part of the camera setup.


Setting the ViviLink Default Option

Next you will be asked to set the default ViviLink destination for photos and videos taken with your camera.

The ViviLink technology allows you to quickly and easily upload your camera's photos and videos to social networks with the accompanying software application.

- 1) First you will be asked to choose the default ViviLink social network for Photos. Press the **UP/DOWN** button to highlight the desired default social network and then press the **MENU** button to confirm the selection.
- 2) Next you will be asked to choose the default ViviLink social network for Videos. Press the **UP/DOWN** button to highlight the desired default social network and then press the **MENU** button to confirm the selection.

USING THE CAMERA

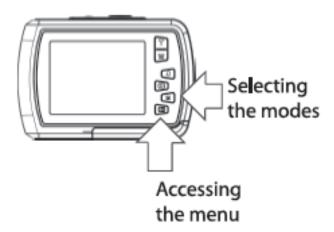

Congratulations! Your camera is now ready to use.

Main Camera Modes

Your camera has different modes for the various camera functions.



PHOTO CAPTURE MODE

Use this mode to capture pictures with your camera.

This is the default mode when the camera is powered ON.

To take a picture, aim your camera as desired and press the **Shutter** button.

The picture is automatically saved to your camera's memory card.

To access the various menus for the Photo Capture mode, press the **MENU** button while in the Photo Capture mode.



VIDEO CAPTURE MODE

Use this mode to capture videos with your digital camera.

After turning on your camera, press the **MODE (M)** button once to open the Video Capture mode. To take a video, aim your camera as desired and press the **Shutter** button to start recording. A red record indicator appears on the LCD screen while the recording is in progress. To stop recording, press the **Shutter** button again. The video is automatically saved to your camera's memory card.

To access the various menus for the Video Capture mode, press the **MENU** button while in the Video Capture mode.



PLAYBACK MODE (PHOTOS & VIDEOS)

Use this mode to view and manage the photos and videos you have captured.

After turning on your camera, press the PLAYBACK button to open the Playback Mode for photos and videos. You can scroll through the photos and videos that you've previously taken to view or delete them as desired.

To access the various menus for the Playback mode for photos and videos, press the **MENU** button while in the Playback mode.

Camera Technical Specifications

Image Sensor	CMOS Sensor
Image Resolution	16M (4608X3456), 14M (4416X3312), 12M (4000X3000), 9M (3456X2592), 7M (3648x204816), 5M (2592x19444), 3M (2048x15364), 2M (31920x1080), VGA (640X480)
Video Resolution	HD 720P (1280X720), VGA (640x480), QVGA (320x240)
File Format	JPEG (Photo); AVI (Video)
External Memory	Micro SD Memory Card (up to 32GB)
LCD Display	2.4 Inch TFT color display
Lens	f=8.15mm F3.0
Zoom	4X Digital Zoom
Exposure	-3.0EV ~ +3.0EV
White Balance	Auto, Daylight, Cloudy, Fluorescent, Incandescent
ISO	Auto, 100, 200, 400
Flash	No Flash, Forced On, Auto Flash, Red Eye Reduction
Self-Timer	10 second delay, Off
Languages	English, French, Spanish, Portuguese, German, Italian, Russian, Poland, Greek
Microphone	Yes
USB Interface	USB 2.0
System Requirements	Windows XP (SP 3), Vista (SP1) and 7 or above;
	MAC OSX v10.5.x or above
Battery	2x AAA (1.5V) alkaline batteries
Working Temperature	0~45°C

Computer System Requirements

To be able to download photos and videos to your computer using the Vivitar Experience Image Manager Software, you will need the following minimum configuration:

WINDOWS OS

- MICROSOFT® Windows XP with Service Pack 3, Windows Vista with Service Pack 1, Windows 7 or higher
- Pentium® 4 processor (or above)
- 1 GB of RAM, with 250 MB of free hard disk space
- 16-bit Color monitor, 1024 X 768 recommended screen resolution
- CD-ROM Drive
- QuickTime® 6 or higher
- MICROSOFT ® Internet Explorer 7 or higher
- Windows Media Player 10 or higher
- DirectX 9 or higher
- Internet connection required

MACINTOSH OS

- Intel processor running Mac OS X v10.5.x or later
- 1 GB RAM, 250 MB free hard disk space
- Display: 1024 x 768 or higher-resolution monitor
- CD-ROM Drive
- QuickTime® 6 or higher
- Internet connection required

NOTE: Make sure the latest compatible Adobe® Flash® Player is installed on your computer.

Powering the Camera On/Off

- Make sure the batteries have been inserted properly into your digital camera.
- Make sure the Micro SD card has been inserted properly into your digital camera.
 (Micro SD card up to 32GB not included)

Please see **Initial Camera Setup** for more information.

POWERING THE CAMERA ON

Press the **U** Power button to turn your camera ON.

After powering on, the LED light turns on briefly and the LCD screen turns on with your camera in Photo Capture Mode.

POWERING THE CAMERA OFF

While the camera is on, you can press the **U** Power button down again for a few seconds at any point to turn your camera OFF.

AUTO OFF - POWER SAVING

Your digital camera has an Auto Power Off feature that automatically turns off your camera after a specific period of time that your camera is left idle. The Auto Power Off settings can be set from the Auto Power Off settings menu in either Photo Capture Mode or Video Capture Mode.

Changing Camera Mode

Your camera has three main modes:

- 1) **Photo Capture Mode:** Use this mode to capture photos with your camera.
- 2) Video Capture Mode: Use this mode to capture videos with your camera.
- 3) Playback Mode (for photos and videos): Use this mode to view the photos and videos you have already taken with your camera.
- When the camera is first powered ON, the Photo Capture Mode will be active.
- The icons that appear on the LCD screen are the best default settings so that you can begin to capture and enjoy clear quality photos.

To change the active camera mode, make sure the camera is powered ON and press the **MODE** (M) button.

- When in Photo Capture Mode, this icon will display on the top-left corner of the LCD display
- When in Video Capture Mode, this icon will display on the top-left corner of the LCD display
- When in Playback Mode, this icon will display on the top-left corner of the LCD display **NOTE**: Press the **PLAYBACK** button to enter the Playback Mode.

Navigating the Menus

Each camera mode has a set of menus specific to that mode.

- 1) Press the **MENU** button to open the menus for the current mode.
- Press the LEFT or RIGHT direction control button to scroll between the various menus for the current mode.
- 3) Press the **UP** or **DOWN** direction control button to highlight the desired menu selection.
- 4) Press the IMENU button to confirm and save the highlighted menu option.
- 5) If the selection can be remembered by the camera, a selection icon will appear to the right of the selected menu option. Changes made to these options remain until you decide to change them again at a later time.
 - **Note**: Some menu options are single-use functions that are not remembered by the camera and do not display this icon when selected.
- 6) At any time you can press the **MODE** button to exit the menus and return to the previous screen.

Note:

- For most menu settings, an icon reflecting your selection displays on the LCD screen.
- The settings are saved by your digital camera until you manually change the setting or restore the camera's default factory settings.

Camera Features: ViviLink, Flash, Macro, Display

VIVILINK

The ViviLink technology allows you to quickly and easily upload your camera's photos and videos to the social networks of your choice with the accompanying Vivitar Experience Image Manager application. A ViviLink destination can be assigned to a photo or video in Capture mode prior to capturing your image or in Playback Mode.

ViviLink: Video or Photo Capture Mode

Press the **MENU** button and select 'ViviLink' to open the ViviLink options. Select a ViviLink option and press the **MENU** button to save your selection and the **MODE** button return to Photo/Video Capture Mode. Your selected ViviLink destination appears as an icon on the LCD screen and your camera is now ready to capture your photo or video with the selected ViviLink destination. **Note**: The ViviLink feature is deactivated by default and needs to be activated prior to capturing each photo or video.

ViviLink: Playback Mode

A ViviLink destination can be added to a captured image or changed by accessing the ViviLink menu in Playback Mode. Simply select an image, press the **MENU** button to view the Playback menus and then select the 'ViviLink' menu option. Next select the ViviLink destination and press the **MENU** button to save and then the **MODE** button to exit the menu screen.

FLASH

There are several Flash options available on your camera. The options appear on the Photo Capture Mode LCD screen in sequence.

To change the Flash mode, press the **£ LEFT** Quick Function button until you arrive at the desired setting.

Important:

- When using Flash, stand between 8 to 10 feet away from the scene you would like to capture.
- The MACRO mode must be turned OFF when you want to use the Flash.
 To change the Macro setting: Press MENU to open the menus and scroll to the 'Macro' menu.
 Select 'Off'. When Macro is OFF, the mountain icon appears on the LCD display.

Flash Type	Description
③	No flash will appear.Use this when you do not want to activate Flash.
Forced Off (Default)	Note: A 'Turn On Flash' message appears when the camera detects a need for flash. When this message appears, it is recommended to press the Flash/Up button and select one of the flash options: Auto Flash, Forced On or Red-Eye Reduction.
4 Forced On	The flash is enabled for each photo. Note: If you use this option in a well-lit environment, your photo may be appear too bright/light (overexposed).
⋬ _A Auto Flash	 When you want the camera to determine if Flash is needed, select Auto Flash. The flash will automatically turn on according to the lighting conditions. When the LED light stops blinking, the Flash is ready for use. Note: In some cameras, an initial flash appears to test your lighting conditions. If flash is needed, a second flash will appear upon taking the photo.
Red Eye Reduction	Eliminates the red-eye effect in a photo caused by flash.


MACRO FEATURE

MACRO ON:

Your camera contains a MACRO feature that allows you to enable or disable the MACRO mode on your camera. While using the MACRO mode, you can capture images at close range (30~45cm). To turn the MACRO mode ON, open the Photo or Video Capture Mode Menu. Then select ' ON' from the Macro menu options.

- When enabled, the MACRO mode allows your camera to focus on an object that is close to the camera.
- The flower icon papears on the LCD and indicates that the Macro mode is ON.



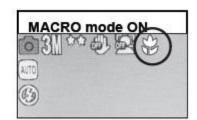

Photo/Video Capture Mode Menu ON Option


LCD Screen Macro ON Icon

MACRO OFF:

To turn the MACRO mode OFF for normal/standard photo and video capture -

- Select '▲ OFF' from the Macro menu options.
 The mountain ▲ icon appears on the LCD display.
- When MACRO mode is off, images can be captured from 1.5m ∞ (infinity).



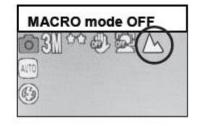

Photo/Video Capture Mode Menu OFF Option

LCD Screen Macro OFF Icon

Note:

The **MACRO** mode must be turned **OFF** when you want to use the following feature of your camera: **Flash**.

DISPLAY: HIDE/SHOW THE LCD ICONS

The display of the icons on the LCD screen can be hidden or visible as desired.

- 1) Hold the **MODE** button for 2 seconds to hide the display of the icons on the screen.
- 2) Press the **MODE** button again to redisplay the icons on the screen.


Photo Capture Mode

The Photo Capture mode allows you to capture pictures with your digital camera.

When the camera is first powered ON, the camera will be in Photo Capture Mode by default.

TAKING A PICTURE

- 1) Selecting the Scene with the LCD Display:
 - While in Photo Capture Mode, use the LCD display on the back of the camera to direct the camera at the scene you would like to capture.
- 2) Zoom Options:
 - Press the **T/Zoom** In and **W/Zoom Out** buttons to zoom in/out if desired.
 - As you press the Zoom buttons, a bar indicator moves up and down the rectangular box according to the zoom used.
 - The following Zoom Indicator appears on the right side of the LCD screen:

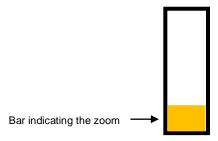

- 3) Capturing the Photo:
 - Press the Shutter button to focus on the subject and take the picture.
 - The picture is automatically saved to the camera's SD memory card.

PHOTO CAPTURE MODE QUICK FUNCTION BUTTONS

Quick Function	Description
Button	
✓ LEFT 4	FLASH: Toggles the following Flash options appearing on the LCD:
	Forced Off, Forced On,
	⁴A Auto Flash, ७ Red Eye Reduction
	NAVIGATES MENU: Navigates within the Menus.
➤ RIGHT ▶	PLAYBACK: Opens the Playback Mode.
	NAVIGATES MENU: Navigates within the Menus.
▲ UP/T	ZOOM: Zooms IN (Tele)
	NAVIGATES MENU: Navigates within the Menus.
→ DOWN / W	ZOOM: Zooms OUT (Wide)
	NAVIGATES MENU: Navigates within the Menus.


Other

△ SHUTTER	PHOTO CAPTURE: Captures the photo
	•
	PHOTO CAPTURE MENU: Opens and exits the menu options for
■ MENU	Photo Capture Mode
	Note: Use the UP/DOWN/LEFT/RIGHT buttons to navigate.
	ENTERS and SAVES SELECTION: Within the Menu, enters the
	submenu and saves the selected setting option.
	MODE SELECT: Toggles between the Photo Capture Mode and Video
MODE (M)	Capture Mode.
	EXITS MENU: Exits the menu screen.

PHOTO CAPTURE MODE MENUS

The following are the menus that appear in your camera's Photo Capture Mode:

- The selection icons below appear by the default settings.
- Once you change a setting, the setting is saved by your camera until you manually change the setting or restore the camera's default factory settings.

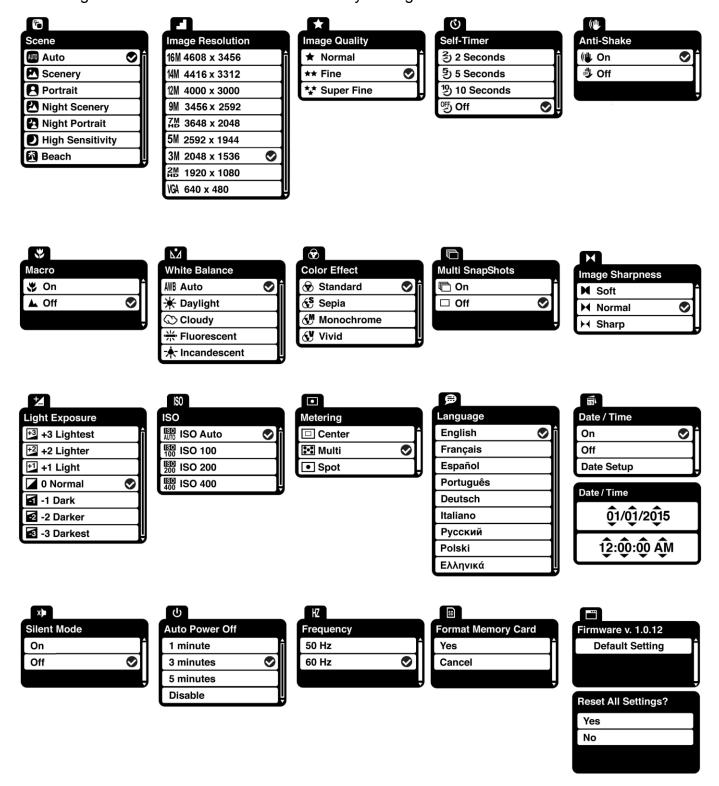

Scene Menu

The 'Scene' Menu allows you to choose scene settings that let your camera to adapt properly to your current environment.

Note:

- When selecting the HIGH SENSITIVITY Option, by default the camera switches off the FLASH automatically (if it's ON) to optimize the picture quality. If however, you would like to override it and manually turn ON the flash – you can do so.
- Remember: The 'Scene' menu is also accessible by pressing the LEFT Quick Function Button while in Capture Mode.
- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Scene' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

Image Resolution Menu

The 'Image Resolution' menu allows you to choose the desired size of the images taken by your camera. Keep in mind that images with a higher resolution will also take up more of your camera's memory.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Image Resolution' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.

5) To continue within the menus and select a different menu option:

Press the **LEFT** or **RIGHT** button to select the next menu item.

6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

An icon reflecting your selection is displayed on the LCD screen.

Image Quality Menu 🖈

The 'Image Quality' menu allows you to select the desired quality level of the images taken by your camera. Keep in mind that images with a higher image quality level will also take up more memory on your camera.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Image Quality' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:

Press the **LEFT** or **RIGHT** button to select the next menu item.

6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

An icon reflecting your selection is displayed on the LCD screen.

Self-Timer Menu (5)

The 'Self Timer' menu allows you to set a delay between the time that the camera's Shutter button is pressed and the actual capture of the picture.

This is an optimal feature if you don't just want to take the picture but would also like to be in the picture yourself. Just set the desired Self-Timer delay, press the **Shutter** button on your camera and position yourself in front of the camera as desired.

1) Press the **MENU** button to open the menus for the current mode.

- 2) Press the LEFT or RIGHT button to scroll and select the 'Self Timer' menu.
- Press the **UP** or **DOWN** button to highlight a specific option. 3)
- Press the **MENU** button to confirm and select the highlighted menu option. 4)
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.


Anti-Shake Menu



The 'Anti-Shake' feature reduces image distortion that can be caused by movement of the camera while capturing the image.

- Press the **MENU** button to open the menus for the current mode. 1)
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Anti-Shake' menu.
- Press the **UP** or **DOWN** button to highlight a specific option. 3)
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- To continue within the menus and select a different menu option: 5)
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

Macro Menu 🖐

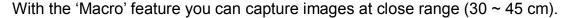

MACRO ON: To enable the Macro mode, select 'On'.

The flower icon 💆 appears on the LCD display and indicates that the Macro mode is ON.

 When enabled, the Macro mode will allow your camera to focus on an object that is close to the camera.

MACRO OFF: To disable the Macro mode select 'Off'.

- The mountain icon A appears on the LCD display.
- When Macro mode is off, images can be captured from 1.5m ∞ (infinity).

Note: The **MACRO** mode must be turned **OFF** (♠) when you want to use the following feature of your camera: **Flash**.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Macro' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

White Balance Menu №

The 'White Balance' feature allows your camera to adjust the coloring of the captured images depending on the type of light source in the current environment.

Properly adjusting the White Balance setting to match your current environment will allow the camera to properly balance the colors in the images that are taken with your camera.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'White Balance' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.

5) To continue within the menus and select a different menu option:

Press the **LEFT** or **RIGHT** button to select the next menu item.

6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

An icon reflecting your selection is displayed on the LCD screen.

Color Effect Menu 🏵



The 'Color Effect' menu allows you to choose a color effect to add to the images taken with your camera.

- 1) Press the **MENU** button to open the menus for the current mode.
- Press the **LEFT** or **RIGHT** button to scroll and select the 'Color Effect' menu. 2)
- Press the **UP** or **DOWN** button to highlight a specific option. 3)
- Press the **MENU** button to confirm and select the highlighted menu option. 4)
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:

Press the **LEFT** or **RIGHT** button to select the next menu item.

To exit the menu view: 6)

Press the **MODE** button to exit the menu and return to your previous mode.

Multi SnapShots Menu

When enabled, the 'Multi SnapShots' feature allows you to take six rapid snapshots in a row with a single click of the shutter button.

This feature can be effective when trying to capture a particular moment in a sporting event or other scenes with quick movements.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Multi SnapShots' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- Press the **MENU** button to confirm and select the highlighted menu option. 4)

- A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

Image Sharpness Menu M

Using the 'Image Sharpness' menu you can set the level of sharpness in the images taken with your camera. The sharpness level dictates if the edges of objects in the image are more or less distinct.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Image Sharpness' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

Light Exposure Menu [⁺]⊿

The 'Light Exposure' setting helps you control the amount of light that enters your camera's lens.

This setting should be adjusted when the environment is lighter or darker than normal.

When the environment has more light than is needed, reduce the exposure setting (by using the negative - count) to reduce the amount of light allowed into the lens by your camera.

If the environment has less light (darker) than is needed, increase the exposure setting (by using

the positive + count) to increase the amount of light allowed into the lens by your camera.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Light Exposure' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

ISO Menu ISO

The 'ISO' menu allows you to set the level of sensitivity that your camera has to light in the surrounding environment. When the ISO level is increased, the image sensor in your camera will be more sensitive to light and allow you to capture images in lower-light situations. The higher sensitivity to light however, may reduce the quality of the images that are taken.

When the ISO is reduced, the image sensor in your camera will be less sensitive to light and will optimize the image quality in environments with bright lighting.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'ISO' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

Metering Menu •

The 'Metering' setting will affect how your camera focuses when capturing an image. Depending on your selection, the camera will be more sensitive to focusing on particular areas in the display and adjust the image color and lighting accordingly.

Center – Averages the light metered from the entire frame, but giving greater weight to the subject in the center

Multi – Used in standard conditions the camera divides and adjusts the settings of the image into several zones for light metering such as complex light conditions, position of subject, brightness, background, direct light and scenes

Spot – Meters the area within the spot point frame at the center of the LCD to set the exposure on the subject in the center of the monitor.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Metering' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

Language Menu 🖻

You can select your camera's language setting by selecting the desired language from the 'Language' menu.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Language' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.

- A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:

Press the **LEFT** or **RIGHT** button to select the next menu item.

6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

Date/Time Menu 🗟

When you capture an image with your camera, the image will include a time stamp with the date and time that the image was taken.

The Date/Time menu allows you to set your camera's date and time as desired. You can also disable the timestamp for future images that will be taken with your camera.

The following are the timestamp options:

On – The timestamp will appear on photos taken.

Off – The timestamp will not appear on photos taken.

To Enable/Disable the Timestamp:

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Date/Time' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:

Press the **LEFT** or **RIGHT** button to select the next menu item.

6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

To Set the Date and Time:

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Date/Time' menu.
- 3) Press the **UP** or **DOWN** button to highlight the 'Date Setup' menu option, then press the **MENU** button to select the option.

- 4) The 'Date Setup' submenu will open.
- 5) Scroll through the window with the **RIGHT** and **LEFT** buttons.
- 6) For each field in the menu, use the **UP** and **DOWN** buttons to set the date and time.
- 7) When you have finished setting the date and time, press the **MENU** button to save your settings and return to the previous mode.
- 8) Press the MODE button to exit the menu without saving your settings and return to your previous screen.

Silent Mode Menu *

You have the option of activating the camera's 'Silent Mode' to disable all of the sound effects (except for beeps heard during the Self-Timer countdown) that the camera emits when performing camera functions.

Note:

This does not affect the sound during video recording.

The camera features that emit sounds include - Power On, Power Off, Shutter 'Click' and Self-Timer. The Silent Mode Options include:

- Silent Mode Off (default): All camera features will emit sound when activated.
- Silent Mode On: All camera features will not emit sound EXCEPT for the Self-Timer and associated Shutter 'Click' at the end of the Self-Timer countdown.
- 1) Press the **MENU** button to open the menus for the current mode.
- Press the LEFT or RIGHT button to scroll and select the 'Silent Mode' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.

Auto Power Off Menu ^也

You can use the 'Auto Power Off' feature in order to conserve you camera's battery life. The designated time represents when your camera will automatically power off.

When the camera sits idle for the designated period of time, the camera will shut off completely and will need to be powered on again with the power button before the next use.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Auto Power Off' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

Frequency Menu HZ

The options in the 'Frequency' menu represent the frequency of the electrical current in fluorescent lighting sources in your locale. If your camera is set to a frequency that does not match your country's electric current, you may see waves on the images taken by your camera.

50Hz – UK, Europe and Australia

60Hz – US, Canada and South America

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Frequency' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

You can use the 'Format Memory Card' menu to delete all of the content that is currently on your camera's memory card.

Keep in mind that formatting the memory card will permanently delete all of the content on your camera's memory card.

This option will delete all of the content at one time. If you would like to delete individual images, use the delete menu in the camera's Playback mode.

Note: Restoring factory defaults or formatting the camera may result in the loss of data.

Please ensure you have backed up your images before you attempt this.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Format Memory Card' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option:
 - <u>CANCEL</u>: To exit without formatting the SD Memory Card, select 'Cancel' and press the
 <u>MENU</u> button.
 - FORMAT: To proceed with the format, select "Yes" and press the MENU button.
 You will be asked to confirm the formatting of the memory card.
 - Select 'No' and press the **MENU** button to exit without formatting.
 - Select 'Yes' and press the MENU button to begin the format.
 The memory card will be completely formatted.

Firmware (Factory Default Settings) Menu

Use the 'Firmware' menu to view the Firmware version on your camera or to reset your camera settings to the Factory Default Settings.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Firmware' menu.
- 3) The 'Default Setting' option is automatically selected.
- 4) Press the **MENU** button to reset the camera to the Factory Default Settings.

You will be asked to confirm the resetting to the Factory Default Settings.

Select 'No' to exit the menu and return to the previous mode without resetting to the

default settings.

Select 'Yes' and press the MENU button to proceed with the reset.
 You will then automatically exit the menu and return to the previous mode with the digital camera settings set to the Factory Default Settings.

Note: After RESETTING to the default settings, it is recommended to select your system Language, Date/Time and ViviLink for Photos and Videos. If you do not, the next time your camera is powered on, you will be prompted to define those settings.

Photo Playback Mode

The Playback Mode allows you to review and edit photos and videos that you've already taken with you camera.

- When you first turn on the camera, the camera will be in Photo Capture mode by default.
- Press the PLAYBACK button to open the Playback Mode.
 Press the MODE (M) button to exit the Playback Mode and return to Capture Mode.
- The latest captured image appears on the LCD screen. If there are no images stored, a message (No File) appears.
 - Videos appear with 'AVI' on the top left, and photos appear with 'JPG'.
- The image counter is displayed on the top right of the LCD screen, indicating the number of the selected image and the total number of images captured.

VIEWING PHOTOS ON YOUR CAMERA

1) <u>Selecting Your Photo:</u>

- Once in Playback Mode, press the LEFT or RIGHT button to scroll through the images on your camera's memory card until you find the image you would like to view.
 - Press the **LEFT** button to view the previous image.
 - Press the **RIGHT** button to view the next image.
- Each captured image (video and photo) is displayed on the LCD screen.

2) <u>Magnifying of Your Selected Photo:</u>

- Hold and press the **UP** button to Zoom In and magnify the selected photo up to 4x.
- Hold and press the **DOWN** button to Zoom Out of the selected photo.
- The magnification amount and zoomed photo orientation are shown on the bottom of the LCD screen.

Use the **LEFT**, **RIGHT**, **MODE** (**M**) (move Up ▲) and **MENU** (move Down ▼) buttons to navigate around the magnified photo.

THUMBNAIL VIEW

Easily navigate and select the image you wish to view by using the Thumbnail View.

The images on your camera will be displayed in a 3 X 3 matrix where you can use the direction buttons to scroll and select images from the thumbnails.

To access the Thumbnail View:

- 1) Press the PLAYBACK button to open the Playback Mode.
- Press the ➤ DOWN button.
 All the images (photos and videos) on your camera will appear in the Thumbnail View.
- Use the UP, DOWN, LEFT, and RIGHT buttons to scroll and select the image you wish to view.
- 4) Press the **SHUTTER** button to enlarge the selected image full size.

PHOTO PLAYBACK MODE QUICK FUNCTION BUTTONS


Quick Function	Description			
Button				
≺ LEFT 4	PREVIOUS IMAGE: Displays the previous image.			
	NAVIGATES MENU: Navigates within the Menus and Thumbnail view.			
➤ RIGHT ▶	PLAYBACK: Opens the Playback Mode.			
	NEXT IMAGE: Displays the next image.			
	NAVIGATES MENU: Navigates within the Menus and Thumbnail view.			
A UD/T	ZOOM: Zooms IN			
▲ UP/T	NAVIGATES MENU: Navigates within the Menus and Thumbnail view.			
	THUMBNAIL VIEW: Opens the Thumbnail View. To navigate in the			
	Thumbnail View press the UP/DOWN/LEFT/RIGHT buttons and the			
➤ DOWN / W	SHUTTER button to select an image.			
	ZOOM: Zooms OUT			
	NAVIGATES MENU: Navigates within the Menus and Thumbnail view.			

Other

SHUTTER	IMAGE SELECTION: In Thumbnail View, confirms and opens the image to			
	full size.			
■ MENU	PHOTO PLAYBACK MENU: Opens and exits the menu options for			
	Playback Mode			
	NOTE: Use the UP/DOWN/LEFT/RIGHT buttons to navigate.			
	NAVIGATES IN ZOOM: Navigates in magnified photo.			
	ENTERS and SAVES SELECTION: Within the Menu, enters the			
	submenu and saves the selected setting option.			
MODE (M)	MODE SELECT: Toggles between the Photo Capture Mode and Video			
	Capture Mode.			
	NAVIGATES IN ZOOM: Navigates in magnified photo			
	EXITS MENU: Exits the menu screen.			

PHOTO PLAYBACK MODE MENUS

The following are the menus that appear in your camera's Photo Playback Mode:

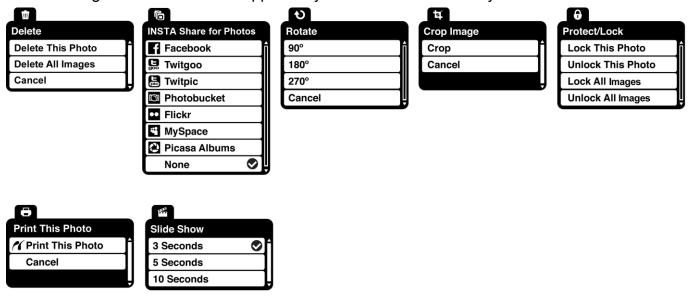

Delete Menu

While in the Playback Mode, you can delete pictures from your camera through the 'Delete' menu.

- 1) Select the photo you would like to delete.
- 2) Press the **MENU** button to open the menus for the current mode.
- Press the LEFT or RIGHT button to scroll and select the 'Delete' menu.
- 4) Press the **UP** or **DOWN** button to highlight a specific option.

To delete the selected photo:

Select "Delete This Photo" and press the **MENU** button.

You will be asked to confirm the deletion of the photo.

- If you would like to proceed with deleting the current image, select 'Yes' and press the
 MENU button to confirm. The photo will be deleted and you will exit the menu and return to the Playback mode.
- If you do not want to delete the current image, select 'No' and press the MENU button.
 The photo will not be deleted and you will exit the menu and return to the Playback mode.

To delete all the images (videos and photos) you have saved on your SD Memory card:

Select 'Delete All Images' and press the **MENU** button.

If you would like to proceed with deleting all the videos and photos, select 'Yes' and press
the MENU button to confirm.

All of your images will be permanently deleted.

A blank 'No Files Exist' screen will appear.

Press the **MODE** button to exit the 'No Files Exist' screen and return to Photo Capture mode.

Remember: All images will be deleted except images that are Protected/Locked. To delete a locked image, first unlock the image, then select delete.

If you do not want to delete all of your videos and photos, select 'No' and press the MENU
button. All images will remain on your SD card and you will exit the menu and return to
the Playback mode.

ViviLink for Photos

The ViviLink technology allows you to quickly and easily upload your camera's photos and videos to the social networks of your choice with the accompanying Vivitar Experience Image Manager application.

- 1) Select the photo you to which you would like to add a ViviLink destination.
- 2) Press the **MENU** button to open the menus for the current mode.
- 3) Press the **LEFT** or **RIGHT** button to scroll and select the 'ViviLink for Photos' menu.
- 4) Press the **UP** or **DOWN** button to highlight a specific option.
- 5) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 6) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 7) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

Note:

• An icon appears on the image with the selected ViviLink destination site when you return to

the Playback display.

- Remember that the ViviLink feature is deactivated by default. A ViviLink destination will only
 be assigned to a photo or video if you manually set it from this menu or from the ViviLink
 menu in Capture mode.
- Changing the ViviLink destination site will also make the selected site the new default ViviLink option. A new default can be selected at any time through this menu.

Rotate Menu 👏

Use this menu to rotate the pictures that you've taken with your camera.

- 1) Select the photo you would like to rotate.
- 2) Press the **MENU** button to open the menus for the current mode.
- 3) Press the **LEFT** or **RIGHT** button to scroll and select the 'Rotate' menu.
- 4) Press the **UP** or **DOWN** button to highlight a specific option.
- 5) Press the **MENU** button to confirm and select the highlighted menu option.
- 6) The selected picture now appears rotated in the Playback Mode display.

You can crop any picture on your camera with the Crop feature.

- 1) View the photo you would like to crop.
- 2) Press the **MENU** button to open the menus for the current mode.
- 3) Press the **LEFT** or **RIGHT** button to scroll and select the 'Crop' menu.
- 4) Press the **UP** or **DOWN** button to highlight the 'Crop' option.
- 5) Press the **MENU** button to select and open the Crop option.
- 6) The Crop window opens on the selected picture.

To define the desired crop area:

- Use the **W** and **T Zoom** buttons on the camera to increase or decrease the Crop box size.
- Use the directional buttons to move the Crop box up, down, right or left.
- 7) When you are ready to crop, press the **Shutter** button.

- 8) When you see the cropped picture appear, press the **Shutter** button again to save or press the **MENU** button to cancel and return to the previous menu.
- 9) If you selected to save, the cropped picture is saved as a new image to your memory card.

Protect/Lock Menu 9

Pictures and videos taken with your camera can be protected or "locked" to prevent any deletion or alteration being made to the files.

- 1) View the photo you would like to protect/lock.
- 2) Press the **MENU** button to open the menus for the current mode.
- 3) Press the **LEFT** or **RIGHT** button to scroll and select the 'Protect/Lock' menu.
- 4) Press the **UP** or **DOWN** button to highlight a specific option.

To Lock the Selected Image:

To lock the selected image use the **UP** or **DOWN** button to highlight 'Lock This Photo' and then press the **MENU** button. The image now appears in Playback Mode with the lock icon **6**.

To Unlock the Selected Image:

To unlock the selected locked image use the **UP** or **DOWN** button to highlight 'Unlock This Photo' and then press the **MENU** button. The image now appears in Playback Mode without the lock icon.

To Lock All Images:

To lock all captured videos and photos use the **UP** or **DOWN** button to highlight 'Lock All Images' and then press the **MENU** button. All images now appear in Playback Mode with the lock icon **6**.

To Unlock All Images:

To unlock all locked videos and photos use the **UP** or **DOWN** button to highlight 'Unlock All Images' and then press the **MENU** button. The images now appear in Playback Mode without the lock icon.

5) Press the **MODE** button at any time to exit the menu and return to your previous mode.

Note:

- Any image that is locked displays a lock symbol on the LCD screen when viewing that image in the Playback Mode. Photos that are not locked do not display the lock symbol.
- Remember that you cannot delete or edit photos while they are locked.

Print This Photo Menu

You can use the 'Print Photos' menu to print the photos that are on your camera directly to a Pictbridge compatible printer.

- 1) Scroll through your pictures and find the one you would like to print.
- 2) Press the **MENU** button to open the menus for the current mode.
- 3) Press the **LEFT** or **RIGHT** button to scroll and select the 'Print This Photo' menu.
- 4) Press the **UP** or **DOWN** button to highlight a specific option.
- 5) Select 'Print This Photo' and press the **MENU** button to print the selected photo.
- 6) You will be asked to connect the camera to the Pictbridge printer.
- 7) Connect the USB cable provided in the package from the camera to the Pictbridge port of the printer.
- 8) Once connected, follow the instructions on the printer to proceed with the printing process.
- 9) Select the 'Cancel' option to exit the menu and return to the previous mode.

Slide Show Menu 🛎

You can view a Slide Show of all the pictures taken with your camera by pressing the **UP** Quick Function button while in Photo Playback Mode. The 'Slide Show' menu allows you to set the interval length of time that each picture displays during the Slide Show.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** direction control button to scroll and select the 'Slide Show' menu.
- 3) Setting up the Interval:

Press the **UP** or **DOWN** direction control button to scroll through the menu options.

Select the 3, 5, or 10 second interval option, then press **MENU** to confirm.

- A selected option icon appears on the selected item.
- 4) To continue within the menus and select a different menu option:

Press the **LEFT** or **RIGHT** button to select the next menu item.

5) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

Note: Beginning the Slide Show:

- While in Playback Mode and viewing a photo, press the UP Quick Function button to initiate the Slide Show.
- To exit the Slide Show and return to the previous mode, press any button.

Video Capture Mode

The Video Capture Mode allows you to capture videos with your digital camera.

When the camera is first powered ON, the camera will be in Photo Capture Mode.


Press the MODE (M) button once to access the Video Capture Mode.

TAKING A VIDEO

1) Selecting the Scene with the LCD Display:

While in Video Capture Mode use the LCD display to direct the camera at the scene you would like to capture.

- 2) Zoom Options:
 - Press the T/Zoom In and W/Zoom Out buttons to zoom in/out if desired.
 - As you press the Zoom buttons, a bar indicator moves up and down the rectangular box according to the zoom used.
 - The following Zoom Indicator appears on the right side of the LCD screen:

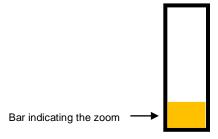

- 3) Capturing the Video:
 - Press the Shutter button to START the video capture.
 - A red, blinking icon appears at the top of the LCD screen indicating that the recording is in progress.
 - To STOP the video recording, press the **D** Shutter button again.
 - The video is automatically saved to the camera's SD Memory card.

VIDEO CAPTURE MODE QUICK FUNCTION BUTTONS

Quick Function	Description	
Button		
≺ LEFT \$	NAVIGATES MENU: Navigates within the Menus.	
➤ RIGHT ▶	PLAYBACK: Opens the Playback Mode.	
	NAVIGATES MENU: Navigates within the Menus.	
▲ UP/T	ZOOM: Zooms IN	
A UP/ I	NAVIGATES MENU: Navigates within the Menus.	
Y DOWN / W	ZOOM: Zooms OUT	
➤ DOWN / W	NAVIGATES MENU: Navigates within the Menus.	


Other

SHUTTER	•	START/STOP: Starts and stops the video capture.	
	•	VIDEO CAPTURE MENU: Opens and exits the menu options for	
	Video Capture Mode		
■ MENU		NOTE: Use the UP/DOWN/LEFT/RIGHT buttons to navigate.	
	•	ENTERS and SAVES SELECTION: Within the Menu, enters and	
		saves the selected Menu Option.	
	•	MODE SELECT: Toggles between the Photo Capture Mode and	
MODE (M)	ODE (M) Video Capture Mode		
	•	EXITS MENU: Exits the menu screen.	

VIDEO CAPTURE MODE MENUS

The following are the menus that appear in your camera's Video Capture Mode:

- The Selection icons below appear by the default settings.
- Once you change a setting, the setting is saved by your camera until you manually change the setting or restore the camera's default factory settings.

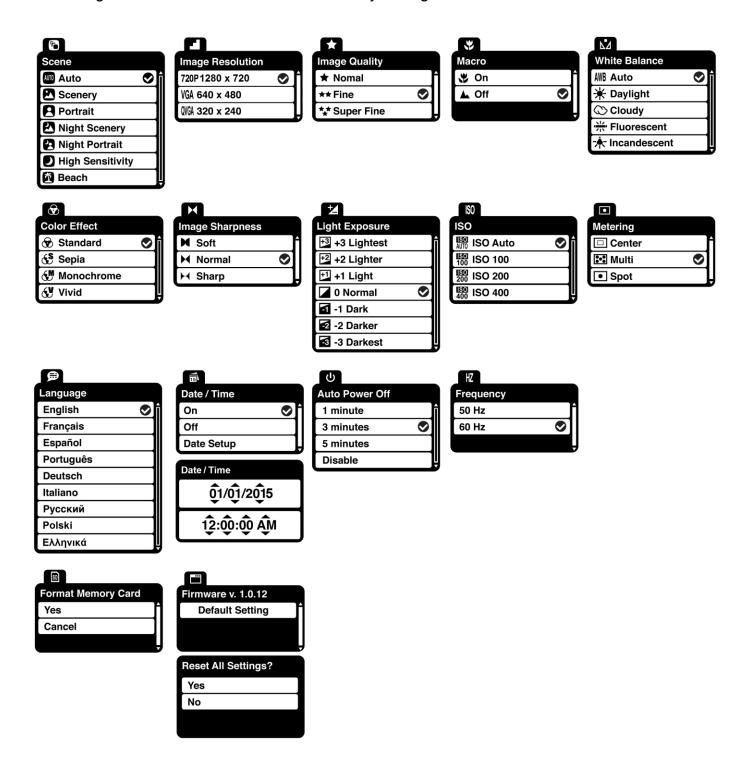

Scene Menu

The 'Scene' menu allows you to choose scene settings that let your camera to adapt properly to your current environment.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Scene' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

Image Resolution Menu

The 'Image Resolution' menu allows you to choose the desired size of the images taken by your camera. Keep in mind that images with a higher resolution will also take up more of your camera's memory.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Image Resolution' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

Image Quality Menu *

The 'Image Quality' menu allows you to select the desired quality level of the images taken by your camera. Keep in mind that images with a higher image quality level will also take up more memory on your camera.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Image Quality' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

Macro Menu 🖐

With the 'Macro' feature you can capture images at close range (30 ~ 45 cm).

MACRO ON: To enable the Macro mode, select 'On'.

- The flower icon
 [♣] appears on the LCD display and indicates that the Macro mode is ON.
- When enabled, the Macro mode will allow your camera to focus on an object that is close to the camera.

MACRO OFF: To disable the Macro mode select 'Off'.

- The mountain icon A appears on the LCD display.
- When Macro mode is off, images can be captured from 1.5m ∞ (infinity).

Note: The **MACRO** mode must be turned **OFF** (♠) when you want to use the following feature of your camera: **Flash**.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Macro' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.

- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

White Balance Menu M

The 'White Balance' feature allows your camera to adjust the coloring of the captured images depending on the type of light source in the current environment.

Properly adjusting the White Balance setting to match your current environment will allow the camera to properly balance the colors in the images that are taken with your camera.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'White Balance' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

Color Effect Menu ®

The 'Color Effect' menu allows you to choose a color effect to add to the images taken with your camera.

1) Press the **MENU** button to open the menus for the current mode.

- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Color Effect' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.

Image Sharpness Menu M

Using the 'Image Sharpness' menu you can set the level of sharpness in the images taken with your camera. The sharpness level dictates if the edges of objects in the image are more or less distinct.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Image Sharpness' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

Light Exposure Menu 4

The 'Light Exposure' setting helps you control the amount of light that enters your camera's lens.

This setting should be adjusted when the environment is lighter or darker than normal.

When the environment has more light than is needed, reduce the exposure setting (by using the

negative - count) to reduce the amount of light allowed into the lens by your camera.

If the environment has less light (darker) than is needed, increase the exposure setting (by using the positive + count) to increase the amount of light allowed into the lens by your camera.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Light Exposure' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:
 - Press the **MODE** button to exit the menu and return to your previous mode.
 - An icon reflecting your selection is displayed on the LCD screen.

ISO Menu ISO

The 'ISO' menu allows you to set the level of sensitivity that your camera has to light in the surrounding environment. When the ISO level is increased, the image sensor in your camera will be more sensitive to light and allow you to capture images in lower-light situations. The higher sensitivity to light however, may reduce the quality of the images that are taken.

When the ISO is reduced, the image sensor in your camera will be less sensitive to light and will optimize the image quality in environments with bright lighting.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'ISO' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.

6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

An icon reflecting your selection is displayed on the LCD screen.

Metering Menu •

The 'Metering' setting will affect how your camera focuses when capturing an image. Depending on your selection, the camera will be more sensitive to focusing on particular areas in the display and adjust the image color and lighting accordingly.

Center – Averages the light metered from the entire frame, but giving greater weight to the subject in the center

Multi – Used in standard conditions the camera divides and adjusts the settings of the image into several zones for light metering such as complex light conditions, position of subject, brightness, background, direct light and scenes

Spot – Meters the area within the spot point frame at the center of the LCD to set the exposure on the subject in the center of the monitor.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Metering' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

An icon reflecting your selection is displayed on the LCD screen.

Language Menu 🖻

You can select your camera's language setting by selecting the desired language from the 'Language' menu.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Language' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

Date/Time Menu 🗐

When you capture an image with your camera, the image will include a time stamp with the date and time that the image was taken.

The Date/Time menu allows you to set your camera's date and time as desired. You can also disable the timestamp for future images that will be taken with your camera.

The following are the timestamp options:

- **On** The timestamp will appear on photos taken.
- **Off** The timestamp will not appear on photos taken.

To Enable/Disable the Timestamp:

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Date/Time' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:

Press the **LEFT** or **RIGHT** button to select the next menu item.

6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

To Set the Date and Time:

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Date/Time' menu.
- 3) Press the **UP** or **DOWN** button to highlight the 'Date Setup' menu option, then press the **SET** button to select the option.
- 4) The 'Date Setup' submenu will open.
- 5) Scroll through the window with the **RIGHT** and **LEFT** buttons.
- 6) For each field in the menu, use the **UP** and **DOWN** buttons to set the date and time.
- 7) When you have finished setting the date and time, press the **MENU** button to save your settings and return to the previous mode.
- 8) Press the **MODE** button to exit the menu without saving your settings and return to your previous screen.

Auto Power Off Menu (b)

You can use the 'Auto Power Off' feature in order to conserve you camera's battery life. The designated time represents when your camera will automatically power off.

When the camera sits idle for the designated period of time, the camera will shut off completely and will need to be powered on again with the power button before the next use.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Auto Power Off' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

Frequency Menu HZ

The options in the 'Frequency' menu represent the frequency of the electrical current in fluorescent lighting sources in your locale. If your camera is set to a frequency that does not match your country's electric current, you may see waves on the images taken by your camera.

50Hz – UK, Europe and Australia

60Hz – US, Canada and South America

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Frequency' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option.
- 4) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 5) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 6) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

You can use the 'Format Memory Card' menu to delete all of the content that is currently on your camera's memory card.

Keep in mind that formatting the memory card will permanently delete all of the content on your camera's memory card.

This option will delete all of the content at one time. If you would like to delete individual images, use the delete menu in the camera's Playback mode.

Note: Restoring factory defaults or formatting the camera may result in the loss of data.

Please ensure you have backed up your images before you attempt this.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Format Memory Card' menu.
- 3) Press the **UP** or **DOWN** button to highlight a specific option:
 - <u>CANCEL</u>: To exit without formatting the SD Memory Card, select 'Cancel' and press the

MENU button.

- <u>FORMAT</u>: To proceed with the format, select "Yes" and press the **MENU** button.

You will be asked to confirm the formatting of the memory card.

- Select 'No' and press the **MENU** button to exit without formatting.
- Select 'Yes' and press the MENU button to begin the format.

The memory card will be completely formatted.

Firmware (Factory Default Settings) Menu

Use the 'Firmware' menu to view the Firmware version on your camera or to reset your camera settings to the Factory Default Settings.

- 1) Press the **MENU** button to open the menus for the current mode.
- 2) Press the **LEFT** or **RIGHT** button to scroll and select the 'Firmware' menu.
- 3) The 'Default Setting' option is automatically selected.
- 4) Press the **MENU** button to reset the camera to the Factory Default Settings.

You will be asked to confirm the resetting to the Factory Default Settings.

- Select 'No' to exit the menu and return to the previous mode without resetting to the default settings.
- Select 'Yes' and press the **MENU** button to proceed with the reset.

You will then automatically exit the menu and return to the previous mode with the digital camera settings set to the Factory Default Settings.

Note: After RESETTING to the default settings, it is recommended to select your system Language, Date/Time and ViviLink for Photos and Videos. If you do not, the next time your camera is powered on, you will be prompted to define those settings.

Video Playback Mode

The Playback Mode allows you to review and edit photos and videos that you've already taken with you camera.

- When you first turn on the camera, the camera will be in Photo Capture mode by default.
- Press the PLAYBACK button to open the Playback Mode.
 Press the MODE (M) button to exit the Playback Mode and return to Capture Mode.
- The latest captured image appears on the LCD screen. If there are no images stored, a message (No File) appears.
 - Videos appear with 'AVI' on the top left, and photos appear with 'JPG'.
- The image counter is displayed on the top right of the LCD screen, indicating the number of the selected image and the total number of images captured.

VIEWING VIDEOS ON YOUR CAMERA

1) <u>Selecting Your Video:</u>

- Once in Playback Mode, press the LEFT or RIGHT button to scroll through the images on your camera's memory card until you find the image you would like to view.
 - Press the LEFT button to view the previous image.
 - Press the **RIGHT** button to view the next image.
- Each captured image (video and photo) is displayed on the LCD screen.

Playing Your Selected Video:

- START: Press the **SHUTTER** button to start playing the video.
- PAUSE: Press the SHUTTER button to pause and then press again to continue playing the video.
- STOP: Press the **UP** button to stop playing the video.

NOTE: The camera does not include a speaker. In order to hear the audio captured with your videos, please connect to your computer using the supplied USB cable to play directly or download the file and then play from your computer. For details see the following sections:

Getting Photos and Videos from your Camera to Your Computer

Transferring Images from my Camera to my Computer Manually

THUMBNAIL VIEW

Easily navigate and select the image you wish to view by using the Thumbnail View.

The images on your camera will be displayed in a 3 X 3 matrix where you can use the direction buttons to scroll and select images from the thumbnails.

To access the Thumbnail View:

- 1) Press the PLAYBACK button to open the Playback Mode.
- Press the **DOWN** button.
 All the images (photos and videos) on your camera will appear in the **Thumbnail View.**
- Use the UP, DOWN, LEFT, and RIGHT buttons to scroll and select the image you wish to view.
- 4) Press the **SHUTTER** button to enlarge the selected image full size.

 Once the selected video is full size you can play and view the video.

VIDEO PLAYBACK MODE QUICK FUNCTION BUTTONS


Quick Function	Description			
Button				
≺ LEFT 4	PREVIOUS IMAGE: Displays the previous image.			
	NAVIGATES MENU: Navigates within the Menus.			
➤ RIGHT •	PLAYBACK: Opens the Playback Mode.			
	NEXT IMAGE: Displays the next image.			
	NAVIGATES MENU: Navigates within the Menus.			
▲ UP/T	STOP VIDEO: During Video Playback, stops the video playback.			
	NAVIGATES MENU: Navigates within the Menus.			
➤ DOWN/W	THUMBNAIL VIEW: Opens the Thumbnail View. To navigate in the			
	Thumbnail View press the UP/DOWN/LEFT/RIGHT buttons and the			
	SHUTTER button to select an image.			
	NAVIGATES MENU: Navigates within the Menus.			

Other

	-			
	IMAGE SELECTION: In Thumbnail View, confirms and opens the image to			
SHUTTER	full size.			
	START/PAUSE: During Video Playback, stops and pauses the playing			
	video.			
■ MENU	PLAYBACK MENU: Opens and exits the menu options for Playback Mode.			
	NOTE: Use the UP/DOWN/LEFT/RIGHT buttons to navigate.			
	ENTERS and SAVES SELECTION: Within the Menu, enters and saves			
	the selected Menu Option.			
MODE (M)	MODE SELECT: Toggles between the Photo Capture Mode and Video			
	Capture Mode.			
	EXITS MENU: Exits the menu screen.			

VIDEO PLAYBACK MODE MENUS

The following are the menus that appear in your camera's Video Playback Mode:

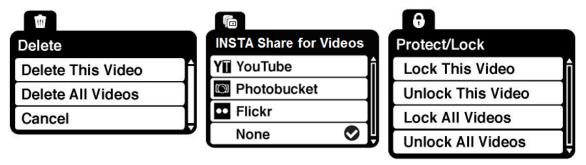

Delete Menu

While in the Playback Mode, you can delete videos from your camera through the 'Delete' menu.

- 1) Select the video you would like to delete.
- 2) Press the **MENU** button to open the menus for the current mode.
- 3) Press the **LEFT** or **RIGHT** button to scroll and select the 'Delete' menu.
- 4) Press the **UP** or **DOWN** button to highlight a specific option.

To delete the selected video:

Select "Delete This Video" and press the **MENU** button.

You will be asked to confirm the deletion of the video.

- If you would like to proceed with deleting the current image, select 'Yes' and press the
 MENU button to confirm. The video will be deleted and you will exit the menu and return to the Playback mode.
- If you do not want to delete the current image, select 'No' and press the MENU button.
 The video will not be deleted and you will exit the menu and return to the Playback mode.

To delete all the images (videos and photos) you have saved on your SD Memory card: Select 'Delete All Images' and press the **MENU** button.

• If you would like to proceed with deleting all the videos and photos, select 'Yes' and press the **MENU** button to confirm.

All of your images will be permanently deleted.

A blank 'No Files Exist' screen will appear.


Press the **MODE** button to exit the 'No Files Exist' screen.

Remember: All images will be deleted except images that are Protected/Locked. To delete a locked image, first unlock the image, then select delete.

If you do not want to delete all of your videos and photos, select 'No' and press the MENU
button. All images will remain on your SD card and you will exit the menu and return to
the Playback mode.

ViviLink for Videos

application.

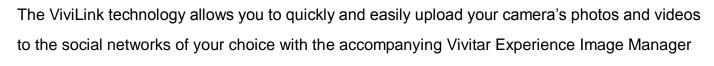

Remember: You can also easily access the ViviLink menu by pressing the **ViviLink** (**DOWN**) button.

- 1) Select the video you to which you would like to add a ViviLink destination.
- 2) Press the **MENU** button to open the menus for the current mode.
- 3) Press the **LEFT** or **RIGHT** button to scroll and select the 'ViviLink for Videos' menu.

- 4) Press the **UP** or **DOWN** button to highlight a specific option.
- 5) Press the **MENU** button to confirm and select the highlighted menu option.
 - A Selected option icon appears on the selected item.
- 6) To continue within the menus and select a different menu option:
 - Press the **LEFT** or **RIGHT** button to select the next menu item.
- 7) To exit the menu view:

Press the **MODE** button to exit the menu and return to your previous mode.

Note:

- An icon appears on the image with the selected ViviLink destination site when you return to the Playback display.
- Remember that the ViviLink feature is deactivated by default. A ViviLink destination will only
 be assigned to a photo or video if you manually set it from this menu or from the ViviLink
 menu in Capture mode.
- Changing the ViviLink destination site will also make the selected site the new default ViviLink option. A new default can be selected at any time through this menu.

Protect/Lock Menu 6

Pictures and videos taken with your camera can be protected or "locked" to prevent any deletion or alteration being made to the files.

- 1) View the video you would like to protect/lock.
- 2) Press the **MENU** button to open the menus for the current mode.
- 3) Press the **LEFT** or **RIGHT** button to scroll and select the 'Protect/Lock' menu.
- 4) Press the **UP** or **DOWN** button to highlight a specific option.

To Lock the Selected Image:

To lock the selected image use the **UP** or **DOWN** button to highlight 'Lock This Video' and then press the **MENU** button. The image now appears in Playback Mode with the lock icon



To Unlock the Selected Image:

To unlock the selected locked image use the **UP** or **DOWN** button to highlight 'Unlock This Video' and then press the **MENU** button. The image now appears in Playback Mode without the lock icon.

To Lock All Images:

To lock all captured videos and photos use the **UP** or **DOWN** button to highlight 'Lock All Images' and then press the **MENU** button. All images now appear in Playback Mode with the lock icon **6**.

To Unlock All Images:

To unlock all locked videos and photos use the **UP** or **DOWN** button to highlight 'Unlock All Images' and then press the **MENU** button. The images now appear in Playback Mode without the lock icon.

5) Press the **MODE** button at any time to exit the menu and return to your previous mode.

Note:

- Any image that is locked displays a lock symbol on the LCD screen when viewing that image in the Playback Mode. Videos that are not locked do not display the lock symbol.
- Remember that you cannot delete videos while they are locked.

Installing the Software

INSTALLING THE SOFTWARE - USING THE CD ROM

You must be connected to the Internet to install and run the Vivitar Experience Image Manager Software.

 Insert the installation CD into your CD-ROM drive. The installation screen should automatically open.



- 2) On WINDOWS OS: The Vivitar Experience Image Manager Installer window appears. If the window does not appear, open the application's CD/DVD drive and click on "Setup.exe" to launch the installer.
- On MACINTOSH OS: Click the icon that appears on the desktop to install the Vivitar Experience Image Manager.
- 4) If you do not have Internet access at the time of inserting the CD-ROM, connect to the Internet and then click the "Install Vivitar Experience Image Manager" button to begin the installation.



NOTE: If you do not have Internet access, you can still download media from the

- camcorder. Click the "How to transfer photos and videos from my camera to my computer" button for instructions.
- 5) If you have Internet access, the "Choose your language" window opens, choose your language and click "Next" to open the next window.
- 6) Select your camera model from the list and click "Next" to open the next window.
- 7) Click "Next" to confirm your camera model selection and to install the application.
- 8) Please wait while the application is being installed on your computer.
- 9) Please review the license terms.
 On WINDOWS OS and Macintosh: Click the "I accept the terms of this license agreement" and then click "Next" to continue.
- 10) On WINDOWS OS only: Let the "Vivitar Experience Image Manager" installer create the folder to where the program will be installed, and then click "Install".
- 11) Please wait while the application continues the installation process on your computer.

 On MACINTOSH OS: If needed, please follow instructions to install the Adobe® Flash® Player. This requires Internet connection.
- 12) On WINDOWS OS: Click the "Close" button when the installation is complete.

 Click the "Launch Vivitar Experience Image Manager" to open the application.
- 13) On MACINTOSH OS: Click the "Quit" button when the installation is complete.

 Click the "Launch Vivitar Experience Image Manager" to open the application.
- 14) If you close the application you can run the Vivitar Experience Image Manager from the Programs (PC) or Applications (Mac) menu on your computer.



INSTALLING THE SOFTWARE – USING THE ONLINE LINK

The Vivitar Experience Image Manager Software can also be downloaded and installed via the following online links:

WINDOWS OS: http://tinyurl.com/viviwin

MAC OS: http://tinyurl.com/vivimac

- 1) Enter the appropriate URL (shown above) into a web browser on your computer.
- 2) The file for installing the software automatically begins to download to your computer.
 Please note that the web page appears empty, however the download automatically begins.
- 3) Locate the downloaded application files on your computer's 'Downloads' folder once the download is complete:
 - On WINDOWS OS the file name is: vivitargeneric_win.exe
 - ON MAC OS in file name is: vivitargeneric_mac.pkg
- Double click on the downloaded application file to install the Vivitar Experience Image Manager Software.
- 5) Follow all instructions
- 6) Once installation is complete, the Vivitar Experience Image Manager opens automatically.

CONNECTING THE CAMCORDER TO THE COMPUTER

- 1) Use the supplied USB cable to connect your camcorder to your computer.
- Power the camcorder ON if it does not turn on automatically upon the connection to the computer.
- 3) The first time you connect the device to the computer you may have to wait a few seconds until the computer recognizes the device.

GETTING VIDEOS AND PHOTOS FROM THE CAMCORDER TO THE COMPUTER

The Micro SD Memory card needs to be inserted. Do not disconnect the cable during transfer. Doing so will cancel the transfer of any files on their way to your computer.

1. Select the "Get Images" button from the Main menu.



- 2. The "Get media from device" window opens.
- 3. You can select to download photos, videos or both.
- Select your camera (removable disk) from the device window. If your camera is the only USB device connected then it will be selected automatically.
- 5. Select a location on the computer where to place the new photo and video files.
- 6. Add the new photo and video files to albums if desired.
- 7. Select to remove the media files from the selected device (removable disk) after the import.
- 8. Click the "Get Media" button to transfer the files from your camera to your computer.
- 9. A media download progress bar appears on the bottom left showing the number of media files downloading to your computer. A message appears when the download is complete.
- 10. The photo and video files that you selected are now downloaded to your computer to the selected folder ready for your use.

GETTING STARTED!

Using the Vivitar Experience Image Manager you can:

- Upload and manage videos to and from the most popular photo sharing and social networking sites - Facebook, Flickr, Picasa, MySpace, Photobucket, Twitter, and YouTube
- Seamlessly transfer photos and videos from one social network to another
- Organize your images by creating offline and online albums
- Edit images using automatic and manual tools
- Use automatic "Geotagging" with built in Google Maps

For more details on how to use the Vivitar Experience Image Manager open the Help file or click the "Take a Tour" button on the application's Home screen.

Transferring Images from my Camera to my Computer Manually

TRANSFERRING PHOTOS AND VIDEOS: WINDOWS

- 1) Use the USB cable that came with your camera to connect your camera to your computer.
- 2) MSDC appears on the LCD.
- 3) A window appears with a list of options, select "Open folder to view files" and click OK.
- 4) Open the DCIM folder and the folder inside to view the media files.
- 5) Select the media and copy the files from this folder into your computer. Optionally, select the files and choose Copy from the Edit menu. Then select a folder and choose Paste from the Edit menu.
- 6) We recommend that you copy the images into the Pictures/My Pictures folder and the videos into the Videos/My Videos folder.
- 7) Do not disconnect the cable during transfer. Doing so will cancel the transfer of any files on their way to your computer.

TRANSFERRING PHOTOS AND VIDEOS: MACINTOSH

- 1) Use the USB cable that came with your camera to connect your camera to your computer.
- 2) MSDC appears on the LCD.
- 3) The camera's device icon appears on the desktop.
- 4) Click on the device icon and open the DCIM folder and the folder inside to view the media files.
- Select the files and drag them into your computer. Optionally, select the files and choose Copy from the Finder's Edit menu. Then select a folder and choose Paste from the Edit menu.
- 6) We recommend that you copy the images into the Pictures folder and the videos into the Movies folder.
- 7) Do not disconnect the cable during transfer. Doing so will cancel the transfer of any files on their way to your computer.

TRANSFERRING PHOTOS AND VIDEOS: APPLE IPAD

NOTE: Please check your device packaging for compatibility with the iPad.

Apple iPad Camera Connection:

For models that are compatible with the iPad, photos and videos can be imported from your digital camera to your iPad by following either one of the options below:

Connecting your digital camera to your iPad using an iPad Camera Connector:
 Plug the Camera Connector into the dock connector port on your iPad, and then attach your digital camera using a USB cable (included) to the Camera Connector.

NOTE: The iPad Camera Connector is not included. This item may be purchased separately.

2) Using an iPad SD Card Reader:

Connect the SD Card Reader to your iPad, then insert your digital camera's SD Memory card into the slot to import photos and videos directly from your camera's SD card.

NOTE: The iPad SD Card Reader is not included. This item may be purchased separately. After you make the connection, your iPad automatically opens the 'Photos' application. This allows you to choose which photos and videos to import and to organize them into albums.

Camera Maintenance

The digital camera is a delicate device.

Please handle your camera with care to avoid damaging it.

Do not expose your camera to heat sources.

Warranty Card

This warranty covers for the original consumer purchaser only and is not transferable. Products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship will be repaired at no charge for parts or labor for a period of one year from the time of purchase.

What Is Not Covered By Warranty:

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

What to Do When Service Is Required:

When returning your defective product (postage pre-paid) for service, your package should include:

- 1) Copy of **original** bill of sale.
- 2) A detailed written description of the problem.
- 3) Your return address and telephone number (Daytime).

MAIL TO ADDRESS BELOW:

Sakar US	Sakar UK/Europe	Sakar Australia
Sakar International	Attention: Service Department	Return faulty camera to
Attention: Service Department	2D, Siskin Parkway East	the Refund Counter at
195 Carter Drive	4020 Middlemarch Business Park	the store where
Edison, NJ	Coventry, CV3 4SU	purchased
08817		

Technical Support

For technical support issues please visit our website at www.vivitar.com. You can find manuals, software and FAQ's at the website. Can't find what you are looking for? E-mail us at support@vivitar.com and one of our technical support team members will answer your questions. For phone support in the US please call 1-800-592-9541, in the UK call 0800 917 4831, in Australia call 1800-006-614. If you would like to call from anywhere else, please visit www.vivitar.com for your local toll free number.

Troubleshooting

Q: I have taken photos and selected the "Get Images" button. I get a message that the images were successfully transferred but the photos do not appear on my computer. What do I do?

First ensure that you have in fact taken photos. Press the Shutter button to take some sample photos and then try downloading them again.

With test photos, if the camera's power is off before you upload them to the computer, the photos are not stored in the camera's memory. These photos should be uploaded quickly before the camera's power is off. If the photos are saved to the SD memory card, then all the photos should appear.

Q: How do I make sure I don't lose important pictures?

This camera requires an SD card for normal use. If the camera's power is off, nothing will happen to the images stored on the SD memory card. We recommend always downloading your photos to your computer as soon as possible to prevent unintentional data loss.

Q: I deleted images using the Vivitar Experience™ Image Manager. The images were also deleted from my computer. How do I recover images that I accidently deleted?

All images deleted using the Vivitar Experience™ Image Manager are sent to your computer's Recycle or Trash Bin and can be retrieved from there.

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates. Uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or –television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different form that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

ViviCamS048_1.0_050516-TA_FW_JL2275A/MI5140