



MOD007

有线键盘用户手册

User Manual

 
快速开始指南 ►
Quick Start Guide

感谢您购买及使用本产品



为了给您带来更好的使用体验，在使用产品前请仔细阅读本说明书，并请妥善保管，以便日后参观。

产品概览

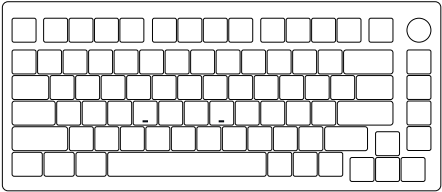

系统需求

Windows®XP / Vista / 7 / 8 / 10或更高版本


安装步骤

将键盘USB连接线插入电脑的USB接口即可开始使用。

独立指示灯

状态	指示灯位置	指示方式
Caps	Caps按键灯位	白光常亮
锁WIN	左Win键灯位	白光常亮

 MOD007S HE 组合键功能

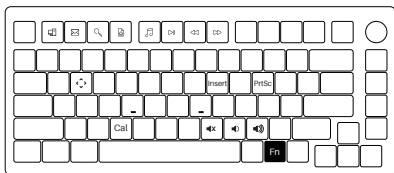

Fn+	F1		我的电脑
	F2		电子邮件
	F3	=	Windows搜索
	F4		浏览器主页
	F5		多媒体播放器

Fn+	F6		播放 / 暂停
	F7		上一首
	F8	=	下一首
	P		Prtsc
	C		计算器

Fn+	I		Insert
	M		静音
	<	=	音量减小
	>		音量增加
	W		将 WASD 与 ↑ ↓ ← → 键对调

调整按键行程快捷键


Fn+1	轴行程为2mm
------	---------

Fn+2	轴行程为0.5mm
------	-----------

Fn+3	行程为0.5mm+火力模式
------	---------------

Fn+4	驱动自定义轴行程通道，默认2mm轴行程
------	---------------------

 MOD007S HE 系统功能 (Windows)

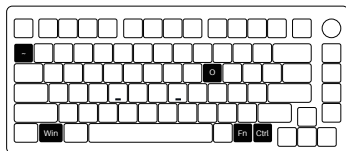

	默认为音量功能
	逆时针为调低音量
	顺时针为调高音量
	按下中间切换为亮度功能
旋钮功能	逆时针为降低亮度
	顺时针为增加亮度

 
锁Win键
Fn + 左Win

WIN系统 ⇌ MAC系统
长按 Fn + O 3秒

恢复出厂设置
长按 Fn + ~ 5秒


切换成菜单键
长按Fn + 右Ctrl 3秒

MOD007S HE 系统功能 (Mac)

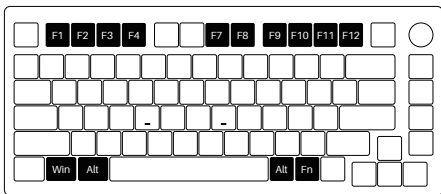

F1	降低显示屏亮度	F7	上一曲	F11	调低音量
F2	增加显示屏亮度	F8	播放/暂停	F12	调高音量
F3	开放任务控制	F9	下一曲	左Win	Option
F4	呼出Siri	F10	静音	左Alt	Command
右Alt	Command	Fn + (F1~12)	F1 ~ F12		

 MOD007S HE 灯光调节

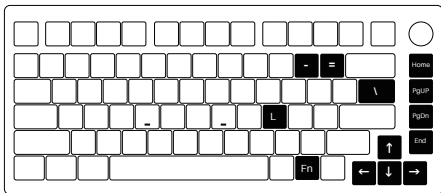

Fn+-	灯光速度变慢	Fn+Home	常亮、涟漪、如影随形、川流不息、流星
Fn+=	灯光速度变快	Fn+PgUp	繁星点点、霓虹、光波、层出不穷、彩泉涌动
Fn+↑	灯光变亮	Fn+End	呼吸、极光、正弦波、雨滴、峰回路转
Fn+↓	灯光变暗	Fn+PgDn	斜风细雨、踏雪无痕、聚合、一石二鸟、百花争艳
Fn+←	灯光方向向左	Fn+\	切换背光致7种单色+RGB循环
Fn+→	灯光方向向右	Fn+L	灯光关闭/开启

按键/灯光自定义说明和调用说明

1. 键盘按键/灯光自定义可配合驱动进行
2. 键盘灯光可搭配驱动实现音乐律动
3. 请在我司官网下载“Akko Cloud”驱动
4. 驱动下载地址www.akkogear.com

AKKO保修和服务声明

1. Akko为中国大陆的客户提供一年保修。对于其他地区，请联系您的卖家（Akko分销商）以了解具体的保修政策。
2. 如果保修期到期，客户需要支付维修费用。如果用户喜欢自己修理键盘，Akko也会提供说明。用户应对自行修复过程中发生的任何损失承担全部责任。
3. 由于私自拆卸产品、使用不当和安装不当而导致的缺陷不在保修范围内。
4. 官方售后服务时间为每周一至周五上午10:00至下午18:00
节假日以国家法定节日休息为准。
5. 退货和保修政策在不同的平台上可能有所不同，并在购买时取决于具体的经销商。

公司：深圳银宸科技有限公司

地址：深圳市宝安区松岗街道碧头第一工业区朗碧路33号

电话：0755-23216420

网址：www.akkogear.com

产地：中国·深圳

Company: Shenzhen Yincheng Technology Co., Ltd

Address: 33 Langbi Rd, Bitou First Industrial Zone, Bao'an District, Shenzhen, China

 


中国制造/Made in China

注意
事项

人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品
请按照电子产品保护方式爱惜使用。

Packing List

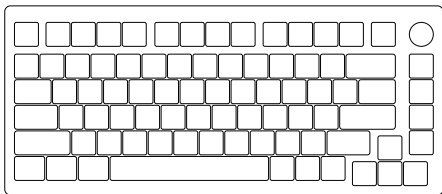

System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version


USB Connection

Connect the keyboard to your computer by plugging in the USB cable into an available USB-A port to start using it.

MOD007S HE LED Indicators

Description	Position	Indicator
Caps	LED for Caps Key	Steady white
Lock Win	LED for left Win Key	Steady white

 MOD007S HE HotKeys

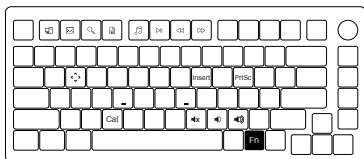

Fn+	F1		My Computer
	F2		E-mail
	F3	=	Windows Search
	F4		Browser Homepage
	F5		Multimedia Player


Fn+	F6		Play/Pause
	F7		Previous Song
	F8	=	Next Song
	P		Print SCR
	C		Calculator

Fn+	I		Insert
	M		Mute
	<	=	Decrease Volume
	>		Increase Volume
	W		Swap WASD with ↑ ↓ ← →

Shortcuts to Adjust Travel Distance

Fn+1	Switch Travel Distance = 2mm	Fn+2	Switch Travel Distance = 0.5mm
Fn+3	Switch Travel Distance = 0.5mm + Ultra Sensitive Mode		
Fn+4	Customize switch actuation distance through Akko Cloud Driver (2mm by default)		

 MOD007S HE System Commands (Windows)

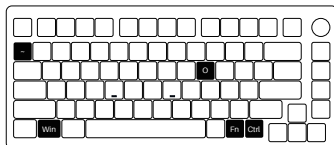

Rotary Knob

Default is volume function;
Rotate counterclockwise to decrease the volume;
Rotate clockwise to increase the volume.

Press the middle to switch to brightness function;
Rotate counterclockwise to decrease brightness;
Rotate clockwise to increase brightness.

 
Restore Factory Settings
Hold down Fn and press ~ Key for 5s

Revert Ctrl into Menu Key
Hold down Fn and press right Ctrl for 3s

Lock Windows Key
Press Fn and Left Win Key


WIN System ⇌ MAC System
Hold down Fn and press O Key for 3s

MOD007S HE System Commands (Mac)

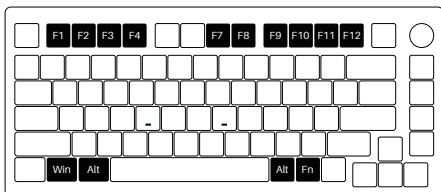

F1	Decrease display brightness	F7	Skip back (Audio)	F11	Volume down
F2	Increase display brightness	F8	Pause/Play (Audio)	F12	Volume up
F3	Open mission control	F9	Skip forward (Audio)	Left Win	Option
F4	Activate Siri	F10	Mute	Left Alt	Command
Right Alt	Command	Fn + (F1~12) F1 ~ F12			

 MOD007S HE Backlight Settings

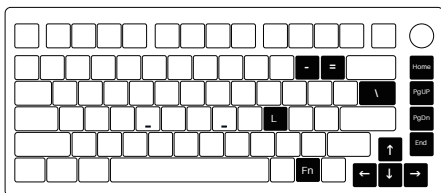

Fn+-	Slower Animation	Fn+Home	Effect1, Effect2, Effect3, Effect4, Effect5
Fn+=	Faster Animation	Fn+PgUP	Effect6, Effect7, Effect8, Effect9, Effect10
Fn+↑	Bright	Fn+End	Effect11, Effect12, Effect13, Effect14, Effect15
Fn+↓	Dim	Fn+PgDn	Effect16, Effect17, Effect18, Effect19, Effect20
Fn+←	Set animation direction to left	Fn+\	This shortcut allows you to set the backlight color to 7 single color with RGB loop effect
Fn+→	Set animation direction to right	Fn+L	Light Off/On

Key Remapping/LED Effects/Customized Actuation Setup Instruction

1. Fundamental features such as key/lighting effects customization can be programmed with Akko Cloud Driver.
2. Hall effect switches related functions can be programmable in Akko Cloud Driver. Please check for the latest firmware and driver for optimized gaming experiences and new features.
3. Users can download the driver via en.akkogear.com.

AKKO Warranty and Service Statement

1. Akko provides One-Year warranty for customers in mainland China. For other regions, please contact your seller (Akko distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. Akko will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Defects resulting from disassembly of our product, improper usage and incorrect installation are not covered by warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Company: Shenzhen Yincheng Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China

Tel: 0755-23216420

Website: www.akkogear.com

Origin: Shenzhen, China



WARNING:
Water and Beverages can't be
poured into the Keyboard.



中国制造/Made in China

Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.



www.akkogear.com



@akkogear



Akko艾酷时尚外设



扫描关注官方微博