


digitech
DAB+ FM Pocket Radio



Model No.: AR1690

INSTRUCTION MANUAL

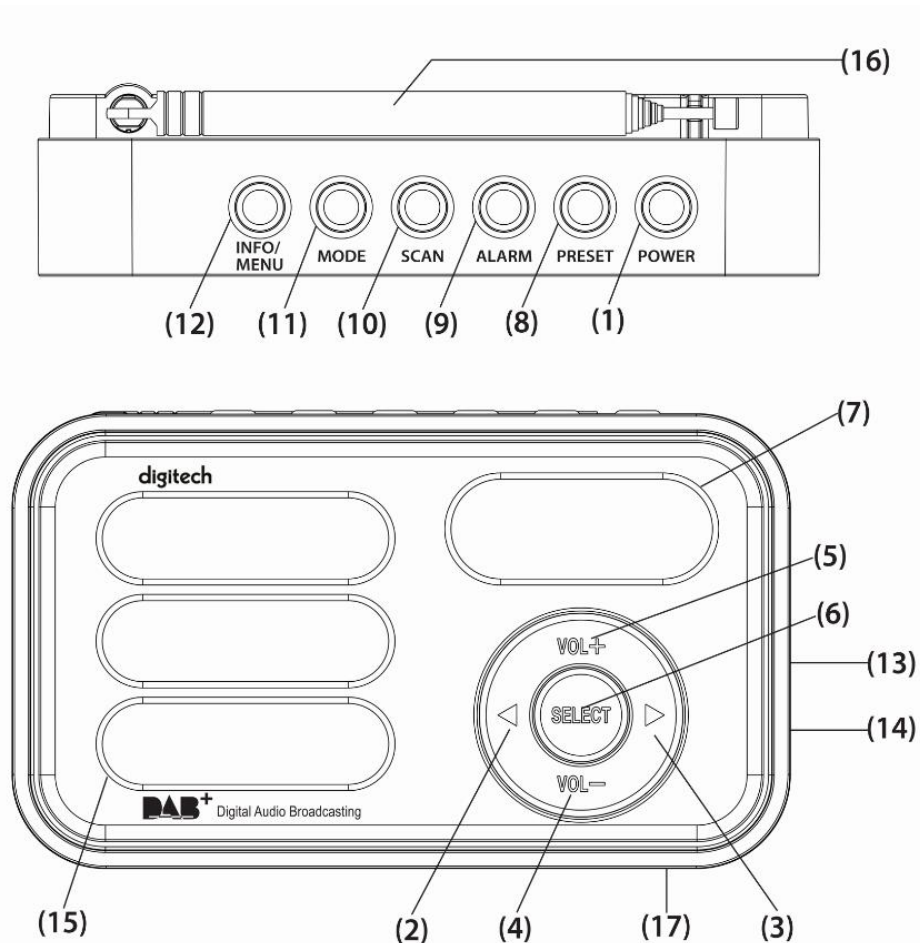

CONTROL LOCATION

1. POWER
2. LEFT (◀ TUNING -)
3. RIGHT (▶ TUNING +)
4. VOLUME -
5. VOLUME +
6. SELECT
7. LCD DISPLAY
8. PRESET
9. ALARM
10. SCAN
11. MODE
12. INFO/MENU
13. HEADPHONE JACK
14. DC CHARGING PORT
15. SPEAKER
16. ANTENNA
17. BATTERY COMPARTMENT COVER (BACK)

OPERATING INSTRUCTION

Battery Supply

Open the battery compartment and insert as indicated in the compartment one Rechargeable Battery, Li-ion 3.7V or 3 x AAA cells.

Battery Charging (using rechargeable battery)

Insert rechargeable battery to the unit.

Connect the unit by inserting the charging cable into DC 5V IN jack, and inserting the other end into the USB interface or USB charger. The charging time is around 2 hours. The charging indicator will flash during battery charging.

DC Adapter

To use 5V AC/DC adapter for external DC charging, plug the connecting cable to the DC charging port. (Voltage adapter is an optional accessory. Do not charge the battery with the AC / DC adapter for more than 24 hours.)

IMPORTANT

If the unit has not been used for a long period of time, the rechargeable battery may be completely discharged into a “sleep mode” condition. This is the characteristics of all the rechargeable battery. For the first time to recharge (to wake up) the battery, it is recommended to charge for a period exceed 5 hours but not exceed 24 hours.

Switch On The Radio

1. Connect the unit with Li-ion 3.7V rechargeable battery or 3xAAA cells or DC adaptor
2. Press **POWER** once to enter DAB / FM Mode
3. During DAB / FM mode, press **POWER** once to standby mode or press and hold **POWER** to switch on / switch off the unit.

DAB Mode

Auto Scan

1. Adjust the antenna extension and angle to have the best reception.
 2. Press **POWER** to switch on the unit.
 3. The first time the radio is powered and switched on, it will automatically select DAB mode and start a quick scan of the DAB channels to search for available stations. Please leave it to complete this process.
 4. Press **LEFT** (◀) or **RIGHT** (▶) to select desired station.
- Note:** You may have to wait for the unit to tune into the new channel.
5. Press **SCAN** can fully scan the available channels again.

Manual Scan

1. Hold **INFO/MENU**, the display shows MANUAL, then press **SELECT**.
2. Press **LEFT** (◀) or **RIGHT** (▶) to select desired channel (5A-13F), press **SELECT** to enter the channel.
3. Select station by using **LEFT** (◀) or **RIGHT** (▶)

FM Radio

1. Press **POWER** to switch on the unit.
2. Press **MODE** to select FM mode.
3. Select your station by using **LEFT** (◀) or **RIGHT** (▶)
4. Or press **SCAN** for auto tuning
 - Press **SCAN** once to forward search next station
 - Hold **SCAN** to backward search previous station
5. Adjust the sound with **VOLUME +** or **VOLUME -**.

DAB / FM Radio Stations Preset:

You can store the frequencies of up to 20 radio stations in the memory. A stored frequency can be erased from the memory by storing another frequency in its place.

1. In DAB or FM mode, tune to your desired station.
2. Hold **PRESET** until the display Preset Empty with flashing 1-20 (1-20 is the preset position number)
 - If the preset number is empty, "Preset Empty" is shown.
 - If the position is saved with station, station frequency is shown.
3. Press **LEFT** (◀) or **RIGHT** (▶) to select the desired memory location.
4. Press **SELECT** once to confirm and save the selected station.
5. To listen to a preset station:
 - Press **PRESET** once,
 - press the **LEFT** (◀) or **RIGHT** (▶) for selecting your desired station and press **SELECT** to confirm.

Setting The Alarm

1. In standby mode
2. Press **ALARM**, to select Alarm 1 / Alarm 2 (ON / OFF is flashing)
3. Press **LEFT** (◀) or **RIGHT** (▶) to change between OFF and ON. Press **SELECT** to confirm.
4. To set the hours, press **LEFT** (◀) or **RIGHT** (▶) *while the display is still flashing*. Press **SELECT** to minute setting.
5. To set the minutes, press **LEFT** (◀) or **RIGHT** (▶) *while the display is still flashing*. Press **SELECT** to confirm.
6. Alarm Mode: Daily, Once, Weekends (Saturday / Sunday, Weekdays (Monday to Friday)), is flashing. Press **LEFT** (◀) or **RIGHT** (▶) to select desired alarm mode and press **SELECT** to confirm.
7. Alarm Type: Beeper, FM, DAB is flashing. Press **LEFT** (◀) or **RIGHT** (▶) to select desired alarm type and press **SELECT** to confirm.
8. Alarm volume is flashing, press **LEFT** (◀) or **RIGHT** (▶) to select desired alarm volume and press **SELECT** to confirm to save the setting and exit.

Snooze Function

1. When your alarm rings, you can press the **SELECT** to temporarily suspend the alarm. The alarm will ring again at 9 minutes later. (The Snooze interval time is 9 minutes).
2. Snooze will be repeated until the **ALARM / POWER** is pressed.

Factory Reset

In DAB or FM mode, press and hold INFO/MENU, then press **LEFT** (◀) or **RIGHT** (▶) and **SELECT** to enter "Factory Reset" and see "No" or "Yes". Press **LEFT** (◀) or **RIGHT** (▶) to "Yes" and press **SELECT** to confirm, then the unit will be reset to original setting.

Volume

Adjust the volume with the controls **VOLUME +** or **VOLUME -**

You may connect headphones with 3.5mm, plug to socket **HEADPHONE**. The loudspeaker is then muted.

Key Lock

Press and hold **SELECT** five seconds to activate key lock function (display shows a lock logo), all keys will be no function. To deactivate the key lock function, press and hold **SELECT** five seconds (lock logo disappear from display).

SPECIFICATIONS

Speaker:	2 inches, 4 ohm dynamic speaker
Power Output:	1.2W
Input Power:	DC 5V
DC Operate:	DC 5V Rechargeable Battery, or DC 4.5V Battery Operation (3 x 1.5V AAA)

PRECAUTIONS:

1. Do not leave the batteries in the compartment for a long time. Remove the batteries to avoid leakage and damage.
2. Do not expose the unit to extreme temperature nor high humidity to ensure normal functioning for a long lifetime.
For instances, never place the unit in bathing areas nor around stoves and radiators.
3. If you find the unit is not working properly, please take it to your nearest services center. Do not attempt to repair by yourself.

WARNING:

To prevent fire or shock hazard, do not expose the unit to rain or moisture.
To avoid electrical shock, do not open the cabinet, refer to service agent or qualified engineer only.