

Canon



https://global.canon/calmanual

- INSTRUCTIONS
- BEDIENUNGSANLEITUNG
- INSTRUCTIONS
- INSTRUCCIONES
- ISTRUZIONI
- INSTRUCTIES
- BRUGERVEJLEDNING
- OHJEET
- INSTRUKTIONER
- INSTRUÇÕES
- ΟΔΗΓΙΕΣ
- ИНСТРУКЦИЯ
- UTASÍTÁSOK
- INSTRUKCJA
- INSTRUCȚIUNI
- POKYNY
- ИНСТРУКЦИИ
- NAVODILA
- UPUTE
- INŠTRUKCIE
- TALIMATLAR
- ПАЙДАЛАНУШЫ НҮСҚАУЛЫҒЫ
- ІНСТРУКЦІЯ З ВИКОРИСТАННЯ

LS-123K

Calculator / Taschenrechner /
Calcolatrice / Calculadora /
Calcolatrice / Calculator /
Räknare / Calculadora /
αριθμητική / Калькулятор /
Számológép / Kalkulator /
Calculator / Kalkulačka /
Калкулятор / Kalkulator /
Kalkulator / Kalkulačka /
Несар макinesi / Калькулятога
Калькулятор



E-IM-3313

123456789012		123456789012
▼ Mixed 140−35+22=127 2x2_③=6 (2+4)÷3x8.1=16.2 −7x9_⑨=−63	ONCA 140 ➔ 35 ➕ 22 ➔ 2 X 2 3 ➔ 2 ➕ 4 ➔ 3 X 8 1 ➔ 7 ⌘ X 99 ➔ ➔	(0.) (127.) (6.) (16.2) (−63.)
▼ Constant 2+3=5 4+3=7 1−2=−1 2−2=0 2x3=6 2x4=8 6÷3=2 9÷3=3	2 ➕ 3 ➔ 4 ➔ 1 ➔ 2 ➔ 2 ➔ 2 X 3 ➔ 4 ➔ 6 ➔ 3 ➔ 9 ➔	(5.) (7.) (−1.) (0.) (6.) (8.) (2.) (3.)
▼ Power, Fraction 3⁴=81 1/5=0.2 1/(2x3+4)=0.1	3 X ➔ ➔ ➔ 5 ➔ ➔ 2 X 3 ➕ 4 ➔ ➔ ➔	(81.) (0.2) (0.1)
▼ Percentage 1200x12%=144 1200x20%=240	1200 X 12 %±	(144.) (240.)
▼ Memory 3x4= 12 −) 6÷0.2= 30 −18 +) 200x2=400 382	ONCA 3 X 4 M± 6 ➔ 2 M± RM CM 200 X 2 M± RM CM RM CM	(0.) (M 12.) (M 30.) (M −18.) (M 400.) (M 382.) (382.)

123456789012		123456789012
▼ Tax Calculation Tax Rate Set Tax Rate = 5% Add the Tax Amount Price \$2,000 without tax Selling price with tax? (\$2,100) Tax amount? = (\$100) Deduct Tax Amount Selling price \$3,150 with tax Price without tax ? (\$3,000) Tax amount? = (\$150)	ONCA SET 5 SET 2000 TAX+ TAX+ 3150 TAX− TAX− ONCA RECALL	

POWER SUPPLY

This calculator comes with a dual power source. The duration of alkaline battery depends entirely on individual usage.
(NOTE: Do not attempt to change the battery by yourself. Visit a Canon Service Center to change the battery for you).

Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. If this occur, press the ONCA key and restart your calculation from the beginning.

TAX FUNCTION

ONCA SET Store the tax rate – Press ONCA SET and enter the tax rate , then press SET to store.

ONCA RECALL Recall the tax rate – Press ONCA RECALL to recall the stored tax rate.

TAX+ Add tax key – Used for adding the tax amount to the display figure.

TAX− Deduct tax key – Used for deducting the tax amount from the displayed figure.

OVERFLOW

In the following cases, "E" will be shown on the display. The keyboard is electronically locked, and further operation is impossible. Press

CA

 to clear the overflow.
The overflow occurs when:
1) The result or the memory content exceeds 12 digits to the left of the decimal point.
2) Dividing by "0".

SPECIFICATION

Power Source: Solar cell and Alkaline battery (LR44 x 1)
Automatic Power-off: approx. 7 minutes
Operation Temperature: 0°C to 40°C
Dimension: 145mm (L) x 104mm (W) x 25mm (H)
Weight: 119 g
(Subject to change without notice)

Made in China / Hergestellt in China / Fabriqué en Chine / Hecho en China / Prodotto in Cina / Geproduceerd in China / Fremstillet i Kina / Valmistettu Kiinassa / Tillverkad i Kina / Fabricado na China / Κατασκευάζεται στην Κίνα / Изготовлено в Китае / Származási hely: Kína / Wyprodukowano w Chinach / Fabricat în China / Vyrobeno v Číně / Произведено в Китае / Izdelano na Kitajskem / Proizvedeno u Kini / Vyrobené v Číne / Üretim yeri: Çin / Кытайда жасалган / Зроблено в Китаї

Printed in China / Gedruckt in China / Imprimé en Chine / Impreso en China / Stampato in Cina / Gedrukt in China / Trykt i Kina / Painettu Kiina.ssa / Tryckt i Kina / Impresso na China / Τυπωθηκε στην Κίνα / Отпечатано в Китае / Nyomtatás az Kíná-b

