 


Quick Start Guide

 
RP-AX56
Dual-Band Wireless Repeater

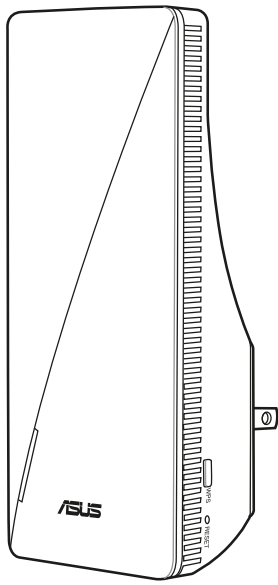

Hardware Explanations

- 1 Plug RP-AX56 into a power outlet.
- 2 The LED will start breathing white for 3 seconds while booting up.

Button Explanations

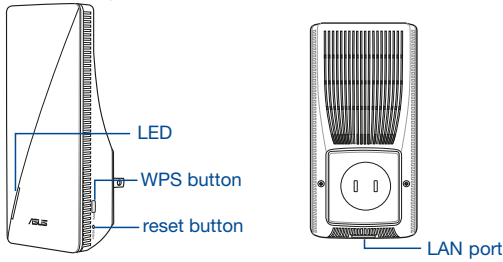

- WPS BUTTON
Launch the WPS Wizard.
- RESET BUTTON
Reset the system to its factory default settings.
- LAN PORT
Connect your PC to the LAN port with a network cable.

LED Explanations

Repeater Mode	
Status	LED Behavior
Booting up	Blinking White
Booting up complete (haven't connected to Router)	Solid Blue
Reset (use a pin to press the reset button for 5 seconds)	Blinking Yellow
Rescue mode	Solid Purple
Starting WPS	Blinking Blue
Connected to the router with Good Signal	Solid White
Connected to the router with Weak Signal	Solid Yellow
No Signal	Solid Red
AP mode (with wired connection)	Solid White
AP mode (without wired connection)	Solid Red


AiMesh Mode	
Status	LED Behavior
Booting up	Blinking White
Booting up complete (not connected to AiMesh Router)	Solid Blue
Reset (use a pin to press the reset button for 5 seconds)	Blinking Yellow
Rescue mode	Solid Purple
Connecting to the AiMesh Router	Blinking Blue
Connected to the AiMesh Router with Good Signal	Solid White
Connected to the AiMesh Router with Weak Signal	Solid Yellow
No Signal	Solid Red
Ethernet backhaul	Solid White

BEFORE SETUP WE SUGGEST...



01 Placing your RP-AX56

 - 1 Plug your RP-AX56 into a power outlet near your router/AP.
- 2 Check the LEDs and see the **LED explanations**.
- 3 Wait for the LED to flash and turn solid blue, indicating that your RP-AX56 is ready to connect to your existing router/AP.

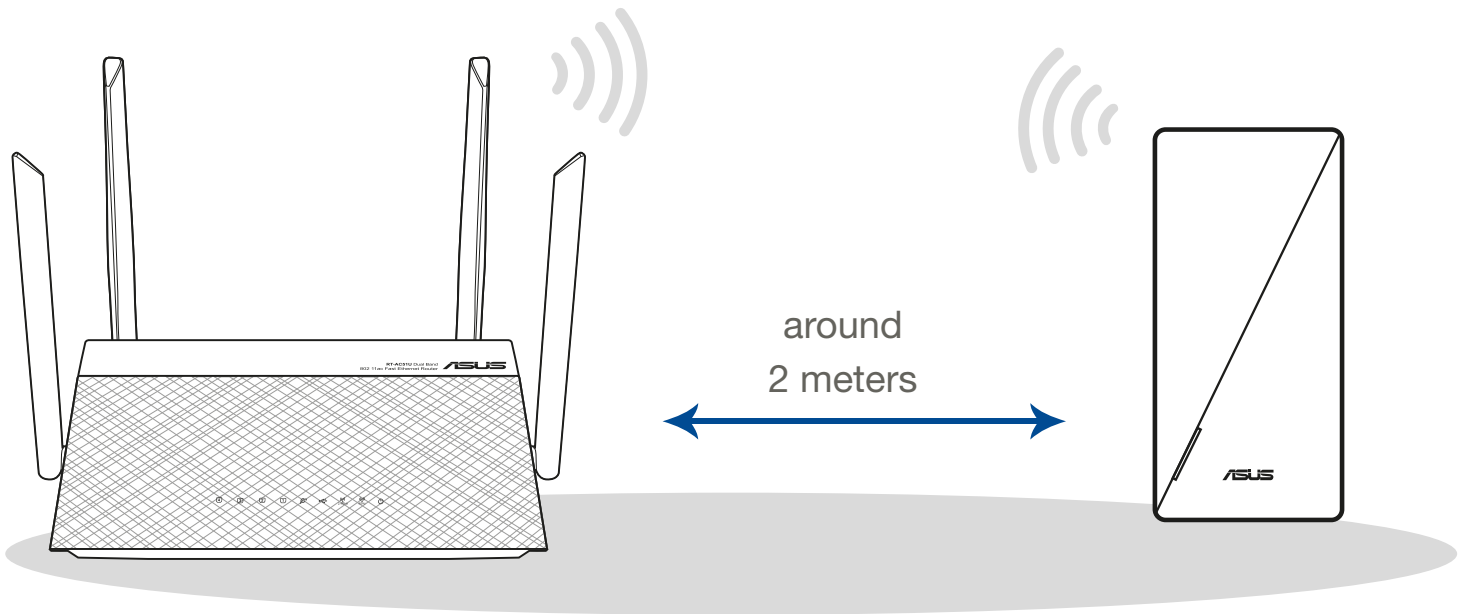


SETUP METHODS Set up RP-AX56 as a repeater



If you would like to connect RP-AX56 to other WiFi networks excluding AiMesh-supported routers, please follow any one of the following two methods to download the ASUS Extender App.

 METHOD 1 Download the ASUS Extender App and follow the onscreen instructions to finish the setup.

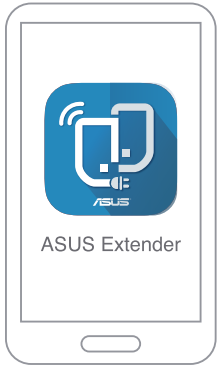

METHOD 2 Connect via WPS

- 1 Press the WPS button on your router/AP.
- 2 Press the WPS button on your RP-AX56 for more than two (2) seconds until the LED starts to blink blue.

