

INSTRUCTION MANUAL

42968283
[KMT081]

 
WHITE
GLOSSY

5107_SPEC_42968283_D30_TWS_v8


Artwork Proof Date: 12.11.2020

PAPER:
80gsm
Bright white uncoated paper

PRINT COLOURS:

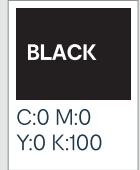

PRINT FINISH:
Double sided
Z-Fold

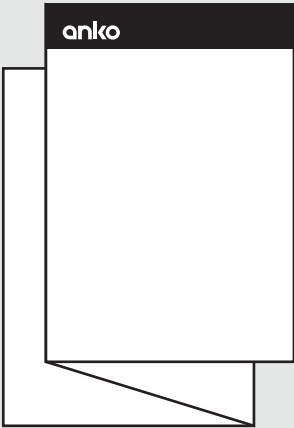 

CHANGE LOG CREST INTERNAL USE ONLY



 
ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.
ALL ARTWORK **MUST** BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.
IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au

THANK-YOU.

BACK

This product shall be supplied by a power source not exceeding PS1 only. ›This Bluetooth earpiece shall be charged by the supplied charging unit only.
CAUTION › The batteries in this product are not replaceable. › During use, storage or transportation the battery should not be subjected to extremely low temperatures, or low air pressure at high altitude. › If the battery is exposed to extremely high temperatures it could result in an explosion or the leaking of flammable liquid or gas. › Please take care when disposing of the unit; disposal in a fire, oven, mechanically crushing or cutting machine could cause explosion.

Function overview:

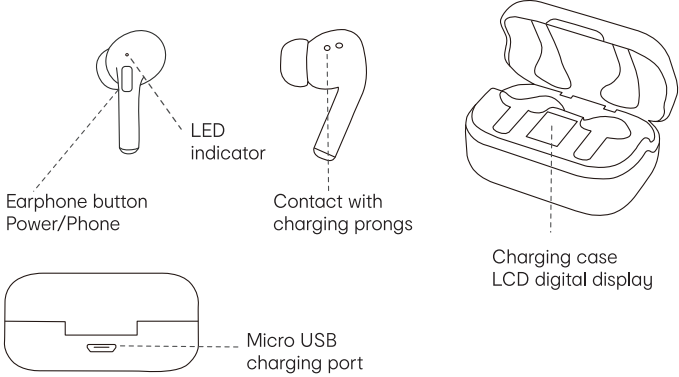

Note: Please remove insulation film from the charging terminals and charge the earphones and case before use.

WARNING: Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. › Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. › Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. › Do not handle your device with wet hands.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.
iPhone, iPad and Mac is a trademark of Apple Inc., registered in the U.S. and other countries.



Earphone Function Operation

Power ON
When the charging case is opened, both earphones will automatically power ON and sync up;

Or when the earphones are OFF you can press and hold both buttons for 2s to turn them ON.

Power OFF
Put earphones back into the charging case and close the lid, they will be automatically powered OFF;

Or you can press and hold the button of either earphone for 4 seconds, both earphones will be turned OFF.

Play/Pause Press either button

Previous Track Press left button 3 times in quick succession

Bluetooth® Pairing

› Open the charging case, the Earphones will automatically power ON (or they can be turned on manually). The LED indicators on the left and right Earphones will flash blue and red as they automatically sync to each other. Once synced the Earphones will enter pairing mode, which is identifiable by one Earphone flashing blue and red.

› Turn the Bluetooth ON on your device.

› Select the pairing name of your Earphones on the list of available devices. Pairing name is: **KM42968283**.

› The Earphone LED indicator will flash blue once every 5 seconds when connected.

Next Track Press right button 3 times in quick succession

Volume Up Press the right button 2 times in quick succession

Volume Down Press the left button 2 times in quick succession

Answer Call
Press either button

Reject Call
Press and hold either button for 1 second

End Call
Press either button

Activating Phone Assistant
Press and hold either button for 1-3 seconds

Trouble shooting tip

- › If the Earphones do not connect to your device, turn the Earphones OFF, turn your device's Bluetooth OFF and then back ON, then repeat the pairing process.
- › Your Earphones are designed to automatically sync to each other when they are turned ON, however if they ever fail to sync, please put both Earphones back into the charging case and close the cover to turn them OFF; then open the cover and the Eaphones will turn on and sync together again.

Phone Calls

If there is an incoming call on your Bluetooth device, the Earphones will pause the playback and ring to alert you of the call. Press either Earphone button to answer the call or press and hold either button for 1 second to reject the call. To end the call, press either Earphone button again.

Charging the Case

- › Connect the micro USB charging cable into the socket on the Charging Case.
- › Plug the cable into a standard USB 5V/1A output.
- › The LCD screen on the case will show the battery charging status while the case is charging and will show 100% status when fully charged.
- › When fully charged, unplug the charging cable.

Warning: To avoid damage to the Charging Case, please only use a 5V/1A charger.

Charging the Earphones

- › Put the Earphones into the Charging Case. The LCD screen will show "L" and "R", indicating that Earphones are placed correctly in the case.
- › Close the charging case lid. The Earphones LED indicator will

FRONT

stay red while the Earphones are charging. When charging is complete the LED will turn OFF. (Note: the Earphones come with a built-in rechargeable battery. Before using them for the first time, we recommend you fully charge the battery. A full charge takes approximately 1 hour).

- › The case LCD screen will show the Earphones battery status when the Earphones are placed into the case correctly.

WARNING: The Earphones can only be used with the provided Charging Case.

Specifications:

Model No: 42968283	Earbud battery capacity: 2 x 40mAh
Version 5.0 Bluetooth® chipset	Playing time: up to 4 hours
Support profiles: A2DP1.3/HFP1.6/HSP1.2/AVRCP1.6	Charging case battery capacity: 250mAh
Frequency Response: 20Hz-20kHz	Earbud charging time: max. 1 hour
Impedance: 16Ω	Charging case's Charging time: approx. 1.5 hours
Driver size: 8mm	Charging port: Micro USB
Sensitivity: 97dB±3dB	Input Voltage: DC5.0V / 1A
Effective range: up to 10 meters	

5107/8

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave VIC 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

anko

True Wireless Earphones
with Battery Level Display
Operating instructions



Includes:

- › true wireless earphones
- › charging case
- › charging cable (micro USB)
- › small & large silicone tips



42-968-283

Bluetooth name is KM42968283