

pure acoustics®

Model: AMNESIA

**Powerful 1200w Double 10k Portable Karaoke
Party Speaker with 2 Wireless Microphones**



User Manual

Thank you for choosing Pure Acoustics. We hope you enjoy using this product. We encourage you to read this operating and safety instruction document before initial use in order to take advantage of all the features and functions installed. The document should be stored in a safe place for future reference and passed on to future owners.

Caution and Safety Guide:

Please turn off the speaker when not in use. If the unit is not used for extended periods of time we recommend disconnecting the unit from the power source .

To prevent speaker damage do not install in areas of high heat or in areas with direct exposure to sunlight. Do not install the speaker near a place where it may come in contact with rain, moisture, or other liquids.

Install the unit on a flat surface with good ventilation. Blocking these vents can damage the speakers as a result of overheating.

To clean the unit, wipe it with a dry napkin or rag.

Warning:

Do not use detergents, gels, etc. to clean the speaker.

In the event of a malfunction, do not open the speaker yourself! Contact a qualified professional for proper diagnosis and repair.

CAUTION:

Dismantling the unit yourself is dangerous and may damage you and the speaker and void your warranty.

FEATURES

Powerful and powerful - 1200W watts of listening experience with deep bass and a strong and clear sound

Party lighting - Lighting panel with colored LED along the entire speaker with effects according to the rhythm of the music

Easy operation - Turn on and sing! User-friendly and quick-to-operate speaker interface

Bluetooth - Streaming music wirelessly to the speaker, suitable for use with iPhone and Android and more

TWS - Connect 2 speakers to one audio source wirelessly, for a powerful surround sound experience. (Works only in Bluetooth mode and must have a speaker of the same model)

USB / Micro SD input - For playing MP3 files straight from the memory card

FM radio - A digital tuner that includes automatic scanning and saving stations in the speaker memory

Digital recording - For recording karaoke directly on an on-key disk or memory card

Wireless microphones - Including 2 wireless microphones (where applicable) and wired microphone input

Wired microphone - Option to connect a wired microphones

Guitar input - 6.3 mm guitar input that includes a separate volume switch

Main audio selector - control of the volume of the speaker, treble, bass and microphones connected at once


AUX input - direct connection to smartphones, tablets and any music source with a 3.5 mm port

Display - shows the source of the music in which the speaker is turned on, such as: Bluetooth, AUX, USB for easy and simple operation

Telescopic handle - Transport from place to place in an easy, convenient and safe way

IR remote control - Full control of all the functions of the remote speaker

MAIN PANEL

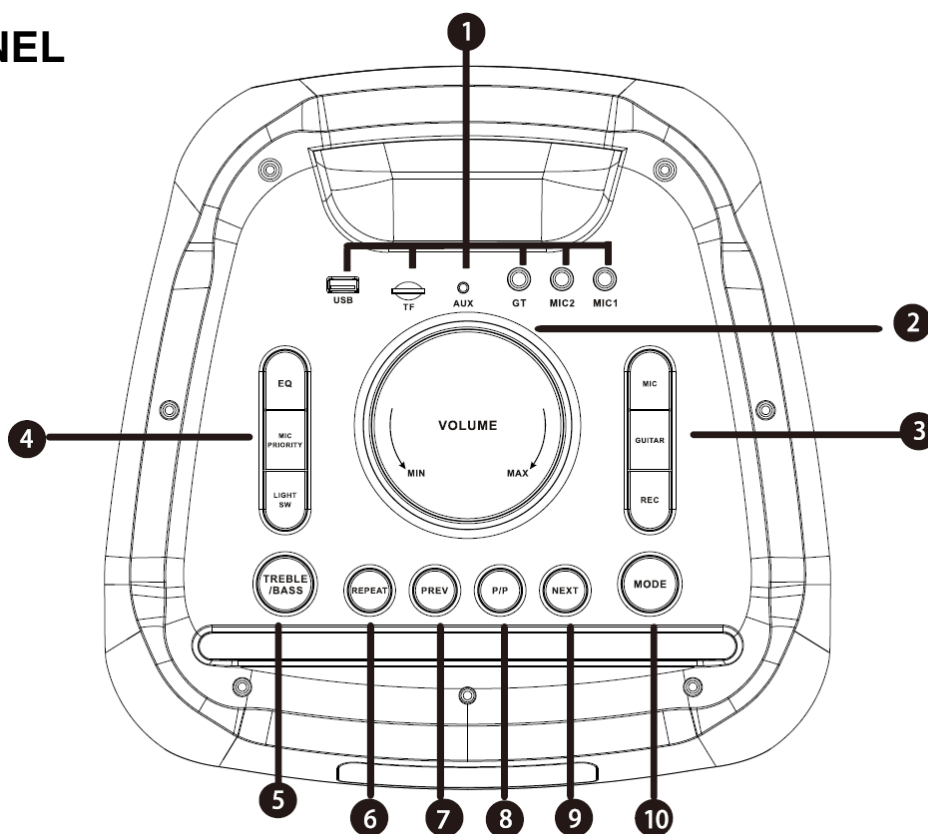

BUTTONS and FUNCTIONS

1. **GUITAR / AUX / MICRO SD / USB inputs / Wired microphone 1 / Wired microphone 2**

2. **VOLUME** - Main volume, guitar volume, microphone volume, echo volume.

3. **REC / GUITAR / MIC buttons**

MIC - Microphone: A. (short press 1 - to enter microphone mode and then you can change the microphone volume using the volume selector (No. 2). B. (2 short presses - to enter the echo microphone control mode and then you can change the echo volume of the microphone with the help of the volume selector (No. 2).

GUITAR - Guitar - short press 1 - To enter the guitar control mode and then you can change the volume of the guitar with the volume selector (No. 2).

REC - Record key - the karaoke can be recorded on a USB or SD card (not included)

4. **LIGHT SWITCH / MIC PRIORITY / EQ buttons**

EQ - Equalizer - allows you to switch between built-in digital equalizer modes

MICROPHONE PRIORITY - The function of lowering the music when using a microphone. Pressing the key will activate / deactivate the function. Microphone is made by one click - lowers the music when using the microphone.

LIGHT SWITCH - Turn on / off the disco lighting

5. **TREBLE / BASS** - short press 1 - to enter TREBLE mode and then you can change the volume with the help of the volume selector (No. 2), 2 presses to enter the BASS mode.


6. **REPEAT** - Repeat the previous song.

7. **PREV** - a short click on the previous song

8. **PLAY / PAUSE** - Play / pause song play

9. **NEXT** - A short click to the next song

10. **MODE** - Transfer between the various functions (BT / USB / AUX / SD / FM)

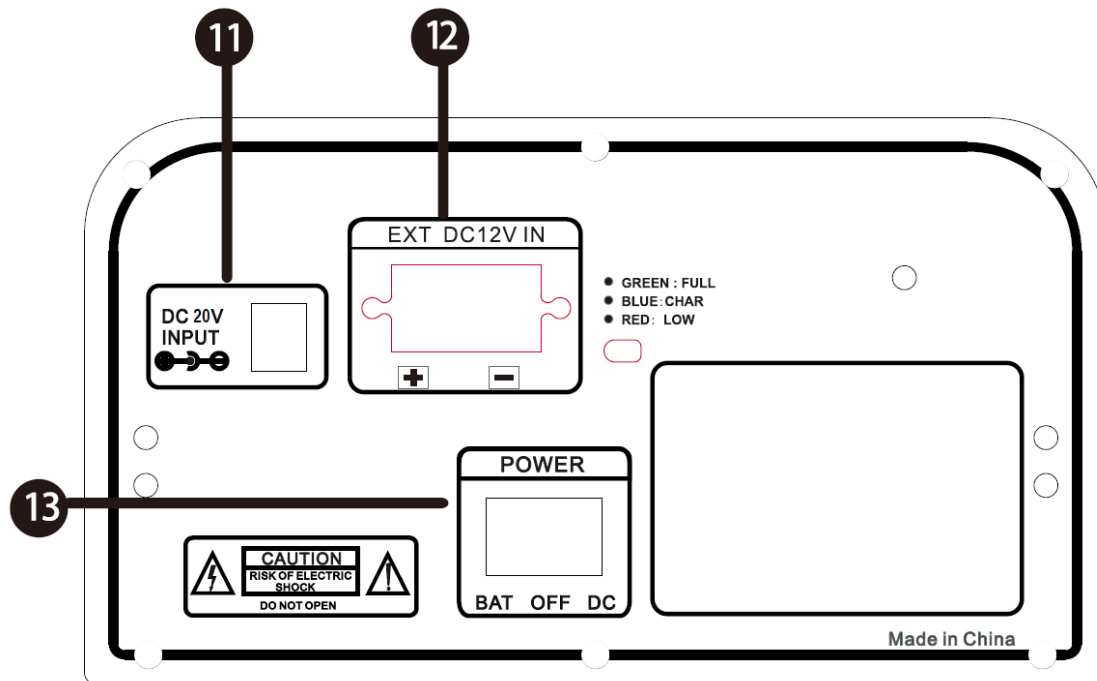

11. DC power connection for charging
12. External Power Supply
13. Switch on and off the speaker

CONNECTIONS

Bluetooth Connection

1. Press the MODE button on the multimedia panel until you reach Bluetooth mode, then a sound will sound and a Bluetooth mode will appear on the display.
2. Make sure that the distance between the speaker and your gland device is not more than a meter.
3. Your Bluetooth device must be set to scan mode.
4. Select "AMNESIA" from the list of scanned devices
5. If prompted to enter a code press "0000" and select Yes / OK to complete the linking process.

FM radio with automatic scanning

1. Turn on the power switch with the on / off switch.
2. Press the MODE button on the panel until you reach FM mode to listen to the radio
3. To perform an automatic scan of the stations, press and hold the P / P button (No. 8) for 3-5 seconds.
4. Press buttons (No. 9 /No. 7) to switch between radio stations in the area at frequencies Mhz 87.5-108.0

AUX input

Allows analog connection between the speaker and the audio source such as: smartphones, tablets, MP3 players and more.

TWS - Mode

1. Turn on both speakers and make sure both are in Bluetooth mode at no more than 3m from each other.
2. Press and hold the button (3-5 seconds) on the next song (- in the next song). The speakers to make a TWS link between the two.
3. At the end of the link, the main speaker will be called the "parent" speaker and the second speaker will be called the "son" speaker.
4. Activate the Bluetooth scan on the music source (smartphone, tablet ...) and connect it to the speaker "master", in the scan will be called "AMNESIA"

Disconnect TWS- Press and hold the next song button (# 7) to disconnect the speakers.

****Please note: The TWS function can be used only when two speakers are in Bluetooth mode and of the same model.**

USB input or MICRO SD Memory Card

You can play music from a USB Drive or a Micro SD memory card (limited to 32 GB).

A. Insert the USB Drive into the USB port and the speaker will play the stored music. If the speaker does not start playing automatically Press the MODE button to enter USB mode.

-or-

B. Insert the MICRO SD memory card and the speaker will play the stored music. If by any chance the speaker does not start playing automatically press the MODE button to enter SD mode.

Recording

Digital recording - recording of speech directly on a USB or TF memory card (not included) only. Use for lectures and conferences only, not recording audio and speech together.

Press the record key - for 3-5 seconds for the recording mode to start recording and another short press to stop the recording. Recording mode is active only in BT / AUX music modes

Microphone Preference

When you press one, you hear the decibels in the entertainment automatically go down by about 20 decibels for speaking into microphones.

Section Lighting On / Off Party Lighting

Party lighting will turn on automatically when the speaker is turned on. To switch off lighting, use switch.

Indicator light on the back of the speaker

- Green light - the speaker is fully charged
- Blue light - the speaker is in charging mode
- Red light - weak battery, charge the speaker

REMOTE CONTROL

1. Red key - MUTE - Mute / Unmute, MODE key - Switch audio sources: BT / AUX / USB / SD and FM
2. Channel keys 1-9
3. ECHO + EQUILIZER + GUITAR- Volume control key
4. TREBLE - Volume control key
5. Multimedia control panel - volume + volume from microphones
6. BASS - Volume control key
7. Previous song player key / Song pause song / Next song player
8. Microphone preference / Repeat the previous song / Record key



TECH SPECS

Power: 1200W

Audio frequency: 48Hz-20 KHz +/- 3dB

Sensitivity: 88dB +/- 3dB

Battery: 12 V / 7.5A

Audio frequencies: 105 dB +/- 3dB

Impedance: 4

Power source 1: (DC 12V 7500A) Rechargeable battery

Power source 2: (DC 20V 4A) External power supply

Product dimensions: 30 * 33 * 86 cm

COMMON QUESTIONS

Why didn't my speaker turn on?

Check that the external transformer is connected to the back of the device.

Find out that the external transformer is connected to a power source.

Find out that the main circuit breaker is in the ON position.

Why is my microphone not working?

Make sure the microphone is in the ON position.

Make sure the switch on the back of the speaker is in the ON position and the transmission light is on.

Make sure that the volume switch is turned to the on position

What is the ideal place to place my speaker?

The speaker should be placed on a smooth and safe surface or on a suitable stand (not included).

Make sure that the speaker is placed in a ventilated place.

Is there any action to extend the life of the speaker?

Yes! In the event that the speaker is not going to be used for an extended period of time, it should be disconnected from the power source.

Fully charge the speaker once a week (4 hours charging time).

Batteries should be removed from the microphones at the end of each use.

Is it possible to clean the speaker occasionally?

Yes, it is possible to clean the speaker by wiping with a rag or dry paper towel only!

Warnings

- **Do not cover the vents!**
- **Do not place other devices on top of the speaker such as: monitors, computers, amplifiers, etc ...!**
- **Do not place the speaker in a wet area or area where the speaker may get wet!**
- **Do not place the speaker in an area of high heat or a place with direct sun exposure!**
- **Do not use any kind of liquid to clean the speaker such as: water, detergent, soapy water etc ...**

Using one of these may cause irreversible damage to the device.

Limited Warranty

Please note that the responsibility for the microphones and / or the rechargeable battery is for natural defects only! The warranty does not include coverage for damages caused as a result of falls, fractures (external or internal) or contact with fluids.

Before confirming replacement or repair of the microphone and / or speaker under warranty, the product will undergo an internal inspection to verify that the fault was not caused as a result of one of the faults mentioned above.

Overcharging! Do not charge the device for more than 4 hours in a row! Faults caused by overcharging are not included in the warranty!