

LiFE



Homey

Ηλεκτρική θερμάστρα χαλαζία, 800W

Electric quartz heater, 800W

- Αυτό το προϊόν είναι κατάλληλο μόνο για καλά μονωμένους χώρους ή περιστασιακή χρήση
- This product is only suitable for well insulated places or occasional use

ΕΛ ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ
EN USER MANUAL

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.



Read the operating instructions carefully before putting the product into operation and keep the instructions, the receipt and, if possible, the box with the internal packing. If you give this product to other people, please also pass on the operating instructions.

USER MANUAL SYMBOLS

Important information for your safety is specially marked. It is essential to comply with these instructions in order to avoid accidents and prevent damage to the machine:

⚠ WARNING: This sign warns you of dangers to your health and indicates possible injury risks.

△ CAUTION: This sign refers to possible hazards to the machine or other objects.

i NOTE: This sign highlights tips and information.

🚫 WARNING: In order to avoid overheating, do not cover this product.

SAFETY INSTRUCTIONS

1. The appliance is designed exclusively for private, domestic use and for the envisaged purpose. This appliance is not fit for commercial use.
2. Check that the voltage indicated on the appliance rating label corresponds to the voltage in the mains.
3. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the associated risks.
4. Children must be supervised so that they do not play with the appliance.

5. Children shall not play with the appliance.
6. Cleaning and user maintenance shall not be made by children without supervision.
7. Children of less than 3 years should be kept away unless continuously supervised.
8. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
9. **△ CAUTION: Some parts of this product can become very hot and cause burns. Particular CAUTION has to be given where children and vulnerable people are present.**
10. **⚠ WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
11. Always plug the appliance into an outlet that is earthed. **Risk of electric shock!**
12. Do not place the quartz heater in front of or below the power outlet.
13. Do not use an extension cable or multi-strips to connect the appliance.
14. Do not use the heater with a programmer, timer or any other device that switches the heater on automatically.
15. Do not use the appliance outdoors.
16. Do not use the appliance in bathroom, swimming pool or in rooms with high humidity level.
17. Keep a safe distance from flammable objects such as furniture, curtains, textiles, paper, etc.
18. Do not place or hang the following, similar or other flammable materials such as paper, plastic, etc., on, in front of or inside the appliance.

19. Do not heat any room smaller than 4m³.
20. Do not place in or under shelves, cabinets or similar places.
21. **⚠ CAUTION:** Please do not cover the heater with any object.
Risk of fire!
22. **⚠ CAUTION:** Do not cover or block the heat outputs or air intakes of the quartz heater.
23. Place the appliance on a flat and stable surface.
24. Make sure that the power cord does not come into contact with the hot parts of the device or in contact with sharp corners and objects.
25. **⚠ CAUTION:** The protective grills are to prevent direct access to heating parts when the quartz heater is in use. Do not place objects inside the appliance. Danger of electric shock!
26. Keep a distance of at least 1m around all sides of the appliance in order to allow sufficient air circulation during appliance operation.
27. Do not operate the appliance without supervision. If you should leave the workplace, always unplug the appliance.
28. Always remove the plug from the socket after usage (pull the plug itself, not the lead).
29. Always unplug the appliance and let it cool down, when you want to move it to another location.
30. When cleaning or storing the device, switch off the appliance and always pull out the plug from the socket (pull the plug, not the cable).
31. Always switch off and unplug the appliance when inserting / removing accessories.
32. Regularly check the appliance and cable for signs of damage. Do not continue to operate the appliance in case of damage.
33. If the quartz tubes glasses are damaged do not use the quartz heater. Please contact the distributor to replace the heating tubes.
34. **⚠ WARNING:** Do not operate the appliance with a damaged cord. In order to avoid the risk of an electric shock, never try to

repair the appliance by yourself. Bring it to the authorized service station for repair. Use only the original spare parts.

35. If the surface is cracked, disconnect the appliance from the power supply to avoid electric shock.

36. **⚠ CAUTION:** The appliance is not intended for use by children, disabled people or people with reduced physical, sensory or mental abilities.

37. Keep the appliance and its cord out of the reach of children and pets.

38. Do not let children play with the appliance.

39. In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

⚠ WARNING: Do not allow small children to play with the foil.

Danger of suffocation!

40. Children are not allowed to use the appliance.

41. Never immerse the appliance into water during cleaning. Check "CLEANING" paragraph for cleaning instructions.

42. To protect again electric shock, do not immerse the cord, plug or unit in water or any other liquid.

43. Do not touch the appliance with wet or damp hands.

PARTS IDENTIFICATION

1. Quartz glass tubes

2. ON/OFF button on top of quartz lamp

3. ON/OFF button for lower quartz lamp



FIRST USE OF QUARTZ HEATER

1. Plug the appliance in a properly installed and grounded outlet.

2. Select the high power heating mode by pressing both ON/OFF buttons to turn on both quartz lamps.

3. Operate the quartz heater for 5-10 minutes.

4. Turn off the appliance by pressing both ON/OFF buttons again.

NOTE: During initial use and due to insulating materials on the heating tubes, odor and / or smoke may be caused. This is not a malfunctioning of the heater and stops after the initial heating of the heating tubes.

⚠ CAUTION: In case of any damage, please switch the quartz heater off immediately and disconnect

