

INSTRUCTION MANUAL

43303441


[KMT095]

43303441_MAN_BT Portable Party Speaker with Lights_v

Artwork Proof Date: 20.06.2023
Number of artboards: 1

PAPER:
80gsm
Bright white uncoated paper

PRINT COLOURS:

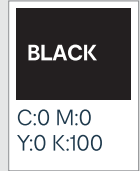

PRINT FINISH:
Double sided
Single fold
148.5 x 210 Folded Size



CHANGE LOG CREST INTERNAL USE ONLY

v2 - Supported Audio Format: mp3/wma/wav/m4a/flac/ape

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.
ALL ARTWORK **MUST** BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.
IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au
THANK-YOU.

© The Crest Company 2023. All rights reserved.

2

LED Light ON/OFF:

› Press and hold MODEL LED POWER to turn ON/OFF LED light.

Charging:

- › This speaker is powered by a rechargeable battery. Please use provided micro-USB cable for charging.
- › Plug the micro-USB cable end to the unit and the other USB A end into a wall charger or other 5V charging devices.

Specification:

Model No: 43303441
Bluetooth Pairing Name: KM43303441
Version: V5.0 Multimedia Bluetooth chipset
Working Distance: 10 Metres
Power Output: 20W
Driver Size: 8" x 1 + 1" x 1
Supported Audio Format: mp3/wma/wav/m4a/flac/ape
Powered by rechargeable battery

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.



WARNING Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. › Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. › Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. › Do not handle your device with wet hands.

v2

anko

Bluetooth® Portable Party Speaker with Lights
Operating instructions



Please read user manual carefully before use

Includes:


- › Bluetooth® party speaker x 1
- › wired microphone x 1
- › 3.5mm aux-in cable x 1
- › micro USB charging cable x 1
- › user manual x 1



43-303-441

Bluetooth name is KM43303441

Function Overview:

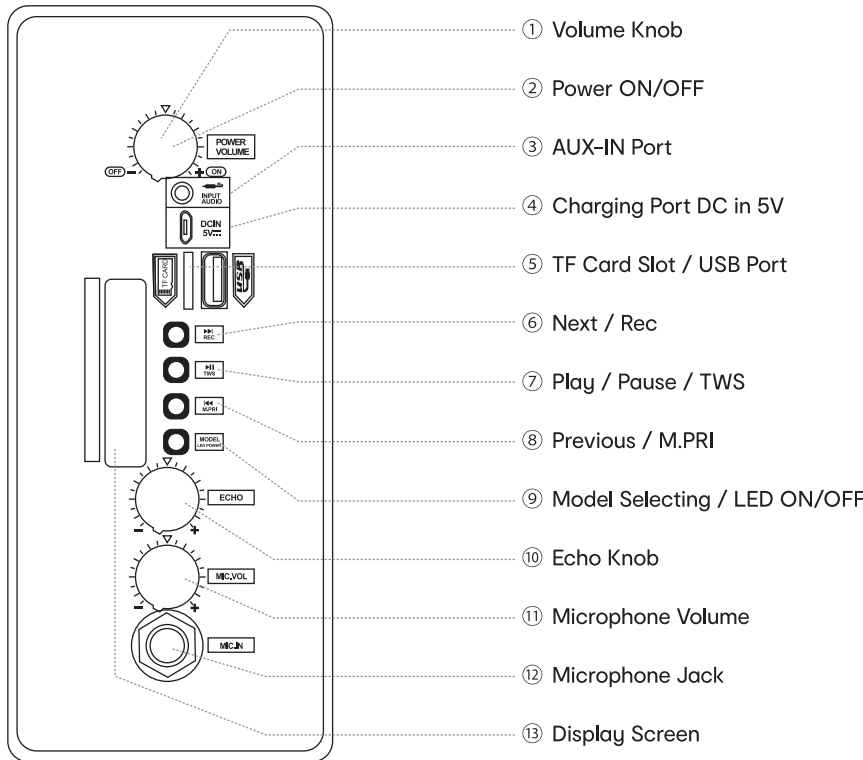

How to use this Speaker

Function Operation

Pause	Press
Play	Press
Next Track	Press button to skip the track
Recording	Press and hold (Please insert USB driver/TF card before use)
Previous Track	Press button to skip the track
Volume Up/Down	Turn volume knob
Power ON/OFF	Switch power knob
LED ON/OFF	Press and hold button
Microphone ECHO Up/Down	Turn ECHO volume knob
Microphone Volume Up/Down	Turn mic volume knob

Bluetooth Pairing:

- › Speaker enters Bluetooth pairing mode by default when switched on, display screen flashes "bBLUE", indicating it is ready to pair with a Bluetooth device.
- › In the Bluetooth menu on the media device, search for "KM43303441" and connect. Type Password "0000" or "1234" if password requested.
- › You will hear a prompt sound once the speaker is connected successfully. "bBLUE" shows on display screen.

AUX in Mode:

- › Press to select AUX-IN mode then display screen will show "AUX", use a 3.5mm Aux-in cable to connect your device. Choose music from your media device and play.
- › Adjust volume knob to increase/decrease volume.

USB Drive Mode:

- › Insert USB drive (up to 32G) into USB port. It will play audio track automatically and shows on display screen.
- › Press button for next track, press button for previous track. Adjust volume knob to increase/decrease volume.

TF Card Mode:

- › Insert TF card (up to 64G) into USB port. It will play audio track automatically and show on display screen.
- › Press button for next track, press button for previous track. Adjust volume knob to increase/decrease volume.

Microphone Function:

- › Insert the wired microphone into microphone jack and switch on the wired microphone. You can start to use microphone.

Recording Function:

- › Insert USB drive or TF card into respective port and plug in wired microphone into microphone jack.
- › Press and hold button, music or sound track from your USB drive or TF card will stop then shows "REC" on display screen, you can start via the microphone. Press and hold button to end the recording.

Note: Recorded soundtrack will be saved to USB drive or TF card as MP3 file in a folder named 'RECORD'. If both USB and TF card are inserted into respective port, recorded soundtrack will be saved to USB driver.

M.PRI (Microphone Priority) Function:

- › Music sound off while you are speaking or singing via microphone, music back on the moment you stop speaking or singing via microphone.
- › Under Bluetooth/USB drive/TF card mode, press and hold button to activate M.PRI function and it will show "OPEN" on display screen. Press and hold button to cancel M.PRI function and it will show "OFF" on display screen.

TWS Mode:

- › Both speaker powered on and select BT mode, Press and hold button (on either speaker) to enter TWS pairing.
- › You can hear voice prompt when TWS pairing is successful.
- › Press and Hold button to cancel TWS.