



Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	TV/Radio /
	Shift + 0
	Smart / List
	Guide / EPG / -/--
	Menu / Home

Original	Replacement
	Fav / Marker / PC
	Exit / Cancel / Clear
	Up
	CH+ / Page+
	Down
	CH- / Page-
	Left
	Vol-
	OK
	Right
	Vol+
	Red / Netflix / Search
	Audio / Lang I/II
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Display / Media
	Blue / Prime Video / Random





The image shows a black remote control for a Mandis TV. It features a variety of buttons including a power button, channel selection buttons (TV, DVD, SAT, AUX), and a numeric keypad. The Mandis logo is prominently displayed in the center of the remote.