

H5E, H5M, H5-PC, H5X®, H10X®, HW2, H3 Element®, H5 Element®, H5X with Ambient Side Dispense



Supersedes:

10052.0000; 10010.0000;
10267.0000; 10420.0000;
10889.0000; 39338.0000;
39338.0001; 44306.0000;
46819.0000; 46819.0001

INSTALLATION & OPERATING GUIDE

For Technical Service, contact Bunn-O-Matic Corporation at 1-800-286-6070.

Bunn-O-Matic Corporation

Post Office Box 3227, Springfield, Illinois 62708-3227

Phone (217) 529-6601 | Fax (217) 529-6644

BUNN-O-MATIC COMMERCIAL PRODUCT WARRANTY

Bunn-O-Matic Corp. ("BUNN") warrants equipment manufactured by it as follows:

- 1) All coffee and tea dispensers/servers, MCR/MCP/MCA single cup brewers, and BUNNlink® electronic circuit and/or control boards – 1 year parts and 1 year labor.
- 2) Product-specific warranties for Premia™, Crescendo®, Fast Cup®, Sure Immersion®, Sure Tamp® and others – 1 year parts and 1 year labor. Please visit commercial.bunn.com/support/warranty-lookup for further details.
- 3) All other equipment – 2 years parts and 1 year labor plus added warranties as specified below:
 - a) Electronic circuit and/or control boards – parts and labor for 3 years.
 - b) Compressors on refrigeration equipment – 5 years parts and 1 year labor.
 - c) Grinding burrs on coffee grinding equipment for 4 years or 40,000 pounds of coffee, whichever comes first.
- 4) For customers subscribed to BUNNlink®, BUNN reserves the right to periodically auto-push critical software updates that will enhance functionality or performance of the BUNN equipment, unless the customer requests advance notice of such software updates from BUNN in writing.

These warranty periods run from the date of installation. BUNN warrants that the equipment manufactured by it will be commercially free of defects in material and workmanship existing at the time of manufacture and appearing within the applicable warranty period. This warranty does not apply to any equipment, component or part that was not manufactured by BUNN or that, in BUNN's judgment, has been affected by misuse, neglect, alteration, improper installation or operation, improper maintenance or repair, non periodic cleaning and descaling, equipment failures related to poor water quality, damage or casualty. In addition, the warranty does not apply to replacement of items subject to normal wear with use including but not limited to user replaceable parts such as seals and gaskets. This warranty is conditioned on the Buyer 1) giving BUNN prompt notice of any claim to be made under this warranty by telephone at (217) 529-6601 or by writing to Post Office Box 3227, Springfield, Illinois 62708-3227; 2) if requested by BUNN, shipping the defective equipment prepaid to an authorized BUNN service location; and 3) receiving prior authorization from BUNN that the defective equipment is under warranty.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER WARRANTY, WRITTEN OR ORAL, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF EITHER MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. The agents, dealers or employees of BUNN are not authorized to make modifications to this warranty or to make additional warranties that are binding on BUNN. Accordingly, statements by such individuals, whether oral or written, do not constitute warranties and should not be relied upon.

If BUNN determines in its sole discretion that the equipment does not conform to the warranty, BUNN, at its exclusive option while the equipment is under warranty, shall either 1) provide at no charge replacement parts and/or labor (during the applicable parts and labor warranty periods specified above) to repair the defective components, provided that this repair is done by a BUNN Authorized Service Representative; or 2) shall replace the equipment or refund the purchase price for the equipment.

THE BUYER'S REMEDY AGAINST BUNN FOR THE BREACH OF ANY OBLIGATION ARISING OUT OF THE SALE OF THIS EQUIPMENT, WHETHER DERIVED FROM WARRANTY OR OTHERWISE, SHALL BE LIMITED, AT BUNN'S SOLE OPTION AS SPECIFIED HEREIN, TO REPAIR, REPLACEMENT OR REFUND.

In no event shall BUNN be liable for any other damage or loss, including, but not limited to, lost profits, lost sales, loss of use of equipment, claims of Buyer's customers, cost of capital, cost of down time, cost of substitute equipment, facilities or services, or any other special, incidental or consequential damages.

CONTENTS

NORTH AMERICAN REQUIREMENTS	4
CE REQUIREMENTS	4
INTRODUCTION	5
USER NOTICES	6
ELECTRICAL REQUIREMENTS	7
ELECTRICAL HOOK-UP	7
PLUMBING REQUIREMENTS	8
Plumbing Hook-Up	8
INITIAL SETUP	8
H5E, H5X, H5-PC, H10X, H3/5 Element	8
H5X with Side Ambient Dispenser	9
H5M	9
HW2	9
OHW	10
Normal Use	10
OPERATING CONTROLS	11
H5 Portion Control Only	11
ADJUSTING DISPENSE VOLUMES	11
PROGRAMMING	12
H5-E, H5-PC, H5X, H10X	12
Level 1 Programming	12
Level 2 Programming	13
H1 - DISPENSE TEMPERATURE LOCKOUT	13
H2 - F° OR C° SELECTION	13
H3 - RESTORING FACTORY DEFAULTS	13
H5 ELEMENT	14
Level 2 Programming	16
H2 - F° OR C° SELECTION	16
H3 - RESTORING FACTORY DEFAULTS	16
H3E ELEMENT	17
Level 2 Programming	19
H1 - DISPENSE LOCKOUT	19
H2 - C° OR F° SELECTION	19
H3 - RESTORING FACTORY DEFAULTS	19
DRAINING THE DISPENSER	22
OHW	22
ALL 2, 3 & 5 GALLON MODELS	22
10 GALLON MODELS	22
CLEANING	23
WALL MOUNTED INSTALLATION - 5 GALLON MODELS ONLY	23
SUPPORT FOR LARGE RECEPTACLES	23

NORTH AMERICAN REQUIREMENTS

- This appliance must be installed in locations where it can be overseen by trained personnel.
- For proper operation, this appliance must be installed where the temperature is between 41°F to 95°F (5°C to 35°C).
- Appliance shall not be tilted more than 10° for safe operation.
- An electrician must provide electrical service as specified in conformance with all local and national codes.
- This appliance must not be cleaned by pressure washer.
- This appliance can be used by persons if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- If the power cord is ever damaged, it must be replaced by the manufacturer or authorized.
- Service personnel with a special cord available from the manufacturer or its authorized service personnel in order to avoid a hazard.
- Machine must not be immersed for cleaning.
- This appliance is intended for commercial use in applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - by clients in hotel and motel lobbies and other similar types of environments
- Access to the service areas permitted by Authorized Service personnel only.

CE REQUIREMENTS

- This appliance must be installed in locations where it can be overseen by trained personnel.
- For proper operation, this appliance must be installed where the temperature is between 5°C to 35°C.
- Appliance shall not be tilted more than 10° for safe operation.
- An electrician must provide electrical service as specified in conformance with all local and national codes.
- This appliance must not be cleaned by water jet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given instructions concerning use of this appliance by a person responsible for its safety.
- Children should be supervised to ensure they do not play with the appliance.
- If the power cord is ever damaged, it must be replaced by the manufacturer or authorized service personnel with a special cord available from the manufacturer or its authorized service personnel in order to avoid a hazard.
- Machine must not be immersed for cleaning.
- Machine rated IX P1.

INTRODUCTION

This equipment heats and dispenses water on demand for beverages and cooking purposes. It has a panel above the faucet that indicates the status of the dispenser. This equipment is for indoor use, either wall-mounted (H5E / X / PC) or on a sturdy counter or shelf.

NOTICE

Brew water temperature is factory set at 200° F (93.3°C)
Areas of high altitude will require lowering this temperature to prevent boiling. This chart should be used as a guide when readjusting the brew water temperature.

Altitude (Feet)	Boiling point of water		Recommended water temperature	
	°F	°C	°F	°C
-1000	213.8	101.0	200	93.3
-500	212.9	100.5	200	93.3
0	212.0	100.0	200	93.3
500	211.1	99.5	200	93.3
1000	210.2	99.0	200	93.3
1500	209.3	98.5	200	93.3
2000	208.4	98.0	200	93.3
2500	207.4	97.4	200	93.3
3000	206.5	96.9	199	92.8
3500	205.6	96.4	198	92.2
4000	204.7	95.9	197	91.7
4500	203.8	95.4	196	91.1
5000	202.9	94.9	195	90.6
5500	201.9	94.4	195	90.6
6000	201.0	93.9	194	90.0
6500	200.1	93.4	193	89.4
7000	199.2	92.9	192	88.9
7500	198.3	92.4	191	88.3
8000	197.4	91.9	190	87.8
8500	196.5	91.4	189	87.2
9000	195.5	90.8	188	86.7
9500	194.6	90.3	187	86.1
10000	193.7	89.8	186	85.6

USER NOTICES

The notices on this dispenser should be kept in good condition. Replace unreadable or damaged labels.

NOTICE
ALL COMPONENTS ARE
200 TO 240 VOLT A.C.

Replace only with
components listed in the
accompanying literature
rated for the same
voltage

12537.0000



00657.0000

⚠ WARNING
To reduce the risk of electric shock,
do not remove or open cover.
No user-serviceable parts inside.
Authorized service personnel only.
Disconnect power before servicing.

37881.0000

⚠ WARNING
♦ Fill water tank before turning - on -
thermostat or connecting appliance
to power source.
♦ Use only on a properly protected
circuit capable of the rated load.
♦ Electrically ground the chassis.
♦ Follow national/local electrical codes.
♦ Do not use near combustibles.
♦ Do not deform plug or cord.

FAILURE TO COMPLY RISKS EQUIPMENT
DAMAGE, FIRE, OR SHOCK HAZARD

READ THE ENTIRE OPERATING MANUAL
BEFORE BUYING OR USING THIS PRODUCT

THIS APPLIANCE IS HEATED WHENEVER
CONNECTED TO A POWER SOURCE
0001 0000 1114 0100 BUNN O-MATIC CORPORATION

00831.0000

⚠ WARNING
Hot Water
Use With Care

12593.0000



00824.0002



00824.0001

As directed in the International Plumbing Code of the
International Code Council and the Food Code
Manual of the Food and Drug Administration (FDA),
this equipment must be installed with adequate
backflow prevention to comply with federal, state
and local codes. For models installed outside the
U.S.A., you must comply with the applicable Plumb-
ing /Sanitation Code for your area.

00656.0001

Optional Field Wiring

120 V, 15.4 A, 1850 W
1PH, 2-Wire + GND, 60HZ

29710.0017


Optional Field Wiring

120/208-240 V, 16.9 A, 4050 W
1PH, 3-Wire + GND, 60HZ


29710.0018

POUR IN WATER ONLY

00833.0000

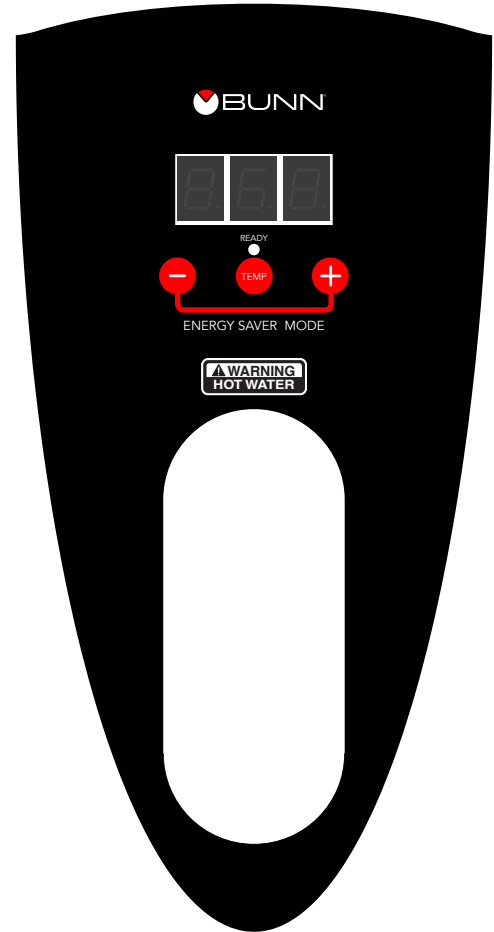

 44025.0003 H5 Element (shown)
44025.0005 H3 Element



34056.0000

⚠ WARNING
To reduce the risk of electric shock,
do not remove or open cover.
No user-serviceable parts inside.


Authorized service personnel only.
Disconnect power before servicing.

37881.0002

ELECTRICAL REQUIREMENTS


WARNING - The dispenser must be disconnected from the power source until specified in *Initial Setup*.

Refer to Data Plate on the Brewer, and local/national electrical codes to determine circuit requirements.

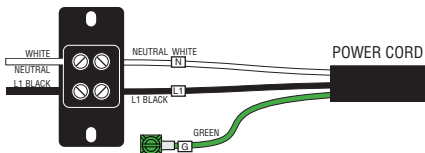


**120 volt
AC models**

NOTE: This electrical service consists of 2 current carrying conductors (L1 and Neutral) and a separate conductor for earth ground.

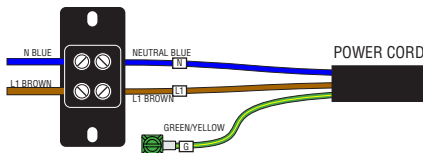


**220-240 volt
AC (A) models**

NOTE: This electrical service consists of 2 current carrying conductors (L1 and Neutral) and a separate conductor for earth ground.

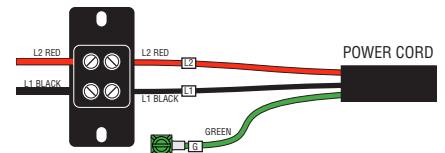

**208 & 240 volt
AC models**

NOTE: This electrical service consists of 2 current carrying conductors (L1 and L2) and a separate conductor for earth ground.

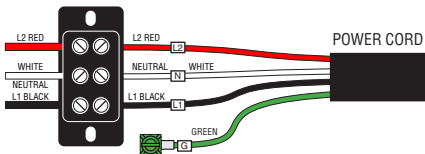

**120/208 & 120/240 volt
AC single phase models**

NOTE: This electrical service consists of 3 current carrying conductors (Neutral, L1 and L2) and a separate conductor for earth ground.



**DUAL VOLT
TOGGLE SWITCH**

ELECTRICAL HOOK-UP

CAUTION – Improper electrical installation will damage electronic components.

1. An electrician must provide electrical service as specified.
2. Using a voltmeter, check the voltage and color coding of each conductor at the electrical source.
3. Turn off master switch (if equipped).
4. Remove the upper and lower rear panels.
5. Install the proper electrical wiring to the terminal block.
6. Connect the dispenser to the power source and verify the voltage at the terminal block before proceeding. Reinstall both rear panels.
7. If plumbing is to be hooked-up later be sure the dispenser is disconnected from the power source. If Plumbing has been hooked-up, the dispenser is ready for Initial Setup.

PLUMBING REQUIREMENTS

- ALL EXCEPT OHW -

These dispenser must be connected to a COLD WATER system with operating pressure between 20 and 90 psi (0.138 and 0.620 mPa) from a ½" or larger supply line. A shut-off valve should be installed in the line before the dispenser. Install a regulator in the line when pressure is greater than 90 psi (0.620 mPa) to reduce it to 50 psi (0.345 mPa). The water inlet fitting is ¼" flare (CE/UK inlet 3/4" BSP on H3EA Element only).

NOTE: Bunn-O-Matic recommends ¼" tubing for installations of less than 25 feet and ⅜" for more than 25 feet from the ½" water supply line. At least 18 inches of an FDA approved flexible beverage tubing, such as reinforced braided polyethylene or silicone, before the dispenser will facilitate movement to clean the counter top. Bunn-O-Matic does not recommend the use of a saddle valve to install the dispenser. The size and shape of the hole made in the supply line by this type of device may restrict water flow.

As directed in the International Plumbing Code of the International Code Council and the Food Code Manual of the Food and Drug Administration (FDA), this equipment must be installed with adequate backflow prevention to comply with federal, state and local codes. For models installed outside the U.S.A., you must comply with the applicable Plumbing /Sanitation Code for your area.

Plumbing Hook-Up

1. Remove the shipping cap from the fitting on the rear of the dispenser, and attach the flare elbow fitting (supplied separately with the dispenser) to the fitting (CE/UK inlet 3/4" BSP on H3EA Element only).
2. Flush the water line and securely attach it to the flare fitting.



Plumbing
Hook-Up



Plumbing Hook-Up
for
H5X with Ambient
Side Dispense Only

INITIAL SETUP

H5E, H5X, H5-PC, H10X, H3/5 Element

CAUTION - The dispenser must be disconnected from the power source throughout the initial setup, except when specified in the instructions.

1. Connect dispenser to the power source and turn on water supply.
 2. Place Master ON/OFF switch in the ON position (if equipped).
- NOTE: (Digital models with display) When power is applied to the dispenser, the display will show the software version for 5 seconds, and then it will show the temperature.
3. Water will automatically flow into the tank to the proper level and shut-off. When filled, the water heater will turn on automatically.
 4. The tank will heat to the (set) temperature.
 5. Refer to Programming to set the Tank Temperature and the Ready Temperature.

NOTE: On H3 Element only, a small amount of expansion water on back of drip tray is normal during initial and/or back to back heating cycles.



INITIAL SETUP

continued from previous page


H5X with Side Ambient Dispenser

This unit has two faucets:

1. The Blue handle dispenses unheated water that depends on the Ambient temperature of the water source.
2. The Red handle dispenses water heated in a tank to a set temperature.

Ambient Temperature

Water heated to a set Temperature

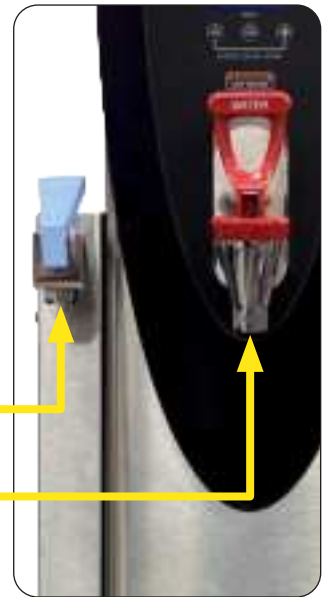

H5M

CAUTION - The dispenser must be disconnected from the power source throughout the initial setup, except when specified in the instructions.

1. Remove the upper rear panel and rotate the control thermostat knob fully counterclockwise to the “OFF” position and replace the panel.
2. Connect the dispenser to the power source and turn-on the water supply.
3. Water will automatically flow into the tank to the proper level and shut-off. This will take approximately 10 minutes.
4. Disconnect the dispenser from the power source, remove the upper rear panel and place the control thermostat knob fully clockwise to the “ON” position, and replace the panel.
5. Connect the dispenser to the power source and wait approximately twenty minutes for the water in the tank to heat.
6. On models with ready indicator, the indicator will light up when the proper water temperature is achieved.



H5M

HW2

CAUTION - The dispenser must be disconnected from the power source throughout the initial setup, except when specified in the instructions.

1. Remove the center rear panel and rotate the control thermostat knob fully counterclockwise to the “OFF” position and replace the panel.
2. Plug-in the dispenser.
3. Water will automatically flow into the tank to the proper level and shut-off.
4. Unplug the dispenser, remove the center rear panel and rotate the control thermostat knob fully clockwise to the “ON” position, and replace the panel.
5. Plug-in the dispenser and wait approximately twenty minutes for the water in the tank to heat. The dispenser is ready for use.



HW2

INITIAL SETUP

continued from previous page

OHW

CAUTION - The dispenser must be unplugged throughout the initial setup, except when specified in the instructions.

1. Place an empty vessel under the faucet, lift the pour-in lid, and pour a full pitcher (64 oz) of tap water into the top of the dispenser. Hold open the faucet handle to allow air to escape from the tank while it is filling.
2. Pour another full pitcher into the top. Close the faucet when water starts flowing from the faucet.
3. Fill the top basin with additional water until it is approximately one inch from the top lid.
4. Plug-in the dispenser and wait approximately 15 minutes for the water to heat to the proper temperature.
5. The dispenser is now ready for use. (Refer to the section on normal use.)



OHW

Normal Use

CAUTION - Water dispensed from this faucet is extremely hot. (Above 200° F.)

1. Hold open the faucet whenever a cup of hot water is desired.
2. Pour another full pitcher into the top whenever water is no longer available at the faucet. No wait is needed, the faucet is ready to dispense another cup of hot water.

NOTE - Due to the tank capacity and heater size, this product should be used only for dispensing a few cups of hot water at a time. (Larger capacity Bunn-O-Matic hot water dispensers are available.)

OPERATING CONTROLS

H5 Portion Control Only

(a) VOLUME SELECTOR BUTTONS

Press and release the button corresponding to the Small, Medium, or Large volume, to select the desired amount of water to be dispensed. Pressing a different button after a cycle has been initiated does not change the volume in progress.


(b) AUTO STOP/MANUAL DISPENSE BUTTON

Press and release button to stop a dispense cycle. Press and hold button to dispense manually.

(c) HIDDEN PROGRAMMING BUTTON

(d) LED INDICATORS

(e) DISPENSE NOZZLE

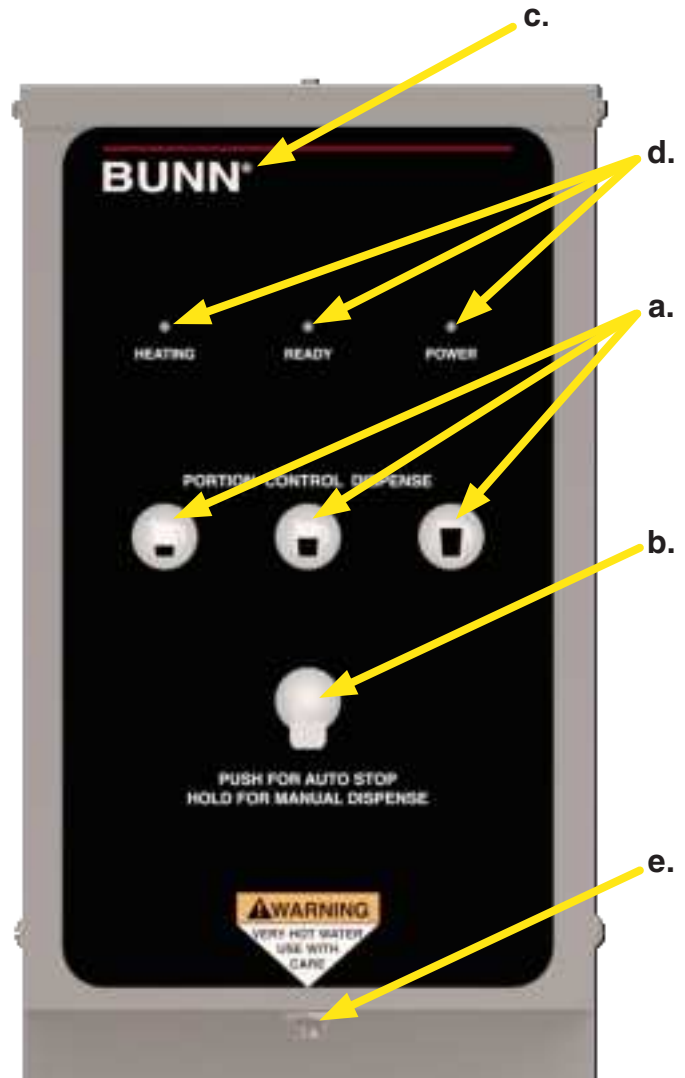

ADJUSTING DISPENSE VOLUMES

NOTE: The dispenser should be at operating temperature before setting dispense volumes.

1. Press and hold the hidden programming button (c) located under the ® next to the BUNN logo on the front of the dispenser until the 3 LED's begin flashing from the left to the right. Release the button.
2. Place an empty graduated container under the dispense nozzle (e).
3. Press and release the batch size to be set (a). The LED's will stop flashing, and the LED over the button just pressed will come on steady. Water will begin to dispense into the container.
4. When the desired amount of water is dispensed, press and release the same button (a). The water will stop dispensing and the batch size is now set.
5. The LED's will begin flashing from left to right again. Repeat steps 2 thru 4 to set up the other batch sizes.
6. To exit the programming set up at any time, press and release the hidden button once (c). The dispenser is now ready for use.

PROGRAMMING


H5-E, H5-PC, H5X, H10X

When power is applied to the dispenser, the display located on the bottom of the main circuit board will show the software version for 5 seconds, and then it will show the model number (see chart below) it will then go to (-). While the tank is filling, the display will read (FIL). When the tank is full the display will show the model number and then go to (-).

MODEL DISPLAYS (P1)


- (H5H) 5 Gallon High Voltage Unit (200-240V)
- (H5L) 5 Gallon Low Voltage Unit (100-120V)
- (HPC) 5 Gallon Portion Control Unit (all)
- (H10) 10X (all)

Switch must be in "SET" position for access into programming modes.

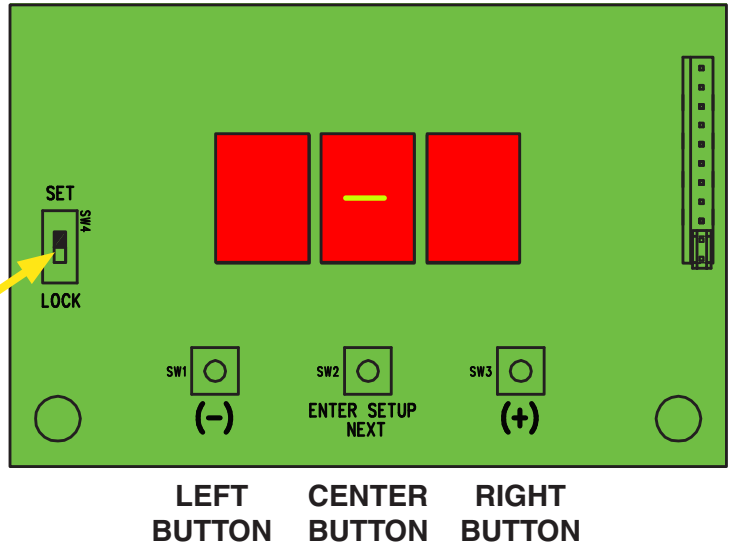

Level 1 Programming

1. Before programming any settings into the Control Board, confirm the correct model number is entered.
2. Do this by pressing and holding down on the center button until P1 appears on the display. Release the center button. The display will now show the model number (ex: H5H). Now scroll with the (+/-) buttons through the models listed above until the display matches the model you are working with.
3. Press and release the center button once more. The display will show P2. Display will now show the tank temperature (ex: 200). Press the (+) button to increase the temperature set point, or the (-) button to decrease the set point.
NOTE: If the unit is a H5X or H10X, set the Tank Temperature to 212°F.
4. After the Tank Temperature is entered, press and release the center button once more. The display will read P3, then show the ready temperature set point. Factory default is 195° F for most dispensers, and 85° F for some.
5. Press the (+) button to increase the set point, or the (-) button to decrease the set point.
6. To exit Level 1 Program press and release the center button once more. The display will show Software version, then model number, then (-).

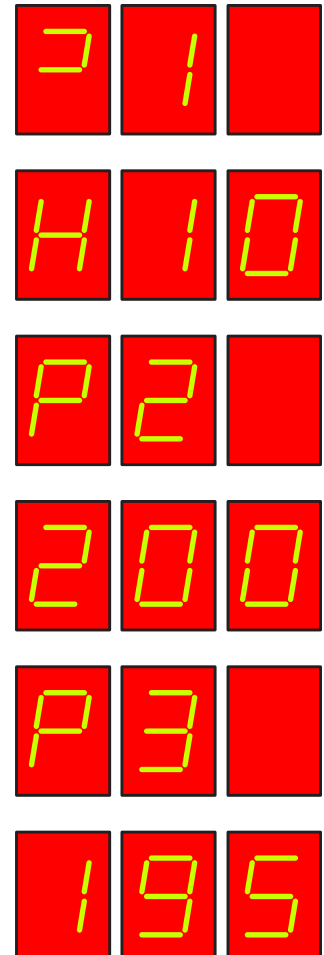

PROGRAMMING


continued from previous page

Level 2 Programming

H1 - DISPENSE TEMPERATURE LOCKOUT

Portion Control Only (Will Not Display ON Other Models)


1. To enter Level 2 Programming, press and hold the center button until H1 appears on the display (approximately 6 seconds) then release button. The display will either read noL (LOCKOUT DISABLED) or Loc (LOCKOUT ENABLED). When (ENABLED), unit will not dispense if the Tank Temperature is below the (READY) temperature setting.
2. Use the (+) or (-) buttons to alternate between Loc and noL.
3. Press and release the center button once more to advance to H2.
4. Or to exit Level 2, press and release the center button 3 times. Display will show, software version, then model number, then (-).

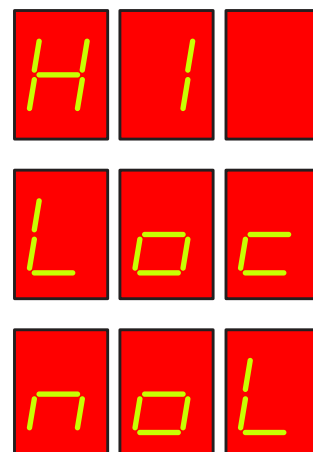

H2 - F° OR C° SELECTION

NOTE: Skip step 1 if going from H1 to H2.

1. To enter Level 2 Programming, press and hold the center button until H2 appears on the display (approximately 6 seconds). Release the center button, The display will show either FAH (Degrees in Fahrenheit) or CEn (Degrees in Centigrade).
2. Press and release the (+) or (-) buttons to alternate between FAH and CEn.
3. After setting FAH or CEn, to exit Level 2 Programming, press and release the center button twice. Display will show, software version, then model number, then (-).

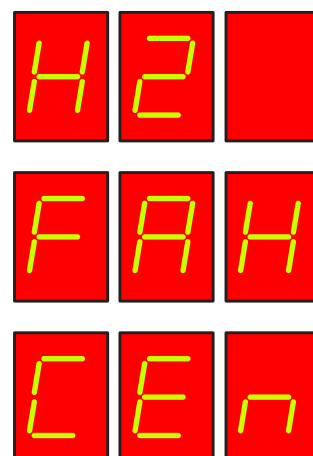


H3 - RESTORING FACTORY DEFAULTS

1. To restore Factory Defaults (This clears all settings that were previously entered), press and release the center button until H2 appears on the display (approximately 6 seconds). Release the Center Button, then press and release the Center Button once more. The display will read H3, then show (- - -).
2. Press and hold both (+) and (-) buttons to initiate the resetting of the factory default settings. The display (- - -) will flash on and off during this time (about 5 to 7 seconds).
3. When the factory default numbers are loaded in, the display will stop flashing, then read don (DONE). You can now release the two buttons.

NOTE: If you release the two buttons at any time before the display reads don, the Factory Default numbers will not be entered. The old numbers will remain in the memory.

4. To exit Level 2 Programming press and release the center button once more. The display will show the Software version, then model number, then (-).

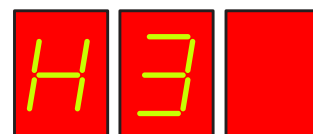

PROGRAMMING

continued from previous page

H5 ELEMENT

Adjusting Temperature:

The switch must be in the “SET” position in order to access the program modes.

1. Press and hold “TEMP” button until display flashes.
2. While display is flashing, press and release the (+) to increase or (-) to decrease temperature.

NOTE: (Starting with software version 0.07)


3. If unit is “E” model, temp will stop at 211°F (99°C). If unit is “X” model, temp display will jump from 211°F (96°C) to 212°F (100°C).

Refer to chart on page 3 and adjust temperature requirements according to altitude.

Program Lockout Switch:

The switch must be in the “SET” position in order to access the program modes.

1. Disconnect the dispenser from the power source.
2. Remove the 4-40 screws and the top cover.
3. Use a small screwdriver to move switch to set position.
4. Install top cover, connect dispenser to power source.

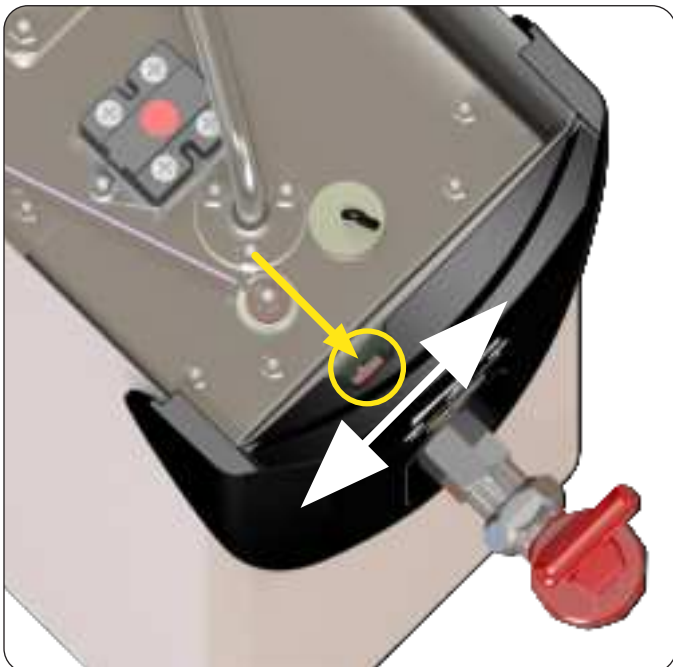


Manual Energy Saver Mode:

The energy save mode will allow the tank temperature to drop down to 140°F (60°C).

1. Simultaneously press and release the (+) and (-) to “manually” activate energy save mode.
2. The display will alternately flash between 140 and the current temperature to indicate it is in the energy save mode.
3. Repeat procedure to exit energy save mode.


Step Forward

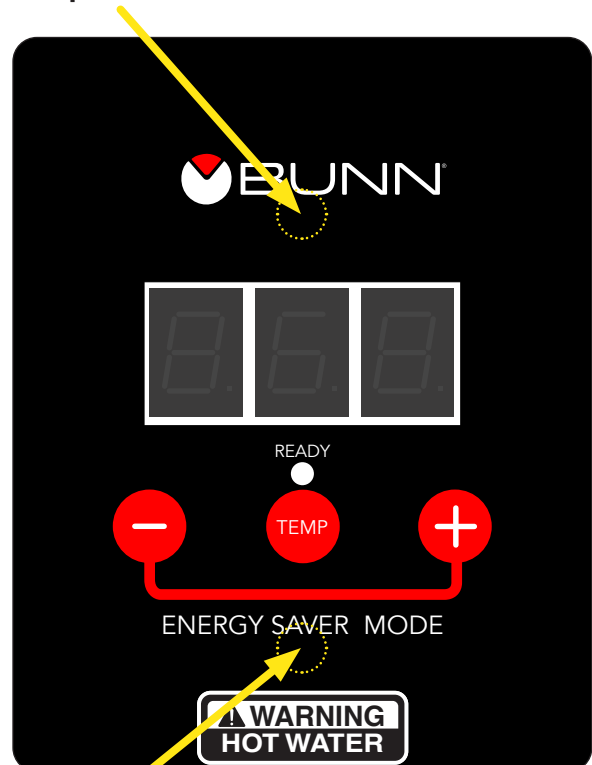

Step Backward

Programming the dispenser:

1. Press and hold upper hidden button (bottom center of “BUNN” logo) until “P1” is displayed.

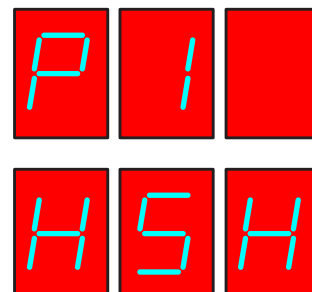

PROGRAMMING

continued from previous page

1. The display will now show the model number.

(H5H) 5 Gallon High Voltage Unit (200-240V)

(H5L) 5 Gallon Low Voltage Unit (100-120V)

Now scroll with the (+/-) buttons through the models listed above until the display matches the model you are working with.

2. Press and release the upper hidden button once more. The display will show P2. Display will now show the "SET" temperature (ex: 200). Press the (+) button to increase the temperature set point, or the (-) button to decrease the set point.
3. Range: 60°F (15°C) to 211°F (99°C) NOTE: Temp will go to 212°F (100°C) on H5X.
4. After the Tank Temperature is entered, press and release the upper hidden button once more. The display will read P3, then show the ready temperature set point.
5. Range: 2° to 20° below the "SET" temperature.
6. Press the (+) button to increase, or the (-) button to decrease the set point.
7. Press and release the upper hidden button once more. The display will read P4. This screen will allow you to turn the "Auto" energy save mode ON/OFF.
NOTE: Turning off this function will disable "P5" and "P6".
8. Press and release the upper hidden button once more. The display will read P5.
9. This will toggle the energy save mode from 140°F (60°C) or tank heater "OFF".
10. Press and release the upper hidden button once more. The display will read P6.
11. This is the time delay from the last refill to the activation of energy save mode.
12. Range: 4 hours to 24 hours.

P 2

2 0 0

P 3

1 9 5

P 4

O F F

P 5

1 4 0

P 6

1 2


PROGRAMMING

continued from previous page

Level 2 Programming

H2 - F° OR C° SELECTION


1. To enter Level 2 Programming, press and hold the upper hidden button until H2 appears on the display. Release the upper hidden button. The display will show either FAH (Degrees in Fahrenheit) or CEn (Degrees in Centigrade).
2. Press and release the (+) or (-) buttons to alternate between FAH and CEn.
3. After setting FAH or CEn, to exit Level 2 Programming, press and release the upper hidden button twice. Display will show, software version, then main screen.

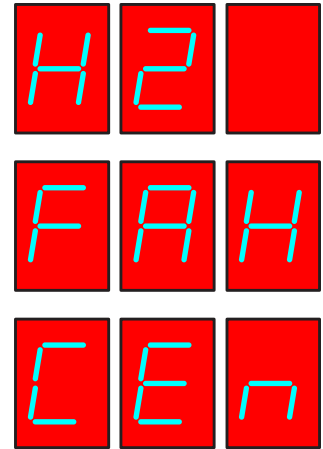

H3 - RESTORING FACTORY DEFAULTS

1. To restore Factory Defaults (This clears all settings that were previously entered), press and release the upper hidden button until H2 appears on the display (approximately 6 seconds). Release the upper hidden Button, then press and release the upper hidden Button once more. The display will read H3, then show (- - -).
2. Press and hold both (+) and (-) buttons to initiate the resetting of the factory default settings. The display (- - -) will flash on and off during this time.
3. When the factory default numbers are loaded in, the display will stop flashing, then read don (DONE). You can now release the two buttons.


NOTE: If you release the two buttons at any time before the display reads don, the Factory Default numbers will not be entered. The old numbers will remain in the memory.

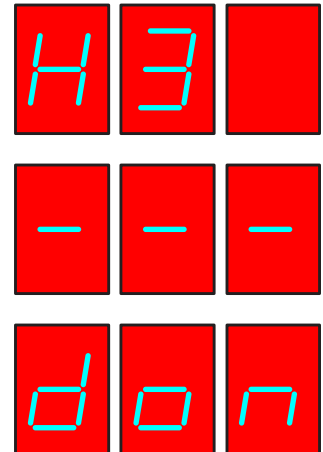


PROGRAMMING

H3E ELEMENT

1. Program lockout switch:
2. The switch must be in the “SET” position in order to access the program modes.
3. Disconnect the dispenser from the power source.
4. Remove the 4-40 screws and the top cover.
5. Looking from back to front, use a small screwdriver (or similar item) through slot in front housing to move switch to set position.
6. Install top cover, connect dispenser to power source.

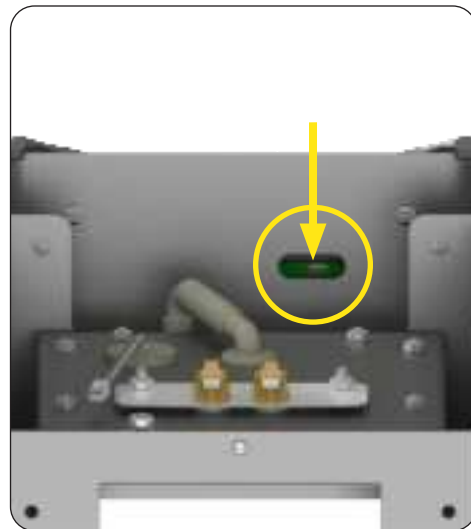

Programming
Button

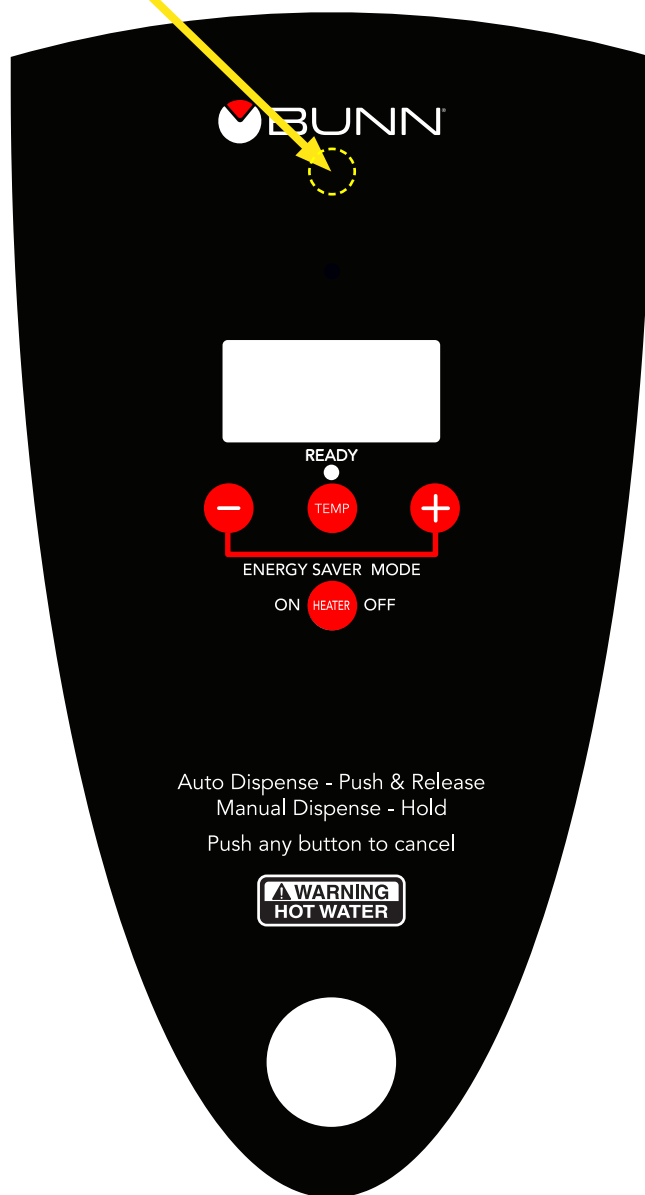

Auto Dispense - Push & Release
Manual Dispense - Hold
Push any button to cancel

WARNING
HOT WATER


PROGRAMMING

continued from previous page

For H3E software versions prior to 2.17

1. Press and release the hidden button. The display will show **P1**. Display will now show the “SET” temperature. Press the (+) button to increase the temperature set point, or the (-) button to decrease the set point.


Range: 15°C (60°F) to 96°C (205°F). Default: 93°C.

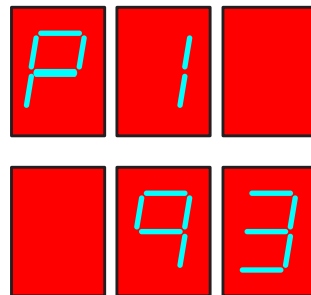

2. After the Tank Temperature is entered, press and release the hidden button once more. The display will read **P2**, then show the ready temperature set point.


Range: 2°C to 10°C below the “SET” temperature. Default: 90°C.

3. Press the (+) button to increase, or the (-) button to decrease the set point.

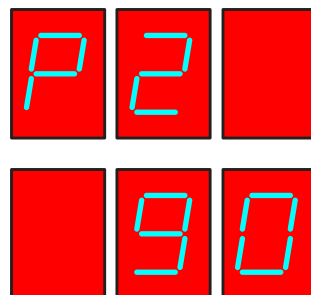


6. Press and release the hidden button once more. The display will read **P3**. This screen will allow you to turn the “Auto” energy save mode ON/OFF. Default: OFF.

NOTE: Turning off this function will disable “**P4**” and “**P5**”.

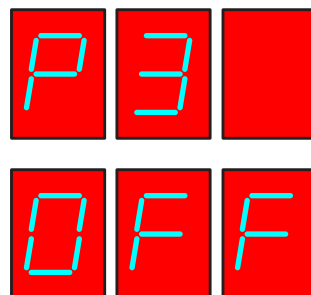


5. Press and release the hidden button once more. The display will read **P4**. This will toggle the energy save mode from 60°C (140°F) or tank heater “OFF”.

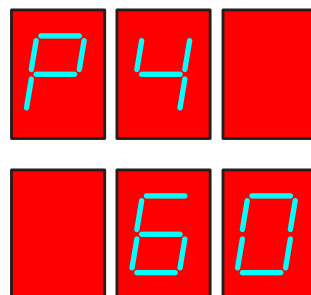

6. Press and release the upper hidden button once more. The display will read **P5**. This is the time delay from the last refill to th/e activation of energy save mode.

Range: 4 hours to 24 hours.

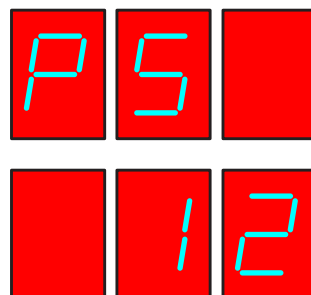


PROGRAMMING

continued from previous page

Level 2 Programming


H1 - DISPENSE LOCKOUT

1. To enter Level 2 Programming, press and hold the hidden button until H1 appears on the display. Release the hidden button. The display will show “noL” (no lockout) or Loc (dispense lockout).
2. Press and release the (+) or (-) buttons to alternate between noL and Loc.

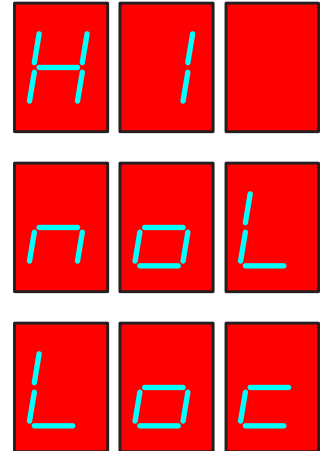

H2 - C° OR F° SELECTION


1. To enter Level 2 Programming, press and hold the hidden button until H1 appears on the display. Press and release the hidden button. The display will show CEn (Degrees in Centigrade) or FAH (Degrees in Fahrenheit)
2. Press and release the (+) or (-) buttons to alternate between FAH and CEn.

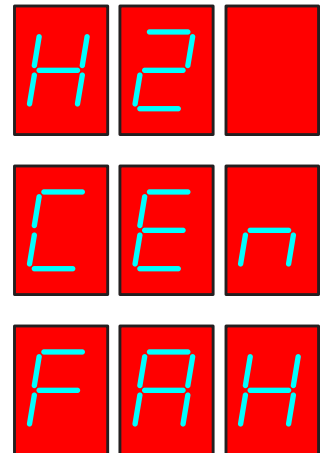

H3 - RESTORING FACTORY DEFAULTS

1. To restore Factory Defaults (This clears all settings that were previously entered), press and release the hidden button until H1 appears on the display. Press and release the hidden button, then press and release the hidden button once more. The display will read H3, then show (- - -).
2. Press and hold both (+) and (-) buttons to initiate the resetting of the factory default settings. The display (- - -) will flash on and off during this time.
3. When the factory default numbers are loaded in, the display will stop flashing, then read don (DONE). You can now release the two buttons.

NOTE: If you release the two buttons at any time before the display reads don, the Factory Default numbers will not be entered. The old numbers will remain in the memory.

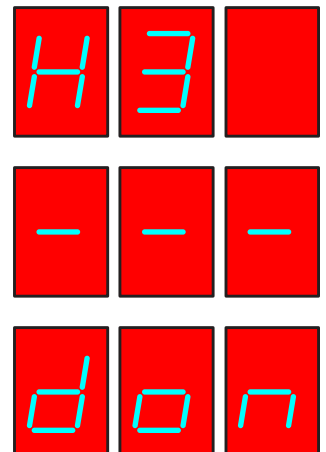

PROGRAMMING



continued from previous page

H3E/X ELEMENT

For H3E models - S.W. 2.17 and above
For H3X models - S.W. 5.11 and above



P1: Model selection. H5H, H5L, H3 toggle through model numbers with +/-.

NOTE: Not used on H3E models.

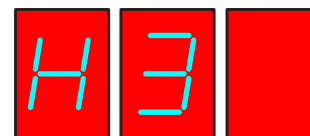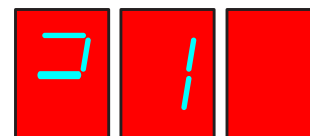

P2: Press and release the hidden button. The display will show **P2**. Display will now show the “SET” temperature. Press the (+) button to increase the temperature set point, or the (-) button to decrease the set point.


Range: 15°C (60°F) to 96°C (205°F). Default: 93°C (200°F)

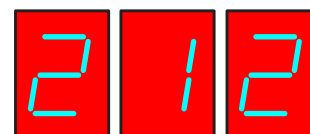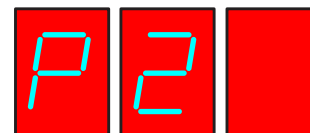

P3: After the Tank Temperature is entered, press and release the hidden button once more. The display will read **P3**, then show the ready temperature set point.



Range: 2°C (2°F) to 10°C (20°F) below the “SET” temperature. Default: 5°F.

Press the (+) button to increase, or the (-) button to decrease the set point.


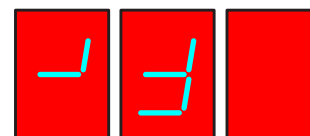


P4: Press and release the hidden button once more. The display will read **P4**. This screen will allow you to turn the “Auto” energy save mode ON/OFF. Default: OFF.

NOTE: Turning off this function will disable “P5” - “P6”.

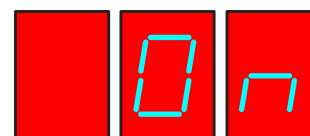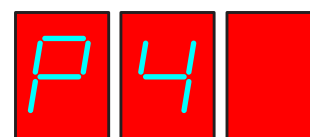

P5: Press and release the hidden button once more. The display will read **P5**. This will toggle the energy save mode from 60°C (140°F) or tank heater “OFF”.

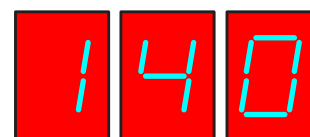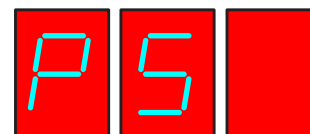


PROGRAMMING

continued from previous page

P6: Press and release the upper hidden button once more. The display will read **P6**.


This is the time delay from the last refill to the activation of energy save mode

Range: 4 hours to 24 hours.

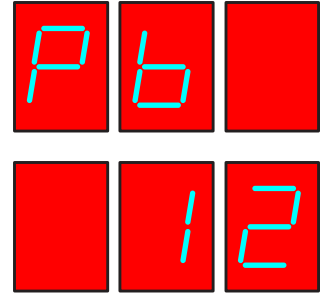


P7: Press and release the upper hidden button once more. The display will read **P7**.

This sets the dispense time for “Portion Control”. Default is “0” (Push & Hold).

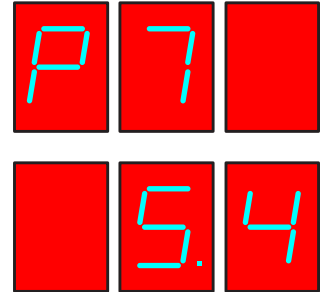

During exit of program mode, software version will be displayed.

NOTE: Refer to page 17 for H1 - H3 modes.

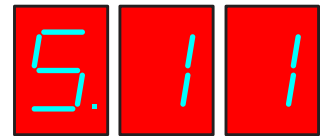

DRAINING THE DISPENSER

OHW

CAUTION - The dispenser must be disconnected from the power source throughout these steps.

1. Disconnect the dispenser from the power source and allow dispenser to cool.
2. Tilt dispenser forward over sink.
3. Open faucet.
4. Continue tilting dispenser forward over sink until water stops flowing.

NOTE - The dispenser must be full using the INITIAL SETUP steps before reconnecting to the power source.

ALL 2, 3 & 5 GALLON MODELS

1. Disconnect the dispenser from the power source and allow dispenser to cool.
2. Remove upper rear access cover(s).
3. Close the white shutoff clamp on the long hose between tank and inlet solenoid.
4. Disconnect the hose clamp and hose from inlet solenoid or check valve.
5. Place the end of the drain hose in a container that has a minimum capacity of 2.0 gallons (7.5 L) HW2,
6. 5 Gal/18.9L for H5E,M,X, & Element.
7. Release the white clamp to drain water from the tank.

When tank is empty, replace the hose onto solenoid (or flow control) and tighten the black clamp.

NOTE: Do not tighten white clamp!

8. Replace the access cover.

10 GALLON MODELS

1. Disconnect the dispenser from the power source and allow dispenser to cool.
2. Remove left side access cover.
3. Close the white shutoff clamp on the long hose that is teed between tank and inlet solenoid.
4. Disconnect the hose clamp and plug from loose end of long hose.
5. Place the end of the drain hose in a container that has a minimum capacity of 10Gal/37.8L.
6. Release the white clamp to drain water from the tank.
7. When tank is empty, replace the clamp and plug and tighten the black clamp.
8. Replace the access cover.

Alternate method:

ALL 2, 5 & 10 GALLON MODELS

CAUTION - The dispenser must be disconnected from the power source throughout these steps.

1. Disconnect the dispenser from the power source.
2. Shut-off and disconnect the incoming water supply and allow dispenser to cool.
3. Remove the 4-40 screws and the top cover.
4. Gently remove one of the grommets from the tank lid.
5. Insert a tube to the bottom of the tank and syphon ALL of the water out.

CLEANING

The use of a damp cloth rinsed in any mild, non-abrasive, liquid detergent is recommended for cleaning all surfaces on Bunn-O-Matic equipment.

WALL MOUNTED INSTALLATION - 5 GALLON MODELS ONLY

If the dispenser is wall mounted, the bottom of the dispenser should be at the same height as a counter or table top. Use B.O.M. part #12542.0000 for side mounted Wall Bracket Kit or # 13125.0001 for front mounted Wall Bracket Kit.

SUPPORT FOR LARGE RECEPTACLES

CAUTION – If the dispenser is to be used with larger receptacles such as pitchers or pots, those receptacles must be adequately supported during dispensing of hot water to avoid spillage of very hot water.

This support may be provided by a table or counter top, or use B.O.M. part #12599.0000 Shelf Kit.

