

SIMPLE MANUAL

Wi-Fi Soundbar

S95TR (SPT9-SL, SPT9-SR)



www.lg.com Copyright © 2024-2025 LG Electronics Inc. All Rights Reserved.

ENGLISH

Specification

Power requirements

Refer to the main label.

Power consumption

Refer to the main label.

Soundbar dimensions (W x H x D): Approx. 1250.0 mm x 63.0 mm x 135.0 mm


Wireless rear speakers dimensions (W x H x D): Approx. 159.0 mm x 223.0 mm x 142.0 mm
Bus Power Supply (USB): 5 V === 500 mA
Amplifier (Total RMS Output power): 810 W RMS

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit https://opensource.lge.com.


LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.


This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

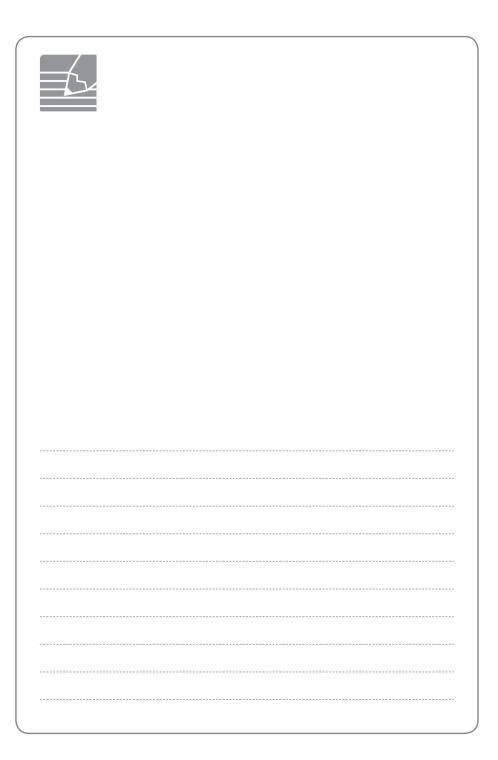

S95TR.DZAFLLK_SIMPLE (Sheet)_MFL05806707.indd 1-3 2025-05-08 2:44:46



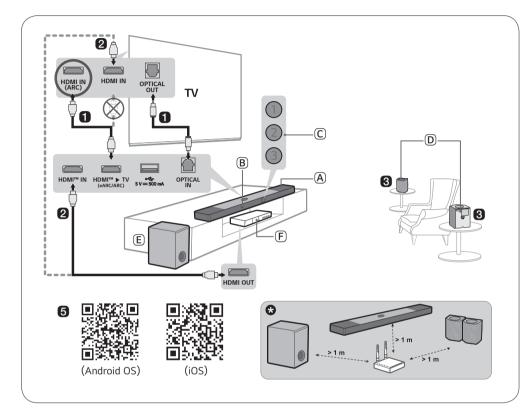

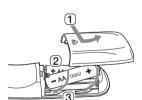

Replacement of Battery

HIGH-DEFINITION MULTIMEDIA INTERFACE

ENGLISH Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference. To view the instructions of advanced features, visit http://www.lg.com or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- (A) Soundbar
- B Remote Control Receiver
- C Status LED (123)
- (D) Wireless Rear Speakers

- E Wireless Subwoofer Install it close to the soundbar.
- F External Device (Blu-ray player, game console, etc.)

○: On / ●: Off / : Blink							
	0		① ② ④		① ② ③	0	0
Red blinking	White	White blinking	White	White blinking	White	Golden yellow	Purple
Power on Power off	OPTICAL / HDMI ARC	Bluetooth ready	Bluetooth	Wi-Fi ready	Wi-Fi	HDMI IN	USB

- Connect the soundbar to your TV via an optical cable or an HDMI cable.
- 2 If you are using an external device (ex. Set-top box, Blu-ray player, game console, etc.), connect it to the soundbar or to the TV via an HDMI cable.
 - ① If necessary, purchase HDMI cables, an optical cable, or a USB extension cable to connect the soundbar.
- 3 Connect to power in the following order: wireless subwoofer → wireless rear speakers → soundbar. Then, turn on the soundbar. When the connection is automatically established with the soundbar, the LEDs on the wireless subwoofer and wireless rear speakers will light up green.
- 4 Using the product with your TV
- 1 Press the Function button repeatedly until LED1 lights up white. If you are using an external device that is connected to HDMI™ IN on the soundbar, press the Function button repeatedly until LED1 lights up golden yellow.
- (2) On your TV's settings, set the output speaker to [HDMI ARC], [Optical], [LG WOWCAST], or [External Speaker].
- ① If you have an LG TV that supports the WOWCAST built-in function, you can connect it to the soundbar wirelessly.
- **5** Connecting the product to your smartphone via Wi-Fi
- (1) Connect your smartphone to Wi-Fi.
- 2 Install the LG ThinQ app on Google Play or the App Store.
- (3) Run the LG ThinQ app and follow the instructions.
- 4 The product will connect to your smartphone and you can control the product with LG ThinQ app.
- 6 Connecting the product to your smartphone via Bluetooth
- 1 Tap the Settings button on your smartphone and select Bluetooth. Turn on the Bluetooth function.
- 2 Press the Bluetooth pair (*) button. After a moment, LED1 and LED2 blink white.
- 3 Find and select "LG_Speaker_S95TR_XXXX".
- 4 When the product is connected to your smartphone via **Bluetooth**, LED1 and LED2 light up white.



If you see a red LED on the wireless subwoofer or wireless rear speakers, it means that the soundbar is not connected to the speakers. If this is the case, connect them in the following order.

- 1 Press the **Power** U button on the soundbar to turn it off.
- Press the PAIRING button on the back of the wireless subwoofer or wireless rear speakers. Check if each LED blinks green.
 If you still see a red LED on the wireless subwoofer or wireless rear speakers, press and hold the button on the back of the subwoofer or wireless rear speakers again.
- 3 Press the **Power** button on the soundbar to turn it on.
- (4) When the connection is established, you will see a green LED light on the wireless subwoofer or wireless rear speakers light up green.
- Keep the soundbar, the subwoofer and wireless rear speakers away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.
- Some speakers may not make sound depend on the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.
- Design and specifications are subject to change without notice.
- Google Play is a trademark of Google LLC.

S95TR.DZAFLLK_SIMPLE (Sheet)_MFL05806707.indd 4-6 2:44:48