

PROAIM

BMP60 R Pro Long Blimp Microphone Windscreen (BMP-60R)



All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Blimp Extension



Proaim BMP60 R Pro Long Blimp Microphone Windscreen with Pistol Grip Handle



XLR Holder



60cm Modular Windjammer



Boom Pole Adapter



40cm Modular Windjammer



6 x Mic Holders



Rubbers 40 Pcs

FEATURES



■ Blimp Mic Windshield Setup

- Hold the blimp cage firmly with one hand. With the other hand, gently twist and pull of the end cap, as shown in the image.



Adjusting the Pistol Grip Handle

- Loosen the ratchet knob and then pulldown the pistol grip handle.



- Once the handle is in position, tighten the ratchet knob to securely lock it in place.



- Open the locking clip on one side of the blimp cage, as shown in the image.



- Repeat the process by opening the locking clip on the opposite side of the blimp cage.



- Slide the mic holder rod out of the blimp cage.



NOTE: The mic holder comes with rubber and clamps pre-attached. If any rubber or clamp breaks, you can replace it using the spare parts provided.



Mic Assembly

- Insert the mic (Not Included) securely into the mic holder.



- Slide the mic holder rod into the cage until it is firmly seated.



Routing the Mic Cable

- Pass the mic cable through the center of the locking clips.
- Tighten the locking clips securely.



- Attach the end cap to the blimp cage and tighten it as shown in the image.



- Route the internal XLR cable through the pistol grip handle for neat cable management.



Note: This ergonomic handle is designed for comfortable handheld operation.



Attaching to Boom Pole

- The handle features a 3/8"-16 threaded base for mounting a boom pole.
- Attach the boom pole (Not Included) to the pistol grip handle.



- Connect the mic's XLR connector to the boom pole's XLR connector.



- The microphone's XLR connector is now properly connected to the boom pole's XLR connector.



Detaching Mic Connectors and Handle

- Disconnect the boom pole's XLR connectors from the mic's XLR connectors.



- Detach the boom pole from the pistol grip handle as shown in the image.
- Pull out the mic cable from the pistol grip handle.



- Loosen the ratchet knob and remove it.



- Take off the handle locking plate from the pistol grip.



- Finally, detach the handle from the blimp cage, as shown in the image.



Boom Pole Adapter Assembly

Feature: This is a shorter attachment with the same 3/8"-16 thread.

- It's used to mount the blimp cage directly to a boom pole without the long pistol grip.
- It reduces total length and weight — ideal for extended boom use.



- Insert the screw into the boom pole adapter as shown in the image.



- Now, attach the spring to the installed screw.



- Insert the screw with spring into the threaded hole of the boom pole adapter.



- Attach the handle locking plate to the opposite side of the boom pole adapter.



- Place the washer onto the boom pole adapter, as shown in the image.



- Secure the ratchet knob onto the boom pole adapter and tighten properly.



Features: The boom pole adapter includes two mounting options — 3/8" and 5/8".

- The boom pole adapter comes with a 3/8" mounting.
- To use the 5/8" mounting, remove the grub screw with a screwdriver.



- Once the grub screw is removed, the adapter converts to the 5/8" size.



- Attach the XLR holder to the boom pole adapter.



- Attach the boom pole to the XLR holder.
Note: Here we use the 3/8" mounting to attach the boom pole.



- Connect the mic's XLR connector to the boom pole's XLR connector.



- Secure the XLR connectors inside the XLR holder.



Modular Windjammer Assembly (40cm)

- A modular windjammer reduces unwanted noise for clearer audio.
- Begin by unzipping the (40cm) modular windjammer.



- Insert the boom pole into the windjammer.



- Zip up the modular windjammer.



Detaching Modular Windjammer, Mic Connectors and Handle

- Remove the boom pole from the windjammer.



- Disconnect the boom pole's XLR connector from the mic's XLR connector.



- Remove the mic cable from the XLR holder.



- Hold the blimp cage firmly with one hand. With the other hand, gently twist and pull of the end cap, as shown in the image.



- Remove the mic cable through the center of the locking clips.



- Open the locking clip on opposite side of the blimp cage, as shown in the image.



- Slide the mic holder rod out of the blimp cage.



- Removed the mic from the mic holder.



Assembly Blimp Extension

- Insert the mic securely into the mic holder.



- Slide the mic holder rod into the cage until it is firmly seated.



- Open the locking clip on the opposite side of the blimp cage, as shown in the image.



- Hold the blimp extension firmly with one hand. With the other hand, gently twist and pull of the end cap, as shown in the image.



- Pull the mic cable out of the blimp extension.



- Attach the blimp extension to the blimp cage.




- Pass the mic cable through the center of the locking clips.



- Attach the end cap to the blimp extension and tighten it securely, as shown in the image.



- Connect the mic's XLR connector to the boom pole XLR connector.

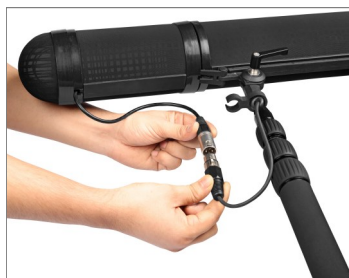

- Secure the XLR connectors inside the XLR holder.



Attaching 60cm Windjammer

- Unzip the 60cm modular windjammer.
- Insert the boom pole into the modular windjammer.
- Zip up the modular windjammer.
- Your setup is ready for use.



**YOUR PROAIM BMP60 R PRO LONG BLIMP MICROPHONE WINDSCREEN
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.