

10 core pigtail color code

	Signal	Wire Color
Power	VIN	RED
	GND	BLACK
Wiegand	DATA0_OUT	GREEN
	DATA1_OUT	WHITE
	GLEAD	LIGHT GREY
Relay	NC	VIOLET
	COMMON	BROWN
	NO	YELLOW
Sensor Inputs	EXIT Switch	BLUE
	Reed Switch	ORANGE




Scan this QR code for detailed
Installation Instructions



Contact Us

- 📞 USA: +91 70221 97983
- 📞 India: +91 87668 12888
- ✉️ support@spintly.com
- ✉️ sales@spintly.com

For more information visit:
www.spintly.com

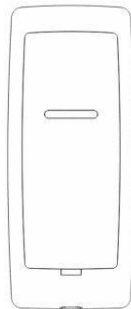

Spintly AURA BASIC Instruction Manual

About:

Spintly AURA the advanced BLE mesh enabled reader by Spintly with highest level of security and reliability

Features:

- BLE Mesh connectivity to Gateway
- Wide Input operating voltage
- Highly Interoperable, retrofit with legacy controllers over Wiegand
- No internet required for access
- Cloud based access management


Specifications:

- Voltage ratings:**
9V to 30V DC
- Power consumption:**
2.4W max at 12V


Box content:

Sr. No.	Contents in the box	Qty.
1	Spintly AURA BASIC unit	1
2	ISO #6, 25mmL, CSK (+)	2
3	Wall Plugs	2
4	Instruction Manual	1


Mechanical dimensions:

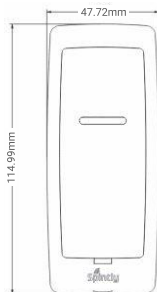

Mounting Instruction:

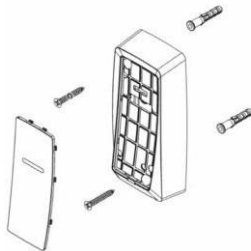

Step 1: Mount the AURA unit on the wall with 2, ISO #6, 25mmL, CSK (+) screws as shown below

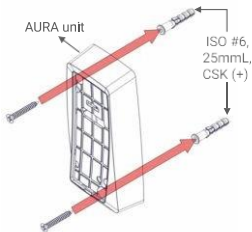

Step 2: Snap in the front face plate as shown below

