

Manual for connector (Wall- or Rack Adjust)



The two parts for the Wall - / Rack Adjust



1. How to mount the wall-adjust together.



2. Slide the connector in the wall adjust.



3. Slide the lower part of the wall adjust over the connector.

Make sure the holes are aligned.



4. There are 4 bolts and 1 hex key included.



5. Tighten the bolts securely.



7. Tighten each screw one by one until there is no more play in the tubes.

If you have a torque wrench,
tightening torque
approximately 15 Nm, 11 ft-lb



6. Check that everything is securely fastened.

And it's ready to use.