Keebar

Product Manual

Electric Kettle

XH-W081B


Facebook: Keebar Website: https://www.amazon.com/keebar Customer Service: keebar_official@outlook.com

Thank you for choosing Keebar!
Please read this user manual carefully to ensure correct operation and keep it on hand for future reference.

Product Specification

Rated Voltage	120V AC	Rated Frequency	60Hz	
Product Mode		XH-W081B		
Rated Power	Rated Power			
Capacity	0.8L			

Part Name

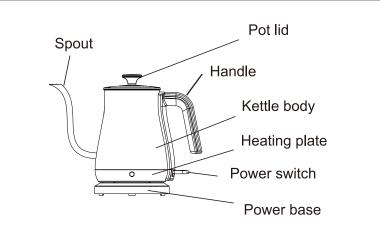

Instructions Before First Time Use

1. Remove the package of the electric kettle . 2. Check whether the voltage marked on the nameplate of the kettle body is consistent with the voltage you are going to use.

3. Please use the power supply with protective grounding to ensure personal safety.

4. In the initial use, add water to wash inside or boil twice to clean firstly,

and then pour out the water. 5. The electric kettle only can be used on the base provided.


6. Completely unroll the cable. **Usage Method**

1. Press the switch before adding water, and cover the lid after adding water (Note: When adding water, please do not exceed the upper limit of the water level, and keep it flat. If the water exceeds the upper water level, it may overflow when boiling. If the water is less than the lower water level, the kettle will not work normally.)

2. Put the kettle on the base correctly and connect the power supply of the base. (Fig 1)

3. Turn on the switch, then you can see that the red indicator light is on, indicating that the kettle starts to work. When the water boils for a period of time, the power will be cut off automatically and the indicator light will go out. 4. If you want to cut off the power before the water boils, press the key.

5. Throw away the first lot of water after boiling.

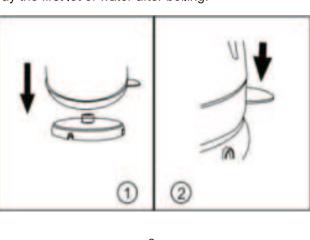


Cleaning Precautions

1. You must turn off the power and cool down the kettle before cleaning.

2. Do not immerse the kettle, base, power cord and plug in the water to prevent water from entering the appliance, causing failure and affecting the safe use. (Fig2)

3. The power plug must be absolutely dry when inserted. It is forbidden to plug and unplug the power cord with wet hands. (Fig 3)

4. Use a damp cloth to wipe the outside of the kettle, body, and base. Do

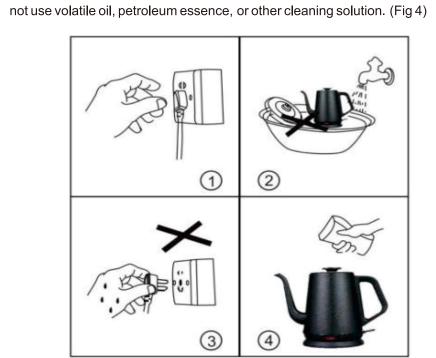

Safety Warning

• Using electrical equipment is dangerous. Please read the instructions carefully before use.

• The appliance is only to be used for the purposes described in these • Keep away from children when the kettle is working. Otherwise, it may

cause burns and electric shock. • In the case of obvious damage to the appliance or the cable, please

contact the seller. • Do not use it if the lid is not tightly closed. Otherwise, the power will not be cut off automatically after the water boils. (Fig. 1)

• When the water is boiled, the water vapor will come out from the water blowing port or the upper cap. The operation shall be careful to prevent scalding. (Fig. 2) Do not use in the presence of no one.

 Do not power on to use the kettle without adding water. • The boiler gets hot during use; Therefore do not touch the appliance

except the handle; Use only on a dry, anti-slip, level surface;

 Do not add water above the "MAX" mark, as this may overflow boiling water (risk of scalding!)

 This product is only used for boiling water. Do not heat other liquids to avoid damage. This product is only used for boiling water. Do not heat other liquids

to avoid damage. If the power cord is damaged, to avoid danger, it must be replaced by the manufacturer or its maintenance department or similar full-

time personnel.

Descale the jug kettle regularly.



Warranty Information **Product Name** Model Name **Default Warranty Period** 12-month Date of Purchase Order Number

Terms & Policy

- The warranty is effective from the date of purchase.
- Keebar will replace defective products based on eligibility. Refunds are available to the original purchasers of our products within the first 30 days of purchase. This warranty extends only to personal use.
- This warranty is non-transferable. Keebar is not responsible for any damages, losses, or inconveniences caused by equipment failure, user negligence, user abuse, or improper operation that does not follow the included user manual.

Customer Service

Your satisfaction is our goal! Should you encounter any issues or have any questions about your new product, feel free to contact our Customer Support Team via email at keebar_official@outlook.com