

VICTROLA™

Bluetooth® Speaker Table

Model: VS-140



Instruction Manual

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE
AND KEEP IT FOR FUTURE REFERENCE.

CONTENTS

SAFETY INSTRUCTIONS	2
SPECIFICATIONS	3
SPEAKER ASSEMBLY.....	4
OPERATION	5
BLUETOOTH OPERATION	6
AUX-IN OPERATION.....	6
BATTERY / CHARGING	7
FCC STATEMENT	7
CALIFORNIA PROP 65 WARNING.....	7
IT WARRANTY.....	8

Design and specification are subject to change without notice.

 
Bluetooth is a registered trademark of Bluetooth SIG, Inc.
Other trademarks and trade names are those of their respective owners.

Made in China.

SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement, near a swimming pool, or near other wet areas.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Keep at least 5 cm around the apparatus for sufficient ventilations. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug the apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Please keep the unit in a well ventilated environment.
16. Only use attachments/accessories specified or provided by the manufacturer
17. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall not be placed on apparatus.
18. The main plug is used as disconnect device, the disconnected device shall remain readily operable.
19. This product is not intended for commercial use. Household Use Only.

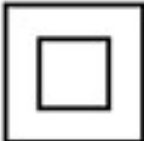

20.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

21.

 The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PROFESSIONAL.	 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.
--	--	---

Warning: To reduce the risk of fire or electrical shock, do not expose the apparatus to rain or moisture. No naked flame sources such as candles shall be placed on top of the apparatus.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device. Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

 
SPECIFICATIONS

Functions:.....	Bluetooth, USB Charging, Aux-In, Hands-free phone call
Bluetooth version:	V4.2
2 USB charging ports (Output):.....	2.1A/1A
Battery:.....	Built-in 2,200mAh Li-ion (24.42Wh) Rechargeable Battery
Playing time:.....	5-6 hours (100% volume level) 8-10 hours (50% volume level)
Charging time:	4 hours (powered off) 6 hours (in use)
Total output power:	88W
RMS:.....	30W (15W x 2)
Speaker (Midrange):	2.75" 4Ω, 12W x 4pcs
Tweeter:	31mm, 8Ω, 20W x 2pcs
Radiator:.....	75mm 4pcs
Power Supply:	AC Adaptor: 100-240, 50-60Hz DC-16V/2A
Included:.....	Speaker, Three (3) Legs, Instruction Manual, 3.5mm Aux-In Cable, Power Supply

CAUTION:

The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in a fire. Do not dispose device in standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate local disposal laws and regulations. Please refer to local regulations for proper battery disposal.

SPEAKER ASSEMBLY

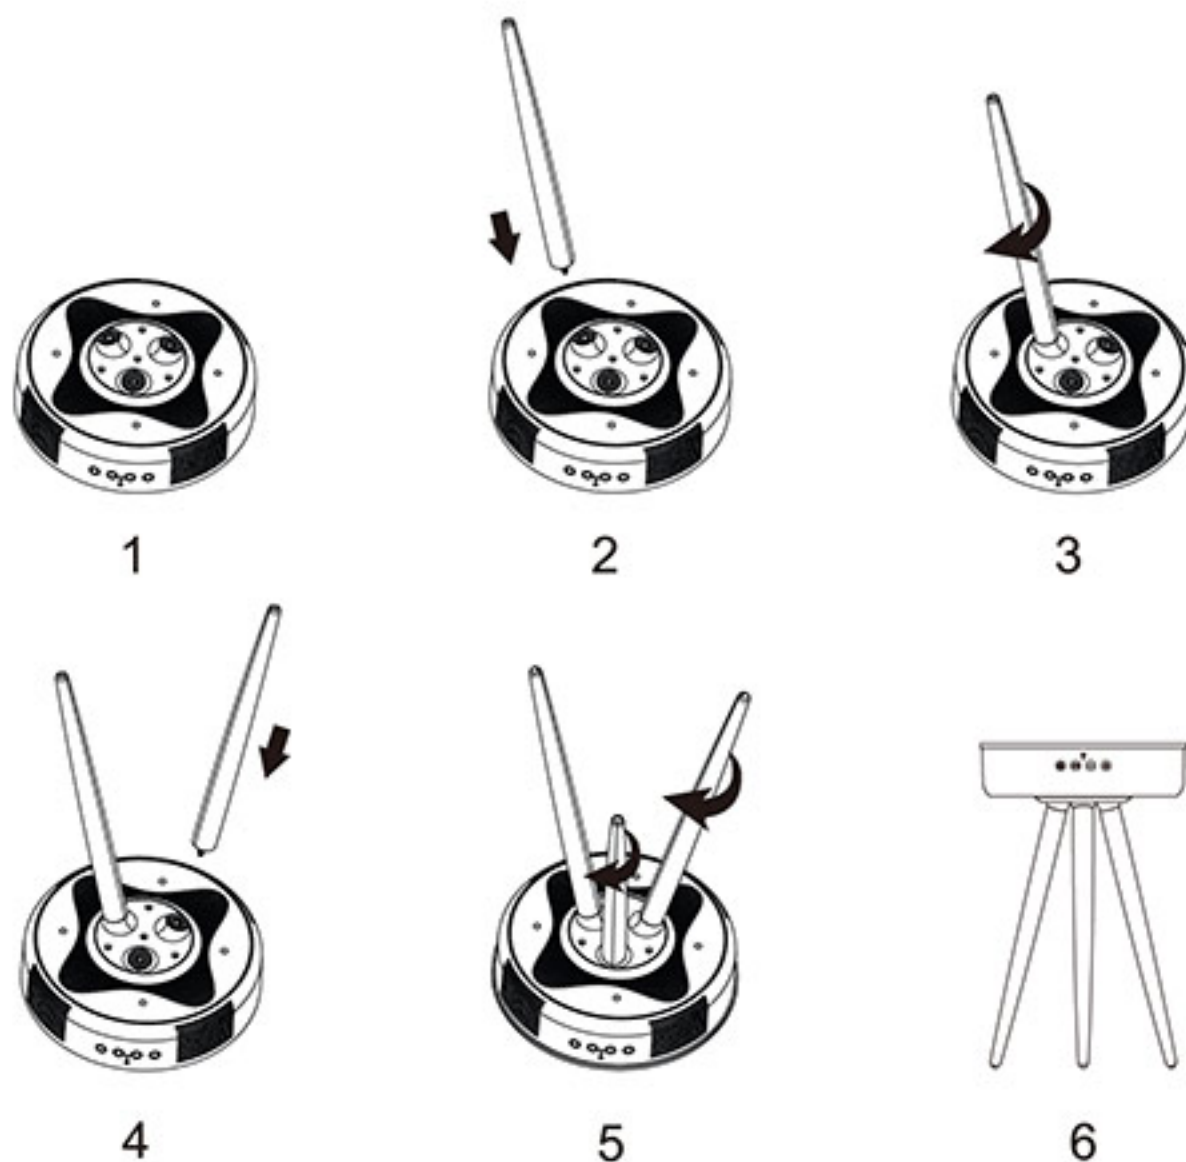 


1. Place speaker on a flat surface with base (showing screw holes) upwards.
2. Insert one wooden leg into a screw hole.
3. Rotate wooden leg clockwise until tightly fastened.
4. Repeat Step 2 for remaining two wooden legs.
5. Repeat Step 3 for remaining two wooden legs.
6. Once all the wooden legs are secure, turn speaker right side up.

WARNING:

1. Maximum support capacity of this speaker is 11 lbs (5kg).
DO NOT place an item heavier than 11 lbs (5kg) on this product.
It will result in damage to the unit.
2. DO NOT use as a seat.
This will result in personal injury and cause damage to the unit.
3. Please keep out of reach of children.

OPERATION

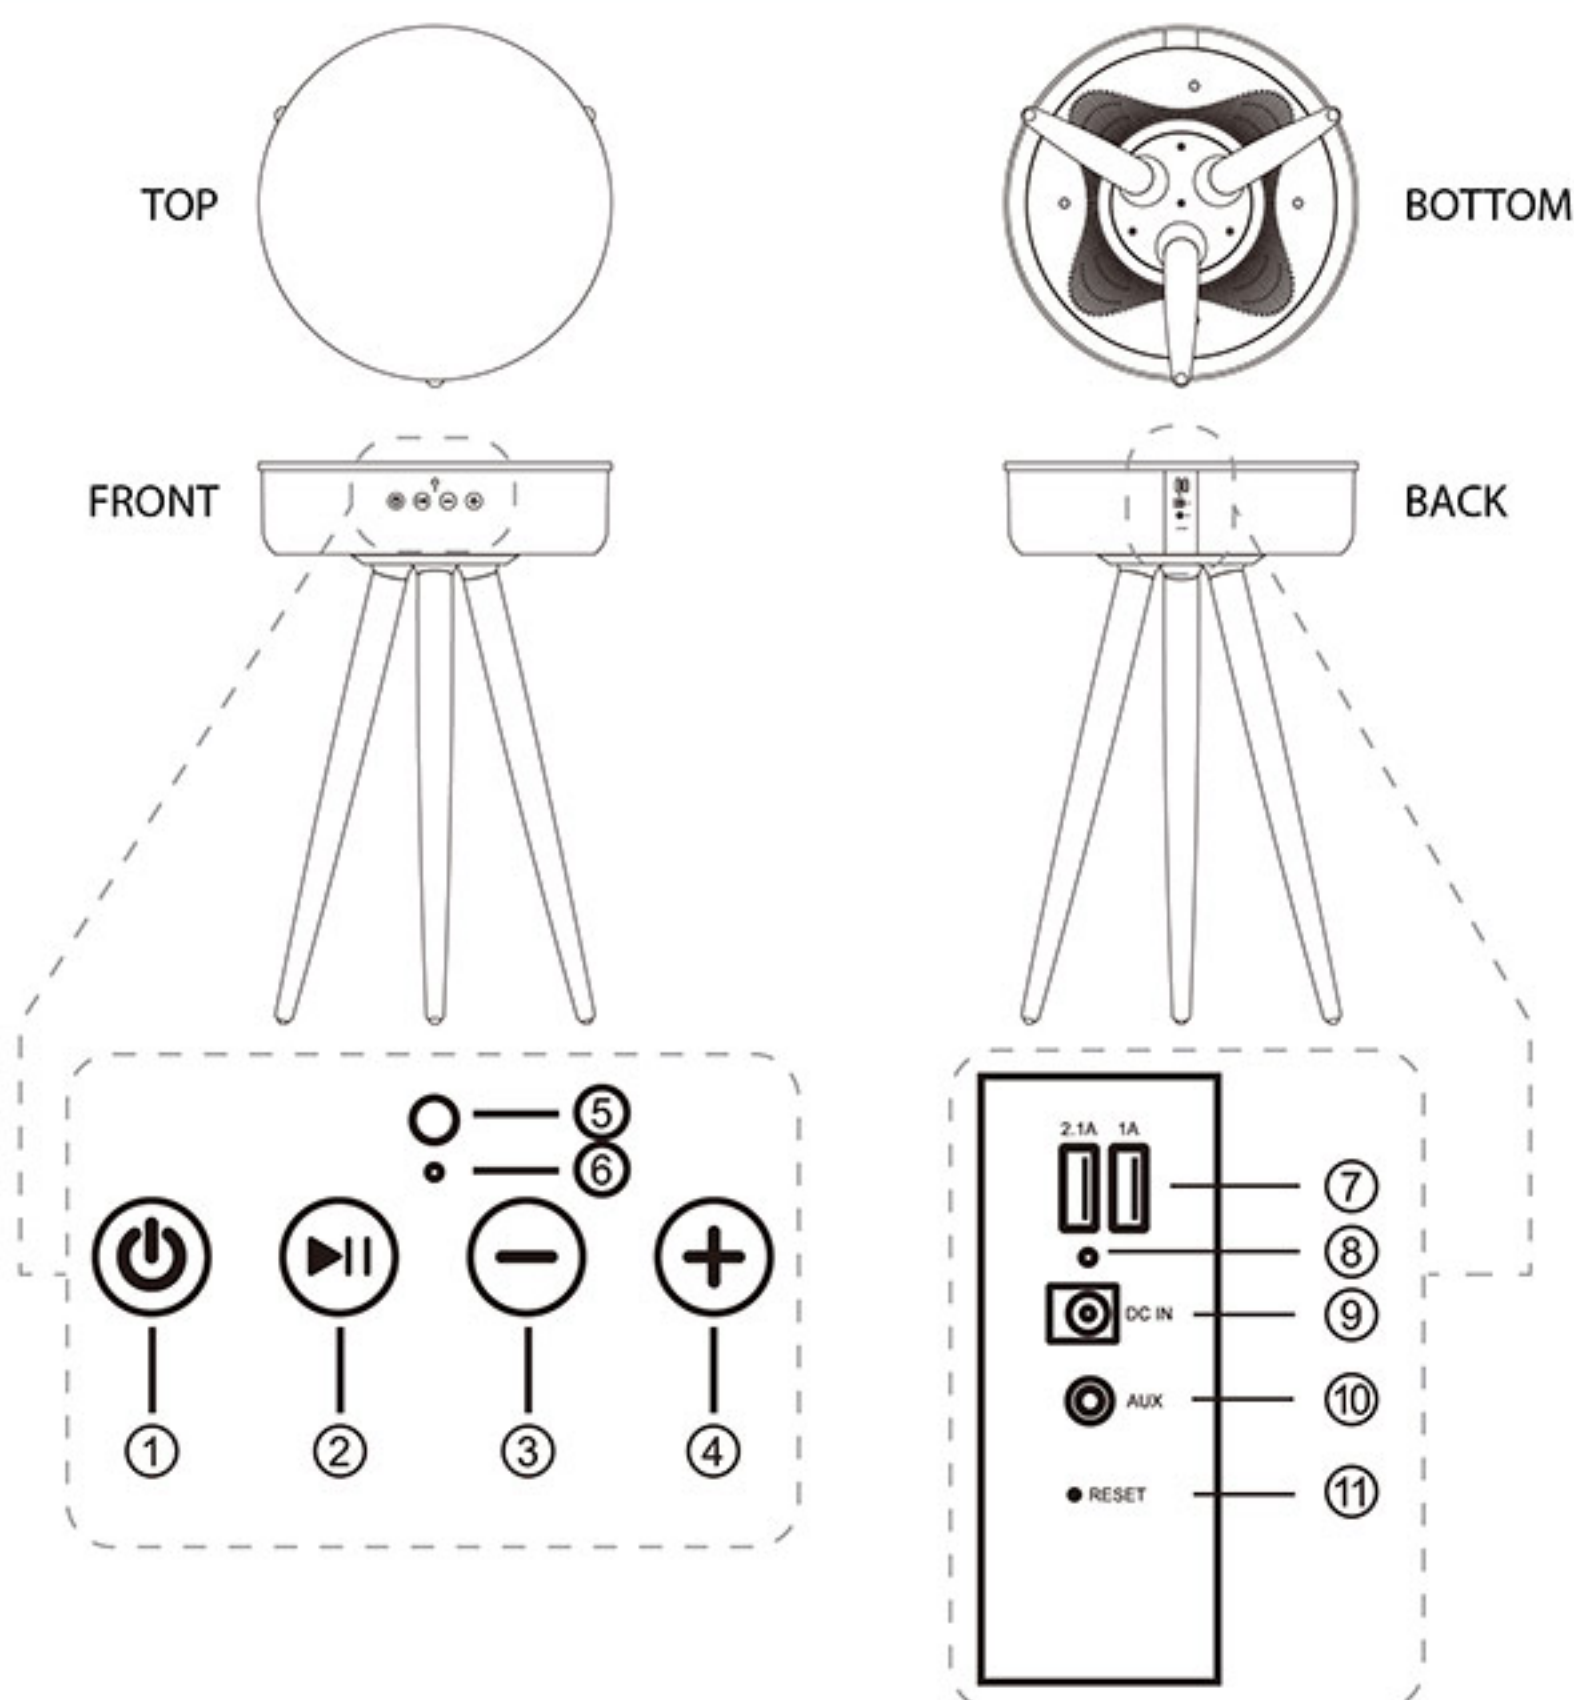

- | | | |
|---------------------|----------------------|-----------|
| 1. POWER | 5. MIC | |
| 2. PLAY/PAUSE/PHONE | 6. LED | |
| 3. VOLUME DOWN | 7. USB 2.1A / USB 1A | 9. DC IN |
| 4. VOLUME UP | 8. CHARGING LED | 10. AUX |
| | | 11. RESET |

POWER ON/OFF

1. Press and hold the POWER button to turn ON - wait for an audible tone. The speaker will automatically be in Bluetooth mode. The blue LED light will begin to flash. A Bluetooth compatible device can now be paired with speaker.
2. Press and hold the POWER button to turn OFF. An audible tone and no illuminated LEDs signify the speaker is now OFF.

NOTE: If the speaker is dormant for 10 minutes, an audible tone will sound and it will automatically power OFF.

It is recommended to fully charge the unit prior to first use.

BLUETOOTH OPERATION

An external device with Bluetooth Connectivity can be wirelessly connected to this speaker using the Bluetooth function.

1. Press and hold the POWER button to turn ON - wait for an audible tone. The speaker will automatically be in Bluetooth mode. The blue LED light will begin to flash. A Bluetooth compatible device can now be paired with the speaker.
2. Turn your external device's Bluetooth Setting ON. Wait a moment, then look for the Bluetooth pairing name "**VS-140**".
3. Select the Bluetooth pairing name, to connect the unit. Once connected, the blue LED light will stop flashing.
NOTE: If the connection is unsuccessful the blue LED light will begin to flash slowly.
4. You are now connected to your external device via Bluetooth!
5. Adjust the sound level using the VOLUME +/- buttons.

Playing music after connecting to Bluetooth:

PAUSE

- Quickly press the Play/Pause/Phone button to pause.
- Quickly press the Play/Pause/Phone button again to resume the Play function.

DISCONNECTING BLUETOOTH

- Press and hold the Play/Pause/Phone button to disconnect Bluetooth pairing.
- Follow steps 2 to 5 above to pair a new external device.

NOTE: The maximum recommended distance between a Bluetooth enabled device and speaker is ≥ 33 ft (10m).

MAKING A PHONE CALL VIA BLUETOOTH

1. When there is an incoming call, the speaker will give an audio prompt.
2. Quickly press the Play/Pause/Phone button to accept the phone call.
(Press and hold the Play/Pause/Phone button to decline the call.)
3. The internal MIC allows you to communicate with the caller.
4. Quickly press the Play/Pause/Phone button to disconnect the call.
5. Quickly press the Play/Pause/Phone button two times to redial the last dialed number.

AUX-IN OPERATION

An external (auxiliary) audio source (i.e. personal CD/MP3 Player/Mobile phone or computer) can be connected to this speaker via the AUX JACK.

1. Plug a detachable Aux Cable into the AUX socket on the rear panel of the speaker.
2. The speaker will automatically switch to AUX mode, the LED will turn green.
NOTE: The speaker will automatically switch to Bluetooth mode when the AUX Cable is removed. The LED will turn blue and begin blinking.

BATTERY / CHARGING INFO

Low Battery prompt to charge speaker:

1. The speaker automatically issues an audible tone to remind the user that the speaker requires charging.
NOTE: If the speaker is not charged it will automatically power off.
2. Connect the A/C adapter to the DC port on the back of the speaker. The red LED light will illuminate signifying the speaker is charging. The red LED will turn off when the speaker is fully charged.

WARNING: Please use the included A/C adapter for charging. If not, it may cause the speaker to charge too slow or not at all. In extreme cases, A/C adapter will become damaged or additional incidents may occur.

CHARGING YOUR EXTERNAL DEVICE VIA USB

When the speaker is powered on OR connected via the A/C adapter, the USB ports can charge 2 devices simultaneously. When the speaker is turned off however, the USB port can not charge external devices.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CALIFORNIA PROP 65 WARNING



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer.
For more information go to www.P65Warnings.ca.gov.

WARRANTY

Victrola is a registered trademark of Innovative Technology Electronics LLC.

Innovative Technology Electronics LLC.

Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics LLC. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable. IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.victrola.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or of one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

Please include your check or money order in the amount of:

- **USD \$5.00 for items \$10.00 to \$39.99. (Price Paid Per Unit)**
- **USD \$10.00 for items \$40.00 to \$99.99. (Price Paid Per Unit)**
- **USD \$16.00 for items \$100.00 and up. (Price Paid Per Unit)**
- **Shipping fees are non-refundable.**

to be payable to Innovative Technology Electronics LLC. (for handling and return shipping charges) (IT) will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.victrola.com/pages/technical-support.

Innovative Technology Electronics LLC.

1 Channel Drive

Port Washington, NY 11050

Toll free: 1-877-483-2497

Website for support: www.victrola.com/pages/technical-support

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER, (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Made In China.