
INSTALLATION AND CARE GUIDE

WOODBRIDGE®

ELECTRONIC WASHLET TOILET: B0980S

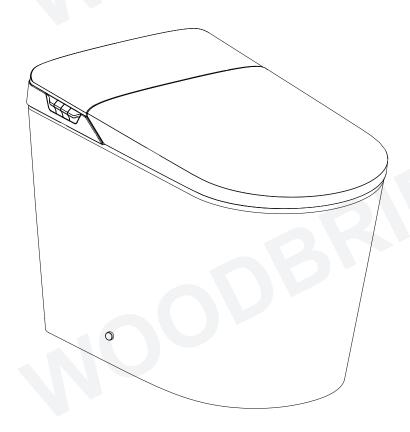

Compliance with the following codes & standard:

- 2015 Uniform Plumbing Code[®] (UPC)
- 2018 International Plumbing Code® (IPC)
- 2018 International Residential Code (IPC)
- CSA B45.5 / IAPMO Z124-2017- Plastic Plumbing Fixtures











Customer Service Phone: 562-229-0088. (Monday - Friday 9 AM - 5 PM Pacific Time)

Or Email: help@woodbridgebath.com

Content

nstallation

Maintenand

Safety instructions	- 2
Technical specification	- 4
List of materials	- 6
Technical drawings	- 7
Parts identification —	8
Installation of ceramic toilet	- 9
Previous preparation —	- 11
Auto lid open/close	- 12
Daily maintenance 1.Main unit care and maintenace 2.Spray nozzle maintenance and care 3.Maintenance of filter net	- 13
Emergency troubleshooting 1.Electricity and water supply cut-off 2.Failure of remote control 3.When the product is left unused for long time	- 14
The illustration of Main Unit Keys —	- 16
Troubleshooting Guide	- 17
Warranty Card	- 18

Safety instructions

Please read the instructions carefully before installation and keep it available for future maintenance or reference.

Failure to observe this instruction can cause body injury and property damage.

Symbol Illustration

	<u> </u>	Indicates that failure to follow the instruction may cause serious injury or a fatal.	
Caution Indicates that failure to follow the instruction rinjury or property damage.		Indicates that failure to follow the instruction may cause body injury or property damage.	

Symbol Illustration

Symbol	Indication	
0	Prohibited activities	
\triangle	Mandatory activities	

	<u> </u>	
Do not throw cigarettes and other burning stuff into toilet, otherwis it might cause fire.		
	Never disassemble,repair or modify this product.Doing so may cause fire or electrical shock.	
	Do not wash the main unit or electrical plug with water or detergent. Doing so may cause fire or electrical shock.	
	Do not handle the electrical plug with wet hands. Doing so may cause electrical shock.	
0	It is prohibited to use other electric appliances in the same socket. It is forbidden to use the power extension or unstable loose outlet; otherwise it may cause fire or electrical shock.	
	If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.	
	This product is electric appliance, so it must be placed far away from water. Please don't drench urine and other liquid to it.	
	Do not put hand or other stuff over the outlet of air dryer or block the outlet of air dryer. Doing so may cause burn and electrical shock.	
	Do not lay on side or upside the product during the electrical circuit, to avoid fire or burning.	
	Do not install or use the product in wet places as steam room etc.	
Mandatory activities	This product must be reliably grounded, and ensure that the AC socket ground to the earth. The ground lead should be used three-pin socket. If you are unsure whether it is reliably grounded, a qualified electrician or maintenance personnel should help to check and ensure. The electrical power source socket wiring should be left null line and right fire line. Never reverse power line wiring.	



This product should be used with 110V, 50Hz electrical current only, load current is at least 13A. Power plug must be equipped with ground fault circuit interrupter or ground fault electrical leakage protector or similar high sensitive, rapid type leakage switch (Rated sensitive current under 6mA).

It is recommended to use water-proof electrical outlet which should be installed in the place where is not easily got wet.

The old aging water supply hose can not be used, otherwise it might cause leakage, fire or electrical shock. Installation of the bidet seat should include specified components and new water supply hose.

When move the product from cold or wet environment into normal room temperature, wait for 2 hours until the condensation water is fully volatilized. Doing so can prevent the product from electrical short-circuit.

! Caution

When it thunders, it is strongly recommended to pull out the power plug.

Do not use the product in the places close to bathtub or water tank.

Do not place the product in water or other liquids.

Do not touch the product that has fallen into liquids, immediately pull out the power plug.

Do not stand on the ceramic toilet. Do not hit the ceramic. A heavy impact on ceramic leads to damage and water leakage.

Never embed ceramic toilet base in cementitious material (such as cement mortar). It may lead to expansion crack.

Do not stand on product unit, seat and cover.



Do not use lacquer thinner, petrol, liquid medicine, detergent, insecticide, toilet cleanser and scrubbing brush to clean the product.

Only use tap water or potable water; otherwise it may cause chafing. Exposure to direct sunlight is prohibited.

This product is equipped with soft-closing seal cover. Heavy pressing or pushing may damage the soft-closing damper.

Do not connect water supply to heater outlet. Make sure inlet water temperature at 3~35 °C, exceeding the specified range will result in the built-in heating module not working. Do not lean against the seat cover when using the product, to avoid damage. Do not try flushing the newsprint, diapers, sanitary napkins and other items easy to chock the toilet.

Stop using the product and shut off the power when product malfunctions, please contact service people for professional service.



Mandatory activities

When installing, disassembling, repairing, and maintaining the product, you must unplug the power supply and close the water supply valve. Do not use in an environment below 0 °C. If the room temperature is below 0 °C, the water in the tank must be discharged to prevent the tank from freezing. If it is not used for a long time, the power must be turned off and the water in the water tank should be discharged. When used by people (including children) who lack physical, sensory, intellectual abilities, or lack of experience and common sense, This product needs to be used under the supervision of a person, and patients with heart disease should use it with caution.

Do not let children play with this product.

To prevent damage caused by freezing, please implement warmth measures to increase the temperature of the toilet.




Technical specification

Rating pressure 110V,50Hz			
	Rating power	1120W	
Main Unit	Overall unit Waterproof	IPX4	
	Water pressure range	Minimum water pressure 0.08MPa Maximum water pressure 0.8MPa	
	Electrical wire	length is about 2.2m	
	Average flush volume	1.28GPF(Full flush 1.6G/Half flush 1.1G)	
	Flushing mode	Siphonic jet	
Toilet	Rough-in distance	12"	15 3/4"
	Outlet outside diameter	3 1/8"–3 3/4"	
	Drainage method	Down-drain	
	Heating power	1400W	
	Water temperature	6 different level adjustments	
	Water volum	3 different level adjustments	
Cleaning	Cleansing mode	Rear washing/Massage washing , Feminine washing/ Massage washing, Pulse massage(optional)	
device	Spray cleansing location	5 different level adjustments	
	Water pressure protector	Pressure stabilizer,Automatic pressure discharging	
	Anti-fouling device	Automatic cleaning nozzle, Anti-syphon device, Anti-backflow device, Filter device	
	Safety device	Thermal fuse, Water temperature sensor, Ground protection, Thermostat, Over temperature protection , Leakage protection plug	
	Warm wind speed	Over 0.2m³/min	
Drying	Warm wind temperature	6 different level adjustments	
device	Heating power	250W	
	Safety device	Thermal fuse, Temperature senor, Thermostat	
Deodorization	Deodorization Method	Diatoms Deodorization	NU

	Surface temperature	6 different level adjustments	
Heefeel coef	Heating power	50W	
Heated seat	Heated burning protection	The seat temperature will automatically decrease to level 1 in 10 minutes after using	
	Safety device	Sensed area,Temperature senor,Thermal fuse, Bimetal thermostat,Leakage protection plug	
	Night light assembly	Intelligent,Often in the off state,Normally on	
	User ID setting	To avoid disturbance from remote controls by multi-user	
Caring device	Automatic flushing	Automatic flush after using the toilet	
	Flushing upon power off	Manual flushing the toilet after using	
	Foot-sensing flushing function	Foot-sensing flushing function is available (optional)	
Differ in shape	Auto lid open-close	Slow close	Auto lid open-close
Antibacterial site		Seat, Spray nozzle	

List of materials

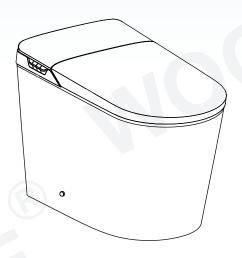

Main Unit



Remote controller components



Sealing Flange



Installation Cardboard



Installation Manual



Warranty Card



Angle Valve




Flange




Hose




Mounting accessory kit

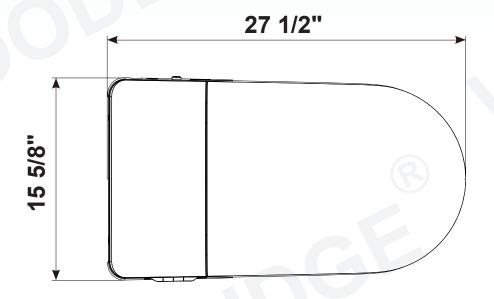

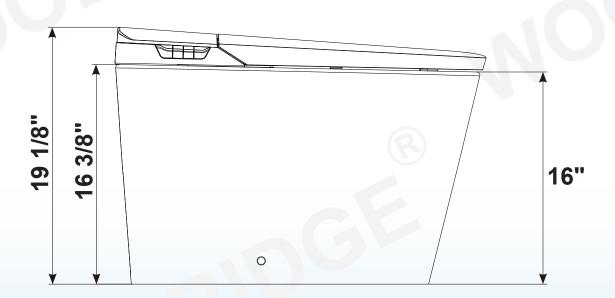


- 1.The product drawing is for reference only, and we reserve the right to modify the appearance of the product.
- 2.If the appearance of the product is changed, the actual product shall prevail.

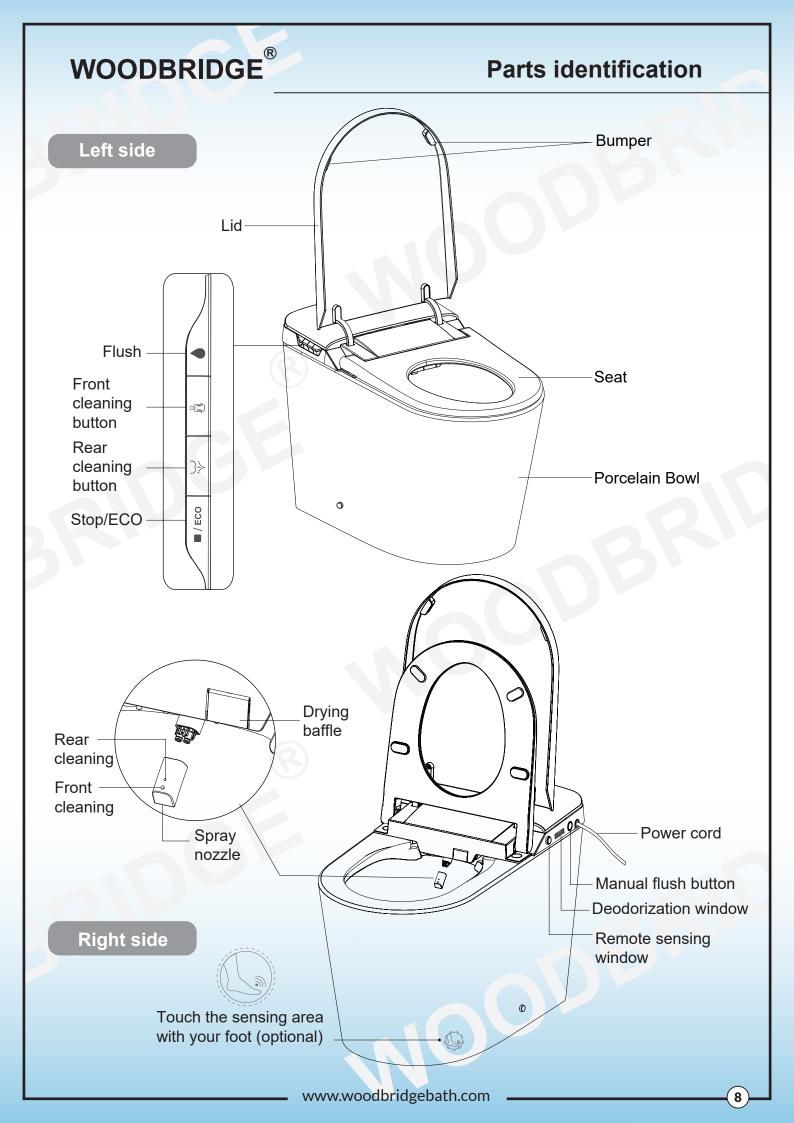

Installation of ceramic toilet


1. Installation of mating angle valve


 Draw drain outlet centerline on the floor, Install angle valve at proper position on wall according to dimension of toilet.

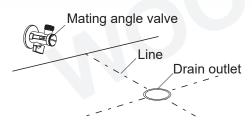

2. Cardboard installation


- Align cardboard with the centerline of drain outlet.
- Draw contour line according to cardboard.

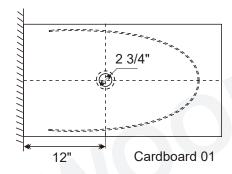

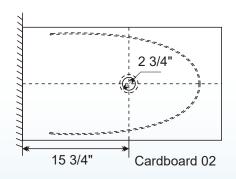


3. Connect flexible hose to water inlet

 Connect one end of new hose to water inlet and tighten it.

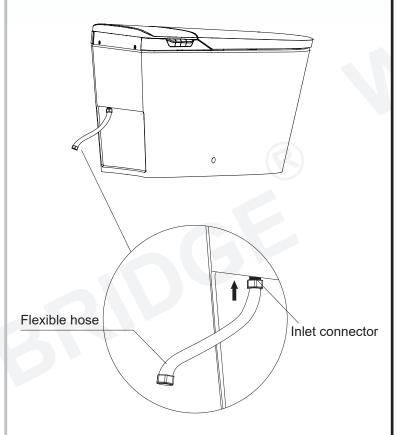

4. Mounting bracket installation


 Assemble the mounting bracket with bolts and then install them to the pre-installed flange plate on the ground and lock tight with nuts.

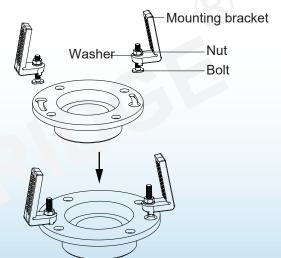

WOODBRIDGE[®]

5. Porcelain toilet installation

- Install sealing flange into drain outlet.
- Install ceramic toilet on corresponding position according to contour line.

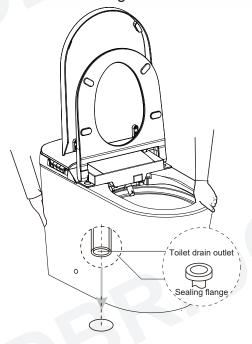

Tips:

The toilet is heavy, and it needs to open the seat cover to carry it by two people.


6.Screw installation

- Put the screw through the fixing sleeve and then install it through the holes(on both sides of the toilet ceramic) to the mounting bracket on the ground, and lock tight with a tool;
- Put the decorative cap on the fixing sleeve.



7. Connect hose to angle valve

 Connect other end of new hose to angle valve and tighten it.

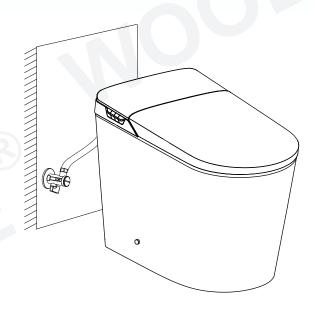

8. Silicone Sealant

 Apply high quality mildew glass glue around the lower edge of the toilet.




Tips:

Please clean the drain outlet; Please make sure porcelain toilet sits perfectly on drain outlet.

1. Turn on the angle valve

• Check thread connection, make sure no leakage is found, unscrew angle valve anticlockwise to maximum opening.

(Tips: When opening for the first time, the angle valve handle has a larger torque)

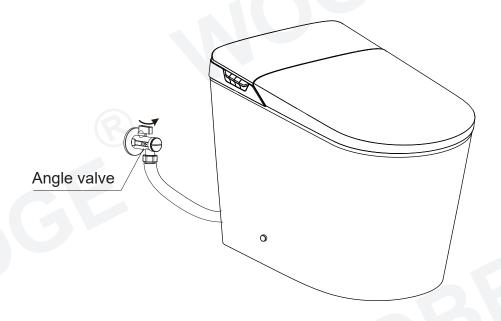

2. Power Connection

• Insert power line leakage protection plug into the power socket, press the reset switch, plug indicator lights on indicating that the power is on.

Tips:

Press electric leakage test button prior to usage, the reset switch pops up indicating that the leakage protection function is normal.

Press the TEST button (then RESET button) every month to assure proper operation.



Indicator light Reset switch Electric leakage test button

3. Self-inspection

- 1. The main unit buzzer rings "beep", first blue light on, then blue light off; red light up again, start self-inspection.
- 2. The main unit buzzer rings another "beep", self-inspection finish.
- 3. Start function mode for normal usage.


Auto lid open/close

If you purchase the intelligent toilet with auto lid open/close function, the product can achieve the function of auto lid open/close. The factory default of this function is on closed situation, so please start the auto lid open/close function by using remote.




7. When user close to the toilet

1. When user is close to the seat, and the human body sensing window detects the action of user, the power and energy-saving indicator lights on, and then the seat cover opens automatically.

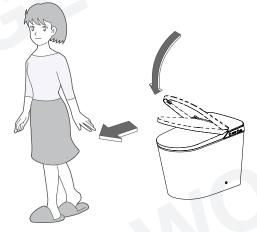

2. After Using toilet

The seat cover closes automatically 180 seconds later after user leaves.

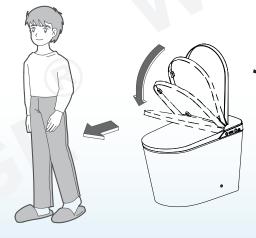

3. When male user stand to use toilet

- 1. Open the seat by remote controller or hand.
- 2. The lid and seat will be closed 180 seconds later after user leaves.

If you buy an electronic toilet with the foot-sensing lid open function, lid can be automatically open by touching the sensing area with your foot. When the toilet lid and the seat are both closed, touch the sensing area with your foot to open the toilet lid; When the toilet lid is open and the seat is closed, touch the sensing area with your foot to open the seat; When the toilet lid and seat are both open, touch the sensing area with your foot to activate half flush.

Daily maintenance

Main unit care and maintenace


- 1. Shut off power supply at maintenance.
- 2. Wipe the stain with a soft damp cloth.



- 3. Safety self- inspection
 - After cleaning, re-connect the toilet with the power supply.

Spray nozzle maintenance and care

- 1. Nozzle self-cleaning
 - •When no user is seated, press the "Rear Wash/massage" button on the main unit, the nozzle will automatically extend and flow out the washing water.
- 2. Spray nozzle disassemble
 - When the nozzle moves forward, the nozzle can be disassembled to clean.

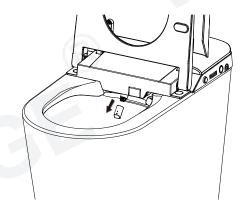

- 3. Use soft cloth or soft brush to clean
 - Do not pull or push the wand,to avoid damage.




- 4. Nozzle retraction
 - Put the nozzle back to the front of the boom and press the "Stop" button to automatically retract the nozzle.

Emergency troubleshooting

Maintenance of filter net

Time for maintenance: It is under normal water pressure but poor flush performance occurs.

1. Unscrew angle valve nut

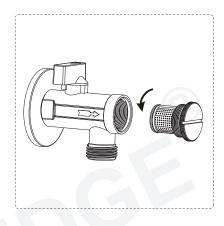


2. Remove filter net



- 3. Use a toothbrush to clean the filter net
- 4. Reinstall filter net and angle valve nut

Electricity and water supply cut-off

- 1. No power
 - Activate flushing by pressing flush button manually.

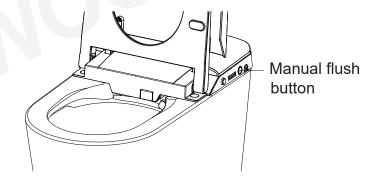


- 2. No water supply
 - Flush the tollet bowl with about 2 gallons of water

Note: Avoid water spilling from bowl.



Failure of remote control

1. Operate the panels on Smart bidet seat

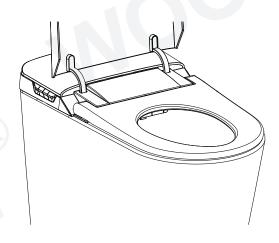

- 2. Battery replacement
 - Take remote control from wall bracket
 - Open battery cover to replace battery and put back to wall bracket

Tips: When replacing the battery, the gear set by the remote control will return to the default value and need to be reset.

When the product is left unused for long time

 Especially in winter when no one at home for a long time, please drain out the water inside tank and pipe to prevent freezing.

To discharge water

- 1. Drain out the water inside tank
 - Turn off angle valve, flush all water inside by pressing and holding manual flush button.
- 2. Drain out the water inside pipe
 - Unscrew the hose connector off angle valve, drain the water in the pipe and reinstall.



- 3. Unplug and cut off the electricity
- 4. Handle the remaining water in bowl
 - It is suggested to put some antifreeze into water inside the bowl.

Tips: Make sure to turn on water supply and power when you use the toilet again.



Note: Before water discharging, the power must be cut off.

The illustration of Main Unit Keys

		The illustration of main unit buttons
	■ / Eco Stop	 Press and hold the "Stop" button on the unit, the unit enters the shutdown mode (red light off), press the "stop button" again, the unit returns to the working mode (lights red).[In the shutdown mode, except for the "Stop" button on the main unit, any button (including the unit and the remote control) is invalid]. When the user is seated, press the "Stop" button on the main unit to stop the feminine washing, rear washing or drying function. When the user is not seated, press the "Stop" button on the main unit repeatedly. The main unit switches over between working mode (red light) and power save mode (blue light).
	Rear washing/ massage	 When people is seated, press "rear cleaning" button, to wash the rear portion of body; Press "rear cleaning" button repeatedly, then turn on/off mobile massage function; Press "stop" button to stop. When one circle cleaning is finished and the body remains seated, the dry function will be automatically turn on and will stop after one cycle. When no one is seated, press "rear cleaning" button, the wand will stretch out ,people can wash the nozzle and wand manually, press "stop" button, the wand will retracts.
-\ ECO	Front washing/ massage	When people is seated, press "Front cleaning" button, to wash the front portion of body; Press "Front cleaning" button epeatedly, then turn on/off mobile massage function; Press "stop" button to stop. When one circle cleaning is finished and the body remains seated, the dry function will be automatically turn on and will stop after one cycle.
	Flush	 1.When the user is seated, long press the "flushing" button on the main unit to turn on the drying function. After drying for one cycle, it will stop automatically. During the drying process, press the "Stop" button to stop the drying function. 2.In the non-off mode, short press the "flushing" button on the main unit to turn on the flush function. [Under the rear wash or the femail wash function, the flush function is invalid; when the nozzle is manually cleaned, the flush function is activated after the nozzle is fully extended and retracted into position].

- Tips: 1. The Power light is off / Energy saving light is on when the product is in energy saving mode; The power light is on/energy saving light is off when it is in working mode; all lights off in standby mode.
 - 2. The default setting of all function is on middle level, after using controller, shift to the level setted last time.

Troubleshooting Guide

Problem	Cause	Solution	
	Water inlet hose bent to cause blocking	Solve the problem of bending of water inlet hose	
No water from Nozzle	Inlet valve is off	Turn on the inlet valve	
	Water supply is cut off	Connect water supply and wait for the water	
	Water inlet hose bent to cause partial blocking	Solve the problem of bending of water inlet hose	
Weak water cleaning	Inlet valve is not fully turned on	Turn on the inlet valve fully	
R	Inlet filter blocked	Clean the filter	
Low water temperature	The water temperature is setted on normal temperature level	Reset the water temperature	
Low seat	The seat temperature is setted on normal temperature level	Reset the seat temperature	
temperature	In standby mode	Switch to functional mode and use it after 3 minutes of use	
Low wind temperature	The wind temperature is setted on normal temperature level	Reset the wind temperature	
No wind out	In standby mode or power save mode	Shift to function mode to use dry function	
Spray wand	Power off	Push back the wand lightly and wait for the power	
cannot retracted	Get stuck by impurities	Clear away the impurities	
Spray wand	Power off	Push back the wand lightly and wait for the power	
cannot stretch out	Not sit in sensing area	Sit right in the sensing area	
Remote control cannot display	The battery of the remote control is installed in the opposite direction	Reload the battery	
	User doesn't reach the sensing area in seat	Adjust to reach the sensing area	
Malfunction of deodorization	Deodorization function keeps working after user leaves	It's a normal phenomenon if deodorization function keeps working after user leaves to ensure eliminating smell entirely	
\wedge	If the problems cannot be solved shut-off the power, and contact s	d as per above methods, please service providers for maintenance.	
Caution	If the leakage circuit breacker often trips off, it means the products has electricity leakage, so please shut-off the power, and contact service provider for maintenance.		

WOODBRIDGE[®]

Product Warranty Card

Model No.	Customer Name	
Seller:	Date of Purchased:	
Invoice No.	Customer contact:	
Distributor	Distributor Phone	

Thank you for choosing our product. This product is warranted for One(1) years since the purchasing date for free repair of problems arising out of defects in workmanship while using in accordance with installation manual and usage cations for intended purposes.

If the product does not work properly with warranty period, please contact your nearest service center. This certificate must be presented to obtain free service under this warranty.

Our company reserves the rights to replace the product by other similar models.

We can serve to fix or repair the product at a reasonable service charge, after expiration of warranty period.

Service charges shall be paid even during the warranty period, if breakage or damage is caused by any of the following events (including but without limitation).

- 1. The user's negligence or mistake in operation, unreasonable repair or alteration.
- 2. Product are damaged by negligence or mistake during installation.
- 3. The movement of installation location of the product.
- 4. Using the product outside of intended use in residential housing or commercial hotels.
- 5. The use of non specified power supply (voltage, rating pressure)
- 6. The dirt, sand and impurities that causing invalid operation.
- 7. Damages due to force majeure (including but not limitation to natural disaster) or other incidents.
- 8. The user fails to use in compliance with the warning or caution described in the installation manual.

Remark.

Please fill in date, seller correctly. If there are some mistakes, the warranty will get invalid.

This three year warranty for free of charge of repair service is only for the items listed in the warranty.

The purchasing date is subject to the purchasing invoice or receipt.

Please keep this warranty and invoice/receipt available for repair or maintenance.

