


Roku

Wire-free
Video
Doorbell &
Chime SE

**Quick Start
Guide**

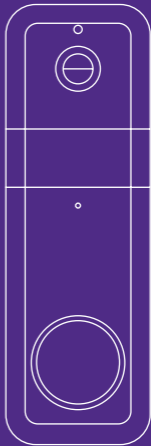



For the best experience Charge your doorbell before setup

 
 
 
To charge doorbell: Plug one end of the charging cable into the micro USB port on the back of your doorbell. Connect the other end to a standard USB power adaptor (like your phone charger).

What's included

- A** Roku Wire-free Video Doorbell SE
- B** Roku Enhanced Chime SE
- C** USB charging cable
- D** Screw back plate
- E** Back plate
- F** Corner kit
- G** Wire caps (x3)
- H** Short screws (x3)
- I** Extension wires (x2)
- J** T8 screwdriver
- K** Long screws (x3)
- L** Plastic anchors (x3)
- M** Adhesive strip
- N** Jump wire

What you'll need

- Your smartphone

A**B****C****D****E****F****G****H**



I



J



 
K



L



M



N

1 Light sensor


2 Lens

3 Motion sensor


4 Microphone

5 Doorbell button


6 Speaker

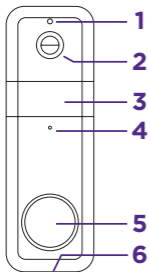

**Doorbell
FRONT**

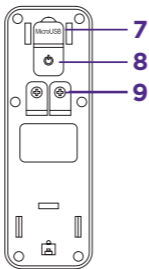

**Doorbell
BACK**

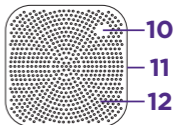

Chime

7 Micro USB charging port

8 Power button

9 Screw terminals

10 Status light


11 Setup button

12 Speaker

Let's get started

STEP 1: Download the Roku Smart Home app

Scan the QR code below to download the Roku Smart Home app on your smartphone. Sign in with your Roku account or create one.

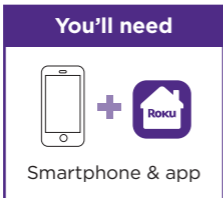

Message & data rates may apply.

STEP 2: Install your doorbell & chime

In the Roku Smart Home app, tap the “+” button, then “**Add Device**” to find “**Wire-free Video Doorbell.**” Follow the instructions to finish setup.

Recommended location

Install your doorbell less than 6.5 feet above ground level.



What's that light mean?

Doorbell	State
WHITE - Solid	Charging
BLUE - Solid	Fully charged

Chime	State
RED - Flashing	Connecting to doorbell
YELLOW - Flashing	Waiting for connections
BLUE - Flashing	Connecting to network
BLUE - Solid	Connected



More features are waiting

Unlock the full potential
of your doorbell with a
Roku Smart Home Subscription.

Learn more at
go.roku.com/rokusmarthome

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RADIATION EXPOSURE STATEMENT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

WARNING

Do not use the battery near a heat source. Do not use the battery near fire or an oven, or in an ambient temperature exceeding 80°C. Over-heating may cause an internal short-circuit, heat generation, smoking, deformation or burning.

CONTAINS A LITHIUM ION BATTERY

Always dispose of batteries following local recycling guidelines. Do not dispose of batteries in household waste or open fire. For more information about recycling and the battery included, see: <https://support.roku.com/article/208755678>

Need help?



Setup
videos



Common
questions



Tips and
tricks

Visit go.roku.com/doorbells

Roku

© 2022 Roku, Inc. All rights reserved. Roku, the Roku logo, Roku Smart Home, and the Roku Smart Home logo are the trademarks or registered trademarks of Roku, Inc.

4100000866_02