

## Aurora™ Bluetooth Soundbar

---

### *Instruction Manual*



\*Product picture is for reference only.

Model: FSBNN3MR-BL  
FSBNN3MSR-BL

# Welcome

Thank you for purchasing Furrion Aurora™ Bluetooth Soundbar. Before operating your new product, please read these instructions carefully. This instruction manual contains information for safe use, installation, introduction of the product.

The manufacturer does not accept responsibility for any damages due to not observing these instructions.


If you have any further questions regarding our products, please contact us at **support@furrion.com**.

# Contents


<b>Welcome.....</b>	<b>2</b>
<b>Contents .....</b>	<b>3</b>
<b>Safety Warnings .....</b>	<b>4</b>
<b>Before Operation .....</b>	<b>7</b>
What's in the box .....	7
Power Source .....	7
Prepare your Remote Control .....	8
<b>Function Overview .....</b>	<b>9</b>
Front/Side/Back panel of the Soundbar .....	9
Remote Control .....	10
<b>Connection.....</b>	<b>11</b>
<b>Installation .....</b>	<b>13</b>
<b>Operation .....</b>	<b>15</b>
General Operation .....	15
Bluetooth Operation .....	15
<b>Troubleshooting.....</b>	<b>16</b>
<b>Specifications.....</b>	<b>17</b>

# Safety Warnings

## Precaution



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock.

For the safety of everyone in your household, please do not remove product covering.



The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating an maintenance problems.

## Safety precaution

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves or other devices (including amplifiers) that produce heat.
6. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
7. To prevent injury, this apparatus must be securely attached to the wall in accordance with the installation instruction.
8. Only use attachments/accessories specified by the manufacturer.
9. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as if objects have fallen into the device, or the device does not operate normally, or has been dropped.
10. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
11. The power cord must be routed properly to prevent people from stepping on it, or objects from resting on it. Check the cords at the plugs and product. Try to use a single, directly dedicated and rated GFI power socket for the product for safe operation.
12. Use properly rated power voltage. Use of non-rated voltage may cause fire, electric shock and severe damages to the product.
13. Do not touch power plugs with wet hands.
14. Do not disassemble the unit by yourself under any circumstances: Removal of the product cover may expose you to high voltage or other dangerous risks. Refer all servicing to a qualified service professional. Warranty will not be honored if you service the product yourself.
15. Do not touch this apparatus, antenna, power cables or power plugs during a thunder or lightning storm.
16. With your product unplugged, gently wipe the surface of the product with a damp (with water) microfiber, cotton or flannel cloth. Remove any dirt and salt deposits from the product, being careful to rinse the cloth frequently to avoid scratching the Soundbar. Avoid using harsh

# Safety Warnings

chemicals, abrasives, or solvents when cleaning any surface on the unit.

17. Any severe physical impact on the product may cause certain components to fall out of place within and break, which may cause fire or electric shock. In such event, do not operate the product. Contact the manufacturer for support.
18. In case of product malfunction or unusual events such as electrical burning smell, smoke, or loss of content signals on Soundbar due to internal overheating, immediately turn off and unplug the power and contact the manufacturer.
19. Adequate ventilation must be maintained to ensure reliable and continued operation and to protect the product from overheating.
20. Do not mount this product near a motor or transformer where strong magnetism is generated.
21. Do not place the product on an unstable place. Improper installation may cause the product to fall, resulting in potential serious personal injuries, as well as damage to the product. Follow mounting instructions properly for safe operation of the product.
22. Do not move or transport the product with any cables (power cables, content connectivity cables) plugged in to the source devices. Damages may occur to the cables, plugs, or jointing connectors of the cables due to forcible bending and stress, which may cause damages to the waterproof seal of the product, making it subject to fire, electric shock, or shorted circuit.
23. Do not submerge this product in water or pressure wash it. It is not designed to be submerged in water, withstand pressure washers, high-pressure water jets, or hurricane-type weather.
24. The operation temperature for the unit is -20°C (-4°F) to +45°C (+113°F). The

storage temperature is -33°C (-27.4 °F) to +58°C (+136.4°F). Protect the Soundbar from damage by the extreme temperature. This is not a commercial outdoor Soundbar.

25. The mains plug is used as the disconnect and shall remain readily operable.
26. Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## COMPLIANCE

### FCC Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Safety Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment under FCC Rules.

## IC Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## Important Battery Precautions

**CAUTION:** Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

### WARNING:

- This device contains a button cell battery on the remote control.
- Do not ingest the battery contained within the remote control supplied with the unit as this battery represents a chemical burn hazard.
- If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

## Care of the Environment



Disposal of your old product and battery Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

- Never dispose of your product with other household waste. Please familiarize yourself with the local rules on the separate collection of electrical and electronic products and batteries.
- The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.
- Your product contains batteries which cannot be disposed of with normal household waste. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

All registered and unregistered trademarks are property of their respective owners.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## For all products with wireless operation

FURRION hereby declares that this equipment is in compliance with the essential requirement and other relevant provision of Directive 2014/53/EU and RoHS 2011/65/EU Directive. The declaration of conformity may be consulted in the support section of our Website, accessible from [www.furrion.com](http://www.furrion.com).

# Before Operation

## What's in the box

Unpack the box carefully and check if the following parts are included. If any parts are missed or damaged, please contact the authorized retailer where you purchased immediately.

- Soundbar x 1
- Remote control x 1 & Button battery x 1
- Coaxial cable (1.6m) x 1
- Mounting bracket x 2
- Mounting screws: (M4\*10mm) x 4; (ST 4.8/5.5\*9.5mm) x 2
- Quick Start Guide x 1
- Warning Card x 1
- Warranty Manual x 1

## Power Source

The Soundbar is designed for use with 100-240 volt, 60 Hz AC current. Connect the power cord to a GFCI protected AC outlet with an "in-use" waterproof cover.

### CAUTION:

 
- Connection to a line voltage other than the specified voltage can create a fire hazard and may damage the unit.
- Damaged power cords should be replaced immediately by a qualified electrician with a cord that meets product specifications.
- We do not recommend to use the extension cords with this product. As with all electrical devices, do not run power cords under rugs or carpets, or place heavy objects on them.
- When this unit is not used for a long time, be sure to unplug it for the safety purpose.
- Do not plug/unplug the AC cord when your hands are wet. Doing this may cause electrical shock.

# Before Operation

## Prepare your Remote Control

### **BATTERY INSTALLATION**

- Use a tool similar as a coin to rotate the battery cover counterclockwise until it is completely removed.
- Insert the button battery (Type: CR2025) with polarity + upside to the battery compartment.
- Put the battery cover into place and rotate clockwise to close the cover tightly to ensure the best waterproof effect.

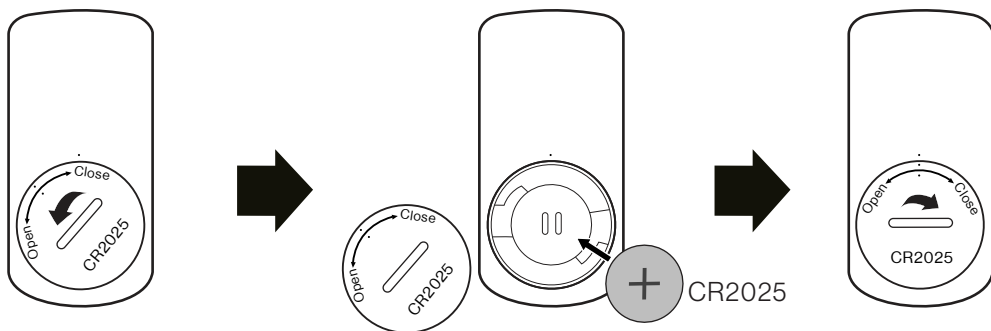

### **BATTERY PRECAUTIONS**

 
These precautions should be followed when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the battery in the battery compartment. Reversed batteries may cause damage to the device.
3. Improper use of a battery may cause overheating or an explosion that could result in injury or fire.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not ingest the battery contained within the remote control or supplied with the unit as this battery represents a chemical burn hazard.
6. Do not throw the battery into the fire.
7. To avoid the risk of accident, keep the new and used battery out of reach of children.



# Function Overview

## Front/Side/Back panel of the Soundbar

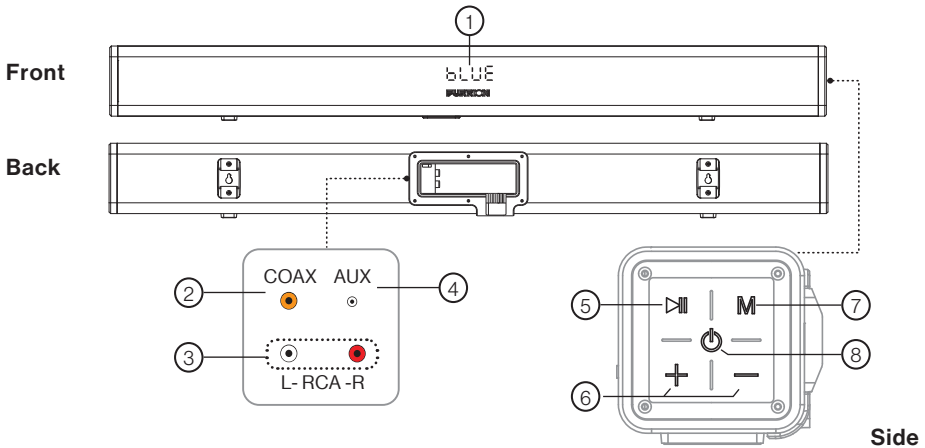

- ① **Display Panel**  
Display the current mode or status.

Source Input/ Mode	Display
Bluetooth input	blue
AUX input	AUX
RCA input	RCA
COAX input	COAX
MUSIC mode	E90
CINEMA mode	E91
TV mode	E92
SPORTS mode	E93


- ② **COAX in**  
Connect to the Coaxial output on your TV or other AV devices.
- ③ **RCA (L-R) in**  
Connect to the audio out on your TV or other AV device.
- ④ **AUX in**  
Connect to the Analog output of an external audio device.
- ⑤ **▶||**  
Play and pause in BT mode.
- ⑥ **+/-**  
Increase or decrease the volume.
- ⑦ **M**  
Select the audio source.
- ⑧ **⏻**  
Press and hold for 2s to power on/off.

**Note:** The front/back panel view will vary by different models.

# Function Overview
 
## Remote Control

English

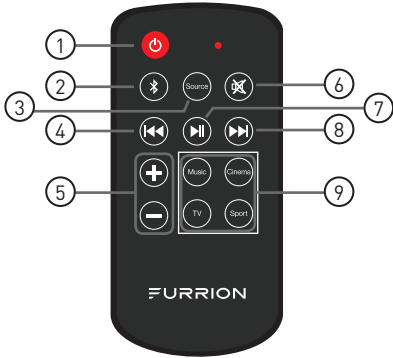



Item	Button	Function
①		Power on/off or switch to standby.
②		Press it briefly to enter Bluetooth pairing mode; Press and hold it for 3 seconds to unpair the connected device, then launch paring with a new device. * BT Name: Furrion SB 2.0 or Furrion SB 2.1
③	Source	Select an input source for the Soundbar: AUX / RCA / COAX / BT.
④		Skip to the previous track for Bluetooth or USB playback.
⑤		Increase or decrease volume.
⑥		Mute or un-mute the Soundbar audio.
⑦		Start or pause Bluetooth or USB playback.
⑧		Skip to the next track for Bluetooth or USB playback.
⑨	Music	Select the preset EQ mode from Music/ Cinema/TV/Sport.
	Cinema	
	TV	
	Sport	

# Connection

 
 
Before connecting, open the protective cover on the back of the Soundbar by removing the screws.

**Warning:** Disconnect power supply before you make or change any connections.


## 1. Connecting to your TV

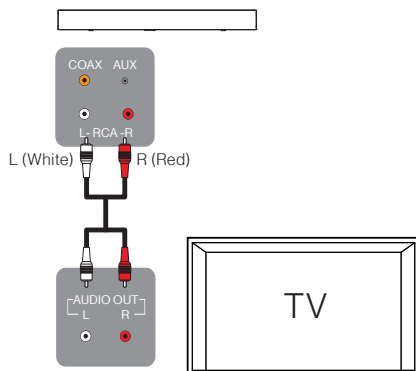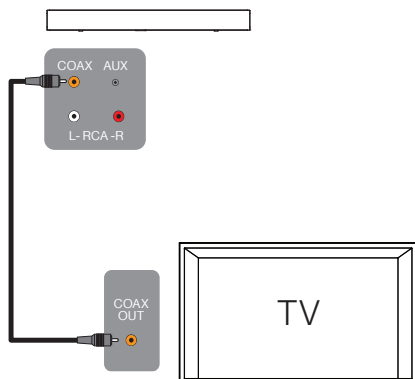

## 2. Connecting to other devices

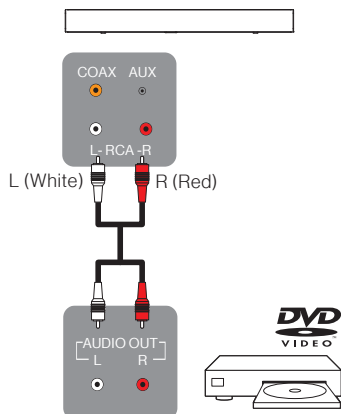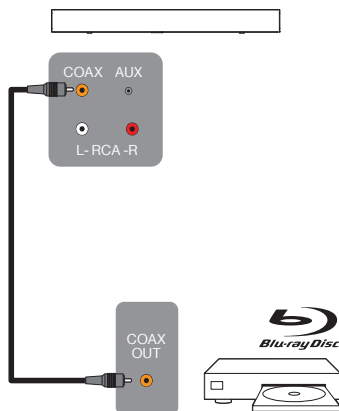  


# Connection

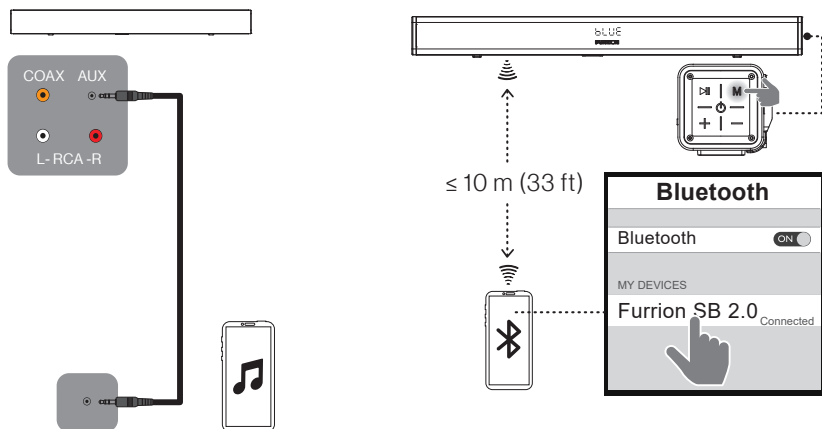 

# Cable Management

 After the connections are completed, close the protective cover and tighten the screws for the best waterproof effect.

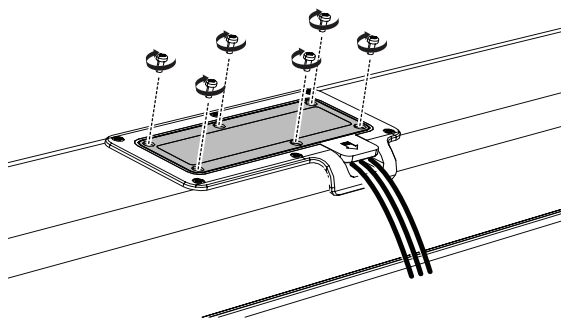

# Installation


## Warning:

- Screws must be tightly secured. Do not overtighten screws as the product may fall as a result of possible damages.
- Make sure the wall surface will support the combined load of the Soundbar, TV and other accessories.
- Be careful not to pinch fingers when operating the mount.
- Use at least 2 people to move or install the Soundbar to ensure no person injury and no product damage. We recommend you to contact a professional for installation.
- During the installation make sure the unit is powered off and unplugged. Otherwise, it may cause an electric shock.


## Option 1. Fix the Soundbar on the compatible Furrion Aurora™ TV

(TV Model: FDUF43CBR/ FDUF49CBR/ FDUF55CBR/ FDUF65CBR/ FDUP43CBR/ FDUP49CBR/ FDUP55CBR/ FDUP65CBR)

 1. Attach the supplied mounting brackets to the rear of the Soundbar and secure with 2 provided screws.

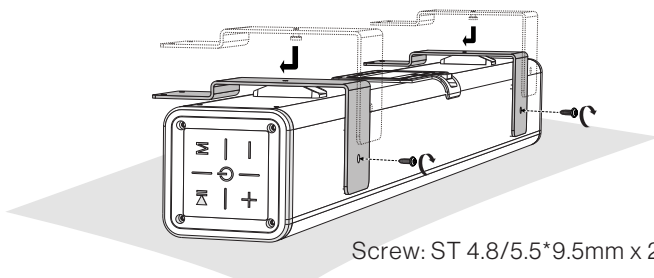

 2. Place the outdoor TV face down on a flat surface with a foam board protected. Mount the outdoor soundbar with brackets to the outdoor TV using the 4 provided screws. At least two people are required for installation to avoid any damage due to the heavy weight.

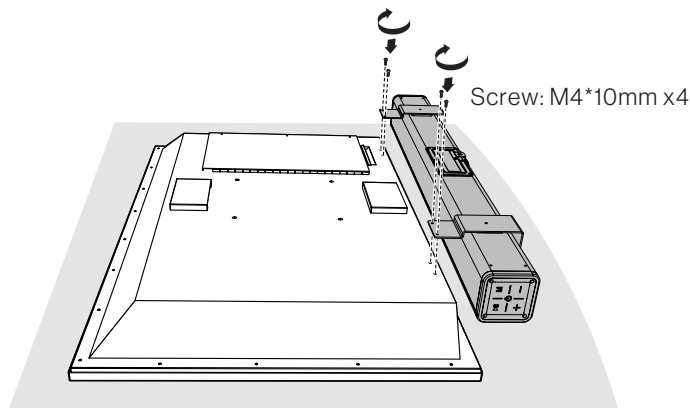

3. Wire the cables from the soundbar to the outdoor TV properly.
4. Mount the TV with soundbar to the TV mount.


# Installation
 
## Option 2. Mount the Soundbar to wall separately

**Caution :** Before mounting on wall, make sure the wall can support the weight of this unit. Purchase and use the fixing screws and anchors appropriate for the type of wall (plaster board, iron board, wood, etc.) you have.

**IMPORTANT:** Connect all cables prior to mounting Soundbar on wall. The cable connection compartment in the rear panel will be obstructed once the Soundbar is mounted.



1. Place the Soundbar against the wall and level it.
2. Mark the two drilling holes on wall with a pencil.
3. Drill holes as marked.
4. Insert the appropriate anchors and screws into the holes.
5. Tighten the screws securely but do not overtighten.
6. Finally hook the Soundbar on the mounted screws directly.

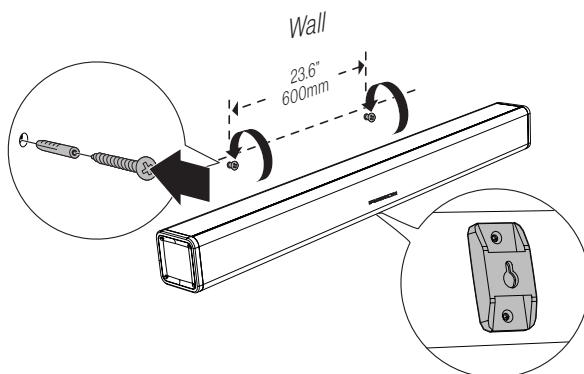

# Operation

## General Operation
  
### Power On/ Off

Press and hold  button on the Soundbar for 2s or press  on the remote control to turn the unit on. Press the button again to turn the unit off.

### Mute or Unmute

Press  button on the remote control to mute the audio. Press  again to unmute.

### Adjust the Volume

Press  /  button on the Soundbar or on the remote control to increase or decrease volume.

### Select a Source

Press **M** button on the Soundbar or **SOURCE** button on the remote control to select AUX, RCA, COAX, BT mode. The source status will display on the LCD screen of front panel when selected.

**Note:** The defaulted source is COAX. After the first time use, the Soundbar will display the source used for the last time.

### Select EQ Mode


Press **Music / Cinema / TV / Sport** button on the remote control to select different audio mode. The different mode (EQ 0/ EQ 1/ EQ 2/ EQ 3) will display on the LCD screen of front panel when selected.

**Note:** The default EQ mode is **TV**.

## Bluetooth Operation

### Select BT mode

Press **M** button on the Soundbar or **Source** button on the remote control once or more to select BT mode.

Press  on the remote control to enter Bluetooth mode directly.

### Connect/Pair a Bluetooth device

After BT mode is selected, it will launch pairing mode automatically.

Activate the Bluetooth function on the mobile device and find the Soundbar BT name **Furion SB 2.0** or **Furion SB 2.1** from the device list to connect.

### Unpair

Press and hold  on the remote control for 3s to unpair the Bluetooth.

### Select a track


Press  or  on the remote control to skip to the previous or the next track.

### Start or Pause playback

Press  on the remote control to start or pause playback.

# Troubleshooting

Please read the user manual carefully before using the Soundbar. If you have any problems with this product, please firstly refer to the below troubleshooting guide to help you resolve the issue.

TROUBLE/ SYMPTOM	SOLUTION
<b>Distorted sound.</b>	Ensure the TV is muted if you play audio from the TV through the Soundbar.
	Ensure that the 3.5mm audio plug is fully inserted.
<b>No sound.</b>	Make sure to select the correct audio input source.
	Check whether the audio connector is damaged.
	Check whether you turned down the volume to zero.
	Ensure that the audio is not muted.
	Ensure the Soundbar is powered on.
<b>Fail to connect a Bluetooth device.</b>	Ensure that you select the Bluetooth as the source mode.
	Check if you enable the Bluetooth function of the device.
	Ensure that you select the right BT Name Furrion SB 2.0/ Furrion SB 2.1 on your device.
	If BT Name Furrion SB 2.0/ Furrion SB 2.1 is not present on the list, disconnect the Bluetooth on the device and launch pairing again to reconnect.
	If the Soundbar is already connected to another Bluetooth device, press and hold  on remote control to disconnect and pair with a new device.
	Ensure that the distance between the Soundbar and the connecting Bluetooth device is within 10m.
<b>Poor audio quality from a connected Bluetooth device.</b>	The Bluetooth reception is poor. Move the device closer to the Soundbar, or remove any obstacle between the device and the Soundbar.
<b>Remote control does not work.</b>	Check the battery of remote control and make sure that it is not dead.
	Direct the remote control to the IR sensor of the device.
	Check whether there are obstacles between the remote control and IR sensor.



# Specifications

Item	FSBNN3MR-BL (2.0)	FSBNN3MSR-BL (2.1)
Power supply	100-240VAC 1.5A 60Hz	100-240VAC 1.5A 60Hz
Total power	2x25W RMS	(2 x 20W + 2 x 15W) RMS
Dimension (W x H x D)	35 <sup>7</sup> / <sub>16</sub> " x 3 <sup>1</sup> / <sub>2</sub> " x 3 <sup>1</sup> / <sub>2</sub> " (900*88*88mm )	39 <sup>7</sup> / <sub>16</sub> " x 3 <sup>1</sup> / <sub>2</sub> " x 3 <sup>1</sup> / <sub>2</sub> " (1000*88*88mm)
Input terminals	Stereo RCA Input (x 1) 3.5mm Aux Input (x 1) Coax Input (x 1): Support and comply with PCM format.	
Frequency response	40Hz-18KHz	
S/N ratio (Audio 1KHz 0dB)	65dB	
Bluetooth Version	V4.2 (A2DP/AVRCP)	
BT Name	Furrion SB 2.0	Furrion SB 2.1



## **Furrion Innovation Center & Institute of Technology**

- 52567 Independence Ct., Elkhart, IN 46514, USA • Toll free:1-888-354-5792
- Email: [support@furrion.com](mailto:support@furrion.com)

©2007-2019 Furrion Ltd. Furrion® and the Furrion logo are trademarks licensed for use by Furrion Ltd. and registered in the U.S. and other countries.

©2007-2019 Furrion Ltd. Furrion® et le logo Furrion sont des marques déposées par Furrion Ltd. et enregistrées aux Etats-Unis et ailleurs.

**FURRION.COM**

# FURRION

## 70W Aurora 2.1 Outdoor Soundbar with Built-in Subwoofer and HDMI-ARC



### Quick Start Guide

Lippert Number: 2022323659

Model: FSBNN30MST



 
[https://support.lci1.com/  
stereo-subwoofers-  
soundbars](https://support.lci1.com/stereo-subwoofers-soundbars)

- \* To view the multi-language user manual, please access the link or scan the QR code.
- \* Pour obtenir le manuel d'utilisateur multilingue, accédez au lien ou scannez le QR code.
- \* Para ver el manual de usuario en otros idiomas, acceda al siguiente enlace o escanee el código QR.




This quick start guide will help you install and use the device properly. For further support and to download the complete user manual please visit <https://support.lci1.com/stereo-subwoofers-soundbars>.

## WHAT'S IN THE BOX

Front

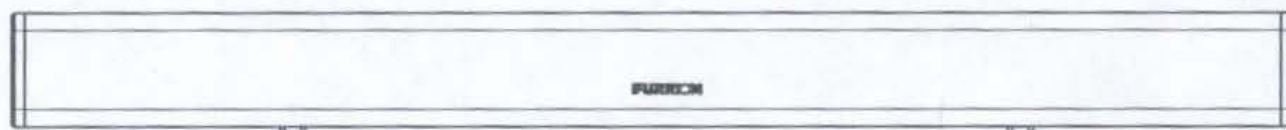

Back

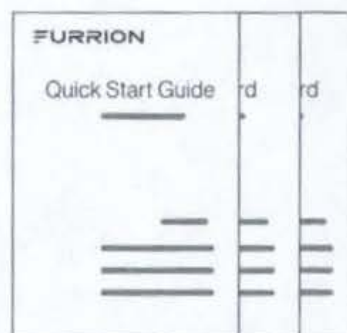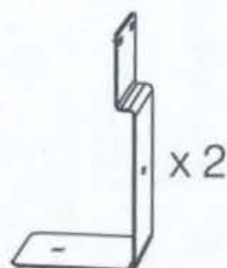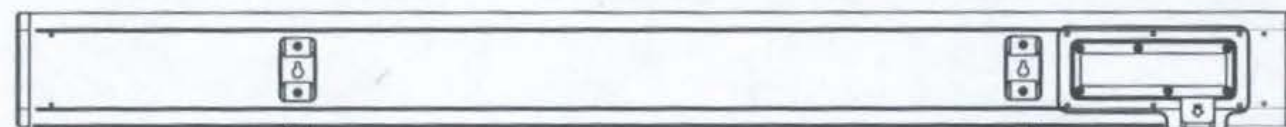   

#8 - 3/8" x 4 pcs



#10 - 3/8" x 2 pcs

**NOTE:** Product design and packaging may change without notice.

 
 
 


## CONNECT




- Open the protective cover on the back by removing the screws then connect the cables.

**Note:** All external devices and cables shown in the diagram are for reference only and not included in the package.


### 1. Connect Soundbar with TV

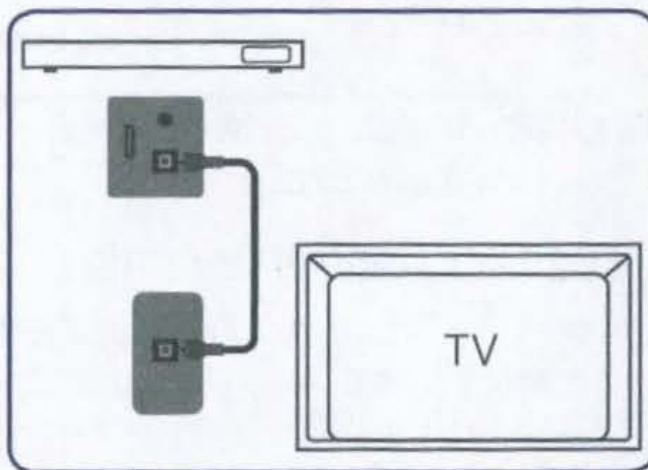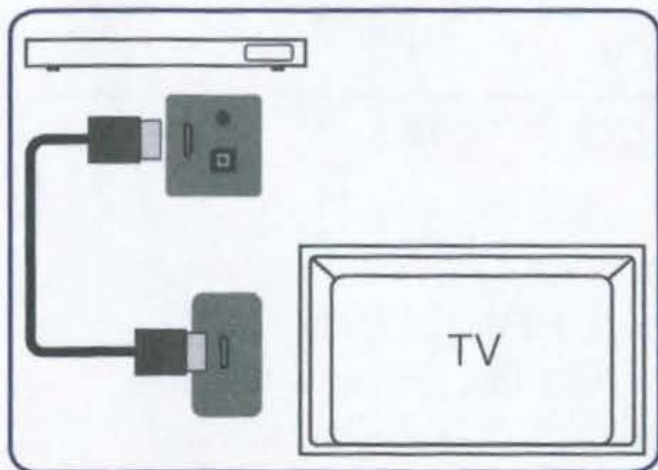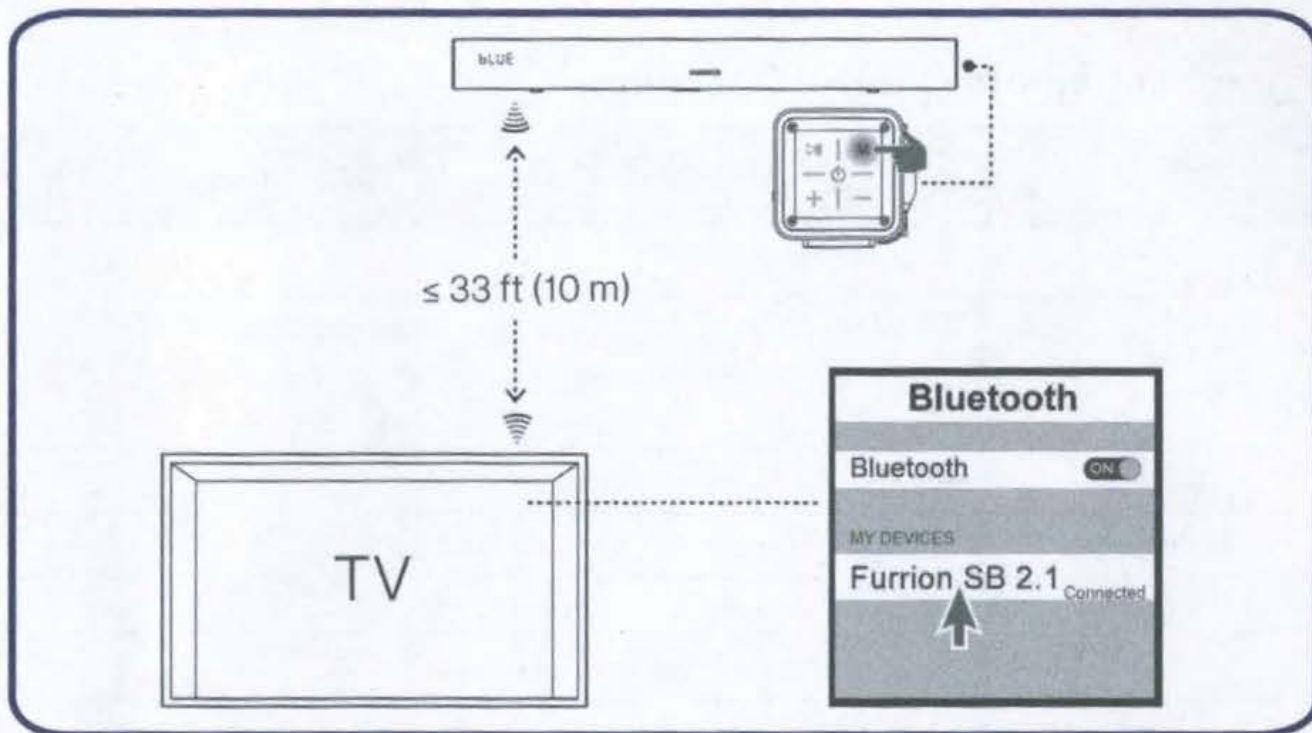

## 2. Connect Soundbar with other devices

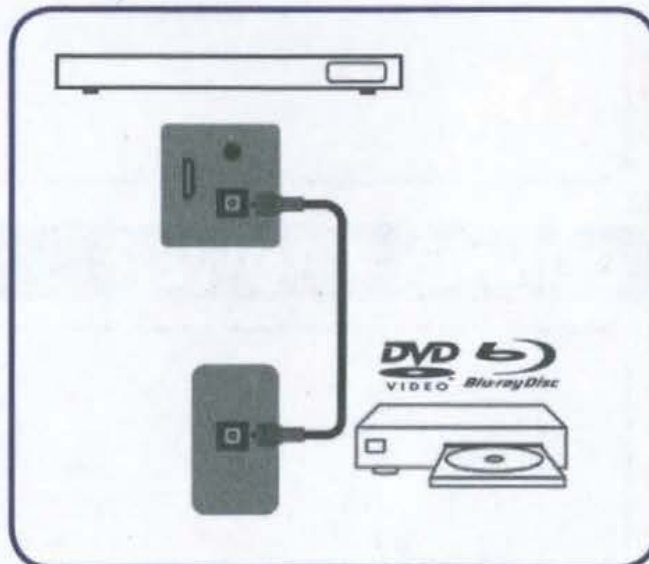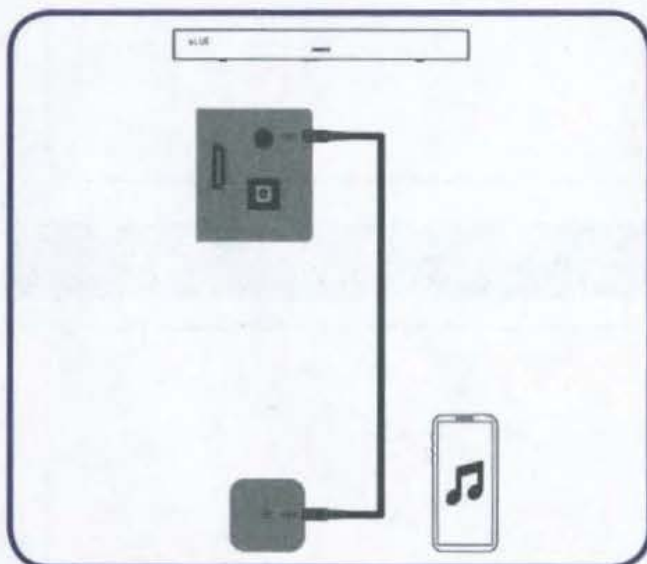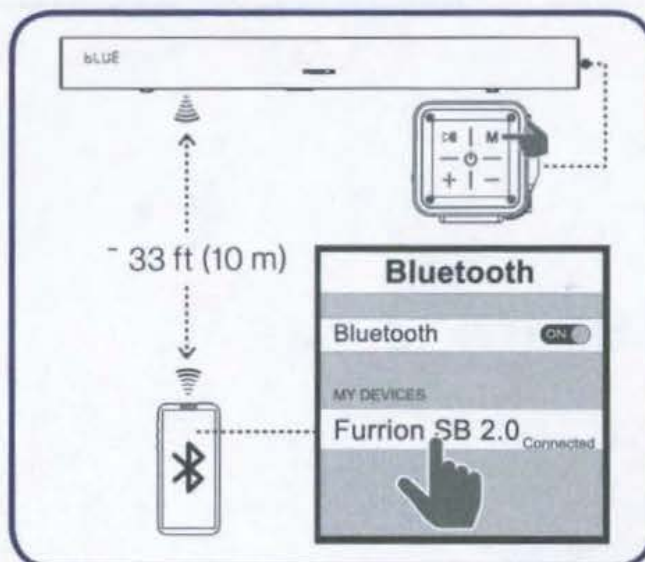   


 
- After the connections are completed, close the protective cover and tighten the screws for the best weatherproof effect.

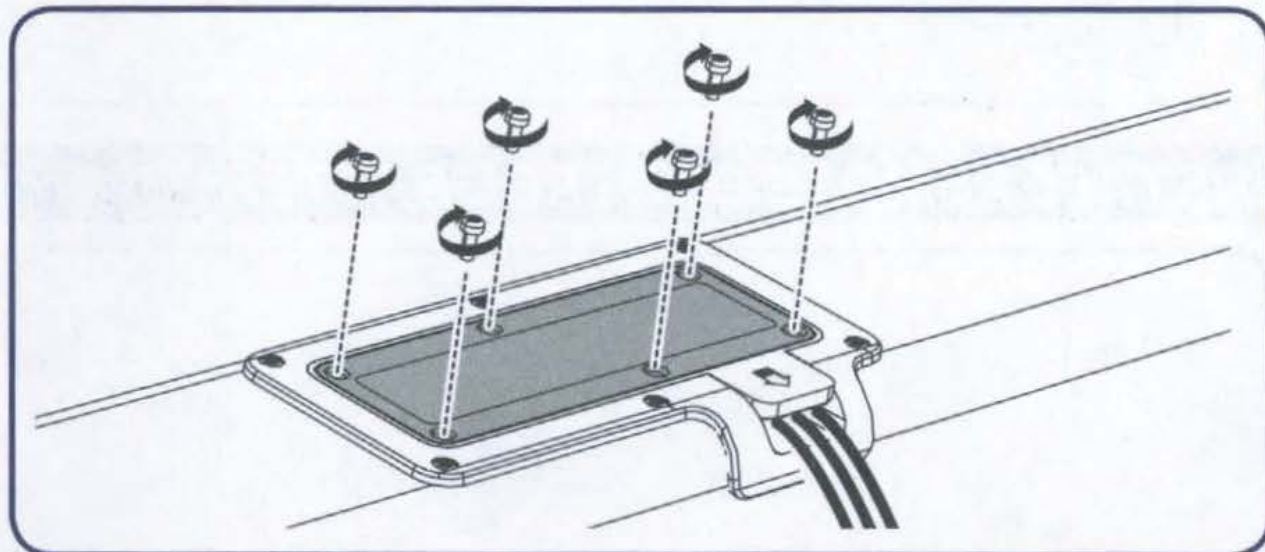

# INSTALL


**IMPORTANT:** Before final installation, check by powering the Soundbar on to make sure the unit operates properly.
  
## 1. Install Soundbar to the compatible Furrion Aurora™ TV

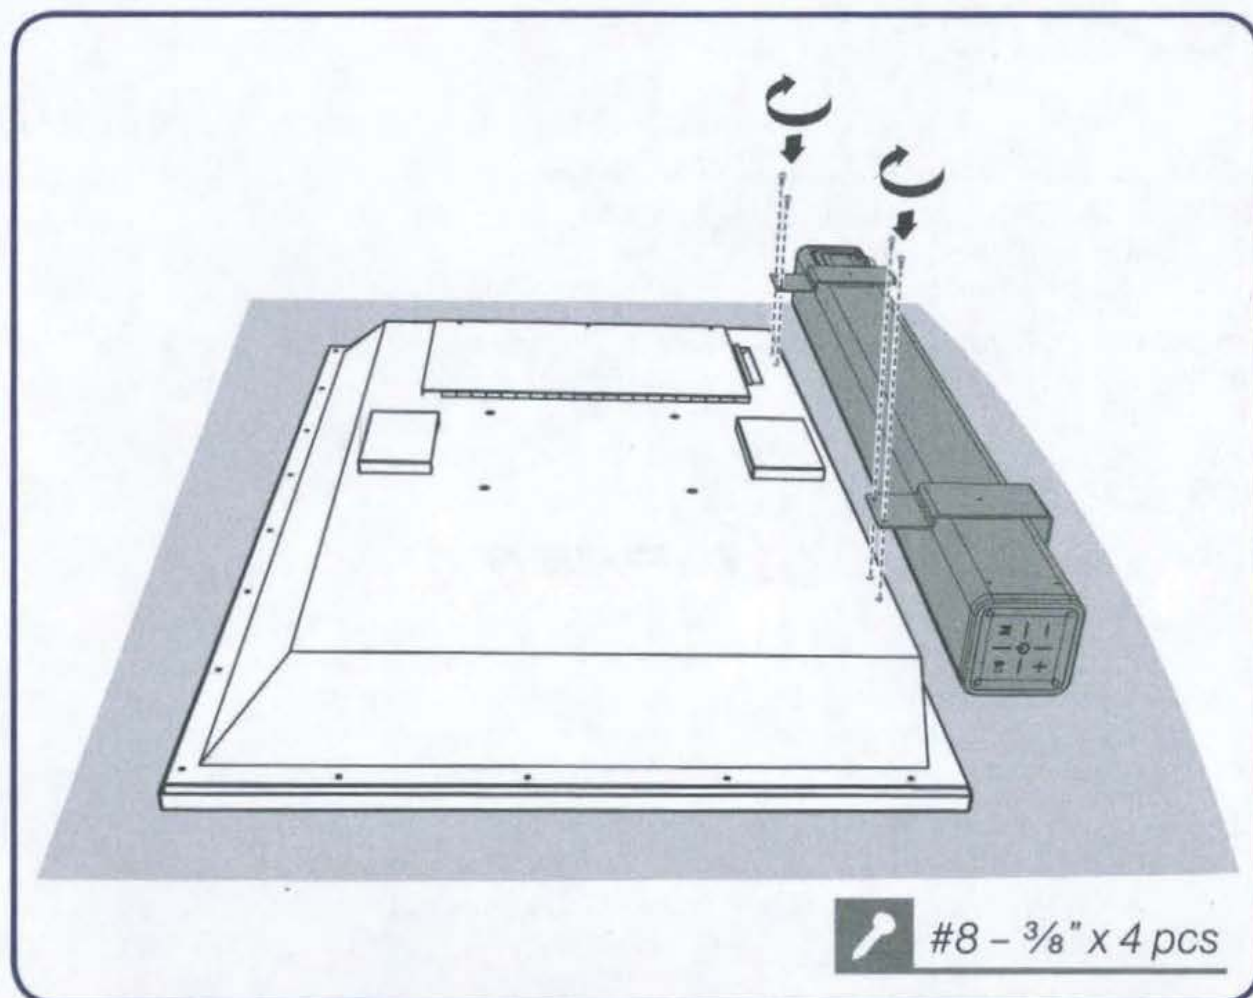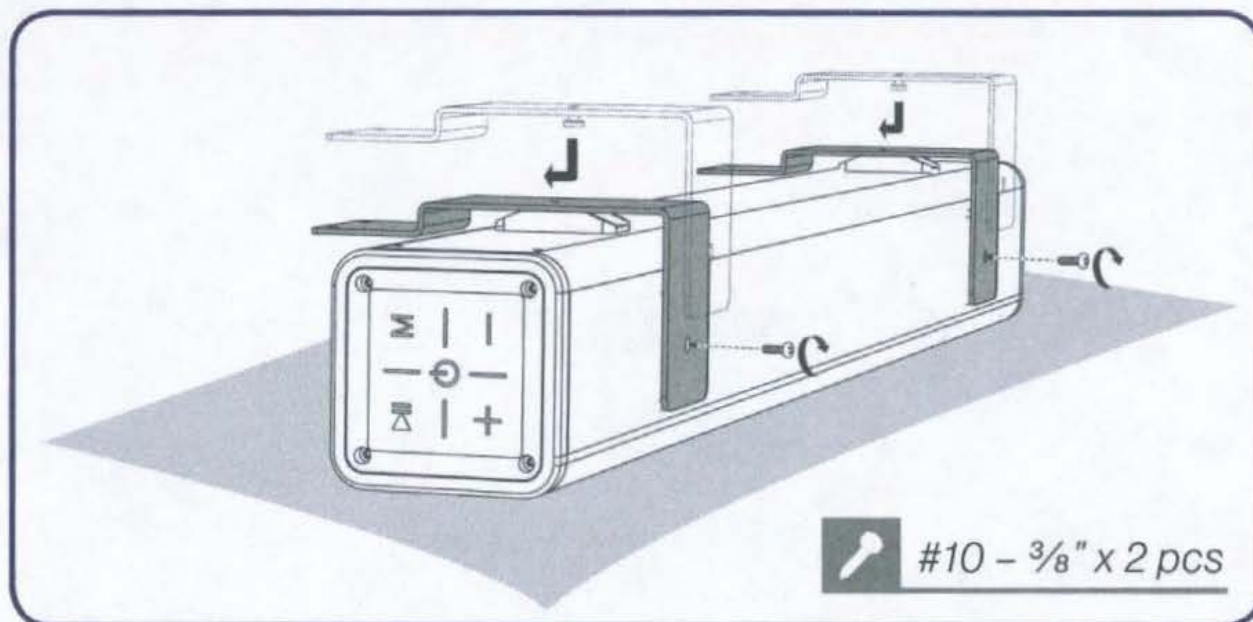





## 2. Mount on wall

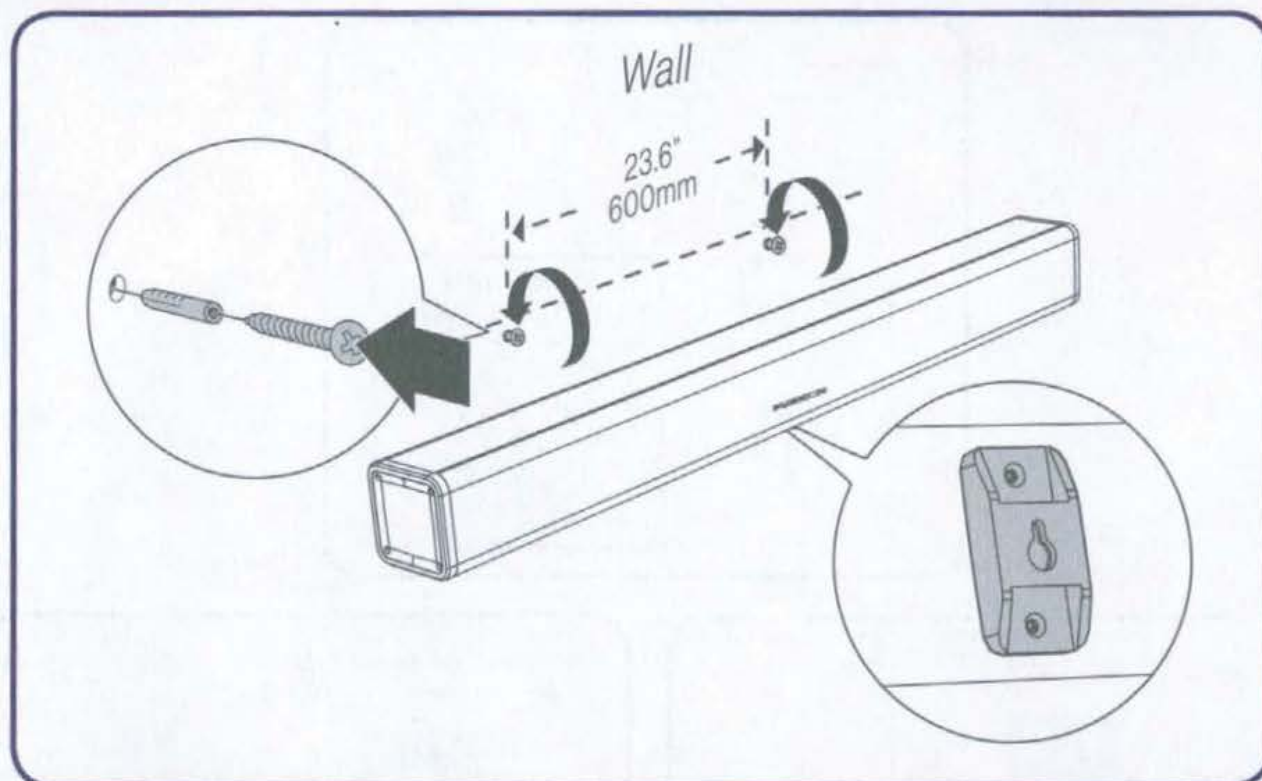 

## CONNECT POWER

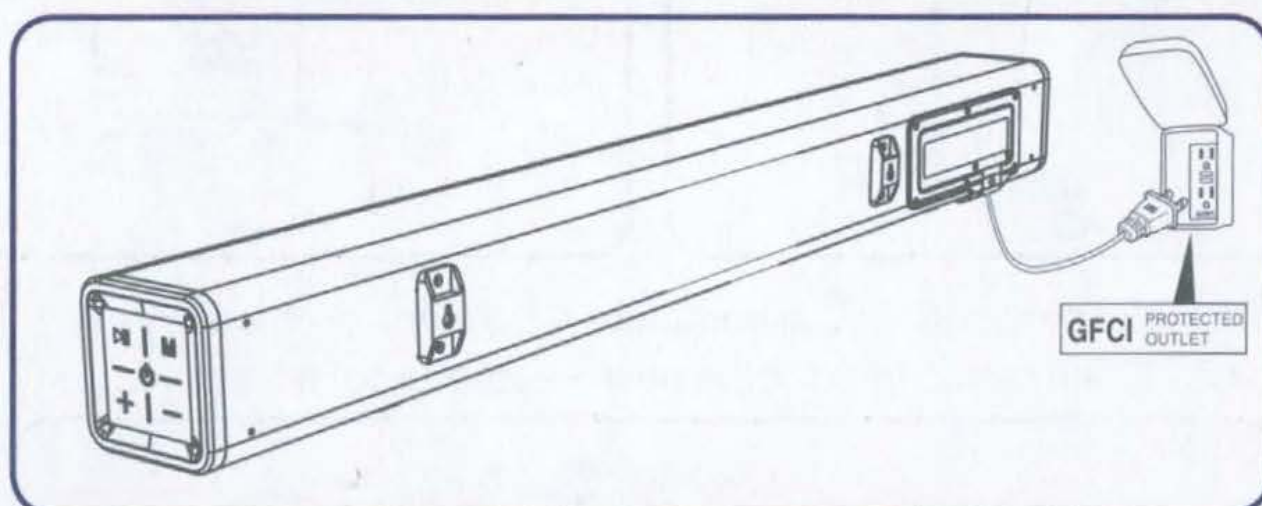 


## INSTALL REMOTE CONTROL BATTERY

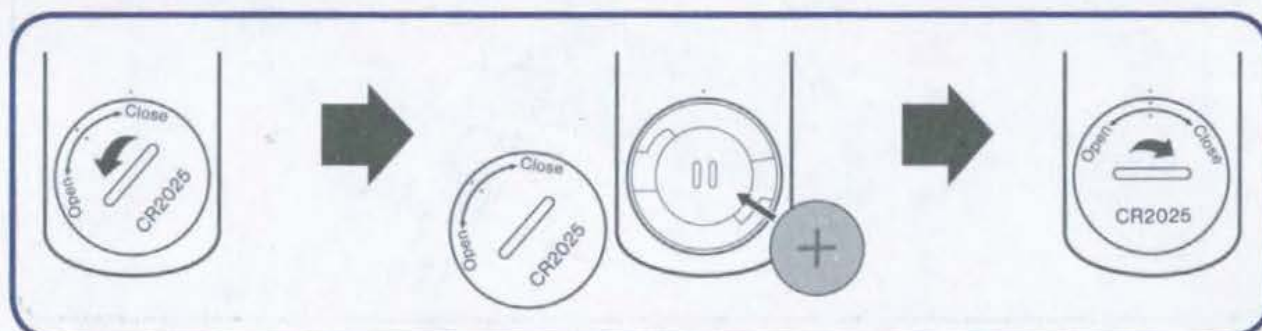 



# BASIC OPERATION
 
## Soundbar Buttons

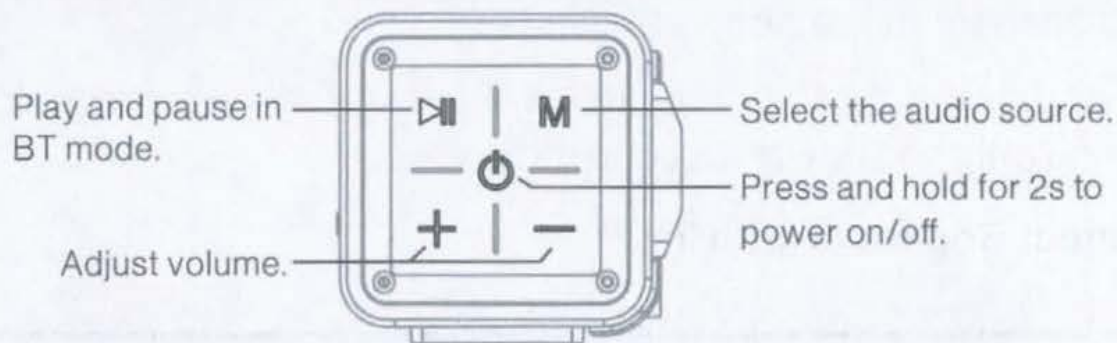

## Soundbar Remote Control Operation

Remote Control Button	Function
	Power on/off.
	Short press to switch the source mode to Bluetooth; Press and hold it for 3s to unpair and launch pairing again. (BT Name: Furrion SB 2.0/ Furrion SB 2.1)
Source	Select the audio source (OPT, HDMI, AUX, BLUE).
	Mute or un-mute the audio output.
	Skip to the previous track in BT mode.
	Start or pause playback in BT mode.
	Skip to the next track in BT mode.
	Adjust volume.
BASS/TREBLE 	Adjust the EQ balance of treble and bass

**Tip:** See the complete user manual online for detailed functional explanation.

## TV Remote Control Operation

When the Soundbar is connected to the TV via HDMI, the TV remote may be used to control the soundbar. TV remotes differ based on brand and model, but general functionality is based on buttons found on most remotes.

- Power Button - Turns soundbar on/off with TV.
- Volume UP/DOWN - Adjusts the soundbar volume
- Mute - Mutes or unmutes the audio output.



# FURRION

Furrion Ltd. (Furrion) is a wholly owned subsidiary of Lippert Components, Inc. (Lippert)

## **Furrion Innovation Center & Institute of Technology**

- 22244 Innovation Drive, Elkhart, IN 46514-5514, USA
- Toll free: 1-800-789-3341
- Email: [support@furrion.com](mailto:support@furrion.com)

©2007-2023 Furrion Ltd. Furrion® and the Furrion logo are trademarks licensed for use by Furrion Ltd. and registered in the U.S. and other countries.

For Patent Info: [www.Lippert.com/patentsFurrion.com](http://www.Lippert.com/patentsFurrion.com)



The contents of this manual are proprietary and copyright protected by Lippert. Lippert prohibits the copying or dissemination of portions of this manual unless prior written consent from an authorized Lippert representative has been provided. Any unauthorized use shall void any applicable warranty. The information contained in this manual is subject to change without notice and at the sole discretion of Lippert. Revised editions are available for free download from [lippert.com](http://lippert.com).

Please recycle all obsolete materials.

For all concerns or questions, please contact Lippert.

Ph: 432-LIPPERT (432-547-7378) | Web: [lippert.com](http://lippert.com) | Email: [customerservice@lci1.com](mailto:customerservice@lci1.com)

# 70W Furrion Aurora™ 2.1 Outdoor Soundbar with Built-in Subwoofer



## Elevate your Outdoor Sound Experience.

Specially engineered for outdoor listening, it features an IP45 water resistance and a robust exterior to protect internal components from the elements. With two speakers and an integrated subwoofer, it supports up to 70 W of explosive sound and is ideal for use in open-air settings. Take full control of your audio experience with the waterproof remote control and connect your media effortlessly thanks to Bluetooth, RCA, and digital coaxial input.

### Key Benefits

**Versatility:** Specially designed to work with Furrion Aurora™ 4K LED Outdoor TV, the soundbar comes equipped with Bluetooth® for convenient wireless connectivity

**Durability:** Durable and outdoor safe, it features an IP45 weatherproof rating and a robust housing that's resistant to snow, dust, insects, and humidity.

**Outstanding Sound Quality:** With 2 speakers and 1 built-in subwoofer, Furrion Aurora™ 2.1 Outdoor Soundbar supports up to 70W of power for an explosive sound and a dynamic audio experience whether you are watching sport, your favorite TV show, or streaming music.

### Main Features



WEATHERPROOF  
(IP45)



EXPLOSIVE  
SOUND



BLUETOOTH  
CONNECTIVITY



BUILT-IN  
SUBWOOFER



RCA INPUT



COAXIAL  
INPUT



3.5MM AUDIO  
INPUT

 


WATERPROOF  
REMOTE



COMPATIBLE WITH  
FURRION AURORA TV

# FURRION

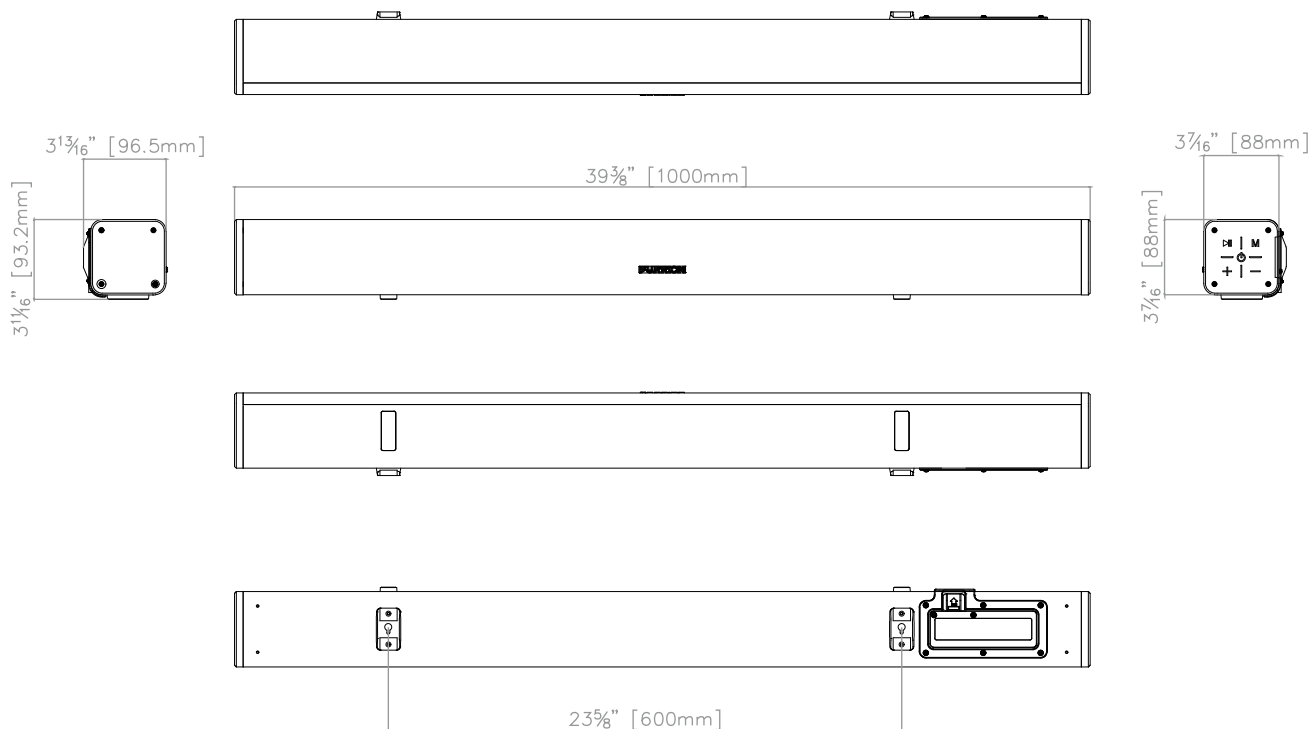

## Power

Power Supply 120V AC 60Hz

## Audio

Audio 70W (Max.)  
Speaker 3" Full Range Driver x 2 +  
2" Tweeter x 2 + 3" Subwoofer x 2

## Connections

# of RCA Inputs 1  
# of 3.5mm Audio Inputs 1  
# of Coaxial Inputs 1

## Special Features

Waterproof IP45  
Sound Modes Sport, Cinema, Music, TV  
Auto Off ✓

## Accessories

Accessories Mounting Brackets  
Waterproof Remote Control  
Coaxial Audio Cable x 1

## Dimensions and Weight

Product Size (WxHxD) 39.4 x 3.5 x 3.5"  
(1000 x 88 x 88mm)  
Net Weight (lbs/kg) 8.38lbs / 3.8kg

## Packaging Information

Packaging Type Color Gift Box  
Quantity Per Box 1pc  
Individual Packaging Dimensions (WxHxD) 43.7 x 5.6 x 5.6"  
(1110 x 141 x 143mm)  
Gross Weight (lbs/kg) 10.14lbs / 4.6kg  
Unit Per Master Carton 4

## Container Load

20" Container Load 1008pcs  
40" Container Load 2128pcs  
40" HQ Container Load 2432pcs





# FURRION

WARRANTY MANUAL..... ENGLISH (EN)

LIVRET DE GARANTIE..... FRANÇAIS (FR)

MANUAL DE GARANTÍA..... ESPAÑOL (ES)

**FSBNN30MST**



Serial NO. : 10001444206042300612

Made in China

ere



Congratulations on purchasing your new Furrion product. All Furrion products are made to strict quality standards. The details of this warranty are set out in the terms and conditions (see reverse) which supplement the authorized reseller or dealer's Terms and Conditions of Sale. Please visit **[www.furrion.com](http://www.furrion.com)**

## LIMITED WARRANTY TERMS AND CONDITIONS

1. Furrion warrants that this product will be free from defects in workmanship and materials for a period of 12 months with parts and labor, except the products in the following table, from date of retail purchase, by the original end-use purchaser ("you") when delivered to you in new condition, in original packaging, from a Furrion authorized reseller or dealer and used in normal conditions. If a valid claim is made under warranty, then you will only be entitled to claim in accordance with paragraph 6 below.

Product Type	Warranty Period
AC/DC Power Centers	24 months
Air Conditioner	24 months
Arctic 12V 8 cu.ft. and 10 cu.ft. Refrigerators	24 months
Aurora Outdoor Televisions	24 months
eRove Portable Cooler	24 months
Gas Water Heater	24 months
Solar	24 months
Marine Cordsets & Adapters, Power Inlets (RV, and Marine)	60 months

2. The warranty only applies to Furrion products: with a valid serial number; used for consumer, private use and not for commercial or industrial use; and where you have validated the warranty in accordance with paragraph 4 below.
3. The warranty does not cover damage or loss: caused by poor, faulty or incorrect use, installation or maintenance; caused by accident (including force majeure or natural forces), misuse, negligence, abrasion, improper storage following delivery, rot and/or infestation following delivery, leaks (or similar incidents); occurring during shipment (even when Furrion arranged or paid for shipping); caused by failure to follow instructions in the owner's guide, damaged; caused by normal wear and tear; caused by maintenance, repairs or modifications other than those carried out by an authorized dealer; caused to the decorative surface of the product; caused to any data, software or information. This warranty also excludes claims based on any misrepresentations by the seller; or if this product's serial number has been altered, defaced, removed or rendered unidentifiable. This warranty is only valid in the country of purchase. Please see section 14 for specific product details.
4. To validate the warranty, you must: (a) complete the registration via **[www.furrion.com](http://www.furrion.com)**, or by call center; and (b) register the warranty covering this product within 6 months

of the date of the bill of sale; and **(c) have the original bill of sale to validate warranty of this product.**

5. If you require warranty service on this product, please cease using the product when a fault arises and contact us directly. **You will have to present your original bill of sale to establish warranty coverage.** Furrion's customer service can be reached at:

(i) **For USA/Canada customers:**

www.furrion.com

Email: customerservice@lci1.com

Toll-free Number: +1-432-547-7378

6. Following the filing of a claim, Furrion will investigate the claim. If we believe there is a defect covered by the warranty, we will at our option either repair or replace the defective product (or part). It is Furrion's right to replace with new or refurbished product. If the product is part of an advanced exchange program, you may be required to provide a credit authorization during the claiming process.
7. Please note in the event that no defect can be found, it is your responsibility to pay for the re-delivery of the replacement items. If a defect is found, Furrion will pay for the re-delivery of the replacement items.
8. Installation of any repaired or replaced product will not be Furrion's responsibility.
9. If you do not allow the authorized dealer to inspect the product which is the subject of the warranty claim, you will invalidate the warranty in respect of that claim.
10. Any repaired Furrion product parts shall be guaranteed on the terms of this warranty for the unexpired portion of the warranty period only.
11. This warranty is subject to the jurisdiction of the courts of the State where you purchased this product, and any dispute or claim arising out of, or in connection with it or its subject matter, shall be governed by, and construed in accordance with the laws of that State.
12. In the event of any difference between this warranty and the provisions in any owner's manuals, warranty manuals, or packaging cartons, the terms of this warranty shall prevail to the fullest extent allowed by law.
13. THIS WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. FURRION SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF FURRION CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. NO FURRION RESELLER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION, EXTENSION, OR ADDITION TO THIS WARRANTY. FURRION IS NOT RESPONSIBLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF ANY EQUIPMENT OR PROPERTY, ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH FURRION PRODUCTS. FURRION'S TOTAL LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THIS PRODUCT PURSUANT



TO THE TERMS OF THIS WARRANTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR EXCLUSIONS OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OR CONDITIONS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY BY STATE OR (WHERE APPLICABLE IN THE COUNTRIES WHERE FURRIION HAS NON-US/CANADIAN AUTHORIZED DEALERS) COUNTRY. NO ACTION OR CLAIM TO ENFORCE THIS WARRANTY SHALL BE COMMENCED AFTER THE EXPIRATION OF THE WARRANTY PERIOD.



Félicitations pour l'achat de votre nouveau produit Furrion. Tous les produits Furrion sont fabriqués selon des normes de qualité rigoureuses. Les dispositions détaillées de la présente garantie sont énoncées dans les

Conditions générales (voir au verso) qui complètent les Conditions générales de vente du revendeur ou du distributeur agréé. Veuillez consulter [www.furrion.com](http://www.furrion.com)

## CONDITIONS GÉNÉRALES DE LA GARANTIE LIMITÉE

1. Furrion garantit un produit exempt de tout défaut dans la fabrication et dans les matériaux employés pour une période de 12 mois comprenant les pièces et la main d'œuvre, à l'exception des produits mentionnés dans le tableau suivant, à compter de la date d'achat au détail par l'acquéreur et utilisateur initial (« vous »), lorsqu'il vous est remis neuf et dans son emballage d'origine par un revendeur ou un distributeur agréé par Furrion et s'il est utilisé dans des conditions normales. Si une réclamation fondée est formulée au titre de la garantie, vous n'aurez de droits que ceux énoncés dans le paragraphe 6 ci-après.

Type de produit	Période de garantie
Centrales d'alimentation CA/CC	24 mois
Climatiseur	24 mois
Réfrigérateur Arctic 12 V 8 pi.cu. et 10 pi. cu.	24 mois
Téléviseurs d'extérieur Aurora	24 mois
Glacière portable eRove	24 mois
Chauffe-eau au gaz	24 mois
Solaire	24 mois
Câbles et adaptateurs de marine, arrivées d'alimentation (pour véhicules récréatifs ou maritimes)	60 mois

2. La garantie ne s'applique qu'aux produits Furrion. Ces derniers doivent être dotés d'un numéro de série valide, être utilisés à des fins privées et non à des fins commerciales ou industrielles et avoir bénéficié d'une validation de garantie en accord avec celle décrite dans le paragraphe 4 ci-après.





# FURRION

**Important Safety Instructions**


**Consignes importantes sur la sécurité**

 
**Instrucciones de seguridad importantes**



**Important Safety Instructions**



 This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves or other devices (including amplifiers) that produce heat.
6. Only use attachments/accessories specified by the manufacturer.
7. Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as if objects have fallen into the device, or the device does not operate normally, or has been dropped.
8. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
9. The power cord must be routed properly to prevent people from stepping on it, or objects from resting on it. Check the cords at the plugs and product. Try to use a single, directly dedicated and rated GFI power socket for the product for safe operation.
10. Use properly rated power voltage. Use of non-rated voltage may cause fire, electric shock and severe damages to the product.

11. Do not touch power plugs with wet hands.
12. Do not disassemble the unit by yourself under any circumstances: Removal of the product cover may expose you to high voltage or other dangerous risks. Refer all servicing to a qualified service professional. Warranty will not be honored if you service the product yourself.
13. Do not touch this apparatus, antenna, power cables or power plugs during a thunder or lightning storm.
14. With your product unplugged, gently wipe the surface of the product with a damp (with water) microfiber, cotton or flannel cloth. Remove any dirt and salt deposits from the product, being careful to rinse the cloth frequently to avoid scratching the soundbar. Avoid using harsh chemicals, abrasives, or solvents when cleaning any surface on the unit.
15. Any severe physical impact on the product may cause certain components to fall out of place within and break, which may cause fire or electric shock. In such event, do not operate the product. Contact the manufacturer for support.
16. In case of product malfunction or unusual events such as electrical burning smell, smoke, or loss of content signals on soundbar due to internal overheating, immediately turn off and unplug the power and contact the manufacturer.
17. Adequate ventilation must be maintained to ensure reliable and continued operation and to protect the product from overheating.
18. Do not mount this product near a motor or transformer where strong magnetism is generated.
19. Do not place the product on an unstable place. Improper installation may cause the product to fall, resulting in potential serious personal injuries, as well as damage to the product. Follow mounting instructions properly for safe operation of the product.
20. Do not move or transport the product with any cables (power cables, content connectivity cables) plugged in to the source devices. Damages may occur to the cables, plugs, or jointing connectors of the cables due to forcible bending and stress, which may cause damages to the waterproof seal of the product, making it subject to fire, electric shock, or shorted circuit.
21. Do not submerge this product in water or pressure wash it. This outdoor soundbar will resist water exposure from normal rain, sprinklers, garden hoses, etc. However, it won't allow ingress of water to the electrical components, doing so may cause damage to the drivers and void the warranty.
22. If the temperature below -20° C is expected, we recommend that you bring your product inside to prevent damage to the product.



[illegible]

## COMPLIANCE

## FCC Statement

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment under FCC Rules.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

### IC Statement

## IMPORTANT BATTERY PRECAUTIONS

**WARNING:**

- If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

### Disposal of your old product and battery

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

All registered and unregistered trademarks are property of their respective owners.

**FOR ALL PRODUCTS WITH WIRELESS OPERATION**



[www.furrion.com](http://www.furrion.com)

IS-FAV00011