



INSTALL GUIDE

OEM-AL(RS)-CH8-[ADS-ALCA]-EN

DOCUMENT NUMBER
77776

REVISION DATE
20211115

FIRMWARE
OEM-AL(RS)-CH8-[ADS-ALCA]

HARDWARE
ADS-ALCA

ACCESSORIES
ADS-USB (REQUIRED)



TERMS OF USE: Automotive Data Solutions Inc. ("ADS") products are strictly intended for installation by Certified Technicians who are employed by a registered business specialized in the installation of automotive aftermarket electronics products. Prior to beginning installation of an ADS product in a vehicle, it is the Certified Technician's responsibility to review the most current Product Guide, Install Guide and vehicle-specific notes available in Weblink®. ADS is not responsible for any damages whatsoever, including but not limited to any consequential damages, incidental damages, damages for loss of time, loss of earnings, loss of profit, commercial loss, loss of economic opportunity and the like that may or may not have resulted from the use, misuse, improper installation or operation of its products. ADS reserves itself the right to suspend any Weblink® account without notice and decline to offer technical support to non-Certified Technicians, non-compliant Certified Technicians or end users.



BEFORE INSTALLATION

- 1- Connect module to computer
- 2- Login to Weblink account
- 3- Flash firmware to module (module is not preloaded with firmware)
- 4- Use accessories accordingly (accessories are sold separately)


MAKE	MODEL	YEAR	INSTALL TYPE	FEATURES											
				DATA IMMOBILIZER BYPASS	3X LOCK START/STANDALONE MOD.	DOOR LOCK	DOOR UNLOCK	ARM OEM ALARM	DISARM OEM ALARM	TRUNK/HATCH RELEASE	DOOR STATUS OUTPUT	TRUNK STATUS OUTPUT	BRAKE PEDAL STATUS OUTPUT	TACHOMETER OUTPUT	SECURE TAKEOVER
RAM	1500 / 2500 / 3500 STD key (Tip-Start) AT	13-17	2	•	•	•	•	•	•		•		•	•	•
	1500 / 2500 / 3500 STD key (Tip-Start) AT	18	3	•	•	•	•	•	•		•		•	•	•
	1500 Classic STD key (Tip-Start) AT	19-21	3	•	•	•	•	•	•		•		•	•	•
	1500 / 2500 / 3500 Diesel STD key (Tip-Start) AT	14-17	2	•	•	•	•	•	•		•		•	•	•
	1500 / 2500 / 3500 Diesel STD key (Tip-Start) AT	18	3	•	•	•	•	•	•		•		•	•	•
	1500 Classic Diesel STD key (Tip-Start) AT	19-21	3	•	•	•	•	•	•		•		•	•	•

NOTE


I WARNING: All vehicle doors must be closed and locked prior to remote start sequence.

BOX CONTENTS

MODULE

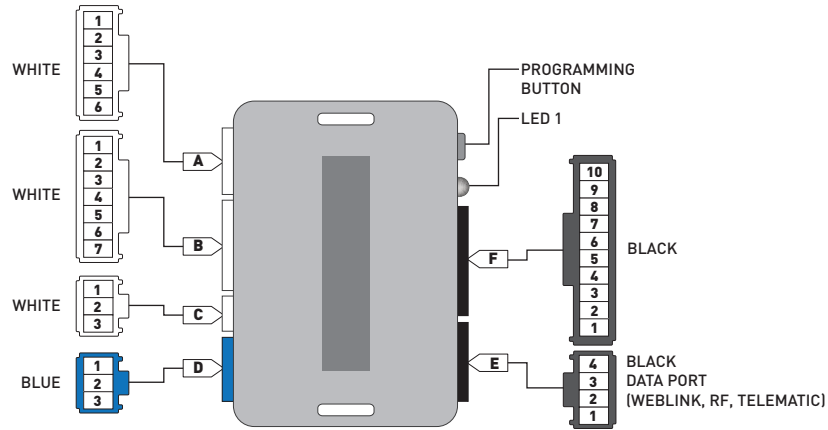

6 PIN WHITE CONNECTOR

 

7 PIN WHITE CONNECTOR



3 PIN WHITE CONNECTOR



 
3 PIN BLUE CONNECTOR



4 PIN BLACK CONNECTOR



10 PIN BLACK CONNECTOR



DATA CABLE 1




DATA CABLE 2




WEBLINK CABLE (required accessory sold separately)




MAKE	MODEL	YEAR	WIRE DESCRIPTION	CONNECTOR NAME	CONNECTOR COLOR	CONNECTOR TYPE	POSITION	WIRE COLOR	POLARITY	MODULE LOCATION	COMPONENT LOCATOR
RAM	1500 / 1500 Diesel STD key AT	13-17	12V	D2664A	Black	06 pin	06	Red	(+)	Ignition connector	F
			Ground	D2664A	Black	06 pin	03	Black	(-)	Ignition connector	F
			Key position	D2664A	Black	06 pin	04	Purple/Brown	(MUX)	Ignition connector	F
			Imo Lin	D2664A	Black	06 pin	05	White/Green	(DATA)	Ignition connector	F
			CanH	D7405A	Black	16 pin	06	Gray/White	(DATA)	OBDII connector	~
			CanL	D7405A	Black	16 pin	14	Yellow	(DATA)	OBDII connector	~
			Parking Light	D2242A	Black	10 pin	01	White/Brown	(MUX)	Parking light switch	A
			Driver door pin	~	~	~	~	Purple	(-)	Harness in driver kick panel	~
	2500 / 2500 Diesel / 3500 / 3500 Diesel / STD key AT	13-17	12V	D2664A	Black	06 pin	06	Red	(+)	Ignition connector	F
			Ground	D2664A	Black	06 pin	03	Black	(-)	Ignition connector	F
			Key position	D2664A	Black	06 pin	04	Purple/Brown	(MUX)	Ignition connector	F
			Imo Lin	D2664A	Black	06 pin	05	White/Green	(DATA)	Ignition connector	F
			CanH	D7405A	Black	16 pin	06	Gray/White	(DATA)	OBDII connector	~
			CanL	D7405A	Black	16 pin	14	Yellow	(DATA)	OBDII connector	~
			Parking Light	D2242A	Black	10 pin	01	White/Brown	(MUX)	Parking light switch	A
			Driver door pin	~	~	~	~	Purple	(-)	Harness in driver kick panel	~

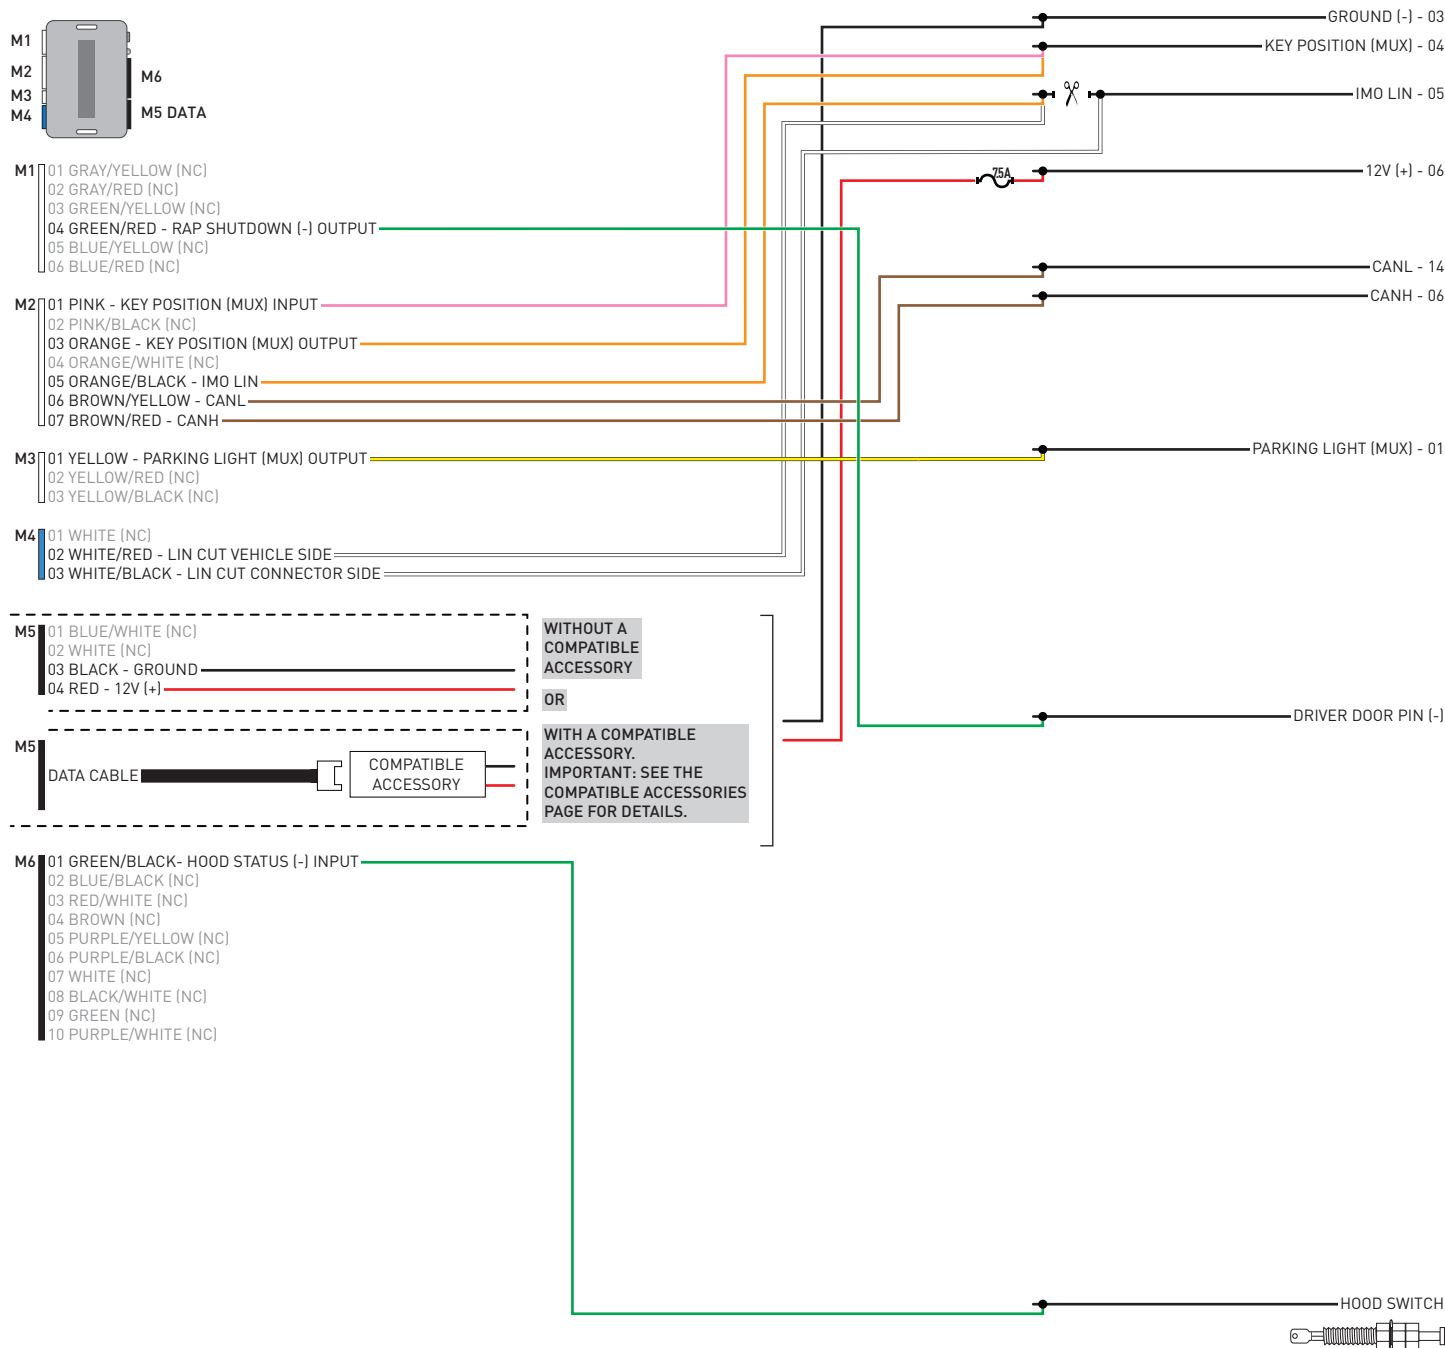

INSTALL THE SUPPLIED HOOD SWITCH IF THE VEHICLE IS NOT EQUIPPED WITH ONE.

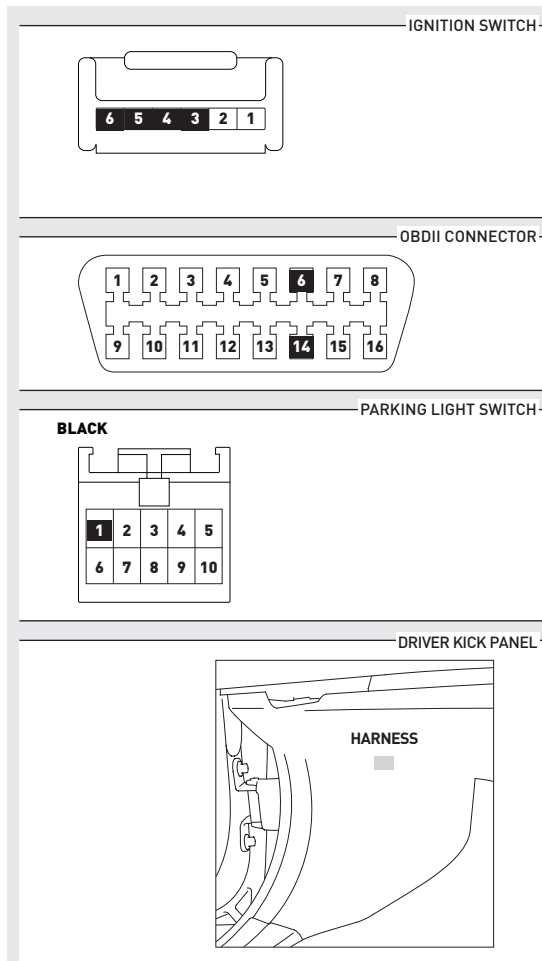


MAKE	MODEL	YEAR	WIRE DESCRIPTION	CONNECTOR NAME	CONNECTOR COLOR	CONNECTOR TYPE	POSITION	WIRE COLOR	POLARITY	MODULE LOCATION	COMPONENT LOCATOR
RAM	1500 / 2500 / 3500 STD key AT	18	12V	D2664A	Black	06 pin	06	Red	(+)	Ignition connector	~
			Ground	D2664A	Black	06 pin	03	Black	(-)	Ignition connector	~
			Key position	D2664A	Black	06 pin	04	Purple/Brown	(MUX)	Ignition connector	~
			Imo Lin	D2664A	Black	06 pin	05	White/Green	(DATA)	Ignition connector	~
			CanH	~	Gray	10 pin	02	Orange	(DATA)	Trailer module, right of steering column	~
			CanL	~	Gray	10 pin	01	Yellow	(DATA)	Trailer module, right of steering column	~
			Parking Light	D2242A	Black	10 pin	01	White/Brown	(MUX)	Parking light switch	~
			Driver door pin	~	~	~	~	Purple	(-)	Harness in driver kick panel	~
	1500 Classic STD key AT	19-21	12V	D2664A	Black	06 pin	06	Red	(+)	Ignition connector	~
			Ground	D2664A	Black	06 pin	03	Black	(-)	Ignition connector	~
			Key position	D2664A	Black	06 pin	04	Purple/Brown	(MUX)	Ignition connector	~
			Imo Lin	D2664A	Black	06 pin	05	White/Green	(DATA)	Ignition connector	~
			CanH	~	Gray	10 pin	02	Orange	(DATA)	Trailer module, right of steering column	~
			CanL	~	Gray	10 pin	01	Yellow	(DATA)	Trailer module, right of steering column	~
			Parking Light	D2242A	Black	10 pin	01	White/Brown	(MUX)	Parking light switch	~
			Driver door pin	~	~	~	~	Purple	(-)	Harness in driver kick panel	~
	1500 Diesel / 2500 Diesel / 3500 Diesel STD key AT	18	12V	D2664A	Black	06 pin	06	Red	(+)	Ignition connector	~
			Ground	D2664A	Black	06 pin	03	Black	(-)	Ignition connector	~
			Key position	D2664A	Black	06 pin	04	Purple/Brown	(MUX)	Ignition connector	~
			Imo Lin	D2664A	Black	06 pin	05	White/Green	(DATA)	Ignition connector	~
			CanH	~	Gray	10 pin	02	Orange	(DATA)	Trailer module, right of steering column	~
			CanL	~	Gray	10 pin	01	Yellow	(DATA)	Trailer module, right of steering column	~
			Parking Light	D2242A	Black	10 pin	01	White/Brown	(MUX)	Parking light switch	~
			Driver door pin	~	~	~	~	Purple	(-)	Harness in driver kick panel	~
	1500 Classic Diesel STD key AT	19-21	12V	D2664A	Black	06 pin	06	Red	(+)	Ignition connector	~
			Ground	D2664A	Black	06 pin	03	Black	(-)	Ignition connector	~
			Key position	D2664A	Black	06 pin	04	Purple/Brown	(MUX)	Ignition connector	~
			Imo Lin	D2664A	Black	06 pin	05	White/Green	(DATA)	Ignition connector	~
			CanH	~	Gray	10 pin	02	Orange	(DATA)	Trailer module, right of steering column	~
			CanL	~	Gray	10 pin	01	Yellow	(DATA)	Trailer module, right of steering column	~
			Parking Light	D2242A	Black	10 pin	01	White/Brown	(MUX)	Parking light switch	~
			Driver door pin	~	~	~	~	Purple	(-)	Harness in driver kick panel	~

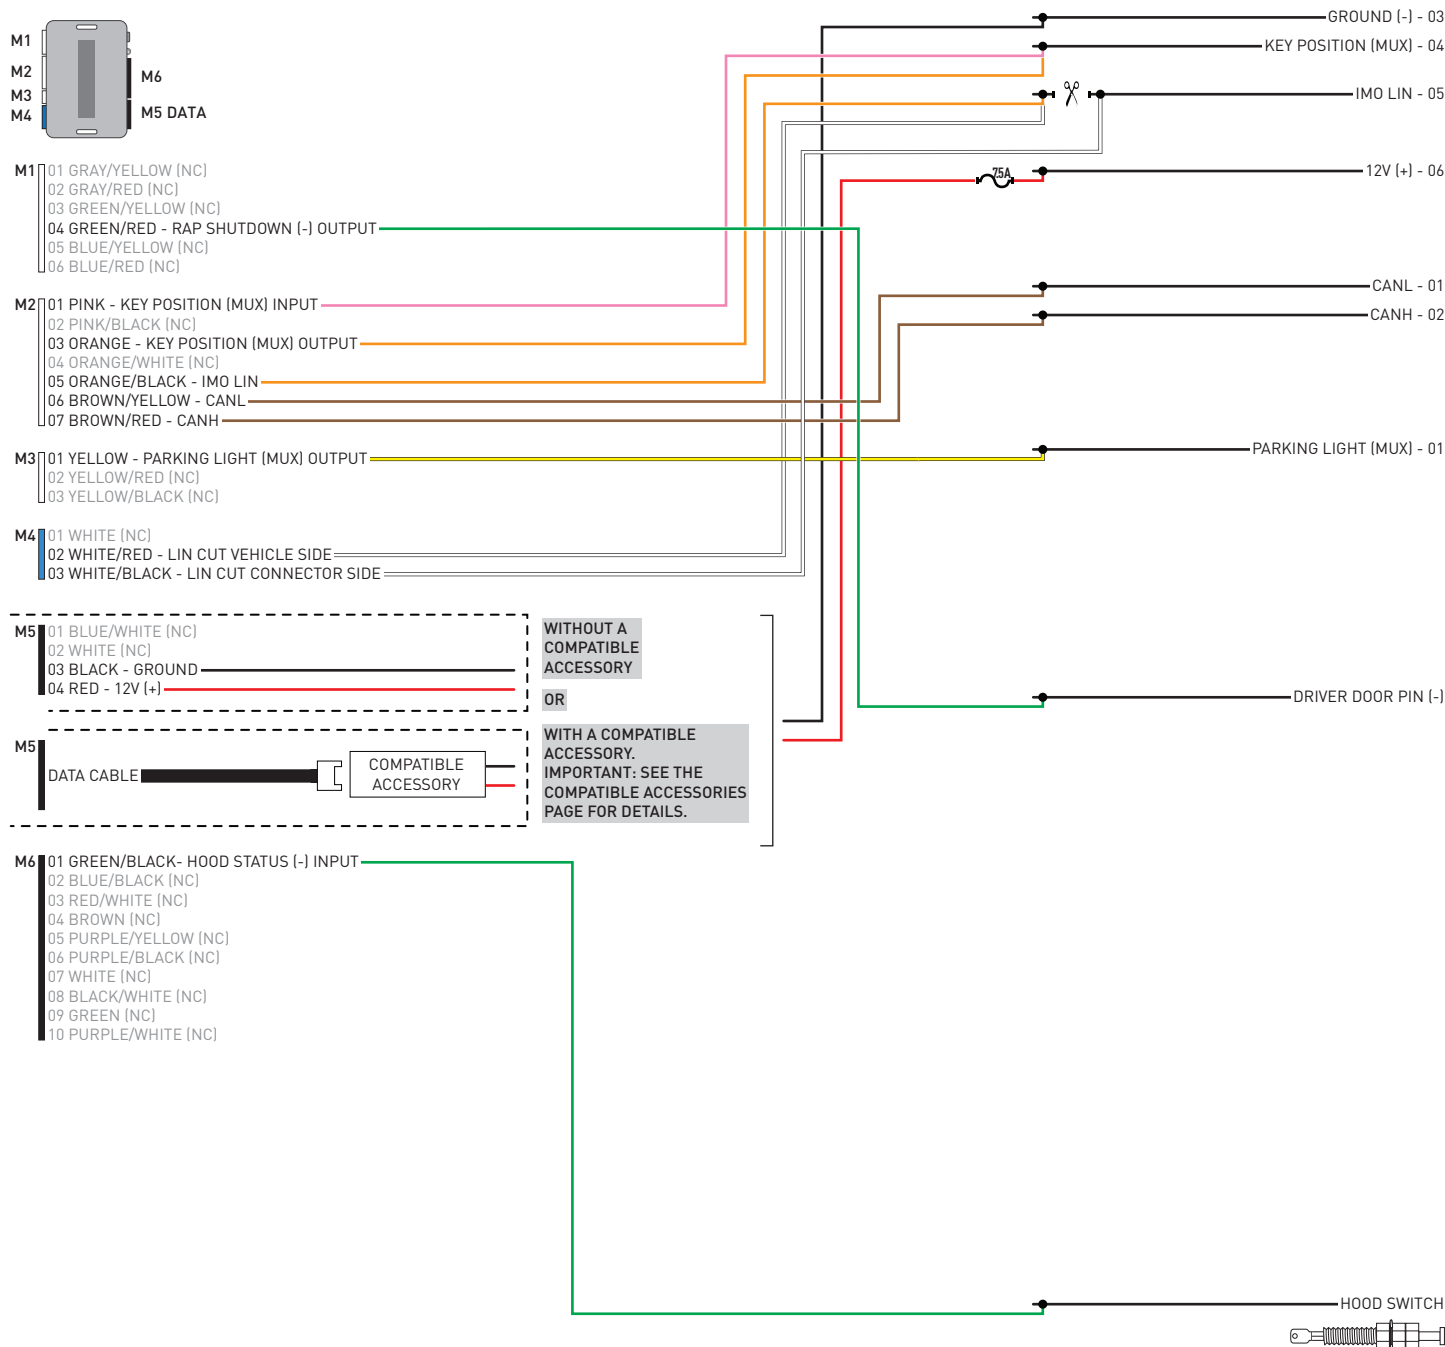


INSTALL THE SUPPLIED HOOD SWITCH IF THE VEHICLE IS NOT EQUIPPED WITH ONE.

 IGNITION SWITCH




TRAILER PACK CONNECTOR

 GRAY




PARKING LIGHT SWITCH

BLACK

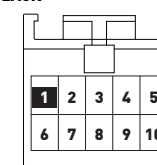

DRIVER KICK PANEL

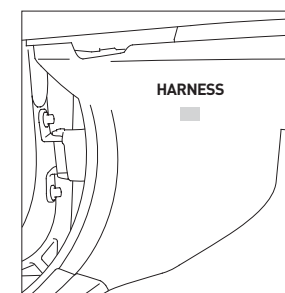

- 01** Close driver door. Re-open driver door to wake up data bus.



- 02** Press Unlock on OEM remote. If the vehicle is not equipped with an OEM remote, press the module programming button.



- 03** Wait, LED will flash GREEN once [1x]. If LED does not flash GREEN, press Unlock on OEM remote again.



- 04** Turn key to ON position.



- 05** Wait, LED will turn solid RED.



- 06** Turn key to OFF position.




- 07** Remove key.



- 08** Insert key into ignition.



- 09** Turn key to ON position.

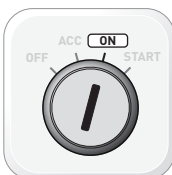


- 10** Wait, LED will flash GREEN.



- 11** Turn key to OFF position.




- 12** WARNING: Disconnect power last. Disconnect module from vehicle.

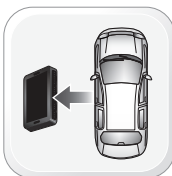

- 13** Connect module to computer and proceed with extended programming.



- 14** WARNING: Do not press module programming button. Connect power first. Connect module to vehicle.

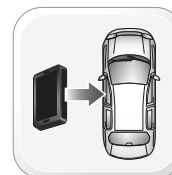

- 15** Turn key to ON position.



- 16** Wait, LED will turn solid GREEN for 2 seconds.



- 17** Turn key to OFF position.



- 18** Turn key to START position.



19



Turn key to OFF position.

20



Module Programming Procedure completed.

>>



NOTE: In Valet Mode, the Remote starter is not functional. Keyless entry, Lock and Unlock will remain functional. See RF kit user manual for alternate valet mode programming.

01



Time restriction. Complete next step within 7 seconds.

02



Cycle ignition ON five times [5x OFF/ON] rapidly.

03



Wait, LED 1 will turn solid RED for 2 seconds.

04



Set ignition to OFF position.

05





Valet Mode Programming Procedure completed.


>>




To exit valet mode: repeat steps 1 to 5.


>>  It is mandatory to exit the Module Navigation at the end of this procedure. Failure to exit the Module Navigation will drain vehicle battery. To exit the Module Navigation at any time: Follow STEP 13.


>>  Module must be programmed to the vehicle.

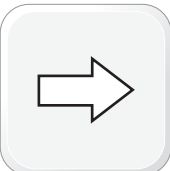
>>  Use the Module Navigation Chart on the next page.


01  Set ignition to OFF position.


02  TO ACCESS THE MENUS: Press and hold programming button until LED 1 turns solid GREEN.

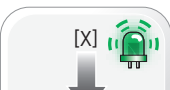
03  IN THE MENUS: Press the programming button as many times as the menu number indicates. LED 1 will flash GREEN an equal amount of times continuously.


04  TO ACCESS THE OPTIONS: Press and hold programming button until LED 1 turns solid RED.


05  IN THE OPTIONS: Press the programming button as many times as the option number indicates. LED 1 will flash RED an equal amount of times continuously.


06  TO ACCESS THE SETTINGS: Press and hold programming button until LED 1 turns solid GREEN.

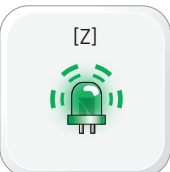
07  LED 1 will flash GREEN as many times as the current (or default) setting number, continuously.


08  IN THE SETTINGS: Press the programming button as many times as necessary to access your setting. LED 1 will flash GREEN an equal amount of times continuously.

09  To return to the MENUS: exit the Module Navigation and redo the Module Navigation Procedure.

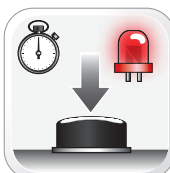
10  To save and return to the OPTIONS: Press and hold programming button until LED 1 turns solid RED.

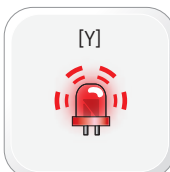11  LED 1 will flash RED as many times as the current option number continuously.

12  Configure every other setting and proceed to step 13.

13  MANDATORY: EXIT MODULE NAVIGATION. Press and hold programming button for 7 seconds. LED 1 will flash RED rapidly. Release programming button. LED 1 will turn OFF.

14  Module navigation completed.

>>  Failure to exit the Module Navigation will drain vehicle battery.


MODULE NAVIGATION CHART: NOTES	[X] MENUS	[Y] OPTIONS	[Z] SETTINGS
I Default settings are listed in bold. II Make sure the option is covered on the vehicle before attempting to change the setting.	01	CONFIGURATION	01 DISARM/UNLOCK BEFORE START
			02 RELOCK AFTER START
			03 RELOCK AFTER SHUTDOWN
			04 FORCE UNLOCK ALL ON FIRST PRESS
			05 TAKEOVER
			06 SECURE TAKEOVER DELAY
			07 N/A
			08 MODULE RUN TIME
			09 WAIT TO START DELAY
			10-12 N/A
			02-07 Technical Support only
			01 N/A
			01 OFF
			02 ON
			01 OFF
			02 ON
			01 OFF
			02 ON
			01 OFF
			02 ON
			01 ENABLE
			02 DISABLE*
			01 45 SEC
			02 90 SEC
			03 03 MIN
			04 04 MIN
			01 N/A
			01 03 MIN
			02 05 MIN
			03 10 MIN
			04 15 MIN
			05 25 MIN
			06 30 MIN
			07 35 MIN
			08 15 MIN
			01 02 SEC
			02 05 SEC
			03 08 SEC
			04 10 SEC
			05 15 SEC
			06 20 SEC
			07 25 SEC
			08 30 SEC
			01 N/A
			01 N/A

*Vehicle will shutdown when a door is opened.


REMOTE STARTER ERROR CODES: NOTES	[X] NUMBER OF PARKING LIGHT FLASHES	DIAGNOSTIC
I WARNING: The following applies only when the parking lights are connected and supported by the system.	03	Foot brake is ON.
	04	Hood is open.
II After a remote starter failure, the parking lights will flash [X] number times to indicate an error code. See table.	05	Engine tach signal is lost.
	06	System is in Valet Mode.
	07	Vehicle is moving (VSS).
	08	Glow plug timeout error.

TEST MODULE		LED 1 STATUS	DIAGNOSTIC
I	DURING PROGRAMMING	Flashing RED	Missing/wrong information from firmware or vehicle.
		Solid RED	Module waiting for more vehicle information.
		Flashing GREEN	Additional steps required to complete module programming.
		Solid GREEN then OFF	Module correctly programmed.
		OFF	No activity or module already programmed.
II	DURING REMOTE START	Flashing RED	Module incorrectly programmed.
		Solid RED	Module incorrectly programmed.
		Flashing GREEN	Module correctly programmed and operational.
		Solid GREEN then OFF	Reset in progress.
		OFF	Invalid ground when running status from remote starter.
III	WITH IGNITION OFF	Flashing RED	Module incorrectly programmed or connected.
		Solid RED	Module not programmed. Waiting for more vehicle information.
		Flashing GREEN	False ground when running status from remote starter.
		Solid GREEN then OFF	Reset in progress.
		OFF	Module at rest and ready for a remote start sequence.

- 01** Disconnect all connectors from module except the BLACK 4-PIN connector.

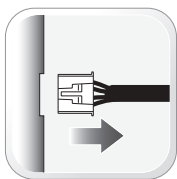

- 02** Disconnect the BLACK 4-PIN connector.

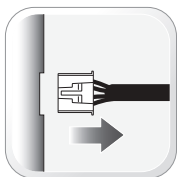


- 03** PRESS AND HOLD programming button while connecting the BLACK 4-PIN connector.



- 04** Wait, LED 1 will flash RED. RELEASE programming button.




- 05** LED 1 will turn RED for 2 seconds.

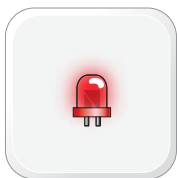

- 06** Module RESET completed.



- 07** Reconnect all connectors.

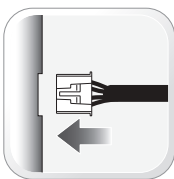

- 08** Repeat programming procedure.



- >>** Failure to follow procedure may result with a DTC or a CHECK ENGINE error message.



>> All vehicle doors must be closed and locked prior to remote start sequence.



01 Time restriction. Complete steps 2 to 6 within 45 seconds.



02 Press unlock on OEM or aftermarket remote.




03 Open driver door and enter vehicle.



04 Close driver door.



05 Turn key to ON position.

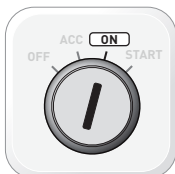

06 Press and release BRAKE pedal.



07 Take over procedure completed.



>> Failure to follow procedure will result in vehicle engine shutdown.



CHECKLIST	
1	WARNING: Vehicle engine will start many times. Test in a well ventilated area.
2	Close all vehicle doors, hood and trunk.
3	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
	Question 1: Does the vehicle remote start?
<input type="checkbox"/>	YES: Go to next step.
<input type="checkbox"/>	NO: The module doesn't detect OEM remote lock button from the vehicle communication network. Check all connections, repeat the test and call technical support, if the problem persists.
4	Press LOCK button three times [3x] rapidly on the OEM keyfob to shut down vehicle.
	Question 2: Does the vehicle shut down?
<input type="checkbox"/>	YES: Go to next step.
<input type="checkbox"/>	NO: Repeat step. If the problem persists, press on the brake pedal once [1x] to shut down the vehicle and call technical support.
5	RAP Shutdown test
	Question 3: Did the radio, interior controls, and headlights turn off within 60 seconds after remote start shutdown?
<input type="checkbox"/>	YES: Go to next step.
<input type="checkbox"/>	NO: Verify the RAP SHUTDOWN connections as illustrated in the wiring diagram. Repeat the test and call technical support, if the problem persists.
6	Open hood.
7	If not already installed, affix the mandatory orange warning sticker under the hood and proceed to next step.
8	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
	Question 4: Does the vehicle remote start?
<input type="checkbox"/>	YES: The vehicle is not equipped with a factory hood pin. Install a mandatory aftermarket hood switch, then repeat the test.
<input type="checkbox"/>	NO: Go to next step.
9	Close hood.
10	Enter vehicle and close the doors.
11	Press LOCK button three times [3x] rapidly on the OEM keyfob to remote start vehicle.
12	Wait for the vehicle to start.
13	Press brake pedal.
	Question 5: Does the vehicle shut down?
<input type="checkbox"/>	YES: Go to next step.
<input type="checkbox"/>	NO: The module does NOT detect the brake pedal signal. Press LOCK button three times [3x] rapidly on the OEM keyfob to shut down, check the brake connection as illustrated in the wiring diagram, if applicable, and call technical support.
14	Exit vehicle.
15	Installation checklist completed.