

TRUE WIRELESS SPORT EARPHONES



24 HOURS TOTAL
PLAYTIME



SPORT
FIT



FAST CHARGE
ENABLED

SAFETY PRECAUTIONS

When using your earphones, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR EARPHONES.
2. Never expose your earphones to high temperatures, extreme cold, or high humidity. Do not submerge in water.
3. To avoid the risk of electric shock, never attempt to open or repair your earphones without the assistance of certified professionals.
4. Your earphones are not to be used by children or the infirm without suitable adult supervision.
5. Always press all buttons carefully. Do not manhandle your earphones.
6. Do not use your earphones at temperatures under 32°F (0°C) or over 104°F (40°C).
7. Do not drop your earphones, throw them, or subject them to strong impacts or physical trauma.
8. Contact the manufacturer for support if you detect any abnormalities when using your earphones. In addition, do not continue to use your earphones if you detect any smoke or fire.
9. Unplug your earphones when not in use for extended periods of time.
10. When plugged in, do not place your earphones on flammable materials such as rugs, carpets, or bedding.
11. Please recycle or dispose of your earphones properly according to your municipality's laws and rules. Contact local recycling facilities and/or the manufacturer for further information.
12. Clean your earphones and charging case using a soft cloth or paper towel. Do not use harsh chemicals when cleaning your earphones, and never submerge your earphones in water.

 


CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.


A CLOSER LOOK

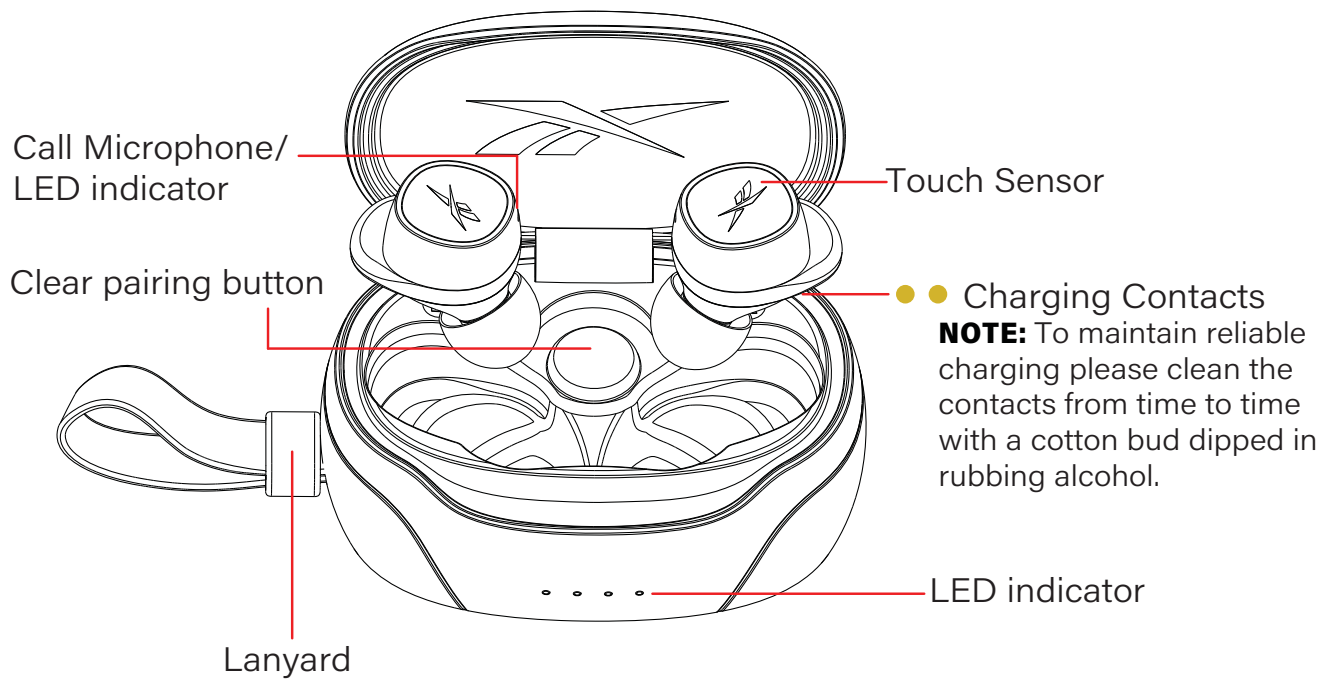


CHARGING

Charging The Case

 
Insert one end of the included USB-C charging cable into the charging port on your case.

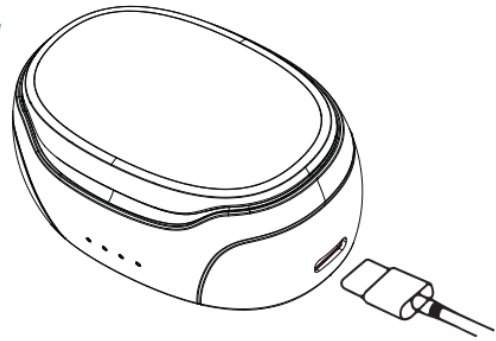

 Insert the other end of the USB cable into a suitable USB charging adapter.

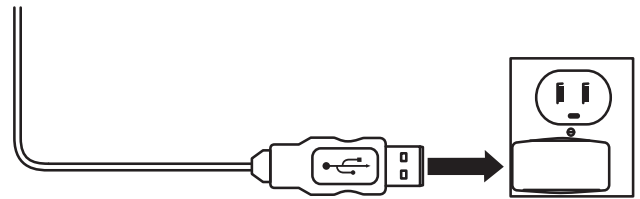

 
When charging, an indicator light on the case will flash.

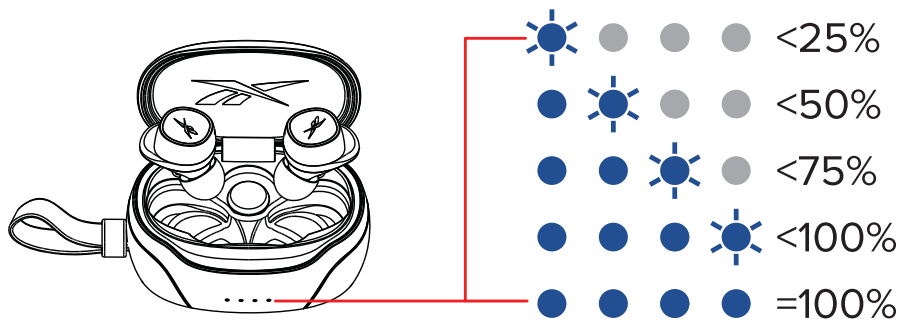

Charging The Earphones

Place the earphones in the charging case. Make sure the charging points make contact between the case and earphones. If there are any stickers on the earphones charging contacts, remove them.

 Charging can take approximately 2-3 hours.

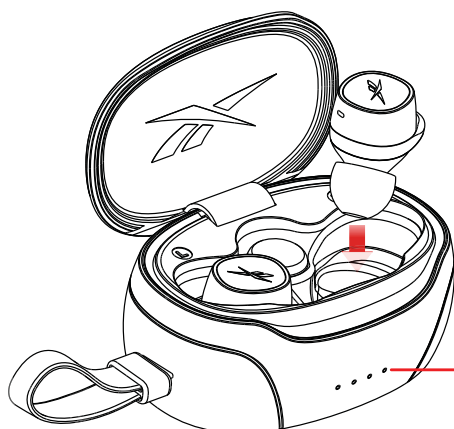


- Charging (Indicator breathing red every 3 Seconds).
- Fully charged (Indicator breathing blue every 3 Seconds).
- The LEDs turn off after about 60 Seconds to conserve power.

POWERING ON/OFF


When first using your earphones, remove any stickers on the charging contacts. Then, place the earphones into the case. To turn the earphones ON, remove them from the case. To turn the earphones OFF, set them back into the case.

 Note: It is recommended that the earphones be fully charged before use.

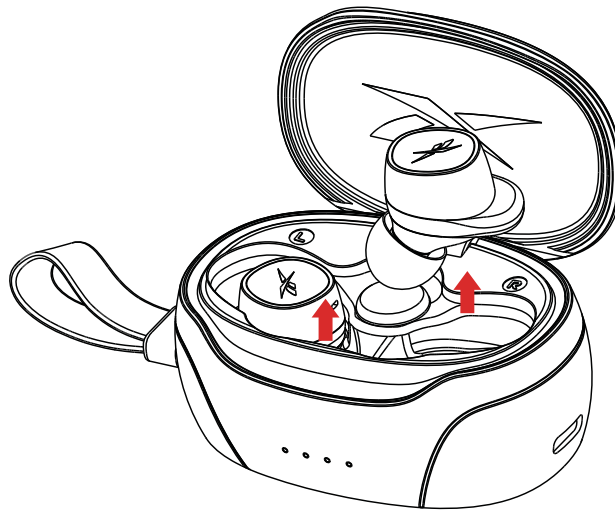


BLUETOOTH PAIRING

 When you remove your earphones from the case, they will power ON and go into pairing mode. Both earphones will automatically sync together when removed from the case.

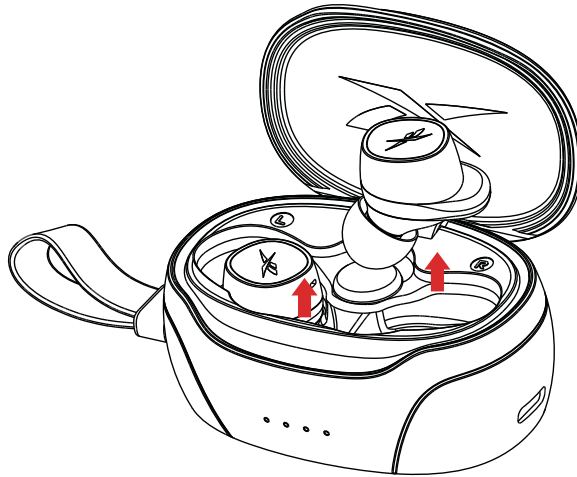

 
The indicator lights on the earphones will flash while in pairing mode. After both earphones be paired together, only one earbud will flash red/blue.

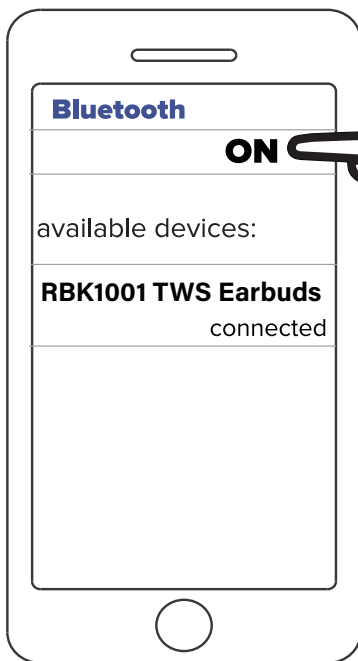

Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is ON. Connect to the device listed as "RBK1001 TWS Earbuds."

After connecting the earphones, their indicator lights will turn OFF.

 USING YOUR EARPHONES

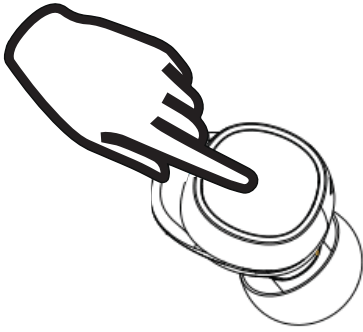

LEFT EARPHONE

Decrease Volume: Press Once
Previous Selection: Press Twice
Voice Assistant: Press and Hold for 2 Seconds
Low Latency On/Off: Press Three Times
Answer Call: Press Once
Decline Call: Press Twice
Hang Up Call: Press and Hold for 2 Seconds
On Call Mic. Mute On/Off: Press Twice

*Low Latency Mode reduces intrinsic Bluetooth delay for better lip-sync.

RIGHT EARPHONE

Increase Volume: Press Once
Next Selection: Press Twice
Pause/Play: Press and Hold for 2 Seconds
Low Latency On/Off: Press Three Times
Answer Call: Press Once
Decline Call: Press Twice
Hang Up Call: Press and Hold for 2 Seconds.
On Call Mic. Mute On/Off: Press Twice



Warning

To prevent possible hearing damage, do not listen at high volume levels for long periods. For your own safety, please be aware of your surroundings when using these earphones.

RESET

If the earphones have any technical problems without visible physical damage, please first attempt a soft reset. A soft reset does not remove previous pairing information.

Soft Reset

Place the earphones into the case. Let the earphones sit for approximately five seconds before taking out.

If a soft reset does not work, attempt a hard reset. A hard reset will remove all pairing information.

Hard Reset

First Method:

When both earphones are charging, press and hold the clear pairing button inside the charging case for 3 seconds to reset the earphones. The LED indicator on the charging case will flash three times to signify reset.

Second Method:

1. Take out the earphones from the charging case to power the earphones ON.
2. Press and hold both earphones for 5 seconds to power off. The LED lights on the earphones will flash red three times.
3. Press and hold both earphones while powered OFF for 12 seconds, resetting the earphones. The LED lights will change to solid red for three seconds.
4. Put both earphones into the case. Use normally.

MAINTENANCE AND CARE

-Use a soft cloth or paper towel to clean your earphones and charging case. Never use any harsh chemicals or detergents for cleaning. Make sure your earphones are dry before charging.

-When your earphones are unused, they should be stored in a cool, dry place.

-Never tug or yank on a cable connected to your earphones or charging case. Connect and disconnect cables as carefully as possible.

-Never expose your earphones to high temperatures or extreme cold.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.