Blu-ray Disc™ / **DVD Plaver**

Operating Instructions

The software of this player may be updated in the future. To download any available updates and the Operating Instructions with advanced features, please visit the following website:

http://www.sony.com/bluraysupport/

Before using the TV, please read this manual thoroughly and retain it for future reference.

Accessory type and quantity may vary depending on the model.

The image shown here is for illustrative purposes only and may be subject to change.

The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

The cables mentioned in this guide is not supplied with your unit.



DVD











On AC adaptor

- Use the supplied AC adaptor for this player, as other
- adaptors may cause a malfunction.

 Do not disassemble or reverse-engineer.

 Do not confine the AC adaptor in a closed place such as a bookshelf or an AV cabinet.
- . Do not connect the AC adaptor to a traveler's electric transformer, which may generate heat and cause a
- · Do not drop or apply shock.

For United States customers. Not applicable in Canada, including in the province Of Quebec. Pour les consommateurs Aux États-Unis. Non applicable au Canada, y compris la province de Ouéhec

FCC WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This transmitter must not be co-located or operated in

conjunction with any other antenna or transmitte The shielded Interface cable (LAN cable) must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

This equipment has been tested and found to comply with the

limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try

- Reorient or relocate the receiving antenna
- to correct the interference by one or more of the following Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for

FCC Radiation Exposure Statement (BDP-S3700/BX370 only):

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least

Contains FCC ID: PPO-WN4636R

Important Safety Instructions

- I) Read these instructions.

 2) Keep these instructions.

 3) Heed all warnings.

 4) Follow all instructions.

 5) Do not use this apparatus near water.

 6) Clean only with dry cloth.

 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

 8) Do not install near any heart sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce better produce heat.

 9) Do not defeat the safety purpose of the polarized or ground
 - type plug. A polarized plug has two blades with one wider that the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the 10) Protect the power cord from being walked on or pinched
 - particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. 11)Only use attachments/accessories specified by the
 - 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combin to avoid injury from tip-over



13) Unplug this apparatus during lightning storms or when unused ng periods of time

for long periods of time.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate

Copyrights and Trademarks a is a trademark of Oracle and/or its affiliates.

- Manufactured under license from Dolby Laboratories.
 Dolby and the double-D symbol are trademarks of Dolby . For DTS patents, see http://patents.dts.com, Manufactured
- under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS Inc @ DTS Inc All Rights Reserved



· The terms HDMI® and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States

This application or device may contain content belonging to Gracenote's providers. If so, all of the restrictions set forth herein with respect to Gracenote Data shall also apply to such content, and said content providers shall be entitled to all of the benefits and protections that are available to Gracenote hereunder. You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own nersonal, non-commercial use only. You agree not to assign copy, transfer or transmit the Gracenote Software or any Gracenote Data to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS

EXCEPT AS EXPRESSLY PERMITTED HEREIN

You agree that your non-exclusive license to use the Gracenote Data the Gracenote Software and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers. Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide You agree that Gracenote may enforce its rights under this Agreement against you directly in its own name. Gracenote may amend or remove Gracenote Data with or without advance notice and may block or modify access to Gracenote of such change, removal, blocking or modification.

PLEASE NOTE that in order to use the Gracenote Data, specific technical pre-requisites, such as this application or device, software programs, methods of transfer, telecommunication services and other third party services, usually need to be used, for which additional cost, in particular connection charges, can be incurred, which you will have to pay for separately. Gracenote does not provide such applications or devices, software programs, methods of does not accept any liability for services of third parties. Gracenote is not responsible for the proper setup, connection or (if applicable) equipment of this application or device so that Gracenote Data may be received; this lies within your sole

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to cour queries without knowing anything about who you are. For nore information, see the web page for the Gracenote Privacy Policy for the Gracenote service. The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS." Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from the Gracenote Servers; the download or any other receipt of content, in particular the download of Gracenote Data, is also at your own risk and you are solely responsible for any damage to this application or device or for any other damages. including loss of data, arising out of such actions. Gracenot

reserves the right to delete data from the Gracenote Servers or o change data categories for any cause that Gracenote deem sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of Gracenote Software or Gracenote Servers will be uninterrupted. Gracenote is not obligated to provide you with new, enhanced or additional data types or categories that Gracenote may provide in the future, and is free to discontinue

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED. INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS. THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE, GRACENOTE DATA OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BELIARI E FOR ANY CONSPOLIENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

© 2000 - present. Gracenote, Inc. All Rights Reserved

Software License Information

For EULA (End User License Agreement), please refer to [License agreement] in the option menu on each network

For details of the other software licenses, please select [Setup] and refer to [Software License Information] in [System

This product contains software that is subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). These licenses establish that customers have the right to acquire, modify, and redistribute the source code of said software in accordance with the terms of the GPL or the LGPL.

The source code for the software used in this product is subject to the GPL and LGPL, and is available on the Web. To download, please visit the following website: http://oss.sony.net/Products/Linux
Please note that Sony cannot respond to any inquiries regarding the content of this source code

Disclaimer regarding services offered by third

rices offered by third parties may be changed, suspended or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

4 **◄◄/▶►** (fast reverse/fast forward)

- Fast reverse/fast forward the disc when your press the button during playback. The search speed changes each time you press the button during video playback.
- Plays in slow motion, when pressed for more than one second in pause mode.
- · Plays one frame at a time, when you press for a

short time in pause mode. Starts or re-starts playback. I◀◀ PREV/NEXT ▶▶I

Skips to the previous

III PAUSE Pauses or re-starts playback

Stops playback and remembers the stop point (resume point).

The resume point for a title/track is the last point you played or the last photo for a photo folder.

SUBTITI F

■ STOP

Selects the subtitle language when multi-lingual subtitles are recorded on BD-ROMs/DVD VIDEOs.

TV VOL +/-

Adjusts the TV volume

AUDIO

Selects the language track when multi-lingual tracks are recorded on BD-ROMs/DVD VIDEOs.

Selects the sound track on CDs MUTING

Turns off the sound temporarily

DISPLAY

Displays the playback information on the screen

To lock the disc tray (Child Lock) You can lock the disc tray to avoid accidental

opening of the tray. While the player is turned on, press STOP. HOME, and then TOP MENU button on the remote to lock or unlock the tray.

Code numbers of controllable TVs

Hold down -TV- (1) and the TV manufacturer's code using the remote buttons for 2 seconds.

Remote Button
Color button (YELLOW)
Color button (BLUE)
Color button (RED)
Color button (GREEN)
TOP MENU
†
POP UP/MENU
←
ENTER
→
RETURN


To avoid electrical shock, do not open the cabinet. Refer Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire.







This symbol is intended to alert the user to th presence of uninsulated "dangerous voltag sufficient magnitude to constitute a risk of

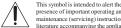

Precautions

- The nameplate is located on the bottom of the unit.
- To prevent fire or shock hazard, do not place objects filled with
- To prevent the or shock nazard, do not prace objects the conditional injuids, such as vases, on the apparatus.
 Install this unit so that the AC adaptor can be unplugged from the wall socket immediately in the event of trouble.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two condition 1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device

IC Radiation Exposure Statement

(BDP-S3700/BX370 only):
This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. Thi radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles)

Contains IC: 4491A-WN4636R

- . This equipment has been tested and found to comply with This equipment has been tested and found to comply with the limits set out in the EMC Directive using a connection cable shorter than 3 metres.
 The player is not disconnected from the AC power source
- as long as it is connected to the wall outlet, even if the player itself has been turned off. To reduce the risk of fire, do not cover the ventilation
- opening of the appliance with newspapers, tablecloths, curtains, etc.

 • Do not expose the appliance to naked flame sources (for example, lighted candles).
- Do not install this player in a confined space, such as a bookshelf or similar unit.

 • If the player is brought directly from a cold to a warm
- location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.

- Blu-ray DiscTM, Blu-rayTM, BD-LIVETM, BONUSVIEWTM and the logos are trademarks of the Blu-ray Disc
 - "DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.
 • "DVD+RW," "DVD-RW," "DVD+R," "DVD-R," "DV
 - VIDEO," and "CD" logos are trademarks.

 "BRAVIA" is a trademark of Sony Corporation. MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
 - issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance.
 - Reverse engineering or disassembly is prohibited.

 Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
 - subsidiary. Content owners use Microsoft PlayReady TM content acces
 - This product meets ENERGY STAR® guidelines for energy ENERGY STAR and the ENERGY STAR mark are
 - Gracenote, the Gracenote logo and logotype, "Powered by Gracenote", Gracenote MusicID, Gracenote VideoID, and trademarks of Gracenote, Inc. in the United States and/or

- Wi-Fi®, Wi-Fi Protected Access®, Wi-Fi Alliance® and Miracast[®] are registered trademarks of Wi-Fi Alliance.^{*}
 • Wi-Fi CERTIFIED™, WPA™, WPA2™, Wi-Fi Protected
- ...-I CERTIFIED™, WPA™, WPA™, WPAI™, Wi-Fi Protected Setup™ and Wi-Fi CERTIFIED Miracast™ are trademarks of Wi-Fi Alliance.*
 - . The Wi-Fi CERTIFIED Logo is a certification mark of Wi-Fi Alliance The Wi-Fi Protected Setup Identifier Mark is a certification
 - mark of Wi-Fi Alliance."

 DLNATM, the DLNA Logo and DLNA CERTIFIEDTM are trademarks, service marks, or certification marks of the Digital Living Network Alliance.*



 Opera® Devices SDK from Opera Software ASA. Copyright 1995-2015 Opera Software ASA, All rights reserved




- All other trademarks are trademarks of their respective
- Other system and product names are generally trader or registered trademarks of the manufacturers. TM and ® marks are not indicated in this document

Gracenote® End User License Agreement

This application or device contains software from Gracenote, Inc of Emeryville California ("Gracenote") The software application or device to perform disc and/or file identification and obtain music- and/or video-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases (collectively, "Gracenote Servers"), and to perform other functions. You may use Gracenote Data only by means of the intended End User functions of this application or device; the reception and display of the Gracenote Data on this application or device are not provided by Gracenote and falls solely within the responsibility and liability of the manufacturer hereof

The available functions of the remote are different depending on the disc or the situation

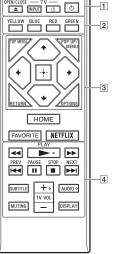

Use the tactile dot as a reference when operating the player.

The player automatically returns to standby mode If any button on the player or remote is not pressed for more than 20 minutes, the player automatically returns to standby mode.

Opens or closes the door tray

-TV- () (on/standby)

் (on/standby) ns on the player, or sets to standby mode

2 Color buttons (YELLOW/BLUE/RED/ GREEN)

Shortcut keys for interactive functions

Opens or closes the BD's or DVD's Top Menu.

POP UP/MENU

OPTIONS

Returns to the previous display

↑/↓ as a shortcut key to launch track search window

→ ←/→ as a shortcut key to perform search functions during DLNA video playback (BDP-S3700/BX370

Center button (ENTER) Enters the selected item

HOME

FAVORITE


Accesses the application registered as favorite NETFLIX

Accesses the "NETFLIX" online service. For further NETFLIX online service details, visit the following website and check the FAO:

Step 1: Connecting the Player


Do not connect the AC adaptor until you have made all the connections.


Connecting to your TV

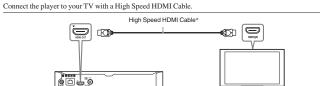

Connecting to your AV amplifier (receiver)

Select one of the following connection methods according to the input jacks on your AV amplifier (receiver).

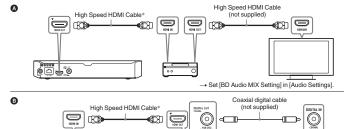

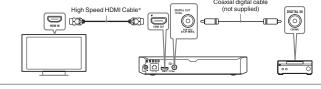

WARNING

To reduce the risk of fire or electric shock, do not expose this

This label is located on the laser protective housing inside the



within the product's enclosure that may be or electric shock to persons

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents


This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft

technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly ictions on content usage, content owners may quire Microsoft to revoke the device's ability to consur PlayReady-protected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an

registered U.S. marks. ENERGY STAR is a registered mark owned by the U.S. government. Gracenote Video Explore are either registered trademarks or

gracenote.

Remote

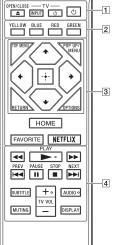

PLAY, TV VOL +, and AUDIO buttons have a tactile dot.

1 ≜ OPEN/CLOSE

-TV- INPUT Switches between TV and other input sources

Turns on the TV, or sets to standby mode.

3 TOP MENU

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

Displays the available options on the screen. RETURN

←/†/↓/**→** Moves the highlight to select a displayed item.


and input track number during music CD playback. • †/\$\dagger* as a shortcut key to rotate photo clockwise/ counterclockwise by 90 degrees.

Enters the player's home screen

Step 2: Preparing for Network Connection


Wired Setup

Use a LAN cable to connect to the LAN (100) terminal on the player.

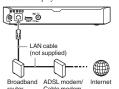

The use of a shielded and straight interface cable (LAN

Wireless Setup (BDP-S3700/BX370

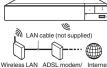

Use the wireless LAN that is built into the player.




* Turns on the player, or sets to standby mode

4 Turn on the TV and set the input selector on your TV by pressing INPUT button on the remote. This will show the signal from the player on your TV screen.


Step 3: Easy Setup

When turned on for the first time Wait for a short while before the player turns on and starts [Easy Initial Settings].


1 Insert two Size AAA (RO3) batteries by matching the \oplus and \bigcirc ends on the batteries to the markings inside the battery compartment of the remote.

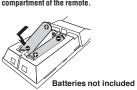

2 Connect the supplied AC adaptor in the numeric order shown below. When removing them, do so in reverse order.

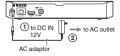

3 Press (b) to turn on the player.

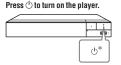

Playing a Disc

For "Playable discs". 1 Press ■ OPEN/CLOSE, and place a disc on the



2 Press OPEN/CLOSE to close the disc tray.

If playback does not start automatically select [Video], [Music], or [Photo] category in • (Disc), and press ENTER.

(Mixed disc) contains data contents. Press OPTIONS on the remote and select [Data Contents] to display any available

Enjoying BONUSVIEW/BD-LIVE

1 Connect a USB memory to the USB jack on the Use a 1 GB or larger USB memory as your local

2 Prepare for BD-LIVE (BD-LIVE only).

- Connect the player to a network. Set [BD] Internet Connection] in [BD/DVD Viewing Settings] to [Allow].
- 3 Insert a BD-ROM with BONUSVIEW/ BD-LIVE.

The operation method differs depending on the disc. Refer to the instruction manual supplied with

Playable discs

Blu-ray Disc*1	BD-ROM, BD-R*2/BD-RE*2
DVD*3	DVD-ROM, DVD-R/DVD-RW, DVD+R/DVD+RW
CD*3	CD-DA (Music CD), CD-ROM, CD-R/CD-RW

- *1 Since the Blu-ray Disc specifications are new and evolving, some discs may not be playable depending on the disc type and the version. The audio output differs depending on the , connected output jack, and selected audio settings
- *2 BD-RE: Ver.2.1, BD-R: Ver.1.1, 1.2, 1.3 including organic pigment type BD-R (LTH type). The BD-Rs recorded on a PC cannot be played if postscripts are recordable.

*3 A CD or DVD disc will not play if it has not been correctly finalized. For more information, refer to the instruction nanual supplied with the recording device

Region code (BD-ROM/DVD VIDEO only)

Your player has a region code printed on the bottom of the unit and will only play BD-ROMs/DVD VIDEOs labeled with identical region codes or ...



Playable types of files

Codec	Container	Extension	With Audio
MPEG-1 Video*1	PS	.mpg, .mpeg	Dolby Digital, DTS, LPCM, MPEG
MPEG-1 Video	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
	PS*3	.mpg, .mpeg	Dolby Digital, DTS, LPCM, MPEG
MPEG-2 Video*2	TS*4	.m2ts, .mts	Dolby Digital, DTS, LPCM, MPEG, AAC
	MKV*1	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
V. dal	AVI	.avi	Dolby Digital, LPCM, WMA9, MP3
Xvid	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
	MKV*1	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
	MP4*1	.mp4, .m4v	AAC
	TS*1	.m2ts, .mts	Dolby Digital, DTS, LPCM, MPEG, AAC
MPEG4/AVC*5	Quick Time*6	.mov	Dolby Digital, LPCM, AAC, MP3
-	FLV*6	.flv, .f4v	LPCM, AAC, MP3
	3gpp/3gpp2*6	.3gp, .3g2, .3gpp, .3gp2	AAC
VC1*1	TS	.m2ts, .mts	Dolby Digital, DTS, LPCM, MPEG, AAC
VCT ·	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
NAMA (0*1*7	ASF	.wmv, .asf	WMA9, WMA 10 Pro
WMV9*1*7	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis
Motion JPEG*6	Quick Time	.mov	Dolby Digital, LPCM, AAC, MP3
Wotion JPEG**	AVI	.avi	Dolby Digital, LPCM, AAC, MP3

Specifications

Specifications and design are subject to change without notice.

Laser	Semiconductor laser

Inputs and outputs

DIGITAL OUT (COAXIAL) (Jack name)	Phono jack /0.5 Vp-p/75 ohms (Jack type/Output level/Load impedance)	
HDMI OUT	HDMI 19-pin standard connector	
LAN (100)	100BASE-TX Terminal	
USB	USB jack Type A (For connecting a USB memory, memory card reader, digital still camera, and digital video camera)*	
	* Do not use for power charging purposes.	
DC IN	BDP-S3700/BX370: 12 V DC, 650 mA BDP-S1700: 12 V DC, 600 mA	

Wireless (BDP-S3700/BX370 only)

Wireless LAN standard	Protocol IEEE 802.11 b/g/n
Frequency range	2.4 GHz band: Channels 1-11
Modulation	DSSS and OFDM

General

5 Perform [Easy Initial Settings].


Follow the on-screen instru asic settings using ←/↑/↓/→ and ENTER on



When [Easy Initial Settings] is complete, the player will automatically find the available network.

Home screen display

The home screen appears when you press HOME. Select an application using ←/↑/↓/→, and press

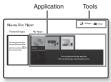

[My Apps]: Manages favorite application. You may add shortcuts for application from [All Apps]. [Featured Apps]: Displays recommended

[All Apps]: Shows all available applications. You can add applications to [My Apps] by pressing OPTIONS, and select [Add to My Apps] [Setup]: Adjusts the player's settings.

Screen mirroring function is only available for BDP-S3700/BX370.

Available options

Various settings and playback operations are available by pressing OPTIONS. The available items differ depending on the situation

[Move Application]: Arranges applications in [My

[Remove Application]: Deletes applications in [My Apps]. [Register as Favorite]: Registers 1 application

into FAVORITE remote button. ${\bf [Data\ Contents]:}$ Displays the contents of the

Playing via a Network

Using "Video & TV SideView" (BDP-S3700/BX370 only)

"Video & TV SideView" is a free mobile application for remote devices (such as smartphone, etc.). By using "Video & TV SideView" with this player, you can easily enjoy the player by using the operation on your remote device. You can launch a service or application directly from the remote device and view the disc information during disc playback. "Video & TV SideView" also can be used as a remote control and software keyboard.

Before you use the "Video & TV SideView" device with this player for the first time, be sure to register the "Video & TV SideView" device. Follow the on-screen instructions on the "Video & TV SideView" device for registration.

Γhe registration can only be performed on the home screen.

Using Screen mirroring (BDP-S3700/ BX370 only)

"Screen mirroring" is a function to display the screen of a mobile device on the TV by Miracast technology.
The player can be connected directly with a Screen mirroring compatible device (e.g. smartphone, tablet). You can enjoy the display screen of the device on your large TV screen. No wireless router (or access point) is required to use this feature.

- . When using Screen mirroring, the quality of picture and sound may sometimes be deteriorated due to interference from other network. You may improve by adjusting [Screen mirroring RF Setting].
 Some network functions may not be available during Screen
- Make sure that the device is compatible with Miracast.
 Connectivity with all Miracast compatible devices is not guaranteed.
- 1 Select 🖷 [Screen mirroring] from home screen using $\leftarrow / \uparrow / \downarrow / \rightarrow$, and press ENTER.
- 2 Follow the on-screen instructions.

Software Update

1 Select 📤 [Setup] on the home screen using **←/ /////**.

Y
To delete data in the USB memory, select [Delete BD Data] in
[BD/DVD Viewing Settings], and press ENTER. All data
stored in the buda folder will be erased.

1 Connect the USB device to the USB jack on the

2 Select ➡ [USB device] using ←/↑/↓/→,

3 Select [Video], [Music], or [Photo] category using **↑**/**↓**, and press ENTER.

Playing from a USB Device

For "Playable types of files"

and press ENTER.

2 Select () [Software Update] using ↑/↓, and

■ [Update via Internet]

Updates the player's software using available network. Make sure that the network is connected to the Internet. For details, see "Step 2: Preparing for Network Connection"

■ [Update via USB Memory]

Updates the player's software using USB memory Make sure that the Software Update Folder is correctly named as "UPDATE" and all the update files must be stored in this folder. The player can recognize up to 500 files/ folders in a single layer including the update files/folders.

- We recommend performing the software update every 2
- If your network condition is noor visit If your network condition is poor, visit http://www.sony.com/bluraysupport/to download the latest software version and update via USB memory.
 You can also get information about update functions from

Format AVCHD (Ver.2.0)

Codec	Extension
MP3 (MPEG-1 Audio Layer III)*10	.mp3
AAC/HE-AAC*1*10	.m4a, .aac*6
WMA9 Standard*1	.wma
WMA 10 Pro*11	.wma
LPCM*10	.wav
FLAC*1	.flac, .fla
Dolby Digital*6*10	.ac3
DSF*1	.dsf
DSDIFF*1*12	.dff
AIFF*1	.aiff, .aif
ALAC*1	.m4a
Vorbis	.ogg
Monkey's Audio	.ape

Music

Format	Extension
JPEG	.jpeg, .jpg, .jpe
PNG	.png*13
GIF	.gif*13
BMP	.bmp*6*14

- *1 The player may not play this file format on a DLNA server (BDP-S3700/BX370 only).

 *2 The player can only play standard definition video on a DLNA server (BDP-S3700/BX370 only).

 *3 The player does not play DTS format files on a DLNA server (BDP-S3700/BX370 only).
- The player can only play Dolby Digital format files on a DLNA server (BDP-S3700/BX370 only).
 The player can support AVC up to Level 4.1.
- The player does not play this file format on a DLNA server (BDP-S3700/BX370 only).
- (BDP-S3/00/BX3/0 only).

 7 The player can support WMV9 up to Advance Profile.

 The player can support frame rate up to 60 fps.

 The player plays AVCHD format files that are recorded on a digital video camera, etc. The AVCHD format disc will
- not play if it has not been correctly finalized.

 The player can play ".mka" files.

 (This file cannot be played on a DLNA server (BDP-S3700/BX370 only),)
- *11 The player does not play coded file such as Lossless.

- *12 The player does not play DST encoded files.
 *13 The player does not play animated PNG or animated GIF
- *14 The player does not support 16bit BMP files.
- Some files may not play depending on the file format, file
- Some files edited on a PC may not play.
 Some files edited on a PC may not play.
- . Some files may not be able to perform fast forward or fast
- reverse function.

 The player does not play coded files such as DRM.
- The player can recognize the following files or folders in BDs, DVDs, CDs and USB devices: up to folders in the 9th layer, including the root folder
 up to 500 files/folders in a single layer
 The player can recognize the following files or folders
 stored in the DLNA server (BDP-S3700/BX370 only):
- up to folders in the 19th layer up to folders in the 19th layer
 up to 999 files/folders in a single layer
 The player can support frame rate:
- up to 60 fps for AVCHD (MPEG4/AVC) only.
- up to 30 fps for other video codecs.
 The player can support video bit rate up to 40 Mbps.
 Some USB devices may not work with this player.
- The player can recognize Mass Storage Class (MSC) devices (such as flash memory or an HDD), Still Image Capture Device (SICD) class devices and 101 keyboard. To avoid data corruption or damage to the USB memory or devices, turn off the player when connecting or removing
- the USB memory or devices.

 The player may not play high bit rate video files on DATA CDs smoothly. It is recommended to play such files using DATA DVDs or DATA BDs.



Printed in Mexico Sc: 09.03.2019 Obpn:N/A Shnmdl: BDPS1700_BDPS3700

SONY

Blu-ray Disc™ / DVD Player

Operating Instructions

Before using the TV, please read this manual thoroughly and retain it for future reference.

Accessory type and quantity may vary depending on the model.

The image shown here is for illustrative purposes only and may be subject to change.

The remote control vary depend of model: The buttons on the remote control may have a different name or location than the remote control shows in this manual.

The cables mentioned in this guide is not supplied with your unit.

Cotting	Stortod
Getting	Started

Playback

Settings and Adjustments

Additional Information



WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Do not expose batteries or appliances with battery-installed to excessive heat, such as sunshine and fire.

CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this Blu-ray Disc/DVD player is harmful to eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.





This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Precautions

- The nameplate is located on the bottom of the unit.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Install this unit so that the AC adaptor can be unplugged from the wall socket immediately in the event of trouble.

IC Radiation Exposure Statement (BDP-S3700/BX370 only):

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Contains IC: 4491A-WN4636R

For United States customers, Not applicable in Canada, including in the province Of Quebec.

Pour les consommateurs Aux États-Unis. Non applicable au Canada, v compris la province de Québec.

FCC WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

The shielded Interface cable (LAN cable) must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/ TV technician for help.

FCC Radiation Exposure Statement (BDP-S3700/BX370 only):

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Contains FCC ID: PPO-WN4636R

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- Heed all warnings.
- 4) Follow all instructions.
- Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Precautions

This equipment has been tested and found to comply with the limits set out in the EMC Directive using a connection cable shorter than 3 metres.

On placement

- Place the player in a location with adequate ventilation to prevent heat build-up in the player.
- To reduce the risk of fire, do not cover the ventilation opening of the appliance with newspapers, tablecloths, curtains, etc.
- Do not expose the appliance to naked flame sources (for example, lighted candles).
- Do not install this player in a confined space, such as a bookshelf or similar unit.
- Do not place the player outdoors, in vehicles, on ships, or on other vessels.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.
- Do not install the player in an inclined position. It is designed to be operated in a horizontal position only.
- Do not place metal objects in front of the front panel. It may limit reception of radio waves
- Do not place the player in a place where medical equipment is in use. It may cause a malfunction of medical instruments.

- If you use a pacemaker or other medical device, consult your physician or the manufacturer of your medical device before using the wireless LAN function.
- Do not place heavy or unstable objects on the player.
- Do not place any objects other than discs on the disc tray. Doing so may cause damage to the player or the object.
- Take out any discs from the tray when you move the player. If you don't, the disc may be damaged.
- Disconnect the AC adaptor and all other cables from the player when you move the player.

On power sources

- The player is not disconnected from the AC power source as long as it is connected to the wall outlet, even if the player itself has been turned off.
- Disconnect the player from the wall outlet if you are not going to use the player for a long time. To disconnect the AC adaptor, grasp the plug itself; never pull the cord.
- Observe following points to prevent the AC adaptor being damaged. Do not use the AC adaptor if it is damaged, as doing so may result in an electric shock or fire.
 - Do not pinch the AC adaptor between the player and wall, shelf, etc.
 - Do not put anything heavy on the AC adaptor or pull on the AC adaptor itself.

On AC adaptor

- Use the supplied AC adaptor for this player, as other adaptors may cause a malfunction.
- Do not disassemble or reverse-engineer.
- Do not confine the AC adaptor in a closed place such as a bookshelf or an AV cabinet.
- Do not connect the AC adaptor to a traveler's electric transformer, which may generate heat and cause a malfunction.
- Do not drop or apply shock.

On adjusting volume

Do not turn up the volume while listening to a section with very low level inputs or no audio signals. Your ears and the speakers may be damaged when the sound level reaches the peak.

On cleaning

Clean the cabinet, panel, and controls with a soft cloth. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

On cleaning discs, disc/lens cleaners

Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction.


On replacement of parts

In the events that this player is repaired, repaired parts may be collected for reuse or recycling purposes.

On connecting to the HDMI OUT jack

Observe the following as improper handling may damage the HDMI OUT jack and the connector.

 Carefully align the HDMI OUT jack on the rear of the player and the HDMI connector by checking their shapes. Make sure the connector is not upside down or tilted.

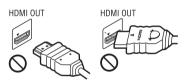

 Be sure to disconnect the HDMI cable when moving the player.



 Hold the HDMI connector straight when connecting or disconnecting the HDMI cable. Do not twist or force the HDMI connector into the HDMI OUT jack.

IMPORTANT NOTICE

Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Plasma display panel televisions and projection televisions are susceptible to this.

If you have any questions or problems concerning your player, please contact a Service center.

Copy Protection

Please be advised of the advanced content protection systems used in both Blu-ray Disc™ and DVD media. These systems, called AACS (Advanced Access Content System) and CSS (Content Scramble System), may contain some restrictions on playback, analog output, and other similar features. The operation of this product and the restrictions placed may vary depending on the date of purchase, as the governing board of the AACS may adopt or change its restriction rules after the time of purchase.

Cinavia Notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

Copyrights and Trademarks

- Java is a trademark of Oracle and/or its affiliates.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.
- Blu-ray DiscTM, Blu-rayTM, BD-LIVETM, BONUSVIEWTM, and the logos are trademarks of the Blu-ray Disc Association.
- "DVD Logo" is a trademark of DVD Format/Logo Licensing Corporation.
- "DVD+RW," "DVD-RW," "DVD+R," "DVD-R," "DVD-R," "DVD VIDEO," and "CD" logos are trademarks.
- "BRAVIA" is a trademark of Sony Corporation.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.
- This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
 - This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary. Content owners use Microsoft PlayReadyTM content access technology to protect their intellectual property, including copyrighted content. This device uses PlayReady technology to access PlayReady-protected content and/or WMDRM-protected content. If the device fails to properly enforce restrictions on content usage, content owners may require Microsoft to revoke the device's ability to consume PlayReadyprotected content. Revocation should not affect unprotected content or content protected by other content access technologies. Content owners may require you to upgrade PlayReady to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.
- This product meets ENERGY STAR[®] guidelines for energy efficiency.
 ENERGY STAR and the ENERGY STAR mark are registered U.S. marks. ENERGY STAR is a registered mark owned by the U.S. government.
- Wi-Fi®, Wi-Fi Protected Access®, Wi-Fi Alliance® and Miracast® are registered trademarks of Wi-Fi Alliance.*
- Wi-Fi CERTIFIEDTM, WPATM, WPA2TM, Wi-Fi Protected SetupTM and Wi-Fi CERTIFIED MiracastTM are trademarks of Wi-Fi Alliance.*
- The Wi-Fi CERTIFIED Logo is a certification mark of Wi-Fi Alliance.*
- The Wi-Fi Protected Setup Identifier Mark is a certification mark of Wi-Fi Alliance.*
- DLNATM, the DLNA Logo and DLNA CERTIFIEDTM are trademarks, service marks, or certification marks of the Digital Living Network Alliance.*



 Opera[®] Devices SDK from Opera Software ASA. Copyright 1995-2015 Opera Software ASA. All rights reserved.



- All other trademarks are trademarks of their respective owners.
- Other system and product names are generally trademarks or registered trademarks of the manufacturers. TM and ® marks are not indicated in this document.
- * BDP-S3700/BX370 only

Software License Information

For EULA (End User License Agreement), please refer to [License agreement] in the option menu on each network service icon.

For details of the other software licenses, please select [Setup] and refer to [Software License Information] in [System Settings].

This product contains software that is subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). These licenses establish that customers have the right to acquire, modify, and redistribute the source code of said software in accordance with the terms of the GPL or the LGPL.

The source code for the software used in this product is subject to the GPL and LGPL, and is available on the Web. To download, please visit the following website:

http://oss.sony.net/Products/Linux

Please note that Sony cannot respond to any inquiries regarding the content of this source code.

Disclaimer regarding services offered by third parties

Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

Contents

- 2 WARNING
- 4 Precautions

Getting Started

- 9 Guide to Parts and Controls
- 14 Step 1: Connecting the Player
- 15 Step 2: Preparing for Network Connection
- 15 Step 3: Easy Setup

Playback

- 17 Playing a Disc
- 18 Playing from a USB Device
- 18 Playing via a Network
- 20 Available Options

Settings and Adjustments


- 22 Using the Settings Displays
- 22 [Software Update]
- 22 [Accessibility Settings]
- 23 [Screen Settings]
- 24 [Audio Settings]
- 25 [BD/DVD Viewing Settings]
- 26 [Parental Control Settings]
- 26 [System Settings]
- 27 [Network Settings]
- 28 [Easy Network Settings]
- 28 [Resetting]

Additional Information

- 29 Troubleshooting
- 33 Specifications

Guide to Parts and Controls

Front panel

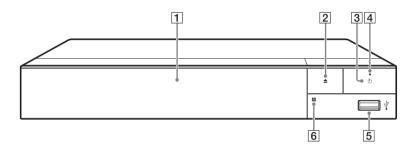

- 1 Door tray
- (on/standby)
 Turns on the player, or sets to standby mode.
- A Power indicator Lights up when the player is turned on.
- 5 y (USB) jack Connect a USB device to this jack.
- 6 Remote sensor


To lock the disc tray (Child Lock)

You can lock the disc tray to avoid accidental opening of the tray.

While the player is turned on, press

■ STOP, HOME, and then TOP MENU button on the remote to lock or unlock the tray.


Rear panel

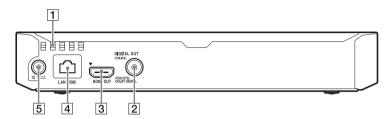

- 1 Ventilation holes
- 2 DIGITAL OUT (COAXIAL) jack
- 3 HDMI OUT jack
- 4 LAN (100) terminal
- 5 DC IN 12 V (AC adaptor input) jack

Remote

The available functions of the remote are different depending on the disc or the situation.

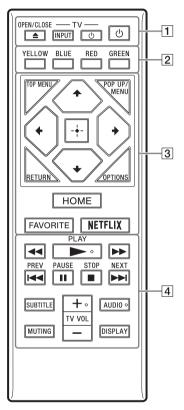



PLAY, TV VOL +, and AUDIO buttons have a tactile dot. Use the tactile dot as a reference when operating the player.

The player automatically returns to standby mode

If any button on the player or remote is not pressed for more than 20 minutes, the player automatically returns to standby mode.

1 ≜ OPEN/CLOSE

Opens or closes the disc tray.

-TV- INPUT

Switches between TV and other input sources.

-TV- (on/standby)

Turns on the TV, or sets to standby mode.

() (on/standby)

Turns on the player, or sets to standby mode.

2 Color buttons (YELLOW/ BLUE/RED/GREEN)

Shortcut keys for interactive functions.

3 TOP MENU

Opens or closes the BD's or DVD's Top Menu.

POP UP/MENU

Opens or closes the BD-ROM's Pop-up Menu, or the DVD's menu.

OPTIONS (page 20)

Displays the available options on the screen.

RETURN

Returns to the previous display.

←/////

Moves the highlight to select a displayed item.



- ↑/↓ as a shortcut key to launch track search window and input track number during music CD playback.
- ↑/↓ as a shortcut key to rotate photo clockwise/counterclockwise by 90 degrees.

 — as a shortcut key to perform search functions during DLNA video playback (BDP-S3700/BX370 only).

Center button (ENTER)

Enters the selected item

HOME

Enters the player's home screen.

FAVORITE (page 16)

Accesses the application registered as favorite.

NETFLIX

Accesses the "NETFLIX" online service. For further NETFLIX online service details, visit the following website and check the FAQ:

http://www.sony.com/bluraysupport/

4 **◄**/►► (fast reverse/fast forward)

- Fast reverse/fast forward the disc when you press the button during playback. The search speed changes each time you press the button during video playback.
- Plays in slow motion, when pressed for more than one second in pause mode.
- Plays one frame at a time, when you press for a short time in pause mode.

► PLAY

Starts or re-starts playback.

I◀◀ PREV/NEXT ▶▶I

Skips to the previous/next chapter, track, or file.

II PAUSE

Pauses or re-starts playback.

■ STOP

Stops playback and remembers the stop point (resume point).

The resume point for a title/track is the last point you played or the last photo for a photo folder.

SUBTITLE (page 25)

Selects the subtitle language when multi-lingual subtitles are recorded on BD-ROMs/DVD VIDEOs.

TV VOL +/-

Adjusts the TV volume.

AUDIO (page 25)

Selects the language track when multi-lingual tracks are recorded on BD-ROMs/DVD VIDEOs.
Selects the sound track on CDs.

MUTING

Turns off the sound temporarily.

DISPLAY (page 18)

Displays the playback information on the screen.

Code numbers of controllable TVs

Hold down -TV- (b) and the TV manufacturer's code using the remote buttons for 2 seconds.


Manufacturer	Remote Button
Sony (Default)	Color button (YELLOW)
Hitachi	Color button (BLUE)
LG/Goldstar/NEC	Color button (RED)
Toshiba	Color button (GREEN)
RCA	TOP MENU
Mitsubishi/MGA	†
Pioneer	POP UP/MENU
Sharp	←
Panasonic	ENTER
Samsung	→
Philips	RETURN

Step 1: Connecting the Player

Do not connect the AC adaptor until you have made all the connections.

Connecting to your TV


Connect the player to your TV with a High Speed HDMI Cable.

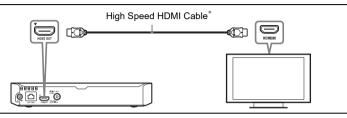


^{*} See "Supplied accessories" (page 33).

Connecting to your AV amplifier (receiver)

Select one of the following connection methods according to the input jacks on your AV amplifier (receiver).

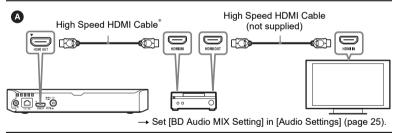

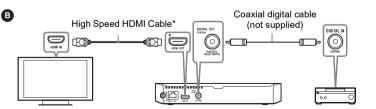


^{*} See "Supplied accessories" (page 33).

Step 2: Preparing for Network Connection

If you are not going to connect the player to a network, proceed to "Step 3: Easy Setup" (page 15).

Wired Setup

Use a LAN cable to connect to the LAN (100) terminal on the player.

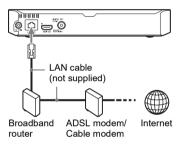




The use of a shielded and straight interface cable (LAN cable) is recommended.

Wireless Setup (BDP-S3700/BX370 only)

Use the wireless LAN that is built into the player.

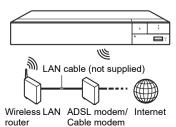


Step 3: Easy Setup


When turned on for the first time

Wait for a short while before the player turns on and starts [Easy Initial Settings].


1 Insert two Size AAA (R03) batteries by matching the ⊕ and ⊝ ends on the batteries to the markings inside the battery compartment of the remote.

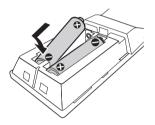

Connect the supplied AC adaptor in the numeric order shown below. When removing them, do so in reverse order.

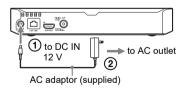

3 Press \circlearrowleft to turn on the player.

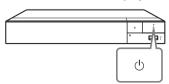

- 4 Turn on the TV and set the input selector on your TV by pressing INPUT button on the remote. This will show the signal from the player on your TV screen.




Ø

When [Easy Initial Settings] is complete, the player will automatically find the available network.

Home screen display

The home screen appears when you press HOME. Select an application using $\leftarrow /\uparrow /\downarrow /\rightarrow$, and press ENTER.

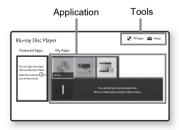

[My Apps]: Manages favorite application. You may add shortcuts for application from [All Apps]. [Featured Apps]: Displays recommended application.

[All Apps]: Shows all available applications. You can add applications to [My Apps] by pressing OPTIONS, and select [Add to My Apps].

[Setup]: Adjusts the player's settings.



Screen mirroring function is only available for BDP-S3700/BX370.

Available options

Various settings and playback operations are available by pressing OPTIONS. The available items differ depending on the situation.

[Move Application]: Arranges applications in [My Apps].

[Remove Application]: Deletes applications in [My Apps].

[Register as Favorite]: Registers 1 application into FAVORITE remote button.


[Data Contents]: Displays the contents of the mixed disc.

Playback

Playing a Disc

For "Playable discs", see page 34.

- Switch the input selector on your TV so that the signal from the player appears on your TV screen.
- Press OPEN/CLOSE, and place a disc on the disc tray.

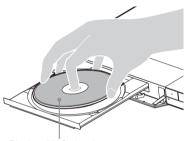

Playing side facing down

3 Press OPEN/CLOSE to close the disc tray.

Playback starts.

If playback does not start automatically, select [Video],
[Music], or [Photo] category in

O(Disc), and press ENTER.



(Mixed disc) contains data contents. Press OPTIONS on the remote and select [Data Contents] to display any available contents.

Enjoying BONUSVIEW/ BD-LIVE

Some BD-ROMs with the "BD-LIVE" logo have bonus contents and other data that can be downloaded for your enjoyment.

BD LIVE...

Connect a USB memory to the USB jack on the player (page 9).

Use a 1 GB or larger USB memory as your local storage.

- 2 Prepare for BD-LIVE (BD-LIVE only).
 - Connect the player to a network (page 15).
 - Set [BD Internet Connection] in [BD/DVD Viewing Settings] to [Allow] (page 25).
- 3 Insert a BD-ROM with BONUSVIEW/BD-LIVE.

The operation method differs depending on the disc. Refer to the instruction manual supplied with the disc.




To delete data in the USB memory, select [Delete BD Data] in [BD/DVD Viewing Settings], and press ENTER. All data stored in the buda folder will be erased.

Displaying the play information

You can view the playback information, etc., by pressing DISPLAY.
The displayed information differs depending on the disc type and player status.

Example: when playing a BD-ROM

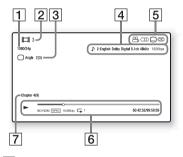

- 1 Output resolution/Video frequency
- 2 Title number or name
- **3** The currently selected angle
- 4 The currently selected audio and closed caption settings
- Available functions (angle, angle, closed caption)
- 6 Playback information
 Displays the Play mode, Playing
 status bar, Disc type, Video codec,
 Bitrate, Repeat type, Elapsed time,
 and Total playing time.
- 7 Chapter number

Playing from a USB Device

For "Playable types of files", see page 35.

- Connect the USB device to the USB jack on the player (page 9).

 Refer to the instruction manual supplied with the USB device before connecting.
- 2 Select = [USB device] using ←/↑/↓/→, and press ENTER.
- Select [Video], [Music], or [Photo] category using ↑/♣, and press ENTER.


Playing via a Network

Playing files on a Home Network (DLNA) (BDP-S3700/ BX370 only)

A DLNA-compatible product can play video/music/photo files stored on another DLNA-compatible product via a network.

- 1 Prepare to use DLNA.
 - Connect the player to a network (page 15).
 - Prepare the other necessary DLNA-compatible products.
 Refer to the instruction manual supplied with the product.


To play a file from a DLNA server via this unit (DLNA player)

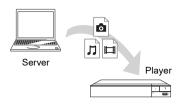

Select [Video], [Music], or [Photo] category from \mathbf{T} [Media Server] in [All Apps], then choose the file you want to play.

To play a file from a DLNA server via another product (Renderer)

When you play files from a DLNA Server on this unit, you can use a DLNA Controller-compatible product (a phone, etc.), to control playback.

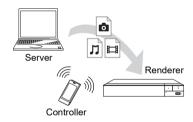

Control this unit using a DLNA controller. Refer to the instruction manual supplied with the DLNA controller.

Using Screen mirroring (BDP-S3700/BX370 only)

"Screen mirroring" is a function to display the screen of a mobile device on the TV by Miracast technology.

The player can be connected directly with a Screen mirroring compatible device (e.g. smartphone, tablet). You can enjoy the display screen of the device on your large TV screen. No wireless router (or access point) is required to use this feature.



- When using Screen mirroring, the quality of picture and sound may sometimes be deteriorated due to interference from other network. You may improve by adjusting [Screen mirroring RF Setting] (page 27).
- Some network functions may not be available during Screen mirroring.
- Make sure that the device is compatible with Miracast. Connectivity with all Miracast compatible devices is not guaranteed.
- 2 Follow the on-screen instructions

Available Options

Various settings and playback operations are available by pressing OPTIONS. The available items differ depending on the situation.

Common options

- [Repeat Setting]: Sets the repeat mode.
- [Play]/[Stop]: Starts or stops the playback.
- [Play from beginning]: Plays the item from the beginning.
- [Accessibility]*1*2:
 - -[Screen Reader]
 - [Enlarge]
 - -[Closed Captions]*3

Ø

- *1 [Accessibility] is only available when [Accessibility Shortcut] in [Accessibility Settings] is set to [On].
- *2 [Accessibility] is not available during photo or music playback.
- *3 [Closed Captions] is only available during video playback.

Video only

- [A/V SYNC]: Adjusts the gap between picture and sound, by delaying the sound output in relation to the picture output (0 to 120 milliseconds).
- [Video Settings]:
 - [Picture Quality Mode]: Selects the picture settings for different lighting environments.
 - -[BNR]: Reduces the mosaic-like block noise in the picture.
 - [MNR]: Reduces minor noise around the picture outlines (mosquito noise).

- **[Pause]:** Pauses the playback.
- [Top Menu]: Displays the BD's or DVD's Top Menu.
- [Menu]/[Popup Menu]: Displays the BD-ROM's Pop-up Menu or DVD's menu.
- [Title Search]: Searches for a title on BD-ROMs/DVD VIDEOs and starts playback from the beginning.
- [Chapter Search]: Searches for a chapter and starts playback from the beginning.
- [Audio]: Switches the language track when multilingual tracks are recorded on BD-ROMs/DVD VIDEOs. Selects the sound track on CDs.
- [Subtitle]: Switches the subtitle language when multilingual subtitles are recorded on BD-ROMs/DVD VIDEOs.
- [Closed Captions]: Selects closed caption format when available.
- [Angle]: Switches to other viewing angles when multi-angles are recorded on BD-ROMs/DVD VIDEOs.
- [Number Entry]: Selects the number by using ←/∱/↓/→ key on the remote.

Music only

- [Track Search]: Searches the track number during music CD playback.
- [Add Slideshow BGM]: Registers music files in the USB memory as slideshow background music (BGM).
- [Shuffle Setting]: Set to [On] to playback music files in randomized order.

Photo only

- [Slideshow Speed]: Changes the slideshow speed.
- [Slideshow Effect]: Sets the effect for slideshows.
- [Slideshow BGM]:
 - -[Off]: Turns off the function.
 - [My Music from USB]: Sets the music files registered in [Add Slideshow BGM].
 - -[Play from Music CD]: Sets the tracks in CD-DAs.
- [Change Display]: Switches between [Grid View] and [List View].
- [View Image]: Displays the selected photo.
- [Slideshow]: Plays a slideshow.
- [Rotate Left]: Rotates the photo counterclockwise by 90 degrees.
- [Rotate Right]: Rotates the photo clockwise by 90 degrees.

Settings and Adjustments

Using the Settings Displays

Select [Setup] on the home screen when you need to change the settings of the player.

The default settings are underlined.

- 1 Select **□** [Setup] on the home screen using **←**/**↑**/**↓**/**→**.
- 2 Select the setup category icon using ↑/♣, and press ENTER.



■ [Update via Internet]

Updates the player's software using available network. Make sure that the network is connected to the Internet. For details, see "Step 2: Preparing for Network Connection" (page 15).

■ [Update via USB Memory]

Updates the player's software using USB memory. Make sure that the Software Update Folder is correctly named as "UPDATE" and all the update files must be stored in this folder. The player can recognize up to 500 files/folders in a single layer including the update files/folders.



- We recommend performing the software update every 2 months or so.
- If your network condition is poor, visit http://www.sony.com/bluraysupport/ to download the latest software version and update via USB memory.

You can also get information about update functions from the website.

 Make sure to operate the player using the supplied remote when updating.

■ [Screen Reader Settings]

[Screen Reader]

[On]: Turns on the function. [Off]: Turns off the function.

[Speech Rate]

[Very Fast] / [Fast] / [Normal] / [Slow] / [Very Slow]: Sets the reading speed.

[Speech Volume]

[High] / [Medium] / [Low]: Sets the reading volume.

[Prioritize Speech Audio]

[On]: Lowers the background sound volume when the sound overlaps with the read-out speech or the auditory signal.

[Off]: Turns off the function.

[Speech Verbosity]

[High]: Read-out in detailed style. [Low]: Read-out in simplified style.



This setting works with NETFLIX service only.

■ [Enlarge]

[On]: Text is displayed in large size. [Off]: Text is displayed in normal size.

■ [Auto-Scroll Speed]

[Fast]/[Normal]/[Slow]/[Very Slow]: Sets the speed of automatic text scrolling.

■ [Accessibility Shortcut]

[On]: Turns on the shortcut in [Options] window.

[Off]: Turns off the shortcut.

[Screen Settings]

■ [TV Type]

[16:9]: Select this when connecting to a wide-screen TV or a TV with a wide mode function

[4:3]: Select this when connecting to a 4:3 screen TV without a wide mode function.

■ [Screen Format]

[Full]: Select this when connecting to a TV with a wide mode function. Displays a 4:3 screen picture in 16:9 aspect ratio even on a wide-screen TV.

[Normal]: Changes the picture size to fit the screen size with the original picture aspect ratio.

■ [DVD Aspect Ratio]

[Letter Box]: Displays a wide picture with black bands on the top and bottom.



[Pan & Scan]: Displays a full-height picture on the entire screen, with trimmed sides.



■ [Cinema Conversion Mode]

[Auto]: Normally select this. The player automatically detects whether the material is video-based or film-based, and switches to the appropriate conversion method.

[Video]: The conversion method suited for video-based material will always be selected regardless of the material.

■ [Output Video Resolution]

Normally select [Auto]. Select [Original Resolution] to output the resolution recorded on the disc. When the resolution is lower than the SD resolution, it is scaled up to the SD resolution.

■ [24p Output]

Outputs 24p video signals only when you connect a 1080/24p-compatible TV via an HDMI connection and the [Output Video Resolution] is set to [Auto] or [1080p].

[BD-ROM 24p Output]

[Auto]: Outputs 1920 × 1080p/24 Hz video signals only when connecting a 1080/24p-compatible TV using the HDMI OUT jack.

[On]: Turns on the function. [Off]: Select this when your TV is not compatible with 1080/24p video signals.

[DVD-ROM 24p Output]

[Auto]: Outputs 1920 × 1080p/24 Hz video signals only when connecting a 1080/24p-compatible TV using the HDMI OUT jack.

[Off]: Select this when your TV is not compatible with 1080/24p video signals.

[Data content 24p Output]

This function is available for playback contents stored in USB memory or data disc.

[Auto]: Outputs 1920 × 1080p/24 Hz video signals only when connecting a 1080/24p-compatible TV using the HDMI OUT jack.

[Off]: Select this when your TV is not compatible with 1080/24p video signals.

[Network content 24p Output]

This function is available for playback contents from other network, such as Home Network, Screen mirroring, etc. [Auto]: Outputs 1920 × 1080p/24 Hz video signals only when connecting a 1080/24p-compatible TV using the HDMI OUT jack.

[Off]: Select this when your TV is not compatible with 1080/24p video signals.

■ [YCbCr/RGB (HDMI)]

[Auto]: Automatically detects the connected TV type, and switches to the matching color setting.

[YCbCr (4:2:2)]: Outputs YCbCr 4:2:2 video signals.

[YCbCr (4:4:4)]: Outputs YCbCr 4:4:4 video signals.

[RGB]: Outputs RGB video signals.

■ [HDMI Deep Color Output]

[Auto]: Normally select this. [16bit]/[12bit]/[10bit]: Outputs 16bit/ 12bit/10bit video signals when the connected TV is compatible with Deep Color.

[Off]: Select this when the picture is unstable or colors appear unnatural.

■ [Pause Mode]

[Auto]: Normally select this. Dynamic moving pictures appear without blurring. [Frame]: Displays static pictures at high resolution.

) [Audio Settings]

■ [Digital Audio Output]

[Auto]: Normally select this. Outputs audio signals according to the status of the connected devices.

[PCM]: Outputs PCM signals from the DIGITAL OUT (COAXIAL)/HDMI OUT jack.

■ [DSD Output Mode]

[Auto]: Outputs DSD signals from the HDMI OUT jack when playing DSD format file. Outputs LPCM signals instead if the HDMI connected device not support DSD.

[Off]: Outputs PCM signals from the HDMI OUT jack when playing DSD format file.

■ [BD Audio MIX Setting]

[On]: Outputs the audio obtained by mixing the interactive and secondary audio to the primary audio.

[Off]: Outputs the primary audio only. Select this to output HD audio signals to an AV amplifier (receiver).

■ [Dolby D Compatible Output]

[On]: Converts DTS audio source to Dolby Digital audio by using EDID (Extended Display Identification Data). [Off]: Turns off the function.

■ [Audio DRC]

[Auto]: Performs playback at the dynamic range specified by the disc (BD-ROM only). Other discs are played back at the [On] level.
[On]: Performs playback at a standard compression level.

[Off]: No compression works. A more dynamic sound is produced.

■ [Downmix]

[Surround]: Outputs audio signals with surround effects. Select this when connecting an audio device that supports Dolby Surround (Pro Logic) or DTS Neo:6.

[Stereo]: Outputs audio signals without surround effects. Select this when connecting an audio device that does not support Dolby Surround (Pro Logic) or DTS Neo:6.

[BD/DVD Viewing Settings]

■ [BD/DVD Menu Language]

Selects the default menu language for BD-ROMs or DVD VIDEOs. Select [Select Language Code], and enter the code for your language, referring to "Language code list" (page 38).

■ [Audio Language]

Selects the default audio language for BD-ROMs or DVD VIDEOs. When you select [Original], the language given priority in the disc is selected.

Select [Select Language Code], and enter the code for your language, referring to "Language code list" (page 38).

■ [Subtitle Language]

Selects the default subtitle language for BD-ROMs or DVD VIDEOs.
Select [Select Language Code], and enter the code for your language, referring to "Language code list" (page 38).

■ [BD Hybrid Disc Playback Layer]

[BD]: Plays BD layer.
[DVD/CD]: Plays DVD or CD layer.

■ [BD Internet Connection]

[Allow]: Normally select this.

[Do not allow]: Prohibits Internet connection

■ [Delete BD Data]

Deletes data in the USB memory. All data stored in the buda folder will be erased.

[Parental Control Settings]

■ [Password]

Sets or changes the password for the Parental Control function. A password allows you to set a restriction on BD-ROM or DVD VIDEO, and Internet video playback. If necessary, you can differentiate the restriction levels for BD-ROMs, DVD VIDEOs, and Internet videos.

■ [Parental Control Area Code]

Playback of some BD-ROMs, DVD VIDEOs, or Internet videos can be limited according to the geographic area. Scenes may be blocked or replaced with different scenes. Follow the on-screen instructions and enter your four-digit password.

■ [BD Parental Control] / [DVD Parental Control] / [Internet Video Parental Control]

By setting Parental Control, scenes can be blocked or replaced with different scenes. Follow the on-screen instructions and enter your four-digit password.

■ [Internet Video Unrated]

[Allow]: Allows the playback of unrated Internet videos.

[Block]: Blocks the playback of unrated Internet videos.

[System Settings]

■ [OSD Language]

Selects on-screen display language for your player.

■ [Closed Caption Settings]

Customizes the format of Closed Caption displayed. Select [Original] in [Text Settings] setting to disable.

■ [HDMI Settings]

By connecting Sony components that are compatible with HDMI functions with a High Speed HDMI Cable, operation is simplified.

[Control for HDMI]

[On]: The following BRAVIA Sync features are available:

- -One-Touch Play
- -System Power-Off
- Language Follow

[Off]: Turns off the function.



For details, refer to the instruction manual supplied with the TV or components.

[Linked to TV-off]

[Valid]: Automatically turns off the player when the connected TV enters standby mode (BRAVIA Sync). [Invalid]: Turns off the function.

■ [Quick Start Mode]

[On]: Shortens the startup time when turning on the player.

[Off]: Reduces standby power consumption.

■ [Auto Display]

[On]: Automatically displays information on the screen when changing the viewing titles, picture modes, audio signals, etc.
[Off]: Displays information only when you press DISPLAY.

■ [Software Update Notification]

[On]: Sets the player to inform you of newer software version information (page 22).

[Off]: Turns off the function.

■ [Device Name] (BDP-S3700/BX370 only)

Displays the player's name. The player's name can be changed.

■ [System Information]

Displays the player's software version information and the MAC address.

■ [Software License Information]

Displays information about the Software License.



■ [Internet Settings]

Connect the player to the network beforehand. For details, see "Step 2: Preparing for Network Connection" (page 15).

[Wired Setup] (BDP-S3700/BX370 only): Select this when you connect to a broadband router using a LAN cable. [Wireless Setup] (BDP-S3700/BX370 only): Select this when you use the wireless LAN that is built into the player for wireless network connection.



For further details, visit the following website and check the FAQ contents: http://www.sony.com/bluraysupport/

■ [Network Connection Status]

Displays the current network status.

■ [Network Connection Diagnostics]

Checks for the proper network connection by running the network diagnostics.

■ [Screen mirroring RF Setting] (BDP-S3700/BX370 only)

[Auto]: Sets the RF (Radio Frequency) channel band automatically for Screen mirroring connection.
[CH 1]/[CH 6]/[CH 11]: Sets CH 1/CH 6/CH 11 as priority.

■ [Connection Server Settings] (BDP-S3700/BX370 only)

Sets whether or not to display the connected server.

■ [Auto Home Network Access Permission] (BDP-S3700/BX370 only)

[On]: Allows automatic access from newly detected DLNA controllercompatible product.

[Off]: Turns off the function.

■ [Home Network Access Control] (BDP-S3700/BX370 only)

Displays a list of DLNA controllercompatible products and sets whether or not to accept commands from the controllers in the list.

■ [Registered Remote Devices] (BDP-S3700/BX370 only)

Displays a list of your registered remote devices.

■ [Remote Start]

[On]: Allows you to turn on the player by a device linked via a network. [Off]: Turns off the function.

[Easy Network Settings]

Select [Easy Network Settings] to specify the network settings. Follow the on-screen instructions.

[Resetting]

■ [Reset to Factory Default Settings]

Resets the player settings to the factory default by selecting the group of settings. All the settings within the group will be reset.

■ [Initialize Personal Information]

Erases your personal information stored in the player.



If you dispose, transfer or resell this unit, please delete all Personal Information for security purposes. Please take the appropriate measures such as logging out after using a network service.

Additional Information

Troubleshooting

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult a Service center.

Picture

There is no picture or the picture is not output correctly.

- → Check that all the connecting cables are securely connected (page 14).
- → Switch the input selector on your TV to display the signal from the player.
- → Reset the [Output Video Resolution] to the lowest resolution by pressing
 ■ STOP, HOME, and then POP UP/ MENU button on the remote.
- → Try the following: ①Turn the player off and on again. ②Turn the connected equipment off and on again.
 ③Disconnect and then reconnect the HDMI cable.
- → The HDMI OUT jack is connected to a DVI device that does not support copyright protection technology.
- Check the [Output Video Resolution] settings in [Screen Settings] (page 23).
- → For BD-ROMs/DVD-ROMs/Data content/Network content, check the [24p Output] settings in [Screen Settings] (page 23).

The display language on the screen switches automatically when connected to the HDMI OUT jack.

→ When [Control for HDMI] in [HDMI Settings] is set to [On] (page 26), the display language on the screen automatically switches according to the language setting of the connected TV (if you change the setting on your TV, etc.).

Sound

There is no sound or the sound is not output correctly.

- → Check that all the connecting cables are securely connected (page 14).
- → Switch the input selector on your AV amplifier (receiver) so that the audio signals of the player are output from your AV amplifier (receiver).
- → If the audio signal does not come through the DIGITAL OUT (COAXIAL)/HDMI OUT jack, check the audio settings (page 24).
- → For HDMI connections, try the following: ①Turn the player off and on again. ②Turn the connected equipment off and on again.
 ③Disconnect and then reconnect the HDMI cable.
- → For HDMI connections, if the player is connected to a TV through an AV amplifier (receiver), try connecting the HDMI cable directly to the TV. Refer also to the instruction manual supplied with the AV amplifier (receiver).
- → The HDMI OUT jack is connected to a DVI device (DVI jacks do not accept audio signals).
- → The device connected to the HDMI OUT jack does not support the audio format of the player. Check the audio settings (page 24).

The HD Audio (Dolby Digital Plus, Dolby TrueHD, DTS-HD High Resolution Audio, and DTS-HD Master Audio) is not output by bitstream.

- → Set [BD Audio MIX Setting] in [Audio Settings] to [Off] (page 25).
- → Check that the connected AV amplifier (receiver) is compatible with each HD Audio format.

The interactive audio is not output.

→ Set [BD Audio MIX Setting] in [Audio Settings] to [On] (page 25).

Message Code 3 [Audio outputs temporarily muted. Do not adjust the playback volume. The content being played is protected by Cinavia and is not authorized for playback on this device. For more information, see http://www.cinavia.com. Message Code 3] appears on the screen when playing a disc.

→ The audio track of the video that you are playing contains a Cinavia code indicating that it is an unauthorized copy of professionally-produced content (page 5).

Disc

The disc does not play.

- → The disc is dirty or skewed.
- → The disc is upside down. Insert the disc with the playback side facing down.
- → The disc has a format that cannot be played back by this player (page 34).
- → The player cannot play a recorded disc that is not correctly finalized.
- → The region code on the BD or DVD does not match the player.

USB device

The player does not detect a USB device connected to the player.

- → Make sure that the USB device is securely connected to the USB jack.
- → Check if the USB device or a cable is damaged.
- → Check if the USB device is on.
- → If the USB device is connected via a USB hub, connect the USB device directly to the player.

Internet Streaming

The picture/sound is poor/certain programmes display a loss of detail, especially during fast-motion or dark scenes.

→ Picture/sound quality may be improved by changing the connection speed. Recommended connection speed is of at least 2.5 Mbps for standard definition video (10 Mbps for high definition video).

There is no options menu during Internet streaming.

→ Options menu is not available during Internet streaming.

Network connection

The player cannot connect to the network

→ Check the network connection (page 15) and the network settings (page 27).

The PC cannot connect to the Internet after [Wi-Fi Protected Setup™ (WPS)] is performed (BDP-S3700/BX370 only).

→ The wireless settings of the router may change automatically if you use the Wi-Fi Protected Setup function before adjusting the settings of the router. In this case, change the wireless settings of your PC accordingly.

You cannot connect the player to the wireless LAN router (BDP-S3700/BX370 only).

- Check if the wireless LAN router is on.
- → Depending on the surrounding environment, such as the wall material, radio wave receiving condition, or obstacles between the player and the wireless LAN router, the communication distance may be shortened. Move the player and the wireless LAN router closer to each other
- → Devices that use a 2.4 GHz frequency band, such as a microwave, Bluetooth, or digital cordless device, may interrupt the communication. Move the player away from such devices, or turn off such devices.

The desired wireless router do not appear in the wireless network list (BDP-S3700/BX370 only).

→ Press RETURN to return to the previous screen, and try wireless setup again. If the desired wireless router is still not detected, select [New connection registration] to perform [Manual registration].

The message [A new software version is available. Please go to the "Setup" section of the menu and select "Software Update" to perform the update.] appears on the screen when turning the player on.

→ See [Software Update] (page 22) to update the player to a newer software version

Control for HDMI (BRAVIA Sync)

The [Control for HDMI] function does not work (BRAVIA Sync).

- → Check that [Control for HDMI] in [HDMI Settings] is set to [On] (page 26).
- → If you change the HDMI connection, turn the player off and on again.
- → If power failure occurs, set [Control for HDMI] in [HDMI Settings] to [Off], then set [Control for HDMI] in [HDMI Settings] to [On] (page 26).
- Check the following and refer to the instruction manual supplied with the component.
 - the connected component is compatible with the [Control for HDMI] function.
 - the connected component's setting for the [Control for HDMI] function is correct.

- → When you connect the player to a TV through an AV amplifier (receiver),
 - if the AV amplifier (receiver) is not compatible with the [Control for HDMI] function, you may be unable to control the TV from the player.
 - if you change the HDMI connection, disconnect and reconnect the AC adaptor, or a power failure occurs, try the following: ①Switch the input selector of the AV amplifier (receiver) so that the picture from the player appears on the TV screen. ②Set [Control for HDMI] in [HDMI Settings] to [Off], then set [Control for HDMI] in [HDMI Settings] to [On] (page 26). Refer to the instruction manual supplied with the AV amplifier (receiver).

The System Power-Off function does not work (BRAVIA Sync).

→ Check that [Control for HDMI] and [Linked to TV-off] in [HDMI Settings] are set to [On] and [Valid] (page 26).

Others

Playback does not start from the beginning of content.

→ Press OPTIONS, and select [Play from beginning].

Playback does not start from the resume point where you last stopped playing.

- → The resume point may be cleared from memory depending on the disc when
 - you open the disc tray.
 - you disconnect the USB device.
 - you play other content.
 - you turn off the player.

Message Code 1 [Playback stopped. The content being played is protected by Cinavia and is not authorized for playback on this device. For more information, see http://www.cinavia.com. Message Code 1] appears on the screen when playing a disc.

→ The audio track of the video that you are playing contains a Cinavia code indicating it was intended for presentation using professional equipment only and is not authorized for playback by consumers (page 5).

The disc tray does not open and you cannot remove the disc even after you press ♠.

- ➤ While the player is turned on, press STOP, HOME, and then TOP MENU button on the remote to unlock the tray and disable the Child Lock (page 9).

The message [[EJECT] Key is currently unavailable.] appears on the screen after ♠ is pressed.

Contact a Service center.

The player does not respond to any button.

Moisture has condensed inside the player (page 4).

Specifications

Specifications and design are subject to change without notice.

System

Laser: Semiconductor laser

Inputs and outputs

(Jack name:

Jack type/Output level/Load impedance)

DIGITAL OUT (COAXIAL):

Phono jack/0.5 Vp-p/75 ohms

HDMI OUT: HDMI 19-pin standard connector

LAN (100): 100BASE-TX Terminal

USB jack Type A (For connecting a USB memory, memory card reader, digital still camera, and digital video camera)*

 Do not use for power charging purposes.

DC IN:

BDP-S3700/BX370: 12 V DC, 650 mA BDP-S1700: 12 V DC, 600 mA

Wireless (BDP-S3700/BX370 only)

Wireless LAN standard:

Protocol IEEE 802.11 b/g/n Frequency range:

requency range:

2.4 GHz band: Channels 1-11 Modulation: DSSS and OFDM

General

Power requirements:

12 V DC with AC adaptor Rating: Input 120 V AC, 60 Hz Power consumption (when using AC adaptor):

BDP-S3700/BX370: 9.2 W BDP-S1700: 8.5 W Dimensions (approx.):

230 mm × 194 mm × 39 mm

(9 ¹/₈ in. × 7 ³/₄ in. × 1 ⁹/₁₆ in.)

(width/depth/height)
incl. projecting parts

Mass (approx.): 0.8 kg (1 lb 13 oz)

Operating temperature:

5 °C to 35 °C (41 °F to 95 °F)

Operating humidity: 25 % to 80 %

Supplied accessories

- High Speed HDMI Cable (1)*
- AC adaptor (AC-M1210UC) (1)
- Remote commander (remote) (1)
- Size AAA (R03) batteries (2)
- * Supplied for BDP-BX370

Playable discs

Blu-ray Disc*1	BD-ROM BD-R*2/BD-RE*2
DVD*3	DVD-ROM DVD-R/DVD-RW DVD+R/DVD+RW
CD *3	CD-DA (Music CD) CD-ROM CD-R/CD-RW

*1 Since the Blu-ray Disc specifications are new and evolving, some discs may not be playable depending on the disc type and the version.

The audio output differs depending on the source, connected output jack, and selected audio settings.

**2 BD-RE: Ver.2.1 BD-R: Ver.1.1, 1.2, 1.3 including organic pigment type BD-R (LTH type) The BD-Rs recorded on a PC cannot be played if postscripts are recordable.

*3 A CD or DVD disc will not play if it has not been correctly finalized. For more information, refer to the instruction manual supplied with the recording device.

Discs that cannot be played

- BDs with cartridge
- BDXLs
- DVD-RAMs
- HD DVDs
- · DVD Audio discs
- PHOTO CDs
- Data part of CD-Extras
- Super VCDs
- Audio material side on DualDiscs
- A disc recorded in a color system other than NTSC, such as PAL (this player conforms to the NTSC color system).

Note on Discs

This product is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some of the music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard, therefore, these discs may not be playable by this product.

Note on playback operations of BDs/

Some playback operations of BDs/ DVDs may be intentionally set by software producers. Since this player plays BDs/DVDs according to the disc contents the software producers designed, some playback features may not be available.

Note about double-layer BDs/DVDs

The playback pictures and sound may be momentarily interrupted when the layers switch.

Region code (BD-ROM/DVD VIDEO only)

Your player has a region code printed on the bottom of the unit and will only play BD-ROMs/DVD VIDEOs labeled with identical region codes or



Playable types of files

Video

Codec	Container	Extension	With Audio	
MPEG-1 Video*1	PS	.mpg, .mpeg	Dolby Digital, DTS, LPCM, MPEG	
	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis	
	PS*3	.mpg, .mpeg	Dolby Digital, DTS, LPCM, MPEG	
MPEG-2 Video*2	TS*4	.m2ts, .mts	Dolby Digital, DTS, LPCM, MPEG, AAC	
Video	MKV*1	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis	
V :1	AVI	.avi	Dolby Digital, LPCM, WMA9, MP3	
Xvid	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis	
	MKV*1	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis	
	MP4*1	.mp4, .m4v	AAC	
	TS*1	.m2ts, .mts	Dolby Digital, DTS, LPCM, MPEG, AAC	
MPEG4/AVC*5	Quick Time*6	.mov	Dolby Digital, LPCM, AAC, MP3	
	FLV*6	.flv, .f4v	LPCM, AAC, MP3	
	3gpp/ 3gpp2*6	.3gp, .3g2, .3gpp, .3gp2	AAC	
VC1*1	TS	.m2ts, .mts	Dolby Digital, DTS, LPCM, MPEG, AAG	
	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis	
WMV9*1*7	ASF	.wmv, .asf	WMA9, WMA 10 Pro	
	MKV	.mkv	Dolby Digital, LPCM, AAC, MP3, Vorbis	
Motion JPEG*6	Quick Time	.mov	Dolby Digital, LPCM, AAC, MP3	
	AVI	.avi	Dolby Digital, LPCM, AAC, MP3	

Format	
AVCHD (Ver.2.0)*1*8*9	

Music

Codec	Extension	
MP3 (MPEG-1 Audio Layer III)*10	.mp3	
AAC/HE-AAC*1*10	.m4a, .aac*6	
WMA9 Standard*1	.wma	
WMA 10 Pro*11	.wma	
LPCM*10	.wav	
FLAC*1	.flac, .fla	
Dolby Digital*6*10	.ac3	
DSF*1	.dsf	
DSDIFF*1*12	.dff	
AIFF*1	.aiff, .aif	
ALAC*1	.m4a	
Vorbis	.ogg	
Monkey's Audio	.ape	

Photo

Format	Extension
JPEG	.jpeg, .jpg, .jpe
PNG	.png*13
GIF	.gif*13
ВМР	.bmp*6*14

- *1 The player may not play this file format on a DLNA server (BDP-S3700/BX370 only).
- *2 The player can only play standard definition video on a DLNA server (BDP-S3700/BX370 only).
- *3 The player does not play DTS format files on a DLNA server (BDP-S3700/BX370 only).
- *4 The player can only play Dolby Digital format files on a DLNA server (BDP-S3700/BX370 only).
- *5 The player can support AVC up to Level 4.1.

- *6 The player does not play this file format on a DLNA server (BDP-S3700/BX370 only).
- *7 The player can support WMV9 up to Advance Profile.
- *8 The player can support frame rate up to 60 fps.
- *9 The player plays AVCHD format files that are recorded on a digital video camera, etc. The AVCHD format disc will not play if it has not been correctly finalized.
- *10 The player can play ".mka" files. (This file cannot be played on a DLNA server (BDP-S3700/BX370 only).)
- *11 The player does not play coded file such as Lossless.
- *12 The player does not play DST encoded files.
- *13 The player does not play animated PNG or animated GIF files.
- *14 The player does not support 16bit BMP

6

- Some files may not play depending on the file format, file encoding, recording condition, or DLNA server condition (BDP-S3700/BX370 only).
- Some files edited on a PC may not play.
- Some files may not be able to perform fast forward or fast reverse function.
- The player does not play coded files such as DRM.
- The player can recognize the following files or folders in BDs, DVDs, CDs and USB devices:
 - up to folders in the 9th layer, including the root folder.
 - up to 500 files/folders in a single layer.
- The player can recognize the following files or folders stored in the DLNA server (BDP-S3700/BX370 only):
 - up to folders in the 19th layer.
 - up to 999 files/folders in a single layer.
- · The player can support frame rate:
 - up to 60 fps for AVCHD (MPEG4/AVC) only.
 - up to 30 fps for other video codecs.
- The player can support video bit rate up to 40 Mbps.

- Some USB devices may not work with this player.
- The player can recognize Mass Storage Class (MSC) devices (such as flash memory or an HDD), Still Image Capture Device (SICD) class devices and 101 keyboard.
- To avoid data corruption or damage to the USB memory or devices, turn off the player when connecting or removing the USB memory or devices.
- The player may not play high bit rate video files on DATA CDs smoothly. It is recommended to play such files using DATA DVDs or DATA BDs.

About wireless LAN security (BDP-S3700/BX370 only)

Since communication via the wireless LAN function is established by radio waves, the wireless signal may be susceptible to interception. To protect wireless communication, this player supports various security functions. Be sure to correctly configure the security settings in accordance with your network environment.

◆ No Security

Although you can easily make settings, anyone can intercept wireless communication or intrude into your wireless network, even without any sophisticated tools. Keep in mind that there is a risk of unauthorized access or interception of data.

♦ WEP

WEP applies security to communications to prevent outsiders from intercepting communications or intruding into your wireless network. WEP is a legacy security technology that enables older devices, which do not support TKIP/AES, to be connected.

◆ WPA-PSK (TKIP), WPA2-PSK (TKIP)

TKIP is a security technology developed to correct the deficiencies of WEP. TKIP assures a higher security level than WEP.

◆ WPA-PSK (AES), WPA2-PSK (AES)

AES is a security technology that uses an advanced security method that is distinct from WEP and TKIP.

AES assures a higher security level than WEP or TKIP.

Notes About the Discs

 To keep the disc clean, handle the disc by its edge. Do not touch the surface.



Dust, fingerprints, or scratches on the disc may cause it to malfunction.

- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car.
- After playing, store the disc in its case.
- Clean the disc with a cleaning cloth. Wipe the disc from the center out.
- Do not use solvents such as benzine, thinner, commercially available disc/ lens cleaners, or anti-static spray intended for vinyl LPs.

- If you have printed the disc's label, dry the label before playing.
- Do not use the following discs.
 - A lens cleaning disc.
 - A disc that has a non-standard shape (e.g., card, heart).
 - A disc with a label or sticker on it.
 - A disc that has cellophane tape or sticker adhesive on it.
- Do not resurface the playing side of a disc to remove surface scratches.

Language code list

For details, see [BD/DVD Viewing Settings] (page 25).

The language spellings conform to the ISO 639: 1988 (E/F) standard.

Code	Language		
1027	Afar	1028	Abkhazian
1032	Afrikaans	1039	Amharic
1044	Arabic	1045	Assamese
1051	Aymara	1052	Azerbaijani
1053	Bashkir	1057	Byelorussian
1059	Bulgarian	1060	Bihari
1061	Bislama	1066	Bengali
1067	Tibetan	1070	Breton
1079	Catalan	1093	Corsican
1097	Czech	1103	Welsh
1105	Danish	1109	German
1130	Bhutani; Dzongkha	1142	Greek
1144	English	1145	Esperanto
1149	Spanish	1150	Estonian
1151	Basque	1157	Persian
1165	Finnish	1166	Fiji
1171	Faroese	1174	French
1181	Frisian	1183	Irish
1186	Scots Gaelic	1194	Galician
1196	Guarani	1203	Gujarati
1209	Hausa	1217	Hindi
1226	Croatian	1229	Hungarian
1233	Armenian	1235	Interlingua
1239	Interlingue	1245	Inupiak
1248	Indonesian	1253	Icelandic
1254	Italian	1257	Hebrew
1261	Japanese	1269	Yiddish
1283	Javanese	1287	Georgian
1297	Kazakh	1298	Greenlandic; Kalaallisut
1299	Cambodian; Khmer	1300	Kannada
1301	Korean	1305	Kashmiri
1307	Kurdish	1311	Kirghiz
1313	Latin	1326	Lingala
1327	Laothian; Lao	1332	Lithuanian
1334	Latvian	1345	Malagasy
1347	Maori	1349	Macedonian
1350	Malayalam	1352	Mongolian
1353	Moldavian	1356	Marathi

Code Language 1357 Malav 1358 Malese: Maltese 1363 Burmese 1365 Nauru 1369 Nepali 1376 Dutch 1379 Norwegian 1393 Occitan 1403 1408 Oriva Oromo 1417 Puniabi: 1428 Polish Paniabi[°] 1435 Pashto: 1436 Portuguese Pushto 1463 Quechua 1481 Rhaeto-Romance 1482 Kirundi: Rundi 1483 Romanian 1489 Russian 1491 Kinvarwanda 1495 Sanskrit 1498 Sindhi 1501 Sangho: 1502 Serbo-Sango Croatian Singhalese; 1503 1505 Slovak Sinhalese 1506 Slovenian 1507 Samoan 1508 Shona 1509 Somali 1511 Albanian 1512 Serbian 1513 Siswati: Swati 1514 Sesotho: Sotho southern 1515 Sundanese 1516 Swedish 1517 Swahili 1521 Tamil 1525 Telugu 1527 Tajik 1528 Thai 1529 Tigrinya 1531 Turkmen 1532 Tagalog 1534 Setswana: 1535 Tonga; Tonga islands Tswana 1538 Turkish 1539 Tsonga 1540 Tatar 1543 Twi 1557 Ukrainian 1564 Urdu 1572 Uzbek 1581 Vietnamese Volapük 1587 1613 Wolof 1632 Xhosa 1665 Yoruba 1684 Chinese 1697 Zulu 1703 Not specified

Parental control/area code

For details, see [Parental Control Area Code] (page 26).

Code Area						
2044	Argentina	2047	Australia			
2046	Austria	2057	Belgium			
2070	Brazil	2090	Chile			
2092	China	2093	Colombia			
2115	Denmark	2165	Finland			
2174	France	2109	Germany			
2200	Greece	2219	Hong Kong			
2248	India	2238	Indonesia			
2239	Ireland	2254	Italy			
2276	Japan	2304	Korea			
2333	Luxembourg	2363	Malaysia			
2362	Mexico	2376	Netherlands			
2390	New Zealand	2379	Norway			
2427	Pakistan	2424	Philippines			
2428	Poland	2436	Portugal			
2489	Russia	2501	Singapore			
2149	Spain	2499	Sweden			
2086	Switzerland	2543	Taiwan			
2528	Thailand	2184	United Kingdom			
2586	Vietnam					

The software of this player may be updated in the future. To download any available updates and the Operating Instructions with advanced features, please visit the following website:

http://www.sony.com/bluraysupport/













