

SYLVANIA

SDVD7751



USER'S MANUAL




SYLVANIA is a registered trademark of OSRAM SYLVANIA INC. used under license.

Table Of Contents

Safety Precaution	1
Package	3
Main Features	3
Main Unit Controls	4
System Connection	6
Basic operation	13
System Setup	16
Specification	20
Troubleshooting	21
Warranty Card	23

 Safety Precaution

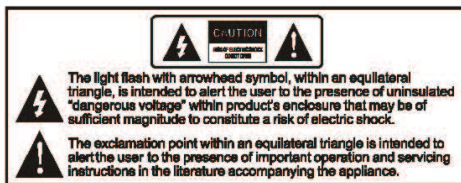

Caution: use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

- 1) Please read the instruction manual carefully and follow all the requirements of safe operation to operate the device.
- 2) Do not use or leave the device in direct sunlight or a hot environment such as a vehicle etc. that is in hot environment. Overheating can damage the device
- 3) Device should be protected from any physical impact or damage and care should be taken not to drop the device
- 4) The supplied strap intends to hold the device only, not subject to extra force.
- 5) Only use the factory supplied charger.
- 6) Do not disassemble, puncture, crush or expose your device to temperatures above 40 ° C / 104 ° F
- 7) Keep your device away from fire or water.
- 8) Keep your device from moisture and extreme temperatures.
- 9) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 10) Unplug this unit during lightning storms or when unused for long time.
- 11) About Cleaning: Unplug the system, use only wet cloth to clean. Do not use liquid detergent or aerosol.
- 12) Refer all servicing to qualified service personnel, servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, exposed to moisture, does not operate normally. Don't try to repair the machine by yourself because of the danger of high voltage and electric shock.
- 13) Do not use irregular shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction.

- 14) BD type disc not supported
- 15) Play only with proper discs in good condition, clean and no scratch.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Package

DVD player	1
DC+Audio/Video cable	1
AC power Wall adapter	1
DC power car adapter	1
User Manual	1
Mounting Straps	2

 
Main Features

- High brightness color 7" LCD screen
- Compatible with disc of DVD, MP3, CD, JPEG etc.

Note: This unit is NOT compatible with Blu-ray.

- Built-in stereo speaker
- Support PAL/NTSC system
- Support Multi-language OSD, speed forward/backward, repeat function
- Text to speech


Main Unit Controls

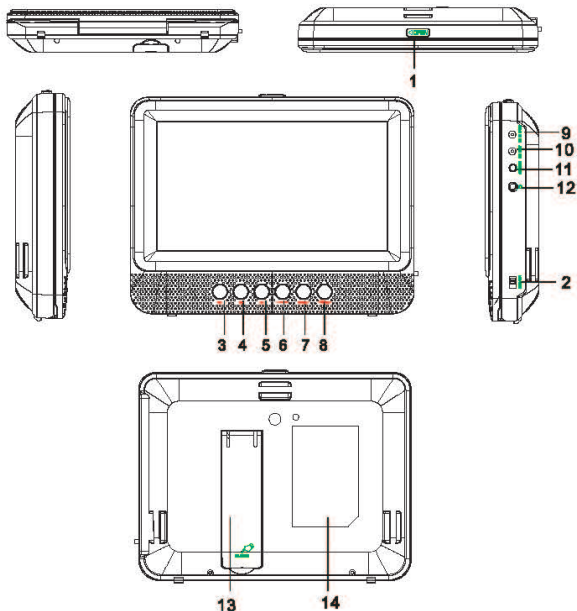

- 1. Open knob
- 2. Power ON/OFF switch
- 3. ◀
- 4. ▶
- 5. ⏮
- 6. Function
- 7. ◀/VOL-
- 8. ▶/VOL+

- 9. DC IN 9-12V
- 10. DC OUT
- 11. AV OUT
- 12. Earphone jack
- 13. Bracket
- 14. Rating Label Position

 Monitor View

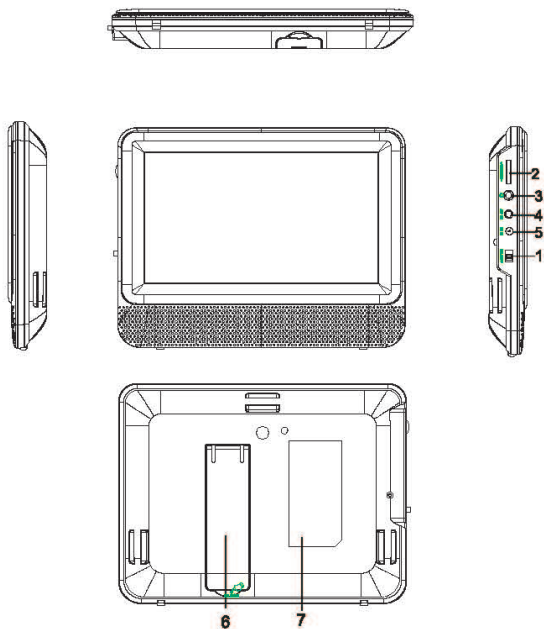


- 1. Power ON/OFF
- 2. Volume knob
- 3. Earphone jack
- 4. AV IN

- 5. DC IN
- 6. Bracket
- 7. Rating Label Position


System Connection

Powering And Installation

 Plug one end of the AC power Wall adapter into the DC IN 12V jack on the right of the machine, then plug the other end into the AC power receptacle. Please refer to the following illustration.

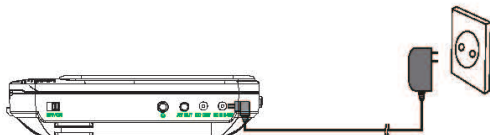

 If using DC power car adapter to connect to the power: Plug one end of the DC power car adapter into the DC IN 12V jack on the unit, plug the other end into the car cigarette lighter socket. See illustration below.

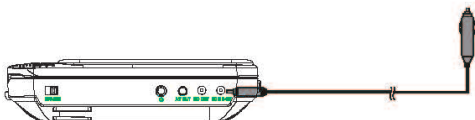

Note:

1. DC power car adapter is available to use only when the car cigarette lighter with DC 12V negative grounding.
2. The mains plug is used as the disconnect device, the disconnect device should remain readily operable.

 
Connecting To The Monitor

The unit can also be connected to the external LCD monitor.

Connect the unit to power by AC power Wall adapter or DC power car adapter .

Then connect the unit DC OUT jack to DC IN 12V Jack of the LCD Monitor by a DC/AV cable. Also use this DC/AV cable to connect the AV OUT jack of the unit to AV IN jack of the Monitor.

Please refer to the illustration below.

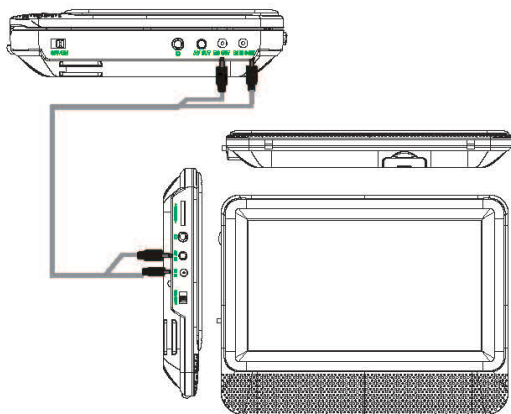

In Car Installation

1. Fit the straps to the DVD Player / Monitor as required.

Please install the units with strap A (long)
and strap B (short) together.

Front



Back



A

Front

Back



 
 
B

Front

Back



Turn the player around so the backs are facing you.

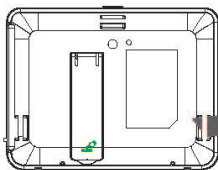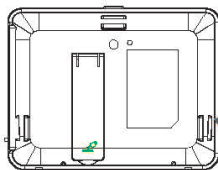



Back

A

Back

A

  
Strap A through the unit from right clip

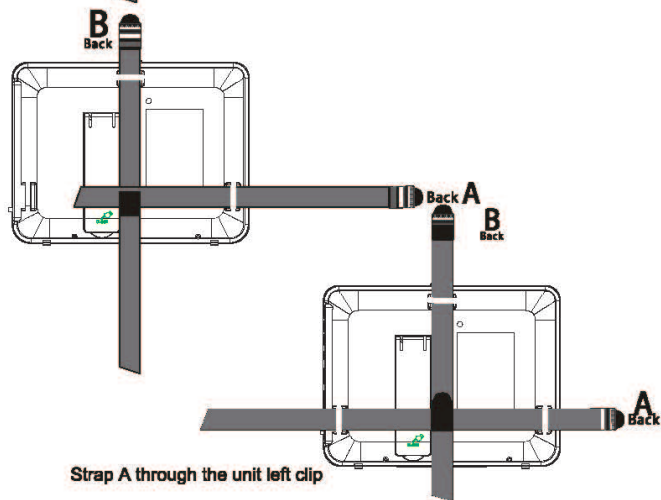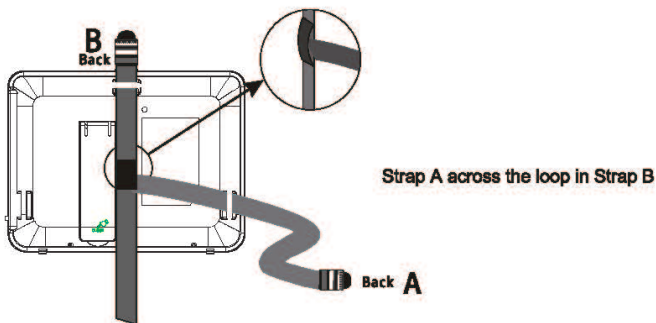


Suggestion: the buckle about 3CM from the unit edge to avoid the head hitting the head

2. Fitting the straps to the headrest.

 a. Fitting the straps to the headrest.

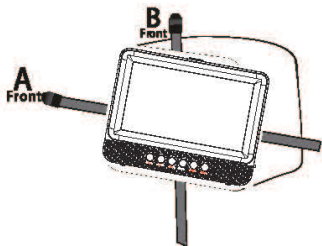

 Fit the straps around the headrest and engage the 2 trident clips. Ensure clips are securely fastened.

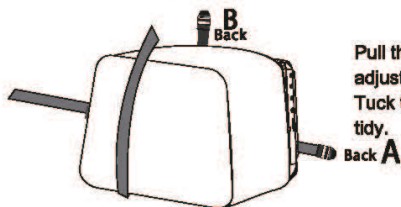


Pull the straps tight using the adjustment. Tuck the loose ends into the strap tidy.

The way strap through the buckle

Buckle back



 The end of the strap through from the second hole of buckle back

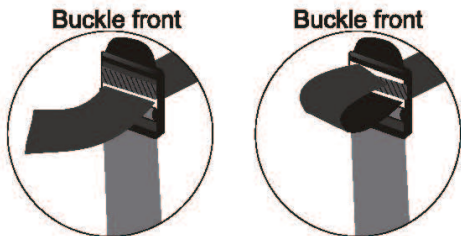


Turn to buckle front, the end of strap through from first hole

Finally , you can adjust the strap length to fit your car headrest


Note :Due different car with different headrest , small or big, so the rest strap length will be different .

NOTE:

 The supplied strap intends to hold the device only, not subject to extra force. Be sure to complete the installation then use the units in the car. For units installation is recommended that the DVD Player is on the LEFT headrest, to ensure a neat cable run to the monitor, as shown below:

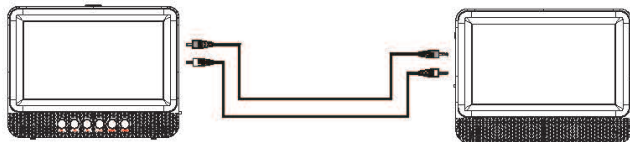

Connecting With External Speaker

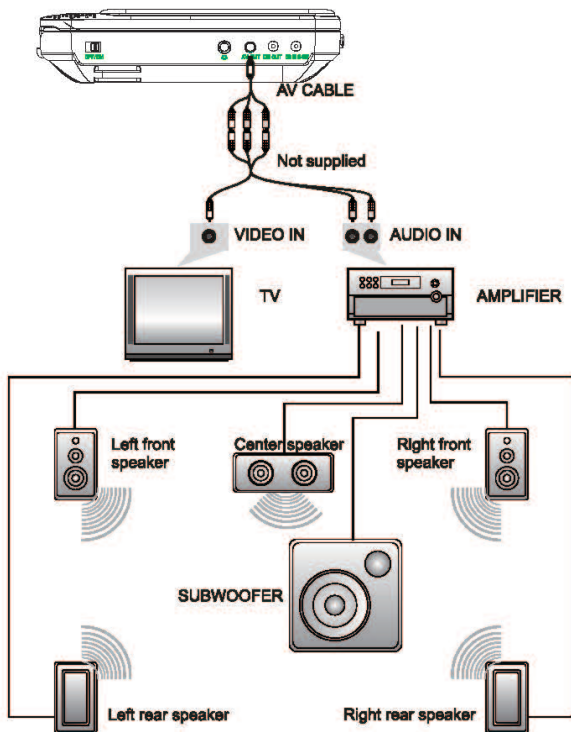 

Note: There is no 5.1 channel in the unit, however, after connecting to APM it is available to output audio in 5.1 channel.

Basic Operation

Playing disc of DVD, CD, MP3



1. Connect the unit to the power;
2. Open the unit and adjust the monitor to the best position for viewing.
3. Turn on the unit by sliding the ON/OFF switch to ON.
4. Open the disc door and insert a disc into the door with the label side facing up.
5. Close the disc door. The unit will load the disc and start playing.
6. During playback, press "▶||" to pause; press it again to resume playback.
7. When playing disc of DVD, CD, Press "▶▶", the unit will search forward. Press it repeatedly, the unit will play at 2, 4, 8, 16, 32 times of speed. press "◀◀", the unit will search backward. Press it repeatedly, the unit will play at 2, 4, 8, 16, 32 times of speed.
8. When the playing is finished, please turn off the power by sliding ON/OFF switch to OFF.

Virtual Remote Operation

1. Press "FUNCTION " button when disc is playing, you will see a virtual remote control as below.
2. The virtual key is shown on the left of the menu, and the current playback status is displayed on the right.
3. Use the ◀◀/▶▶/◀◀/▶▶ button to choose the icon, when the icon is selected, you can see the description at the bottom.
4. Press ▶|| button, the selected virtual key will be activated, "▶|| =Selected function" icon will be shown at top left for 10 seconds, in these 10 seconds you just need to press ▶|| button to change the style of the function. If the icon disappear, the ▶|| key will not work. (For Search, Return, Mute, the icon won't be shown).



5. You can also press "FUNCTION" button to close virtual remote menu without any operation. The player will resume playing after the menu exit.

Note:

1. When the disc is in the submenu, press the "FUNCTION" key can go back the title menu.
2. Stop or no disc state, the "FUNCTION" is invalid.

Virtual Remote Operation

1. SRH (Search): Press the "SRH" key, you can see the number bar below, Use left/right key to move the cursor, press ok to confirm, when playing DVD, you can change the chapter and the title, press the "T/C" icon change the item you want to change. When playing CD, you can select the track.

Note: To select the title, you need to enter two numbers.

0 1 2 3 4 5 6 7 8 9 OK T/C

2. M (Menu): to enter menu root.
3. ZOOM: When playing DVD discs, you can zoom in, press the "ZOOM" button and ok button to change the image size according the following sequence: x2 x3 x4, when playing JPEG file, you can zoom in and zoom out, press the "ZOOM" button and ok button to change the image size according the following sequence: 100% 125% 150% 200% 75% 50%.
4. TT (Title): to display title information.
5. ADO (Audio): to select audio language.
6. SUB (Subtitle): to select subtitle language when playing DVD disc.
7. OSD: Display the disc information during playing DVD/CD. Such as elapsed time and remaining time.
8. ↺ (Repeat): When playing disc of DVD/CD/MP3, you can change the repeat style by press repeat button. For different type of disc, it change according different sequence.

DVD: ↺ Chapter → ↺ Title → ↺ All → Repeat off
MP3: ↺ One → ↺ Folder → Repeat off
CD: ↺ Track → ↺ All → Repeat off

9. Slow: You can press slow key to change the playing speed slowly during playing DVD. Then press **⏮** repeatedly to change the playback speed according the following sequence: 1/2 1/4 1/8 1/16.
10. **↵** (Return): to return to the menu.
11. **🔇** (MUTE): to turn mute.
12. Angle: When playing a DVD disc with multi-angles, press "Angle" button and **⏮** button to change the display angle.

Note: The function is available only for disc with multi-angle.

Playing JPEG File

1. Place a JPEG disc into the tray,the unit will start reading and playing.
2. Press "**⏮ ⏭**" and **⏮** button to select a JPEG file from the menu.
3. Press "**⏮ ⏭**" to rotate the picture clockwise.
4. Press "**⏭**" to reverse the picture horizontally and press "**⏮**" to reverse the picture vertically.

Function operation:

Press "FUNCTION" key you will see the toolbar as below:



Press the **⏮/⏭** to move the cursor to select functions.

Press "**⏭**" to select the function.

⏮ : Return, to return to the main menu.


⏭ : To repeat one, repeat all.

🔍 :To zoom in/out the image during playback.

Press "FUNCTION" to exit the toolbar.

Play MP3 File

1. Place a MP3 disc into the disc door.
2. Press "◀▶" to select the file; Press ▶| button to play the file selected.

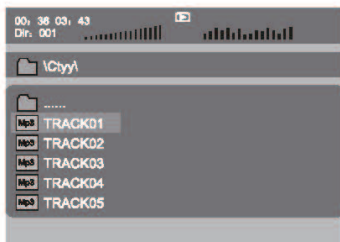 

Function operation:

Press "FUNCTION" then you will see the toolbar as below:



Press the ◀/▶ to move the cursor to select functions,

Press the number key to select the track.


Press "▶|I" to select the function.

🔇 : MUTE, to turn mute.

🔄 : To select repeat one, repeat folder, repeat off.

Press "FUNCTION" to exit the toolbar

 System Setup

	<p>When no disc, press function button, the main menu will be displayed on the screen. In the General Setup Page, Press ▶▶ button to highlight this item. Press ▶ I button to access. Press ◀◀▶▶ button to select the setting. Press ▶ I button to confirm your selection. Press ◀◀ button to exit.</p>
--	---

General Setup Page

<div>General Setup</div> <table><tr><td>TV Display</td><td>Wide</td><td>Normal/PS</td></tr><tr><td>Angle Mark</td><td>On</td><td>Normal/LB</td></tr><tr><td>OSD Lang</td><td>ENG</td><td>Wide</td></tr><tr><td>Screen Saver</td><td>On</td><td></td></tr><tr><td>Text to Speech</td><td>Off</td><td></td></tr></table> <div>▲ ▼ :Move ◀ :Return ▶ :Entry</div>	TV Display	Wide	Normal/PS	Angle Mark	On	Normal/LB	OSD Lang	ENG	Wide	Screen Saver	On		Text to Speech	Off		TV display: Enter this option, user can set screen display format (Normal/PS, Normal/LB, Wide) The default is "Wide". Note: ☆ The function depends on the display ratio with which the DVD disc is recorded. ☆ Please choose "Wide (16:9)" when using a 16:9 wide screen TV set.
TV Display	Wide	Normal/PS														
Angle Mark	On	Normal/LB														
OSD Lang	ENG	Wide														
Screen Saver	On															
Text to Speech	Off															
<div>General Setup</div> <table><tr><td>TV Display</td><td>Wide</td><td></td></tr><tr><td>Angle Mark</td><td>On</td><td>On</td></tr><tr><td>OSD Lang</td><td>ENG</td><td>Off</td></tr><tr><td>Screen Saver</td><td>On</td><td></td></tr><tr><td>Text to Speech</td><td>Off</td><td></td></tr></table> <div>▲ ▼ :Move ◀ :Return ▶ :Entry</div>	TV Display	Wide		Angle Mark	On	On	OSD Lang	ENG	Off	Screen Saver	On		Text to Speech	Off		Angle Mark: Enter this option to set the angle during playback. Optional setting: On,Off. The default is: On.
TV Display	Wide															
Angle Mark	On	On														
OSD Lang	ENG	Off														
Screen Saver	On															
Text to Speech	Off															
<div>General Setup</div> <table><tr><td>TV Display</td><td>Wide</td><td></td></tr><tr><td>Angle Mark</td><td>On</td><td></td></tr><tr><td>OSD Lang</td><td>ENG</td><td>English</td></tr><tr><td>Screen Saver</td><td>On</td><td></td></tr><tr><td>Text to Speech</td><td>Off</td><td></td></tr></table> <div>▲ ▼ :Move ◀ :Return ▶ :Entry</div>	TV Display	Wide		Angle Mark	On		OSD Lang	ENG	English	Screen Saver	On		Text to Speech	Off		OSD Language: In the option user can set OSD menu language (English). The default: English.
TV Display	Wide															
Angle Mark	On															
OSD Lang	ENG	English														
Screen Saver	On															
Text to Speech	Off															
<div>General Setup</div> <table><tr><td>TV Display</td><td>Wide</td><td></td></tr><tr><td>Angle Mark</td><td>On</td><td></td></tr><tr><td>OSD Lang</td><td>ENG</td><td></td></tr><tr><td>Screen Saver</td><td>On</td><td>On</td></tr><tr><td>Text to Speech</td><td>Off</td><td>Off</td></tr></table> <div>▲ ▼ :Move ◀ :Return ▶ :Entry</div>	TV Display	Wide		Angle Mark	On		OSD Lang	ENG		Screen Saver	On	On	Text to Speech	Off	Off	Screen Saver: Enter this option to set whether to activate the screen saver function. The default is ON.
TV Display	Wide															
Angle Mark	On															
OSD Lang	ENG															
Screen Saver	On	On														
Text to Speech	Off	Off														

<p>General Setup</p> <p>TV Display Wide</p> <p>Angle Mark On</p> <p>OSD Lang ENG</p> <p>Screen Saver On</p> <p>Text to Speech Off On Off</p> <p>▲ ▼ :Move ◀ :Return ▶ :Entry</p>	<p>Text to speech : Enter this option to set Text to speech Optional setting: On, Off.</p> <p>The default is : Off.</p>
---	--

Video Setup Page

<p>Video Setup</p> <p>TV Type NTSC PAL</p> <p>Panel Quality NTSC</p> <p>▲ ▼ :Move ◀ :Return ▶ :Entry</p>	<p>TV Type: Enter this option to select TV type (PAL, NTSC). The default is NTSC.</p>
<p>Video Setup</p> <p>TV Type NTSC</p> <p>Panel Quality</p> <p>▲ ▼ :Move ◀ :Return ▶ :Entry</p>	<p>Set the Video Quality of PANEL</p>

Preference Page

<p>Preference Setup</p> <p>Audio ENG English</p> <p>Subtitle Off</p> <p>Disc Menu ENG</p> <p>Parental Default</p> <p>▲ ▼ :Move ◀ :Return ▶ :Entry</p>	<p>Audio: Enter this option, user can select preferred audio language for DVDs. The default is English.</p> <p>Note: ☆ The audio language depend on the material on each disc. ☆ User can also change the audio language during playback by pressing the Audio button.</p>
--	--

Preference Setup

Audio	ENG	
Subtitle	OFF	English
Disc Menu	ENG	OFF
Parental		
Default		

▲ ▼ : Move ◀ : Return ▶ : Entry

Subtitle:

Select your preferred language to show the subtitles on the screen.

The default is OFF.

The subtitle languages depend on the information available on each disc, You can also change the subtitle language during playback by press the SUBTITLE button.

Preference Setup

Audio	ENG	
Subtitle	OFF	
Disc Menu	ENG	English
Parental		
Default		

▲ ▼ : Move ◀ : Return ▶ : Entry

Disc Menu:

This function allows you to choose the menu language stored on the disc.

The default is English.

Note: the disc menu languages depend on the information available on the disc.

Preference Setup

Audio	ENG	1 KID SAFE
Subtitle	Off	2 G
Disc Menu	ENG	3 PG
Parental		4 PG 13
Default		5 PGR
		6 R
		7 NC 17
		8 ADULT

▲ ▼ : Move ◀ : Return ▶ : Entry

Parental:

Enter this option to set the parental control level to some unsuitable disc scenes being watched by the children.

Optional parental control levels: KID SAFE, G, PG, PG 13, PGR, R, NC17, ADULT.

The default of this option is ADULT.

Make continuously pressing "FUNCTION" button on the unit 4 times to be the password.

Preference Setup

Audio	ENG	
Subtitle	OFF	
Disc Menu	ENG	
Parental		
Default		Reset

▲ ▼ : Move ◀ : Return ▶ : Entry

Default:

Select this item and press ►| button to reset all settings to the original factory settings.

Specification

Compatible disc: DVD+R/RW, DVD-R/RW, CD-DA,
CD-R/RW, MP3, JPEG

Signal system: PAL/NTSC

Panel size: 7 inch

Picture resolution: 800*480 (RGB)

Frequency response: 20 Hz to 20 kHz

Video output: 1 Vp-p/75 Ohm, unbalanced

Audio output: 1.2 Vrms(1 KHZ,0dB)

Audio S/N: Better than 75 dB

Dynamic range: Better than 85 dB

Laser: Semiconductor Laser, Wave Length: 660 nm/790 nm

INPUT: AC 100-240V(Wall adaptor power source)

Power source: DC12V

Power consumption: 10 W

Operating temperature: 0~40°C

Weight(Monitor/DVD Player): 0.25/0.52 Kgs


Dimensions (Monitor/DVD Player)(W x D x H):

190x145x24.5mm / 190x145x35.5mm

Note:

- 1.The quality and speed for reading JPEG photos depend on the resolution and compression ratio of the photos. Some JPEG photo may not be played due to the disc quality and the formats.
- 2.Some DVD+R/RW,DVD-R/RW,CD-R/RW disc may not be played due to the quality on burning conditions.

Troubleshooting

PROBLEM	SOLUTION
No sound or distorted sound	Make sure the machine is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
Can't advance through a movie	You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.
The icon  appears on screen	The feature or action cannot be completed at this time because: <ol style="list-style-type: none">1. The disc's software restricts it.2. The disc's software doesn't support the feature (e.g., angles)3. The feature is not available at the moment.4. You've requested a title or chapter number that is out of range.
Display shows- "No disk" after inserting DVD	<ol style="list-style-type: none">1. Check to see if you may have inserted a blank disc.2. Remove disk and check to ensure that disc is clean and not scratched.3. Check to see if you may have inserted a disc that has not yet been finalized.4. Check to see if you may have inserted the disc correctly; please remove and try to insert disc correctly.5. Try to play the original DVD disk. please note that some DVD players cannot recognize improperly burned disks.6. Use a lens cleaning disk or gently wipe the laser pickup lens with dry microfiber cloth.

Picture is distorted	The disc might be damaged. Try another disc; It is normal for some distortion to appear during forward or reverse scan.
No forward or reverse scan	Some discs have sections that prohibit rapid scanning or chapter skip; If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.
Not reading disc	<ol style="list-style-type: none"> 1. Check to see if the disc you are playing is compatible with your unit. 2. This unit compatible with disc of DVD, VCD, MP3, CD, JPEG, etc. 3. This unit is not compatible with Blu-ray 4. Play only with proper discs in good condition and clean, no scratch. 5. Do not touch the loader pick-up.



If at any time in the future you should need to dispose of this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic equipment Directive)

Owing to continuous improvement, no prior notice will be given regarding changes on above feature and spec.

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

90 days Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

**For service assistance and product information
please call: 1-800-968-9853.**

Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3

www.curtisint.com