

Coolpad E560 User Manual

Table of Contents

A MESSAGE FROM COOLPAD.....	1
TRADEMARKS AND COPYRIGHTS.....	1
GETTING STARTED.....	2
<i>Device layout</i>	<i>2</i>
<i>Main keys.....</i>	<i>3</i>
<i>Charging the battery.....</i>	<i>3</i>
<i>SIM card and Micro SD card</i>	<i>4</i>
<i>Power on/off, Restart and Aeroplane mode</i>	
<i>Locking/unlocking the screen... </i>	<i>5</i>
<i>Touch screen</i>	<i>6</i>
<i>Home screen.....</i>	<i>8</i>
<i>Notifications and Quick Settings panel</i>	<i>9</i>
<i>Entering text.....</i>	<i>10</i>
<i>Taking screenshots</i>	<i>11</i>
APPS.....	12
<i>Installing or uninstalling apps .</i>	<i>12</i>
<i>Phone.....</i>	<i>12</i>
<i>Contacts.....</i>	<i>14</i>
<i>Messaging.....</i>	<i>15</i>
<i>Email.....</i>	<i>16</i>
<i>Chrome</i>	<i>17</i>
<i>Calendar</i>	<i>18</i>
<i>Camera</i>	<i>18</i>
<i>Photos.....</i>	<i>19</i>
<i>Clock.....</i>	<i>19</i>
<i>Calculator.....</i>	<i>20</i>
<i>Downloads</i>	<i>20</i>
<i>YouTube</i>	<i>20</i>
<i>Hangouts.....</i>	<i>21</i>
<i>Google apps.....</i>	<i>22</i>

SETTINGS.....	23
<i>Wi-Fi.....</i>	<i>23</i>
<i>Bluetooth.....</i>	<i>23</i>
<i>Data usage.....</i>	<i>25</i>
<i>Mobile networks</i>	<i>25</i>
<i>Tethering & portable hotspot..</i>	<i>25</i>
<i>Display</i>	<i>26</i>
<i>Sound.....</i>	<i>26</i>
<i>Battery.....</i>	<i>26</i>
<i>Location</i>	<i>27</i>
<i>Security.....</i>	<i>27</i>
<i>Accounts</i>	<i>28</i>
<i>Backup & reset.....</i>	<i>28</i>
<i>Date & time</i>	<i>29</i>
<i>System Update</i>	<i>29</i>
PRODUCT SAFETY INFORMATION.....	30
<i>RF exposure</i>	<i>30</i>
<i>Distraction</i>	<i>32</i>
<i>Product handling</i>	<i>32</i>
<i>Electrical Safety</i>	<i>34</i>
<i>Interference.....</i>	<i>35</i>
<i>Explosive environments</i>	<i>36</i>
<i>Recycling information.....</i>	<i>36</i>
<i>Notice.....</i>	<i>37</i>
<i>Warranty conditions</i>	<i>37</i>
TECHNICAL DATA.....	41
<i>Specs & hardware.....</i>	<i>41</i>
<i>In-Box Contents</i>	<i>42</i>
<i>Declaration of hazardous substances</i>	<i>43</i>

A MESSAGE FROM COOLPAD

Thank you for purchasing your **E560** mobile phone! Please follow these simple - but *important* - instructions for optimal use of your new phone:

Before using your phone for the first time, please carefully read this User Guide, especially the safety information.

Note: Products or services of the vendor or carrier are subject to change within this User Guide without prior notice.

Application features and functions may vary among countries, regions or hardware specifications, and any third-party application malfunctions are the responsibility of those manufacturers.

Exercise caution when editing User Registration Settings as this may cause functional or compatibility problems for which Coolpad will not be responsible.

Most of all, we want you to thoroughly enjoy your new **E560** phone and get the most out of all of its remarkable features!

TRADEMARKS AND COPYRIGHTS

 
Copyright © 2015 Coolpad Technologies Inc. All Rights Reserved. All materials in this document including, without limitation, the design, the text, and any and all marks (unless otherwise indicated) are the property of Coolpad Technologies, Inc. Coolpad and the Coolpad logo are registered trademarks of Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd. Google, Android, Gmail, Hangouts, Google Play, YouTube and additional related marks are trademarks of Google Inc.

Note: Pictures shown are for illustration only and do not represent actual devices.






GETTING STARTED

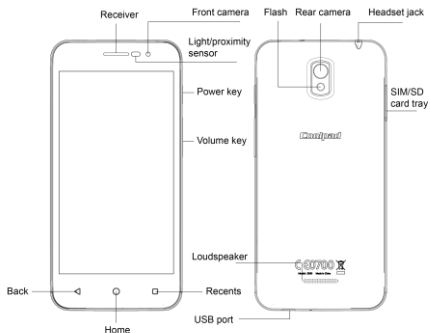Get off to a running start with your new **Coolpad E560!**

Device layout



Main keys

Key	Function
 Power	<ul style="list-style-type: none">• Press and hold to turn your phone on or off.• Press to turn on or lock the screen.
 Recents	<ul style="list-style-type: none">• Tap to open the list of recent apps.• Tap and hold to activate the Menu.
 Home	<ul style="list-style-type: none">• Tap to return to the Home screen.• Tap and hold to activate Google Search.
 Back	<ul style="list-style-type: none">• Tap to return to the previous screen.
 Volume	<ul style="list-style-type: none">• Press to adjust the phone volume.

Charging the battery

1. Connect one end of the data cable to the USB port. This is located at the bottom of the phone.
2. Connect the other end to the travel adapter.
3. Connect the travel adapter to an electrical outlet to fully charge the phone.

 
Note:

- Use the travel adapter that comes with the phone; using other adapters may damage your phone.
- Charging your phone through a USB cable that is attached to a laptop takes more time than charging it with the travel adapter.
- The phone will power off automatically when the battery is too low. Charge the battery if this happens. When the battery is critically low, the charging status may not be displayed immediately (you must wait before it is displayed). Using the phone to play games or perform other activities during the charging process may cause the phone to power off due to low battery.
- The battery will gradually discharge if it is left unused for a long period of time. Before using the battery again, you must recharge it in order to power on and use your phone normally.

 
SIM card and Micro SD card



1. Insert the ejection pin into the hole to loosen the card tray.

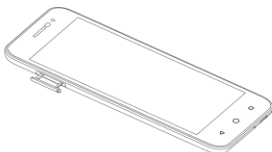

2. Pull out the card tray gently.

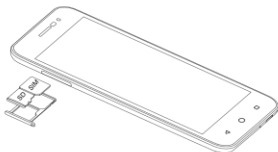

3. Place the SIM card and Micro SD card on the card tray.

Power on/off, Restart and Aeroplane mode

The Power key is located on the upper, right-hand side of your phone.

Power on: When the phone is off, press and hold the Power key for a few seconds to turn on the phone.

Power off: When the phone is on, press and hold the Power key until the options pop up. Select Power off to turn off the phone.

Restart: When the phone is on, press and hold the Power key until the options pop up. Select Restart to restart the phone.


Aeroplane mode: When the phone is on, press and hold the Power key until the options pop up. Select Aeroplane mode and the phone will automatically disable all signal transmission.

Note: You can also tap  on the home screen and then tap **Wireless & networks > More > Aeroplane mode**. 

Locking/unlocking the screen

Locking the phone turns the screen off and prevents unintended operations. To lock the screen while using the phone, simply press the Power key. Also, if the phone is not used for a specified period of time, the screen turns off and automatically locks.

To unlock the screen, press the Power key to turn on the screen

and slide  up.

Note: Tap  > **Security > Screen lock** to set the type of lock screen.

Touch screen

Tapping

To open an app or to launch other functions, tap it with your finger.



 
Tapping and holding

Tap and hold an item or the screen for more than 2 seconds to access available options.



Dragging

To move an item, tap and hold it and drag it to the target position.

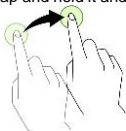

Double-tapping

Double tap on an image to zoom in. Double tap again to return.



Swiping

Swipe left or right on the Home screen to view other panels.



Spreading and pinching

Spread two fingers apart on a webpage or image to zoom in a part. Pinch to zoom out.



Home screen

Basic layout



Customizing your Home screen


The Home screen displays widgets, favorite apps, and more. To view other panels, swipe left or right, or tap one of the screen indicators at the bottom of the screen.

On the Home screen, tap and hold an empty area to access the available options including changing wallpaper settings and add widgets.

- To add widgets, tap and hold an empty area on the Home screen, tap **Widgets**, tap and hold a widget, and then drag it to the Home screen.
- To move an app, tap and hold an item on the Home screen, and then drag it to a new location. To move the item to another panel, drag it to the side of the screen.
- To remove an item, tap and hold the item. Then, drag it to **Uninstall** at the top of the screen.
- To create a folder, tap and hold an app, and then drag it over another app; drop the app when a folder frame appears around the apps; a new folder containing the selected apps will be created. To add more apps to the folder, tap and hold another app, and then drag it to the folder. To rename the folder, tap the folder and then tap the folder name.







Notifications and Quick Settings panel

 
Notifications alert you to the arrival of new messages, calendar events, and alarms, as well as ongoing events.



- When a notification arrives, its icon appears at the top of the screen. Icons for pending notifications appear on the left, and system icons showing things like the Wi-Fi signal, mobile carrier signal, or battery strength are on the right.
- Swipe down from the top of your phone screen to open the notification panel and view details.
- When you're finished with a notification, swipe it away. To dismiss all notifications, tap  at the bottom right of the notifications list.

Use Quick Settings to easily get to frequently used settings, like turning on **aeroplane mode**. To access the Quick Settings panel, swipe down from the top of your phone screen twice with one finger or once with two fingers.

To change a setting, just tap the icon:

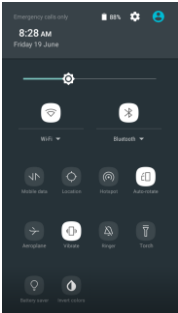 
- **Wi-Fi:**  Turn Wi-Fi on or off. To open Wi-Fi settings, tap the Wi-Fi network name.
- **Bluetooth:**  Turn Bluetooth on or off. To open Bluetooth settings, tap the word "Bluetooth".
- **Mobile data:**  See mobile usage data and turn it on or off.
- **Aeroplane mode:**  Turn **aeroplane mode** on or off. **Aeroplane mode** means your phone won't connect to Wi-Fi or a cell signal, even if one is available.
- **Auto-rotate:**  Lock your device's orientation in portrait or landscape mode.
- **Flashlight:**  Turn the **flashlight** on or off.



- **Location:**  Turn the location service on or off.
- **Display brightness:**  Slide to lower or increase the brightness of your screen.

Entering text


Using the text input panel

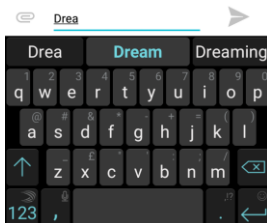



The input panel can be used to enter text. Tap the Back key to hide the input panel. Tap the text input area to open the input panel.





Switching input methods

Your phone comes with multiple text-input methods. You can choose one of them to input text.

1. To change your phone's default input method, tap  on the home screen.
2. Under **Personal**, tap **Language & input > Current keyboard**, and then select an input method.

Editing text

Tap and hold over text. Drag  or  to select the desired text. You can use the icons that appear on the top right of the screen to quickly edit the text.


- : Select all text.
- : Cut selected text.
- : Copy selected text.
- : Replace text with the text you previously cut or copied.

Taking screenshots

1. Focus on the image displayed on your phone screen.
2. Press the Power key and lower Volume key at the same time.
3. The image will be auto-saved in Photos.


APPS

Installing or uninstalling apps

To purchase and download apps, tap  to enter the Play Store.

Note: Apps can also be downloaded from web pages using the phone browser or third-party app download software.

Installing apps

Browse apps by category or tap  to search for a keyword. Select an app to view information about it. To download free apps, tap **Install**. To purchase and download apps where charges apply, tap the price and follow the on-screen instructions.

Uninstalling apps




On the home screen, tap and hold an app and then drag it to **Uninstall** at the top of the screen.

Note: Some pre-installed apps can't be uninstalled.

Phone

You can place calls from the Phone app, the Contacts app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually tap it to dial.

Making a call

1. Tap  on the Home screen.
2. Tap  to open the keypad and enter a phone number.
3. Tap  at the bottom of the screen to make a call.

Note: To avoid affecting the quality of the call, do not cover the receiver or speaker when making or answering a call.

Making a call from contacts list


1. On the Phone screen, tap **Contacts** to open the contacts list.
2. Tap a contact to make a call.

Making a call from recent calls

1. On the Phone screen, tap **Recents** to view recent calls.
2. Tap a call to make a call.

Speed dial







1. On the Phone screen, tap **Speed dial**.

2. Tap  > **Settings** > **General settings** > **Other** > **Speed dial settings**.
3. Tap a number key and choose a contact from the list and tap **OK**.
4. Tap the keypad, tap and hold the number key assigned to a contact to quickly call the contact.

 
Note: The number key 1 is the default key for voicemail. It can't be set as a speed-dial number.


Answering or rejecting a call

When a call comes in, there are various options available.

- To answer a call, slide  towards  on the right.
- To reject a call, slide  towards  on the left.
- To reject the call and send an SMS message to the caller, slide  towards  on the top.


Note: When a call comes in, you can press the volume button to mute the ringtone. To create various

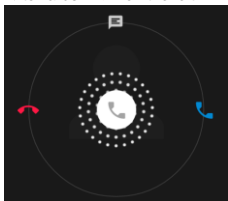

rejection messages, tap  > **Settings** > **General settings** > **Other** > **Quick responses** on the Phone screen to edit the messages.






During a call

During a call, you can do any of the following:



- **Speaker:** Activate the speakerphone to hear the caller on the loudspeaker (so you don't need to hold it to your ear).
- **Mute:** Turn off the microphone so that the other party cannot hear you.
- **Keypad:** Open the keypad and enter another number.
- **Hold:** Put the current call on hold.
- **Add call:** Dial a second call.
-  : End the current call.

Exploring recent calls

Recent calls contain your history of calls received, missed or made. It's an easy way to redial a number, return a call or add a number to your contacts.

1. Tap  to enter the Phone screen.
2. Tap **Recents** to view a list of your most recent incoming and outgoing calls.
3. Tap  and then choose **Call history** to see more calls. Arrow icons beside a call indicate the type of call, and multiple arrows indicate multiple calls:
 - Missed call 
 - Incoming call 
 - Outgoing call 




You have the following options for recent calls:

- Tap a number or contact, and then tap **Details** for more information about the call.
- Tap **Call back** to dial the number.
- Under **Details**, tap  to delete the call.
- Under **Details**, tap  > **Edit number before call**, to make changes to the call back number.

Contacts

The Contacts app easily saves all of your important contact information including contact names, numbers and email addresses.



Adding a contact

1. Tap  on the Home screen.
2. Tap  and enter the contact information.
3. Tap  to save it.


Note: To add a phone number to the contacts list from the keypad, enter the number and tap **Add to contacts**.

Managing contacts

Adding a contact to Favourites

1. On the Contacts screen, select the contact you want to add to Favourites.
2. Tap  at the top right of the contact name. The star will fill colour () to indicate that the contact has been added to Favourites.




Searching for a contact

1. On the Contacts screen, tap .
2. Enter keywords in the search box. Search results will be


displayed below the search bar.

Note: You can also slide the scroll bar at the right of Contacts to quickly search for a contact.



Editing a contact

1. On the Contacts screen, select the contact you want to edit and then tap  .
2. Edit relevant information and then tap  to save the contact. Alternatively, tap  > **Discard changes** to cancel your changes.

Deleting a contact

1. On the Contacts screen, select the contact you want to delete and then tap  > **Delete**.
2. Tap **OK** to confirm that you want to delete the contact.





Importing contacts from SIM card/storage

1. On the Contacts screen, tap  > **Import/export**, and select the corresponding option.
2. Select one or multiple contacts.
3. Tap  to finish copying the contact(s).

Messaging

On the Home screen, tap  to enter the Messaging screen.


Creating a message

1. On the Messaging screen, tap  .
2. Enter the recipient's number or you can tap  to select contacts.
3. Add your message. Tap  to attach media files such as photo, audio and slides.
4. Tap  to send the message.


Note: An SMS will be sent as an MMS when media files are added.

Replying to a message


1. On the Messaging screen, select the message you want to reply to.

2. Compose your message and tap  to send it.


Searching messages

1. On the Messaging screen, tap 
2. Enter message content or keywords to quickly search for the message you need.

Deleting a message

1. On the Messaging screen, tap and hold the message conversation you want to delete.
2. Tap  to delete the message conversation.


Customising message settings

On the Messaging screen, tap  > **Settings** to configure SMS, MMS, message notifications and other settings.

Email

 
Setting up & using Gmail

 
The Gmail app allows you to read and compose emails.



On the Home screen, tap  to enter the Gmail screen. Here Gmail has various uses. For instance, utilize your Gmail account for signing in to all Google apps & services including but not limited to:

- Google Play Music
- Google Play Store
- Google Drive

Getting familiar with your Email app

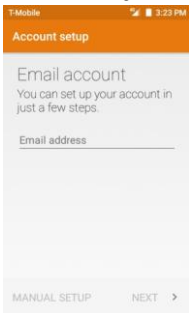- On the Home screen, tap  to enter the Email screen. When using it for the first time, you need to enter your email address and password to configure an account.
- After your email account is configured, you can archive, delete, label, or perform other mail operations.
- Tap the icon on the left of a mail thread to select it.



- After opening a mail, swipe to the left or right to read earlier or later mail conversations.
- Tap  at the top of your phone screen to manage your mails.
- On the Email screen, you can tap  > Settings to add a new email account.
- On the Email settings screen, tap an email account and customize your Email settings.

Chrome



On the Home screen, tap  to browse the Internet to search for information and bookmark your favourite webpages to access them conveniently.

Browsing web pages


1. Tap the address field
2. Enter the web address or a keyword to browse the web page.

Managing bookmarks


Adding a bookmark

1. Open the web page you want to bookmark.
2. Tap  > .
3. Enter the bookmark name and tap **Save** to add the bookmark.


Opening a bookmark


1. On the Chrome screen, tap  > **Bookmarks**.
2. Select the bookmark of the website you want to view.

 
Customising browser settings

1. On the Chrome screen, tap  > **Settings**.
2. On the Settings list, you can select menus to customise the browser.

Calendar

On the Home screen, tap  to enter the Calendar screen.

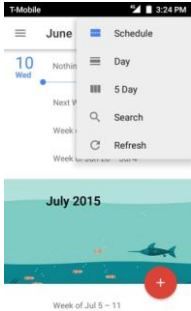


- If you have synced your Gmail account, the first time you open the Calendar app on your phone; it will show your current calendar events.
- To modify the Calendar view, tap  and choose **Schedule, Day, or 5 Day** from the top of the Calendar screen.
- View or edit event details by tapping an Event.








Camera

You can use your phone to shoot and share both photos and videos.

Taking a photo


1. On the Home screen, tap  to enter the Camera screen.
2. Focus on your subject by looking through your phone screen.
3. Tap  to take a photo. Or swipe to the right to activate the Pro mode and tap  to take a photo.

Creating a video

1.  the Home screen, tap  to enter the Camera screen.
2.  to **the left** to activate the Video mode.
3. Tap  to start recording a video.
4. Tap  to stop when you finish recording.

Sharing a video or photo

1. On the Home screen, tap  to enter the Photos screen.




2. Select a video or photo and tap .
3. From the pop-up screen, select your desired sharing method.

Photos


On the Home screen, tap  to enter the Photos screen.

You can view and manage photos and videos stored in your phone.

When you're signed into your device with your Google Account, the Photos app makes it easy to auto-backup all the photos and videos you take, organize them, and share with friends.


- To delete an image or a video, select an image or a video and tap  at the bottom of the screen.
- To delete multiple images and videos, tap  on the top right of the Photos screen, and tap **Select photos**, tick the images or videos to delete, and then tap  on the top right of the current screen.

Clock

On the Home screen, tap  to enter the Clock screen. You can set alarms, check the current time in many cities around the world, set a specific duration or time an event.


Operating the alarm

On the Clock screen, tap  to switch to the Alarm tab.

1. Tap  and the time displayed to set your alarm.
2. Once your alarm is set, you may add a label to it.
3. Tick the **Vibrate** check box and choose your ringtone from the **Cesium** pop-up screen.

Calculator






On the Home screen, tap  to enter the Calculator screen. You can perform simple or complex calculations.

Swipe right or rotate the phone to landscape orientation to display the scientific calculator.

Downloads




On the Home screen, tap  to enter the Downloads screen. You can download files from Gmail or other areas.


- On the Downloads screen, tap an item to open it.
- Tap and hold an item until  appears, and then tap it to share the item through one of the many sharing methods.
- Tap and hold an item until  appears, and then tap it to delete the item.
- Tap  > **By name**, **By date modified**, or **By size** to sort the downloaded items.

YouTube




On the Home screen, tap  to enter the YouTube screen. You can watch the world's videos and keep up with your favorite YouTube channels. Sign in to access your subscriptions, playlists, uploads, purchases, history and more.


Sign in to YouTube





To sign in, go to  > **Sign in**. Select an existing account on your device, or go to **Add Account** to add a new account to your device.

Switch channels

If you have multiple channels associated with the same account, you can switch channels by signing out and signing in again. To sign out, go to  > **Sign out**.

Watch videos

Tap a thumbnail to begin playing a video. Tap  in the video player to access additional viewing options.

- **Full screen:** To play the video in full screen, tap the full screen icon  or rotate your device horizontally.
- **Video quality:** To manually adjust the video quality, tap  >  on a video.
- **Captions:** Enable captions on a video by selecting  > **CC** on a video. Not all videos may have closed captioning available.


Watch videos while browsing

Minimize the video to navigate the app without missing a single moment of the video you're currently watching. This way, you can browse suggestions, playlists, and more without pausing or stopping the video.


- **Minimize and maximize the player:** Swipe down to minimize the video player and continue navigating the app. Swipe upwards on the minimized video to maximize it again.
- **Dismiss the player:** Swipe left to right if you no longer want to view the minimized video

Playback settings



Limit mobile data usage by going



to  > **Settings** > **General** > **Limit mobile data usage**. When enabled, HD video will only stream on a Wi-Fi connection.

Hangouts



On the Home screen, tap  to enter the Hangouts screen. With Hangouts, you can send messages, emoji, and photos or start video calls with one person or with a group of people. You can start a Hangout with anyone you'd like as long as the person has a Google Account.

Start a Hangout:

1. Tap the compose icon  at the top right of your Hangouts list.
2. Select a contact for your Hangout by typing the person's name, email address, or phone number in the search box. You can also select one of your contacts from the lists below the search box.
3. You can start a Hangout in a few ways:
 - **Send a message:** Type your message and tap the send icon .

- **Make a video call:** You also can make a video call to that person by tapping the video call icon .
- **Start a phone call:** Tap the phone icon .

Start a group Hangout:

1. Tap the compose icon .
2. Select a contact for your Hangout by typing the person's name, email address, or phone number in the search box. You can also select one of your contacts from the lists below the search box.
3. Tap **Anyone else?** in the contact box at the top of the Hangout.
4. Select one or more people to add to the Hangout.
5. Tap **OK**.
6. Type the message you'd like to send, and tap the send icon .


Google apps

Google provides entertainment, social media, and business apps. Google Play Store is all-in-one entertainment point with music, movies, books and apps on the web. For more details, visit www.support.google.com/android.

SETTINGS


Wi-Fi

Connecting to a Wi-Fi network


1. On the Home screen, tap  to enter the Settings screen. Then, choose **Wireless & networks** > **Wi-Fi** to turn Wi-Fi on/off.
2. Drag the slider to **On** enabling your phone to scan for available Wi-Fi networks.
3. Tap the name of a desired network to connect, entering the password if necessary.

Note: Previously connected and saved networks will be automatically joined. A user can join a network and forget it, or remove it from the known networks list.

Adding a network

1. Tap  at the top right corner of the Wi-Fi screen. Then tap **Add network** in the pop-up window.
2. Enter the SSID network name and select the correct security mode.
3. Tap **Save**.

Setting advanced Wi-Fi options

On Wi-Fi screen, tap  > **Advanced**. You will be notified whenever a public network is available. If you do not want to be notified, drag the slider for Network notification to the left. To save your phone's data usage, your phone will remain connected to Wi-Fi when your screen sleeps.

Bluetooth

Your phone supports Bluetooth, which allows you to create a wireless connection with other compatible devices so that you can share data. Use Bluetooth to maximize awesome phone capabilities and functions.


Note: Bluetooth has a maximum reception distance of 10 metres. Keep devices connected by Bluetooth within 10 metres of each other. Obstacles like walls or other electronic equipment may interfere with Bluetooth signals.


Turning Bluetooth on/off

On the Home screen, tap  to enter the Settings screen. Then, choose **Wireless & networks > Bluetooth** to turn Bluetooth on/off.

Changing your phone's Bluetooth name


Your phone contains a random Bluetooth name which will be visible to other Bluetooth devices during connection attempts. You can change the random name to a more identifiable one.


1. On the Bluetooth screen, tap  > **Rename this device**.
2. Enter a new name and tap **Rename**.

Note: You can also change the name of the Bluetooth device as it appears on your phone. Tap  next to the connected Bluetooth device, enter a new name and tap OK to change the name.

Pairing your phone with other Bluetooth devices


You need to pair with a Bluetooth device before you can share data with it. Once a device is paired with your phone, it will automatically connect to your phone whenever it is turned on.

1. Turn Bluetooth on and your phone will automatically scan for nearby Bluetooth devices.
2. If your phone stops scanning before other Bluetooth device is ready, tap  > **Refresh**.
3. Within the list, tap the ID of the Bluetooth device so as to pair with it.
4. Ensure that both devices show the same pairing code and tap **Pair**.

Note: If you want to unpair it, tap  next to the connected Bluetooth device and tap **Forget**.

Sending files via Bluetooth

With Bluetooth, you can share pictures, videos or music files with your family and friends.

1. In ES File Explorer application, tap and hold the file you want to send.
2. After the file has been selected, tap  > **Share**, on the options menu that pops up, select **Bluetooth**.
3. The screen will list the Bluetooth devices that have been found. Select the device you want to send the file to.

Data usage

On the Home screen, tap  to enter the Settings screen. Then, choose **Wireless & networks > Data usage**.

- **Mobile data:** Set your phone to use data connections on any mobile network
- **Set mobile data limit:** Set a limit for mobile data usage. You may limit the mobile data usage by following steps:
 1. Drag the slider for **Set mobile data limit** to the right.
 2. Drag the limit adjustment bar upwards or downwards to set the limit.
 3. Drag the warning adjustment bar upwards or downwards to set a data usage alert level. Your phone will alert you when the warning level is reached.

Note: If you turn on Wi-Fi and the data service simultaneously, the phone will automatically use the Wi-Fi connection. If Wi-Fi is disconnected, the phone will use the data service to continue the data connection. **Please note that absence of Wi-Fi will use your data which could cost you amount of money according to your tariff with operator.**


Mobile networks

On the Home screen, tap  to enter the Settings screen. Under **Wireless & networks**, tap **More > Mobile networks**.

- **Data roaming:** Connect to data services when you are roaming.
- **Preferred network type:** With 4G/3G/2G available.
- **Enhanced 4G LTE Mode:** Use 4G loads data faster.
- **Access Point Names:** Set up access point names (APNs).

Tethering & portable hotspot

Use the device as a mobile hotspot to share the device's mobile data connection with other devices when the network connection is not available. Connections can be made via Wi-Fi, USB, or Bluetooth.

1. Tap  on the Home screen.
2. Under **Wireless & networks**, tap **More > Tethering & portable hotspot**.

Note: Using this function may incur additional data charges, depending on your data plan.


- **USB tethering:** Share your phone's mobile data connection

via USB with a computer and use the computer to connect to the internet.

- **Portable Wi-Fi hotspot:** Activate the Wi-Fi hotspot and share your phone's mobile data connection.
- **Bluetooth tethering:** Sharing your phone's data connection via Bluetooth.

Note: You can tap **Set up Wi-Fi hotspot** to set the name, security and password for the Wi-Fi hotspot. To protect your network, it is recommended that you secure it using WPA2 PSK.

Display

On the Home screen, tap  > **Device** > **Display** to change the brightness or font size settings and customize the wallpaper on your phone.

- **Brightness:** Set the brightness of the display.
- **Wallpaper:** Change the background picture of the Home screen.
- **Sleep:** Set the screen sleep time. Your screen will automatically turn off if no operations are performed within the time set.
- **Daydream:** When Daydream is on, your device displays photos, colours, and more while it is charging or docked. Set the daydream type or when to daydream. Tap the daydream switch to turn off this function.
- **Font size:** Set the font size according to your preference.

Sound

On the Home screen, tap  to enter the Settings screen. Then, choose **Device** > **Sound & notification**.

1. Drag the slider to adjust the **Media volume**, **Alarm volume**, or **Ring volume**. You can also adjust the Ring volume by pressing the Volume key on the left side of your phone.
2. Tap **Phone ringtone**. Choose a desired ringtone for your phone.

Note: Please note that high volume can damage your ears.

Battery


On the Home screen, tap  to enter the Settings screen. Then, choose **Device** > **Battery**. Here you may monitor how apps,

other data and your phone system all consume battery power.

- Tap **Show battery percentage**, the battery percentage icon shall appear on the status bar next to the battery level icon.

Note: The usage time left shows the time remaining before the battery power runs out. Usage time left may vary depending on your device settings and operating conditions.

- Prolong your phone battery life by turning on **Battery saver**.

1. On the Battery screen, tap  and then tap **Battery saver**.
2. Drag the slider to **On**.

Note: Battery saver turns off automatically when your phone is charging.

Location

You can let your device access GPS, Wi-Fi networks, and mobile networks to estimate your location. Apps that have your permission can use this information to deliver location-based services, such as the ability to check in, view commute traffic, or find nearby restaurants.

To control what location information your device can use, tap



> **Personal > Location**.

When the Location switch is on, you can do any of the following:


- Change the **Location mode** between **High accuracy**, **Battery saving** and **Device only**.
- View **Recent location requests**.
- Check the **Location services**.

Note: Using location access does make more demands on your battery. If you need to save battery life then you can turn it off, though when the switch is off, your device won't be able to find your precise location or share it with any apps.

Security


Setting a screen unlock pattern

You can set a screen unlock pattern. Once the screen has locked, it needs to be drawn correctly in order to unlock the screen.

- Tap  > **Personal > Security > Screen lock > Pattern**.
- Follow the onscreen instructions to draw the unlock pattern.
- Tap **Continue**.
- Draw the same unlock pattern again and tap **Confirm**.


Setting a screen unlock PIN

You can set a numeric PIN to unlock your phone. Once the screen has locked, it needs to be entered correctly in order to unlock the phone.

- Tap  > **Personal** > **Security** > **Screen lock** > **PIN**.
- Enter at least four-digit numbers.
- Tap **Continue**.
- Enter the same number again and tap **Confirm**.

Setting a screen unlock password

You can set a screen unlock password to unlock your phone.

- Tap  > **Personal** > **Security** > **Screen lock** > **Password**.
- Enter a password containing at least four characters.
- Tap **Continue**.
- Enter the same number again and tap **Confirm**.

Accounts

Use the Accounts settings to add, remove, and manage your accounts, such as Exchange, Facebook, Google, Twitter and other supported accounts.

On the Home screen, tap  to enter the Settings screen. Then, choose **Personal** > **Accounts**. Under **Accounts**, you can see the accounts you already added or manage your accounts.

Adding an account

1. Tap **Add account**.
2. Select the kind of account to add.
3. Follow the onscreen instructions to enter the required information about the account.
4. Configure the account.
5. When you are finished, the account you configured is added to **Accounts**.

Backup & reset

On the Home screen, tap  > **Personal** > **Backup & reset** .

- **Back up my data:** Back up app data, Wi-Fi passwords and other settings to Google servers.
- **Backup account:** Set up or edit your Google backup

account.

- **Automatic restore:** Set the device to automatically restore settings and app data from the Google server when apps are reinstalled.
- **Factory data reset:** Reset settings to the factory default values and delete all data.

Note: Before restoring factory settings, it is vital that you first back up all important data on the phone; otherwise all data will be lost after factory settings have been restored.

Date & time

On the Home screen, tap  > **System** > **Date & time**.

Automatic date & time: Use network-provided time.

Automatic time zone: Use network-provided time zone.

Set date: adjust the date manually.

Set time: adjust the time manually.

Select time zone: select the desired time zone from the list.

Scroll the list to view more time zones.

Use 24-hour format: switch between 24-hour format and 12-hour format.

Note: When your phone is using date and time settings provided automatically by the network, you cannot manually set the date, time and time zone.

System Update

On the Home screen, tap  > **System** > **About phone** > **System updates**.

Tap **Check for updates**, and the phone will search for the latest software. If you want to update the system, please tap **Download**. After that, tap **Update now** to complete the upgrade. Then your phone's software will have the latest version.

Note:

1. During downloading or updating, do not change your default storage location, to avoid errors in locating the correct update packages.
2. Upgrading your phone software will not affect your mobile phone data.

PRODUCT SAFETY INFORMATION

RF exposure

General statement on RF energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.594 W/kg and when tested near the body (at a distance of 1.5cm) the highest SAR value was 0.886 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

Distance of operation

This device model has been tested and meets radiofrequency exposure guidelines when used as follows:

- Against the ear: Place or receive a device call and hold the device as you would a wire line telephone.
- Body worn: When transmitting, place the device in a carry accessory that contains no metal and positions the device a minimum of 1.5 cm from your body. Use of other accessories may not ensure compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and are not holding the device at the ear, position the device a minimum of 1.5 cm from your body,
- Data operation: When using a data feature, position the phone a minimum of 1.5 cm from your body for the whole duration of the data transmission.

Regulatory information

This device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

CE 0700

Declaration of Conformity

EU Declaration of Conformity

According to the Radio Equipment and
Telecommunications Terminal Equipment Directive
1999/5/EC

For the following equipment

Product : Smart Phone
Type Designation/Trademark : E560 / Coolpad
Manufacturer's Name : Yulong Computer Telecommunication Scientific
(Shenzhen) Co., Ltd
Manufacturer's Address : Coolpad Information Harbor, 2nd Mengxi Road,
Hi-Tech Industrial Park(North), Nanshan District,
Shenzhen, P.R.C

is herewith confirmed to comply with the requirements set out in the Council
Directive 1999/5/EC for radio equipment and telecommunications terminal equipment.
For the evaluation of the compliance with this Directive, the following standards
were applied:

Safety: EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011;

Health: EN 62209-1:2006, EN 62209-2:2010, EN 50566:2013, EN 62479:2010,
EN 50360:2001+A1:2012; EN 50332-1:2002; EN 50332-2:2003;

EMC: EN 301 489-1 V1.9.2(2011-09), EN 301 489-3 V1.6.1(2013-08),
EN 301 489-7 V1.3.1(2015-11), EN 301 489-17 V2.2.1(2012-09),
EN 301 489-24 V1.5.1(2010-10);

Radio : EN 300 328 V1.8.1(2012-06), EN 300 440-2 V1.4.1(2010-08),
EN 300 440-1 V1.6.1(2010-08), EN 301 511 V9.0.2(2003-03),
EN 301 908-1 V7.1.1(2015-03), EN 301 908-2 V6.2.1(2013-10),
EN 301 908-13 V6.2.1(2013-10)

Identification Mark

CE 0070

Notified body involved: PHOENIX TESTLAB GmbH

Köningswinkel 10, 32825, Blomberg, Germany

Person responsible for making this declaration

Name, Surname : Li amei Position/Title : Project Manager

Shenzhen
(Place)

2015-06-23
(Date)

Li amei
(Signature)

Distraction



Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product handling



General statement on handling and use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorised personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum 0 and maximum +45 degrees Celsius.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Demagnetisation

To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Air bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Repetitive motion injuries

To minimise the risk of repetitive motion injuries, when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Make use of the special features in the handset which minimise the number of buttons which have to be pressed, such as message templates and predictive text.
- Take lots of breaks to stretch and relax.

Emergency calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud noise

This phone is capable of producing loud noises which may damage your hearing. Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Use the recommended headphones only.



PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Bright light

This phone is capable of producing flash of light or use as a torch, do not use it too close to the eyes.

Phone heating

Your phone may become warm during charging and during normal use.

Electrical Safety



Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and damaged products

Do not attempt to disassemble the phone or its accessory.

Only qualified personnel must service or repair the phone or its accessory.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorised service centre.

Battery handling & safety

The device has a built-in, non-removable battery. Do not attempt to remove the battery, otherwise the device may be damaged. To replace the battery, take the device to an authorized service centre.

Do not disassemble or short-circuit the battery. Accidental short-circuiting can occur if a metallic object such as a key, paper clip, or pen touches the terminals of the battery.

Improper battery use may result in a fire, explosion, or other hazard. If you believe the battery has been damaged, do not use it and take it to a service centre for testing.

Interference

General statement on interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on the aircraft. If your device offers a 'flight mode', this must be enabled prior to boarding an aircraft.

Interference in cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive environments



Petrol stations and explosive atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting caps and areas


Turn off your mobile phone or wireless device when in a blasting area or in areas posted turn off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

Recycling information



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

 They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

In non-European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable

recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied. Read the safety information carefully to ensure that you use this wireless device in a correct and safe manner.

Yulong Computer Telecommunication Scientific (Shenzhen) Co., Ltd.

Address:

Coolpad Information Harbor, 2nd Mengxi Road, Hi-Tech Industrial Park (North), Nanshan District, Shenzhen, P.R.C



Warranty conditions

1. Warranty

1.1 The responsibilities of Coolpad with respect to the products of this manufacturer are limited to the following terms and conditions.

1.2 Coolpad guarantees that its products, under normal use, will not exhibit any defects in material or manufacturing defects for a period of 2 years from the date of purchase of the respective telephone by the Customer. For the purpose of claiming the warranty, the Customer will be required to provide the receipt or other documentation from which the initial purchase date is evident.

1.3 A warranty lasting 6 months from the date of purchase shall apply to all batteries, chargers, headsets and belt clips, irrespective of the purchased telephone model.

1.4 The Customer must always return the faulty product to the location where it was purchased.

1.5 In the event that a defect is identified and the warranty claim is submitted correctly within the warranty period, Coolpad may at its own discretion either:

- a) repair the faulty product free of charge using new or refurbished parts that provide performance and reliability comparable to new parts, or
- b) replace the product for a new or refurbished one, that offers performance and reliability comparable to a completely new product and its functions are at least equivalent to the initial

product.

1.6 The replacement product or parts are subject to a warranty valid for the remaining duration of the initial product or a warranty for a period of sixty (60) days from the date of replacement or repair depending on whichever of these periods is shorter.

1.7 In the event that a product or parts are replaced, the replacement product becomes the property of the Customer and the initial product the property of Coolpad.

1.8 Parts that are provided by Coolpad within the scope of the manufacturer's warranty policy, must always be used in the product covered by the warranty.

2. Exceptions and limitations

2.1 This limited warranty covers only hardware product produced by Coolpad and designated with the „Coolpad“ logo.

2.2 Coolpad guarantees that this Coolpad brand product (hereinafter „product“) will not exhibit any material defects or manufacturing defects when used in a normal manner.

2.3 This limited warranty does not apply to any hardware product or software not manufactured by Coolpad, irrespective of the fact whether such a product or software is included with the initial Coolpad product.

2.4 Coolpad takes no responsibility for damages caused to the product by nonadherence to the instructions and recommendations related to the use of the product.

2.5 This warranty does not cover:

- a) cosmetic defects, among others including scratches, grazes or cracked plastic parts of the telephone;
- b) damage resulting from using products and accessories that were not manufactured by Coolpad;
- c) damage caused by an accident, inappropriate or incorrect use, contact with a liquid, fire, earthquake or other external effects with the exception of the warranty on specific telephone models that covers similar types of risks;
- d) damages caused by using the product in a manner that is in contradiction to the intended purpose or function of the product;
- e) damage caused as a result of modifications (including expanding and upgrading of software), performed by persons other than authorized representatives of Coolpad or authorised providers of these services;
- f) damage to the product or its parts resulting from unauthorised modifications of such a product or its parts;
- g) damage resulting from normal wear and tear or normal ageing of respective product components;
- h) any type of damage in the case that the serial number of the product was removed or so damaged that it is illegible;
- i) damages caused as a result of theft or loss of the product.

2.6 In the event that a product under warranty is sent to the service centre Coolpad, whilst:

- a) no defect is identified, the Customer will be required to pay all

testing, administrative and transport costs and charges based on the current rates charged by the provider for the provision of the individual services;

b) it is found that the claimed defect is a defect that is not covered under the warranty conditions (see the aforementioned exceptions and limitations), the customer will be obliged to pay the costs of repair.

2.7 Neither Customers nor Vendors may open the product for purposes other than the insertion of a SIM card, memory cards or the battery. The warranty does not cover any damage to the product resulting from it being opened for other than the aforementioned purpose.

3. Resulting damages

3.1 With the exception of the cases described directly in these warranty conditions and in the maximum possible extent permitted by valid legislation, Coolpad renounces itself of responsibility for direct, special, random or resulting damages, which are the result of a breach of these warranty conditions or other conditions set forth by law, amongst others including responsibility for losses resulting from the inability to use the product, loss of income, loss of real or expected profits (amongst other including losses of contractual profits); losses resulting from the inability to utilise the invested funds for other purposes; losses resulting from expected savings, losses resulting from the inability to carry out business activity, missed opportunities, injury to good name and reputation, disruption or damage to data, direct and subsequent losses or damages however arisen, furthermore responsibility for the costs expended with respect to the replacement of property or equipment, costs of the restoration, programming or copying or programs or data stored or utilised in Coolpad products or losses arisen due to the inability to secure the required level of protection or confidentiality of data stored in the product. The aforementioned limitations do not apply to rights raised in relation to injury or death of persons and likewise to legal responsibility and obligation for intentional and negligent behaviour and/or omissions. Coolpad hereby rejects to provide any warranty guaranteeing that it will always be able to repair every product within the scope of this warranty or to replace it without the risk of damage or loss of programs or data.

4. Data backup

4.1 Prior to sending the product for the purposes of a warranty repair, it is the full responsibility of the Customer to arrange for the backup of data stored in the product or to remove from the memory of the product potentially sensitive data or confidential information. Likewise, the Customer is obliged to deactivate any security passwords.

4.2 Within the scope of the warranty service, the product's data contents will be deleted and memory media will be formatted.

4.3 A replacement product will be provided to the Customer in the

exact configuration as in which the initial product was purchased, however with possible software updates. Coolpad may, within the scope of the warranty, perform the installation of current software versions (particularly in the case, where new hardware components would not function properly or reliably with the initial version of the system software). After installing a new version of the system software, it may result that third-party programs or applications installed in the product may not run correctly. In such a case, the customer is fully responsible for the reinstallation of all external software programs and applications as well as the restoration of data and passwords.

5. Transport costs

5.1 Returning the faulty product to the location of its initial purchase is the full responsibility of the Customer.

5.2 The return of a faulty product by a Retailer or Vendor to the Coolpad centre for repairs and service is the full responsibility of the Retailer or Vendor.

5.3 The return of a repaired product to the Retailer or Vendor from the Coolpad centre for repairs and service is the responsibility of the Coolpad centre for repairs and service.

5.4 The return of the repaired product by the Retailer or Vendor to the Customer is the full responsibility of the Retailer or Vendor.

TECHNICAL DATA

Specs & hardware

Specifications		
Dimensions	139x 67.8 x 7.99 mm	
Form factor	Bar	
Antenna	Built-in	
SIM card	Micro SIM	
Network	GSM (900/1800/1900MHz) UMTS (900/2100MHz) LTE (800/900/1800/2600MHz)	
Camera	Front 5M pixel + Rear 8M pixel	
Headset jack	Φ3.5mm CTIA standard	
Screen Parameters		
Type	Dimensions	Resolution
QHD	4.7 inches	960x540
Accessories		
Battery	Battery Type	Lithium Ion Polymer Rechargeable Battery
	Rated Capacity	1780 mAh
	Nominal Voltage	3.8 V


Note: The battery capacity is subject to update and change.

In-Box Contents

No.	Name	Quantity
1	Phone	1
2	Battery (built-in)	1
3	Travel Charger	1
4	USB Cable	1
5	Warranty Card	1
6	Quick Start Guide	1

Note: The items supplied with the phone and any available accessories may vary depending on the region or service provider.

Declaration of hazardous substances

Parts Name	Toxic or hazardous substances or elements					
	Plu mb um (Pb)	Mer cur y (Hg)	Ca dmi um (Cd)	Chr omi um VI (Cr (VI))	Pol ybr omi nat ed Bip hen yls (PB B)	Poly bro min ated Dip hen yl Eth ers (PB DE)
PCB Board and Accessories	○	○	○	○	○	○
Plastics	○	○	○	○	○	○
Metals	○	○	○	○	○	○
Battery	○	○	○	○	○	○
Other	○	○	○	○	○	○
○: indicates that the content of the toxic or hazardous substance in all homogeneous materials is within the limit of the SJ/T11363-2006 standard.						
x: indicates that the content of the toxic or hazardous substance in some homogeneous materials exceeds the limit of the SJ/T11363-2006 standard.						
 <p>The Environmentally Friendly Use Period of this product is 20 years, as shown by the symbol on the left. The Environmentally Friendly Use Period of replaceable parts, such as battery, may be different from that of the product. The Environmentally Friendly Use Period is valid only when the product is operated under the conditions defined in this User Guide.</p>						