
ASSEMBLY INSTRUCTIONS

ITEM NO. FB3042HAY-SC-4PK

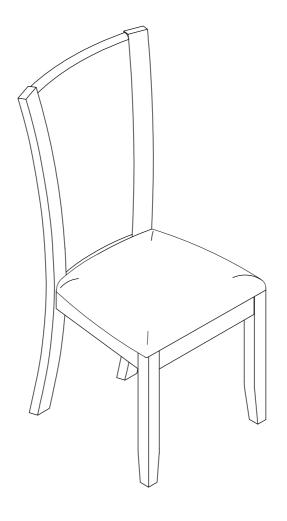



ASSEMBLY TIPS:


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.


Part List					
NO.	DIAGRAM	PART NAME	Q'ty		
#1		Back frame with cushion	1pc x4		
#2		Seat frame with cushion	1pc x4		
#3		Front Legs	2pcs x4		

Part List					
NO.	DIAGRAM	PART NAME	Q'ty		
#A		Bolt Ø1/4" x 3"	4pcs x4		
#B		Bolt Ø1/4" x 2-3/8"	4pcs x4		
#C		Bolt Ø1/4" x 1-1/2"	2pcs x4		
#D		Spring washer Ø1/4"	10pcs x4		
#E		Flat washer Ø1/4"	10pcs x4		
#F		Allen key M4	1pc x4		

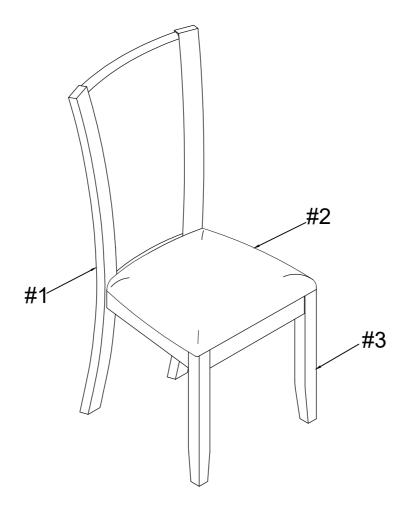

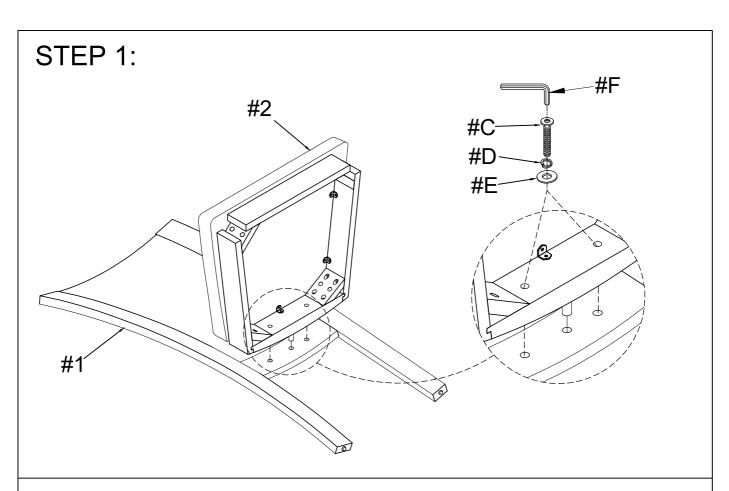

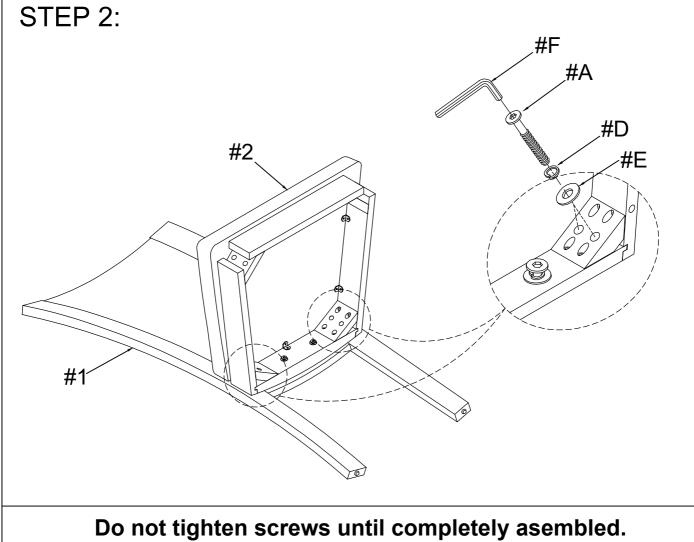


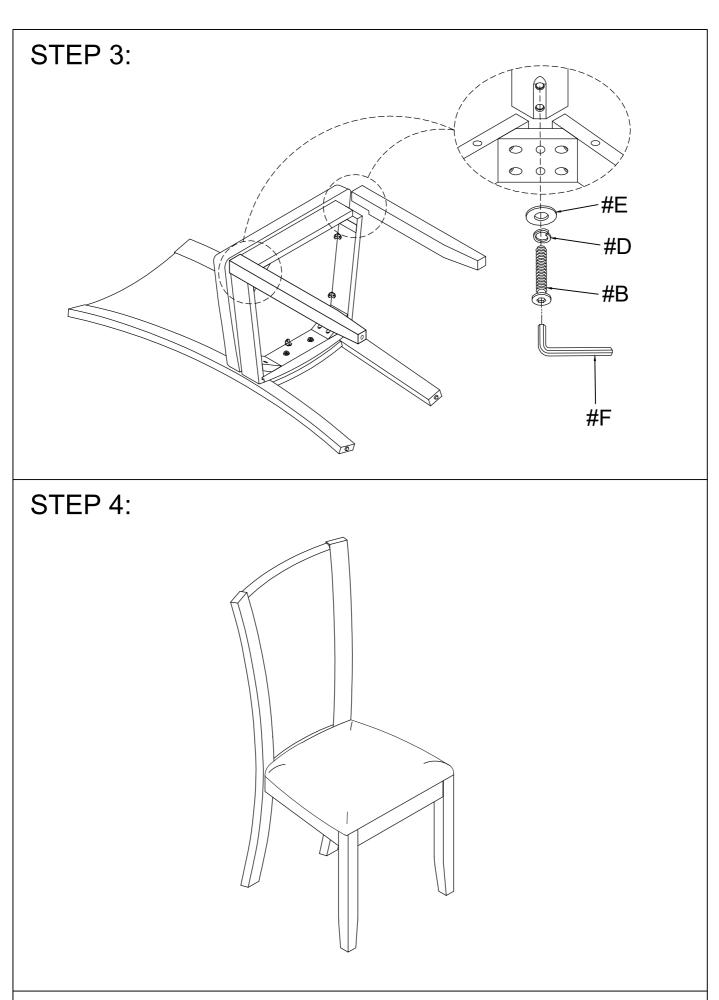

Tighten all screws until completely asembled.


ASSEMBLY INSTRUCTIONS

ITEM NO. FB3012CST-GY-T-3535 FB3012CST-WA-T-3535

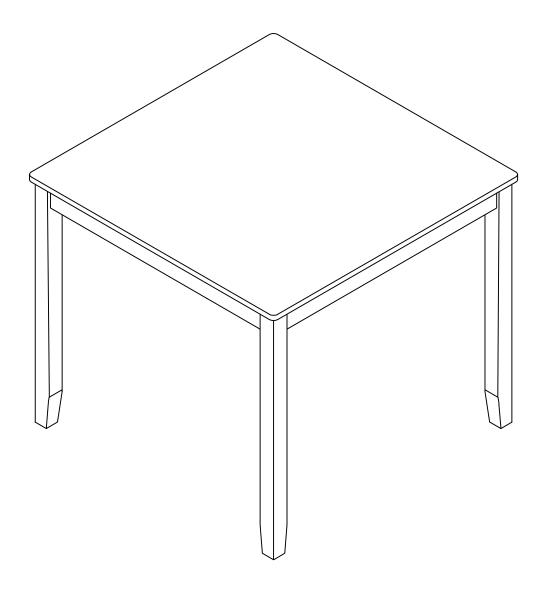

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

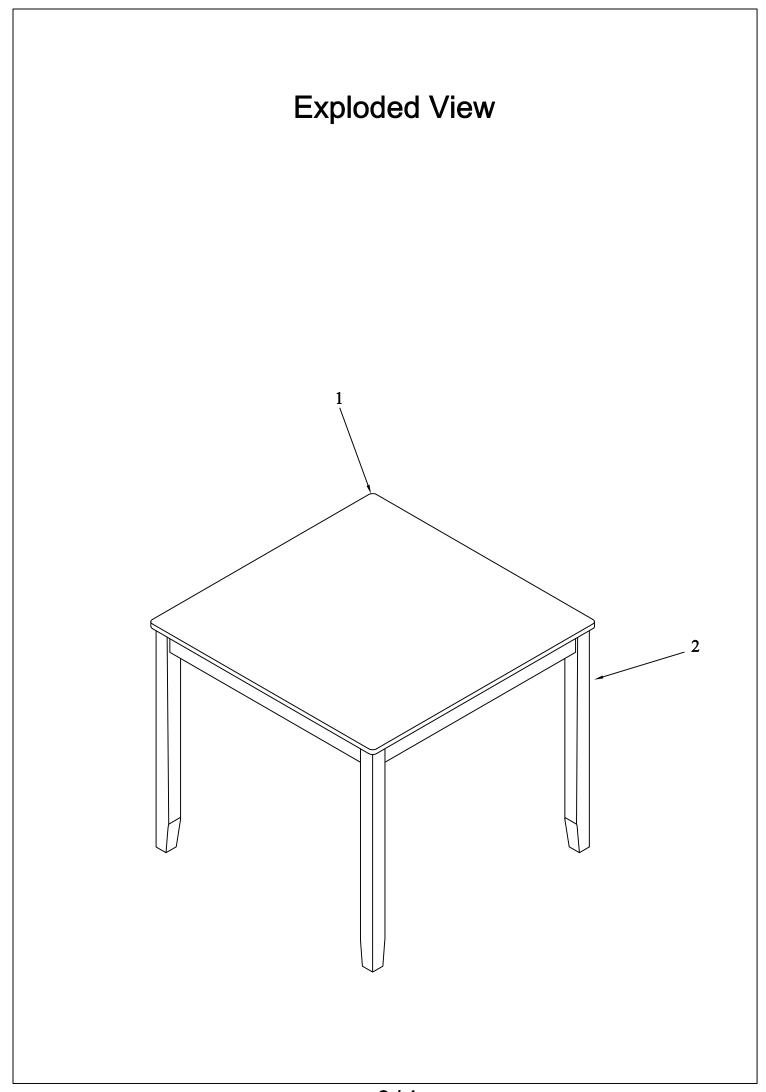

PARTS LIST						
NO.	DIAGRAM	PART NAME	Q'Ty			
1		TABLE TOP	1PC			
2	⊕	LEG	4PCS			

HARDWARE LIST						
NO.	DIAGRAM	PART NAME	Q'Ty			
Α		BOLT / BOULON	8PCS			
		Ø5/16" x2-3/8"				
В		LOCK WASHER	8PCS			
		Ø5/16"1/16	01 00			
С		FLAT WASHER	8PCS			
		Ø5/16"x 19mm	000			
D		ALLEN KEY	1PC			
		1/6" x 2-1/4"	0			

