 


VILHATTEN

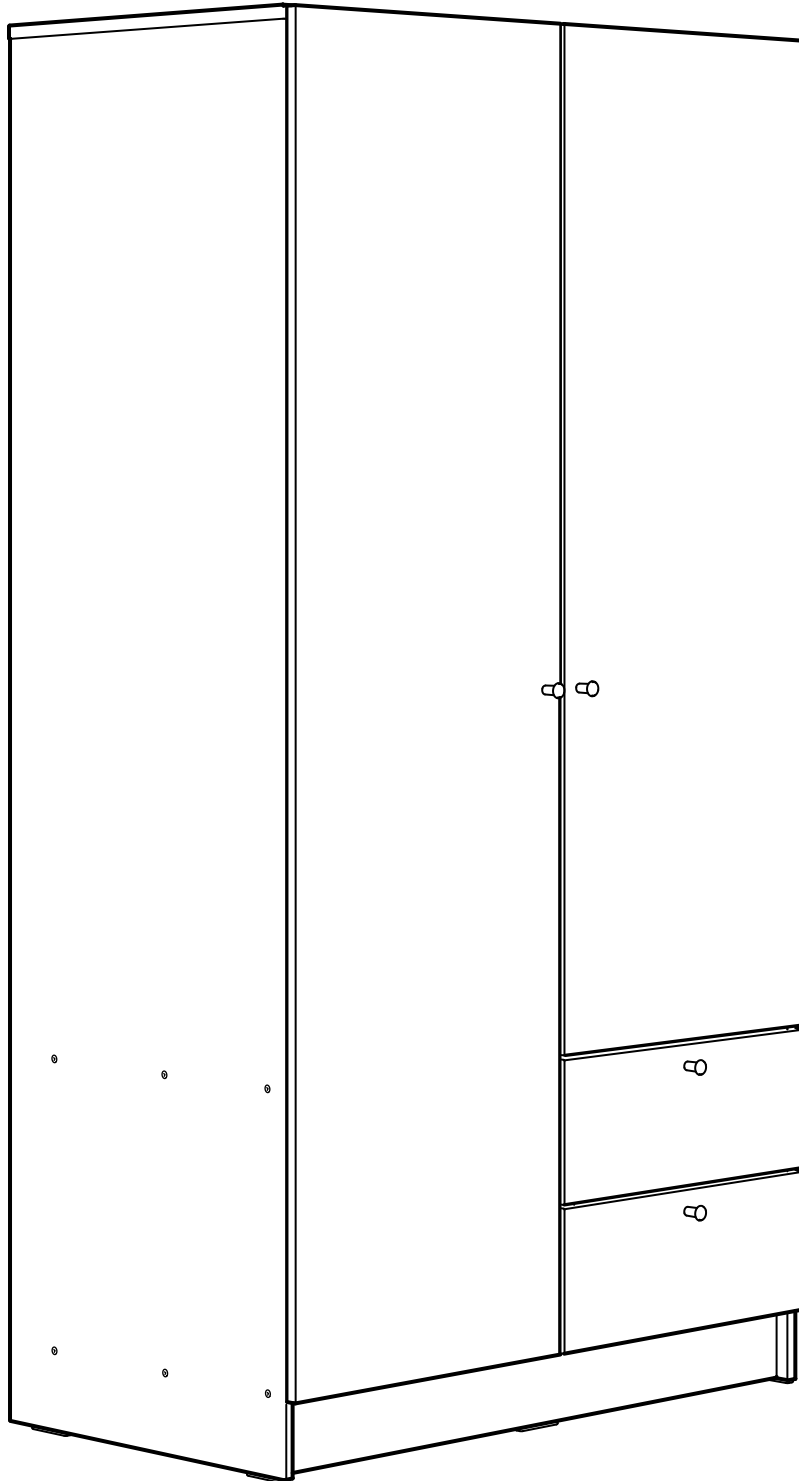

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
 
 
NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

English


Read and follow each step of the instruction carefully.

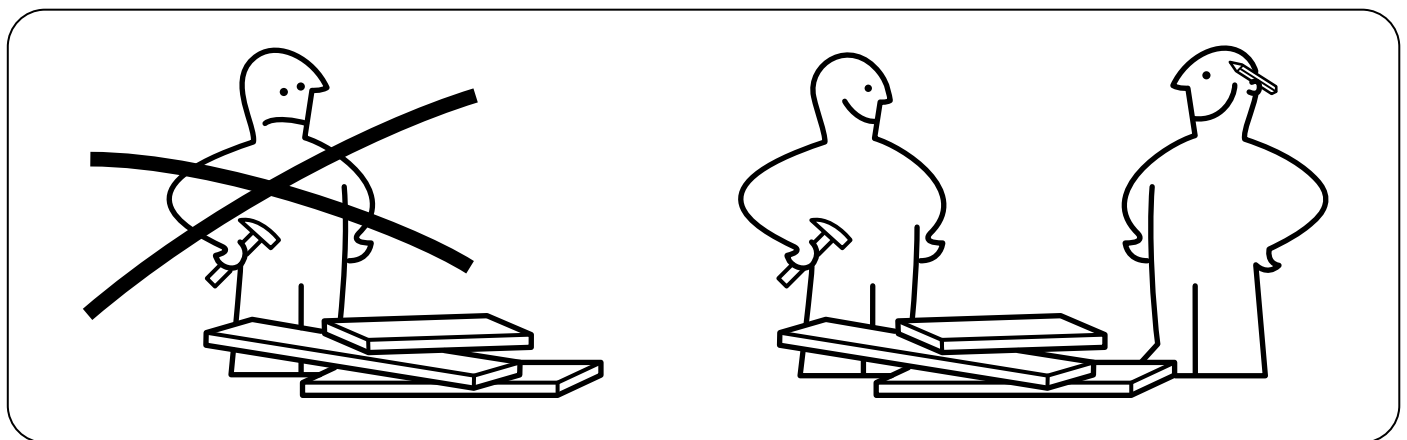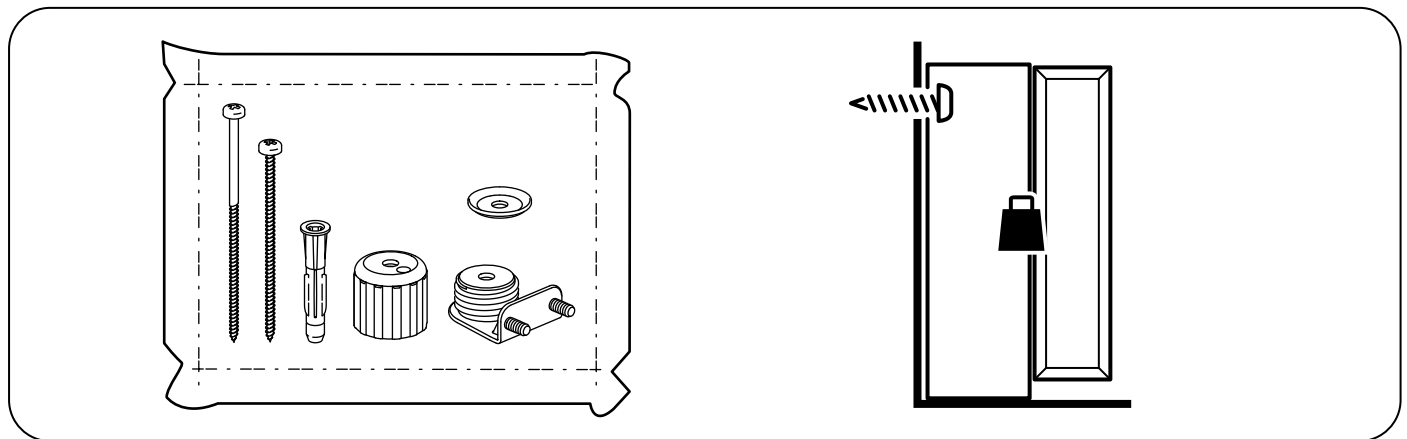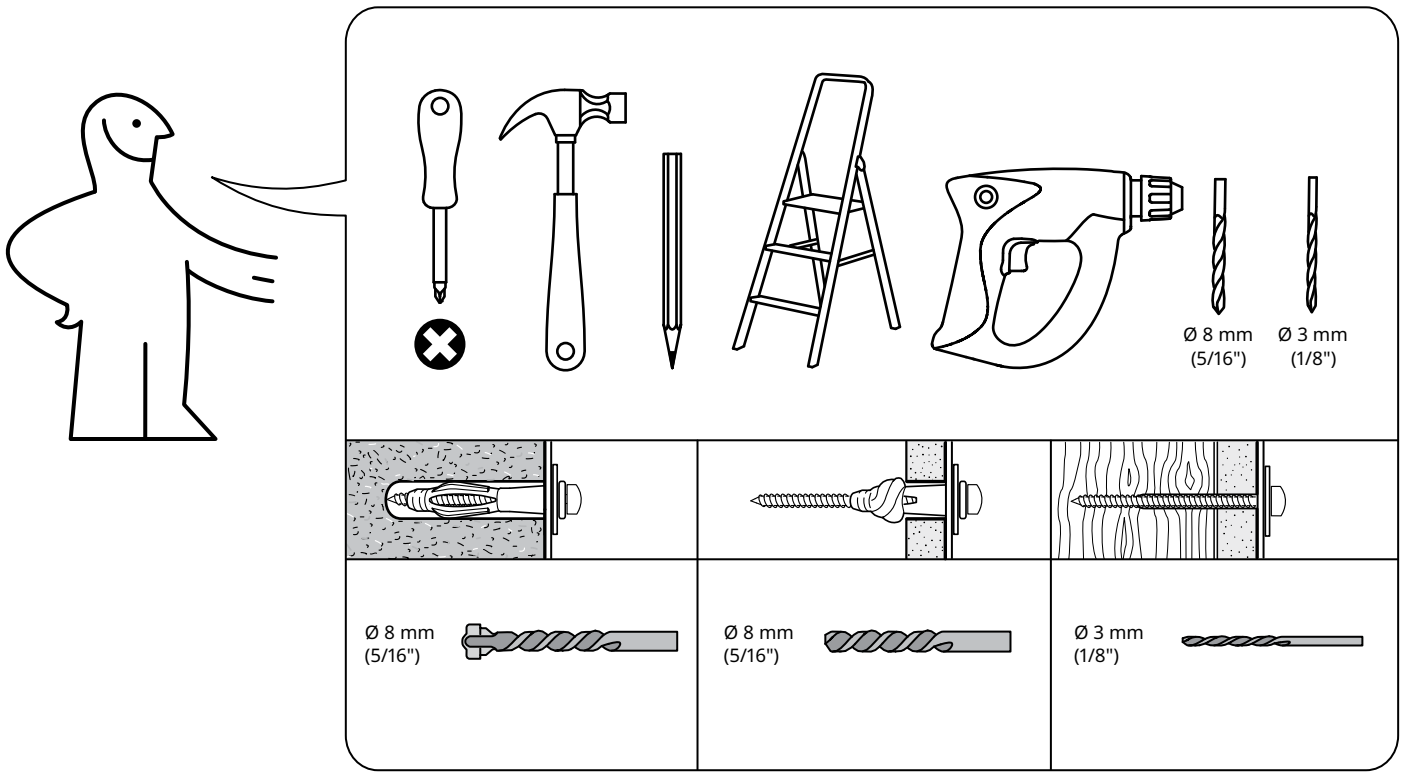

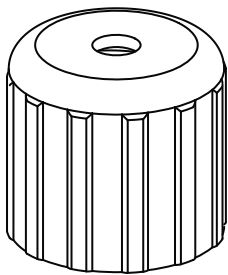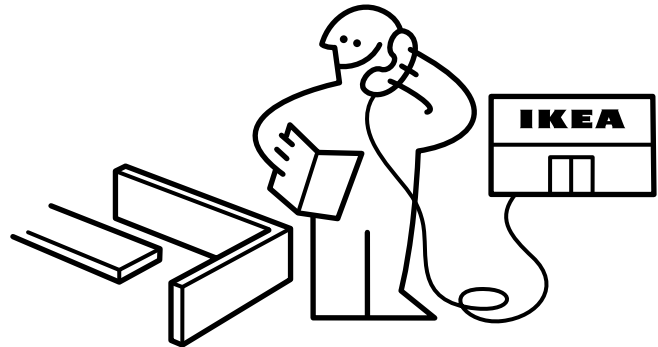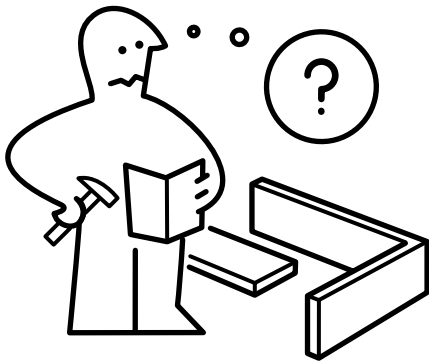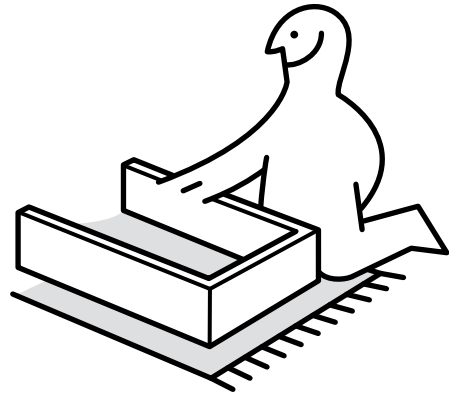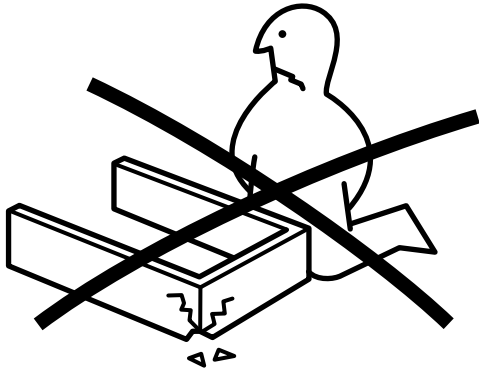


150689

 2x



126916

 2x

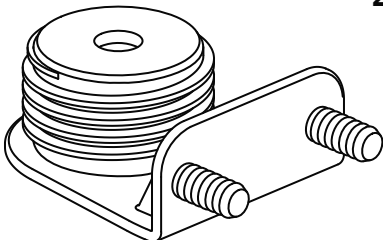


150688

2x




147968

 2x




158469

 2x







121714

 
2x

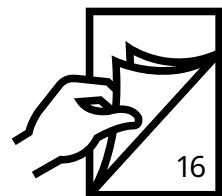


16

     327495

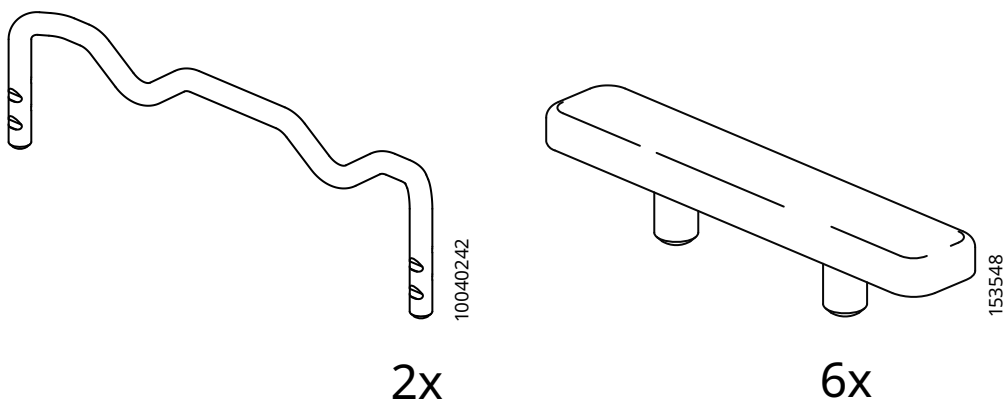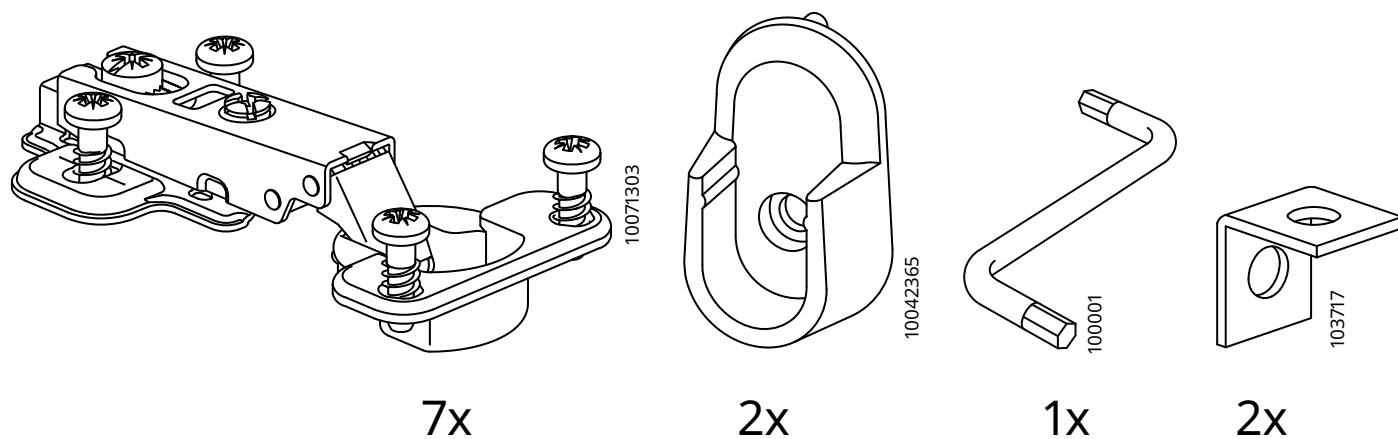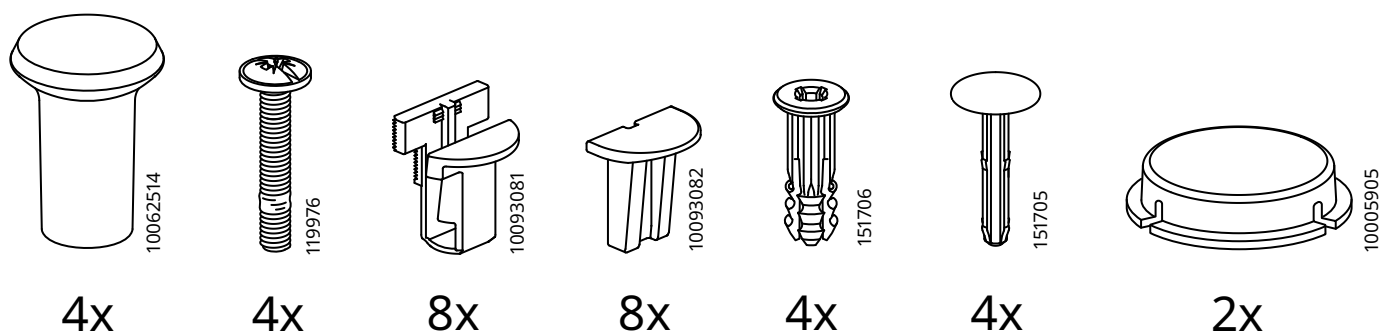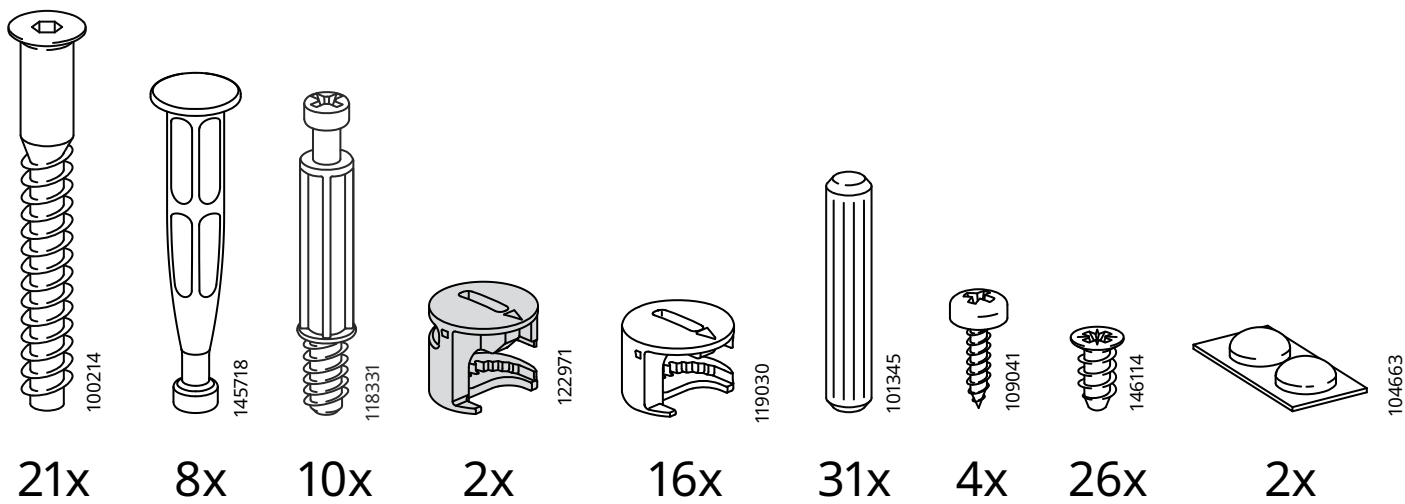


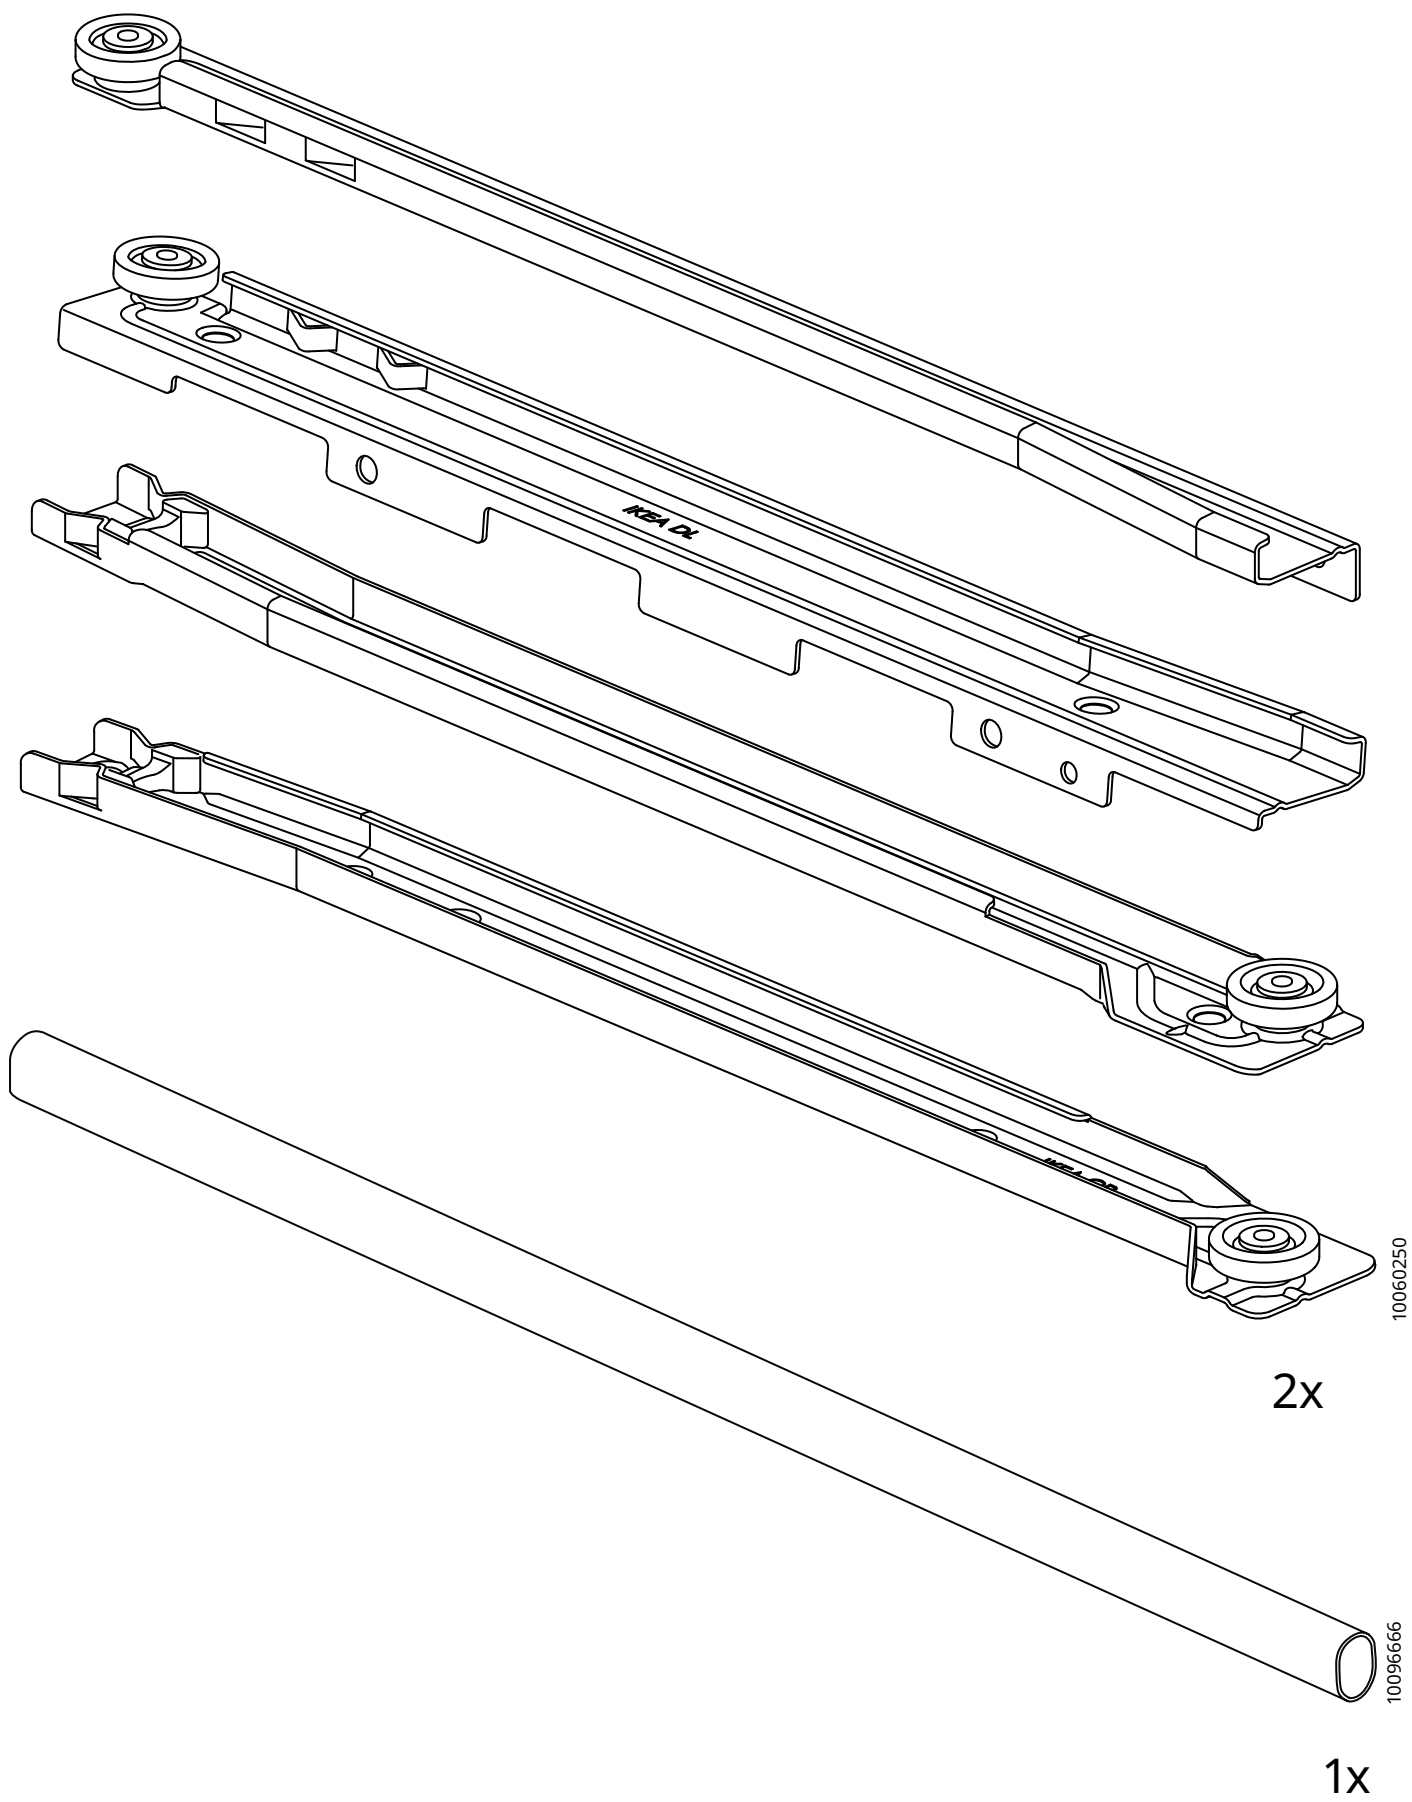


1

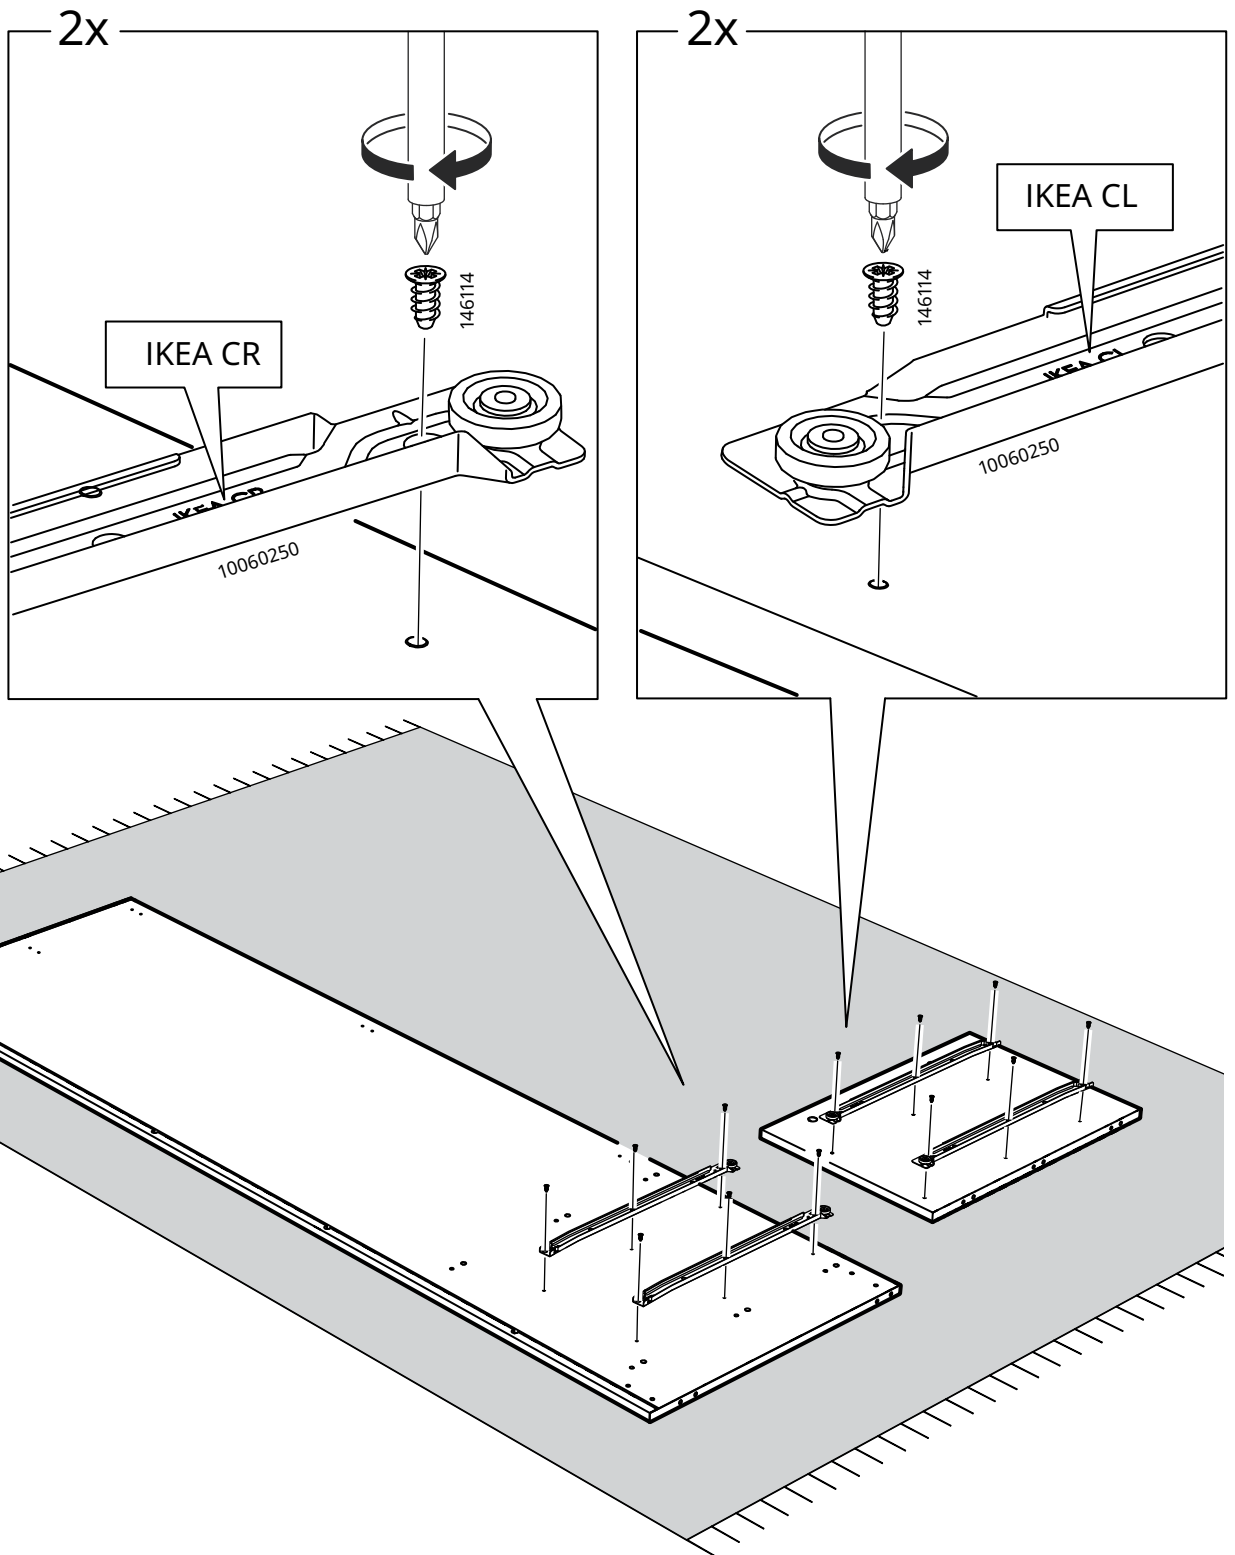 


2

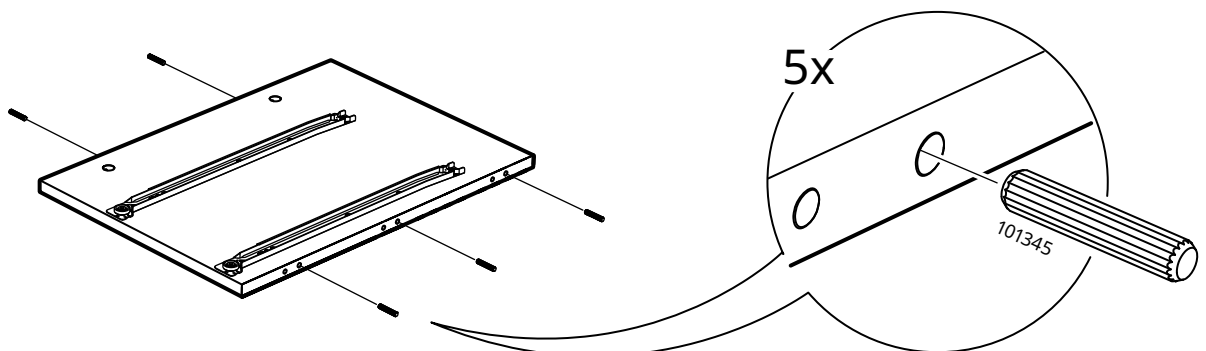 


3

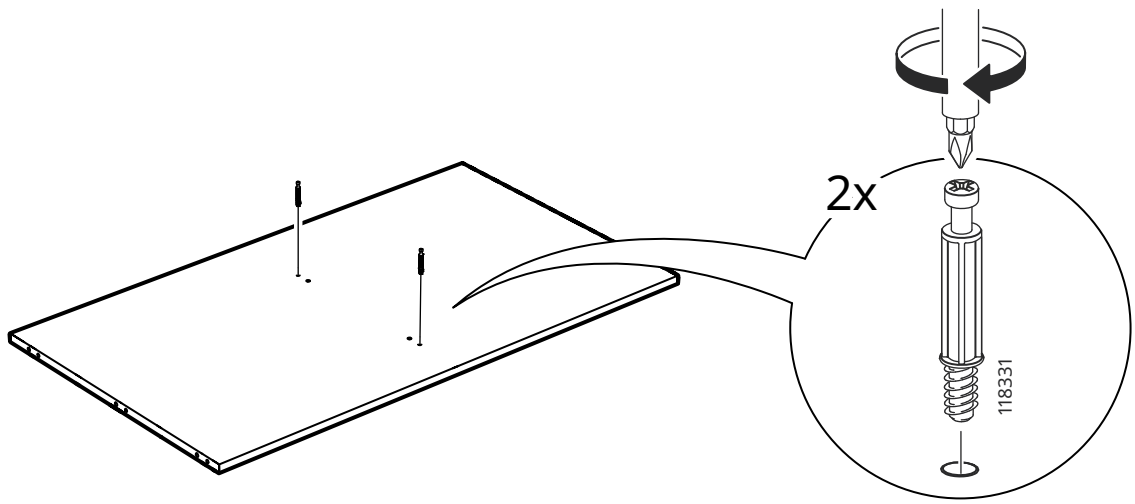 


4

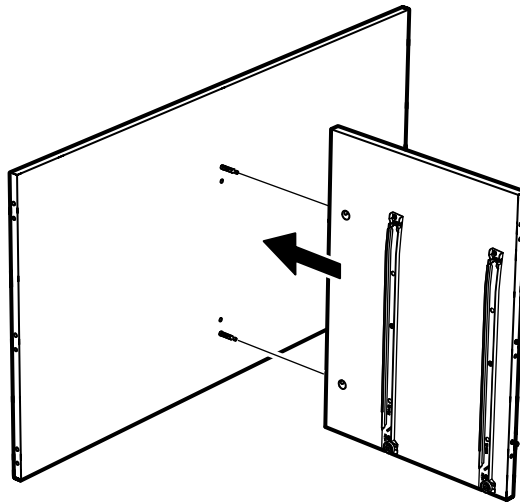 


5

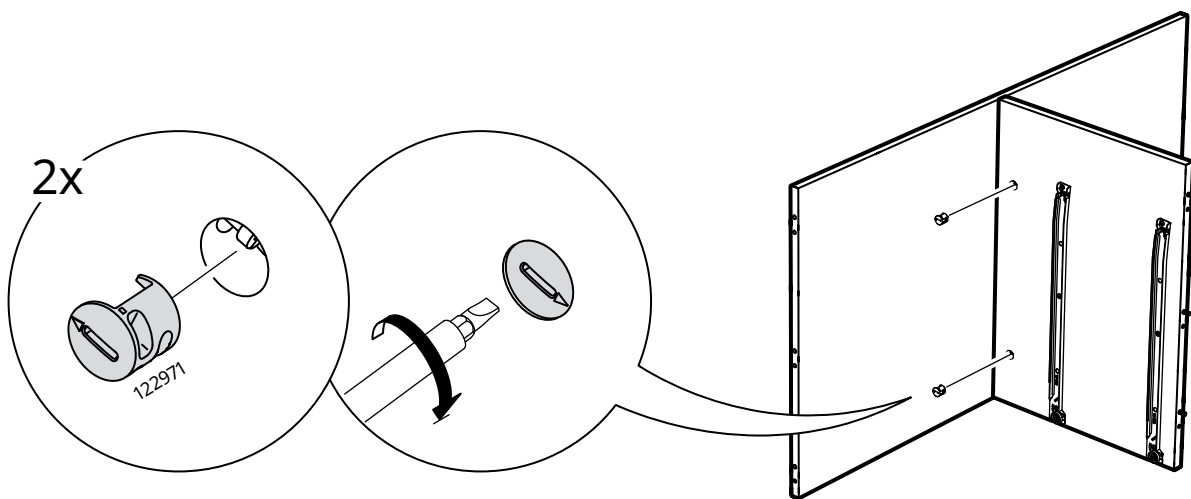 


6

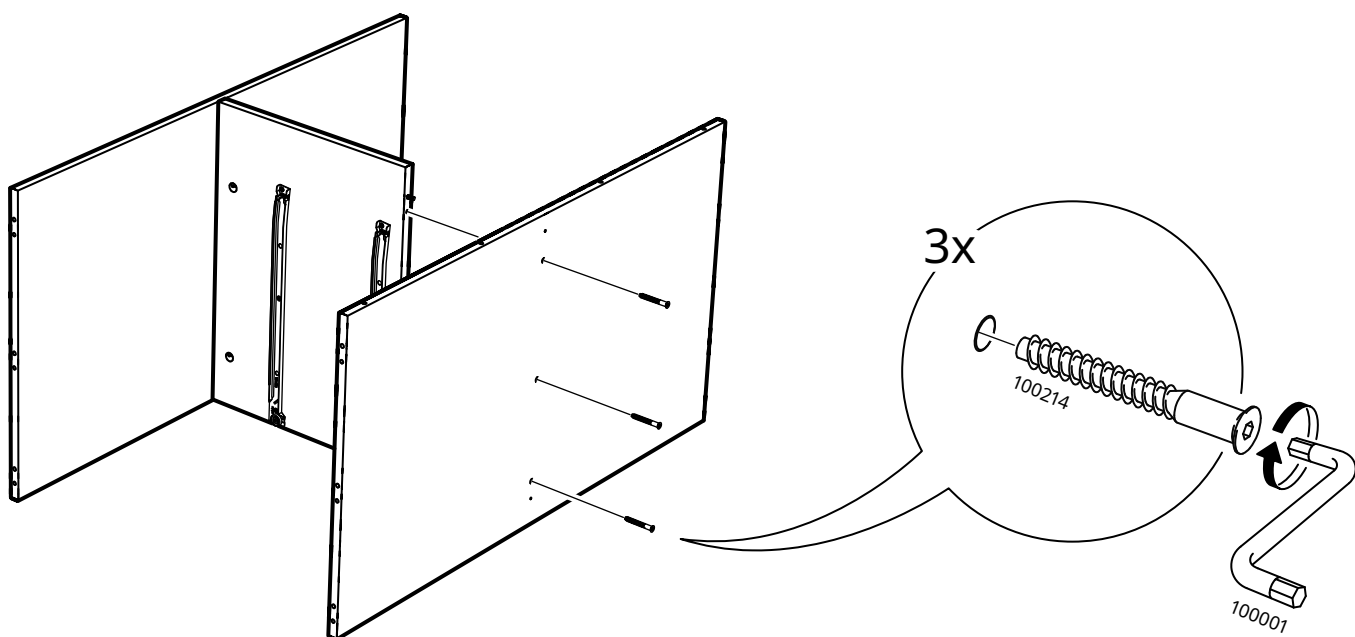 


7

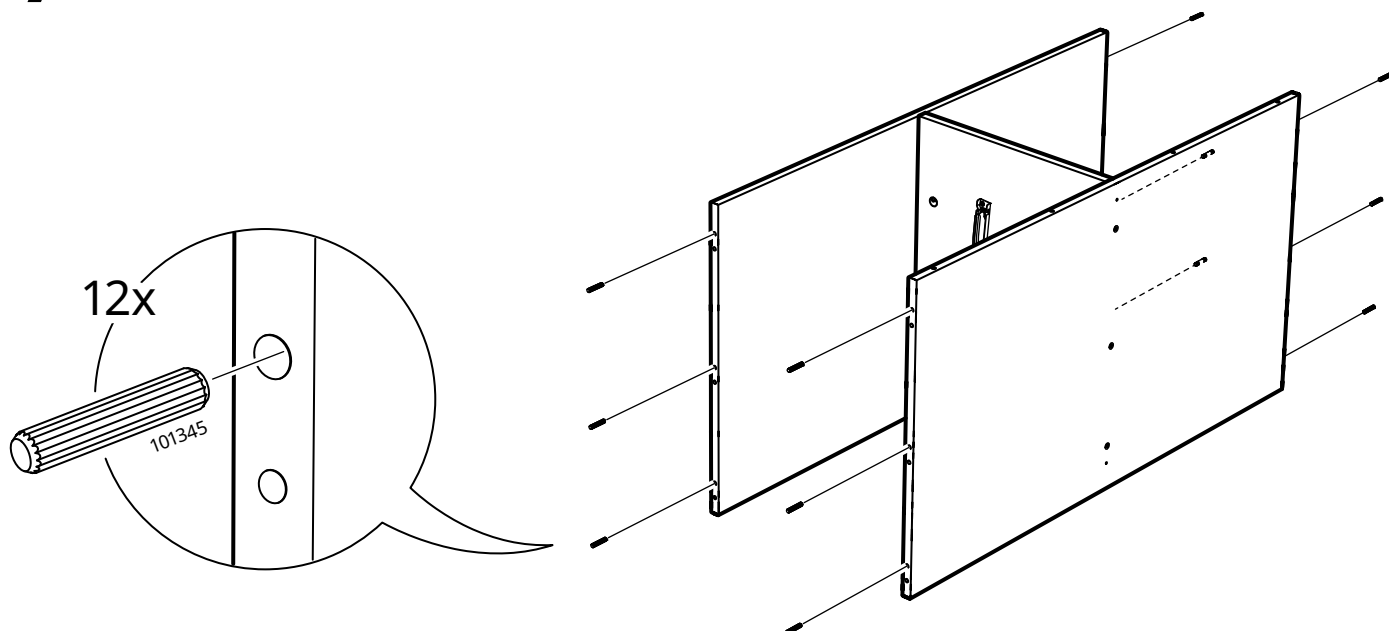 


8

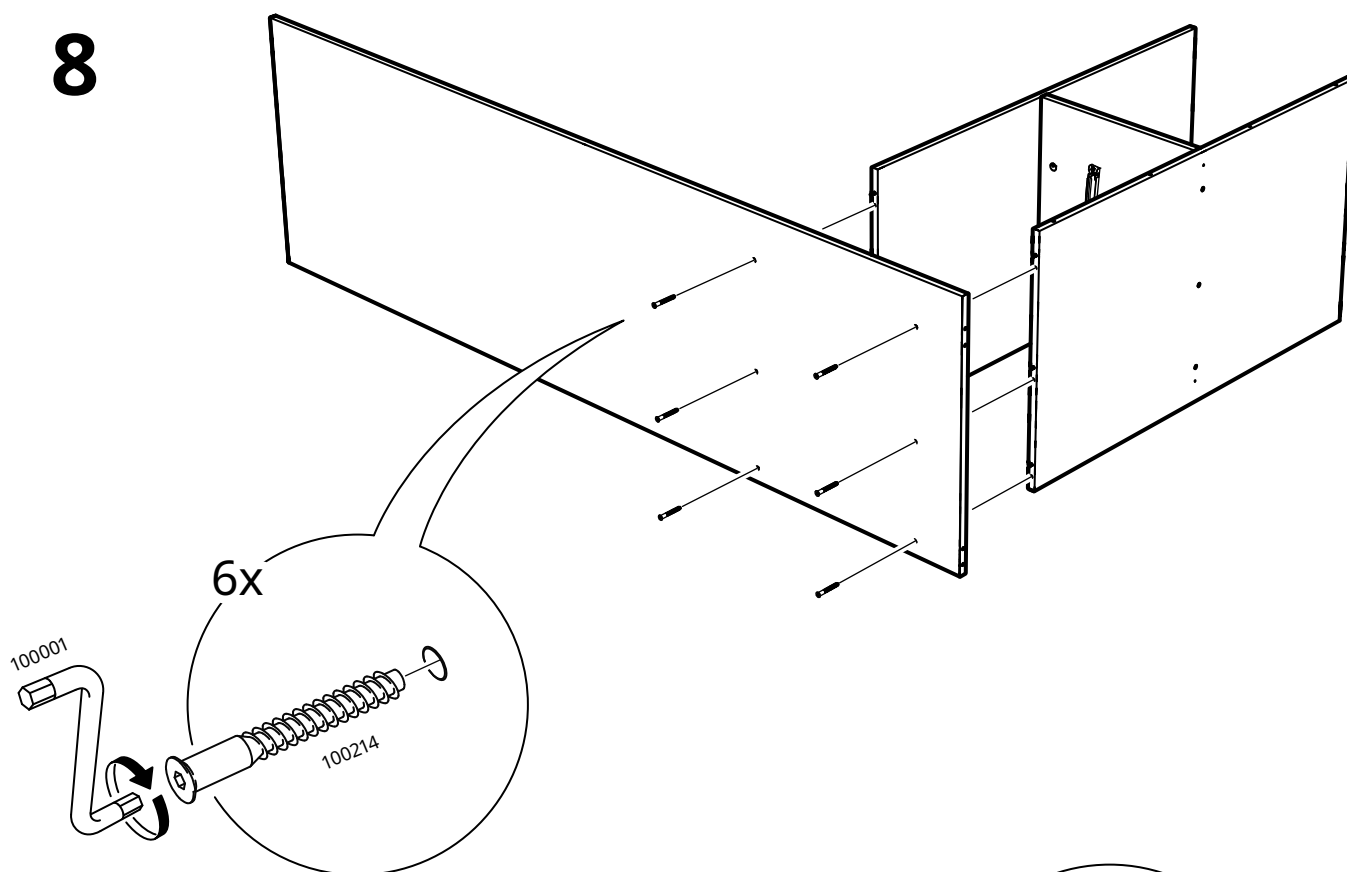 


9

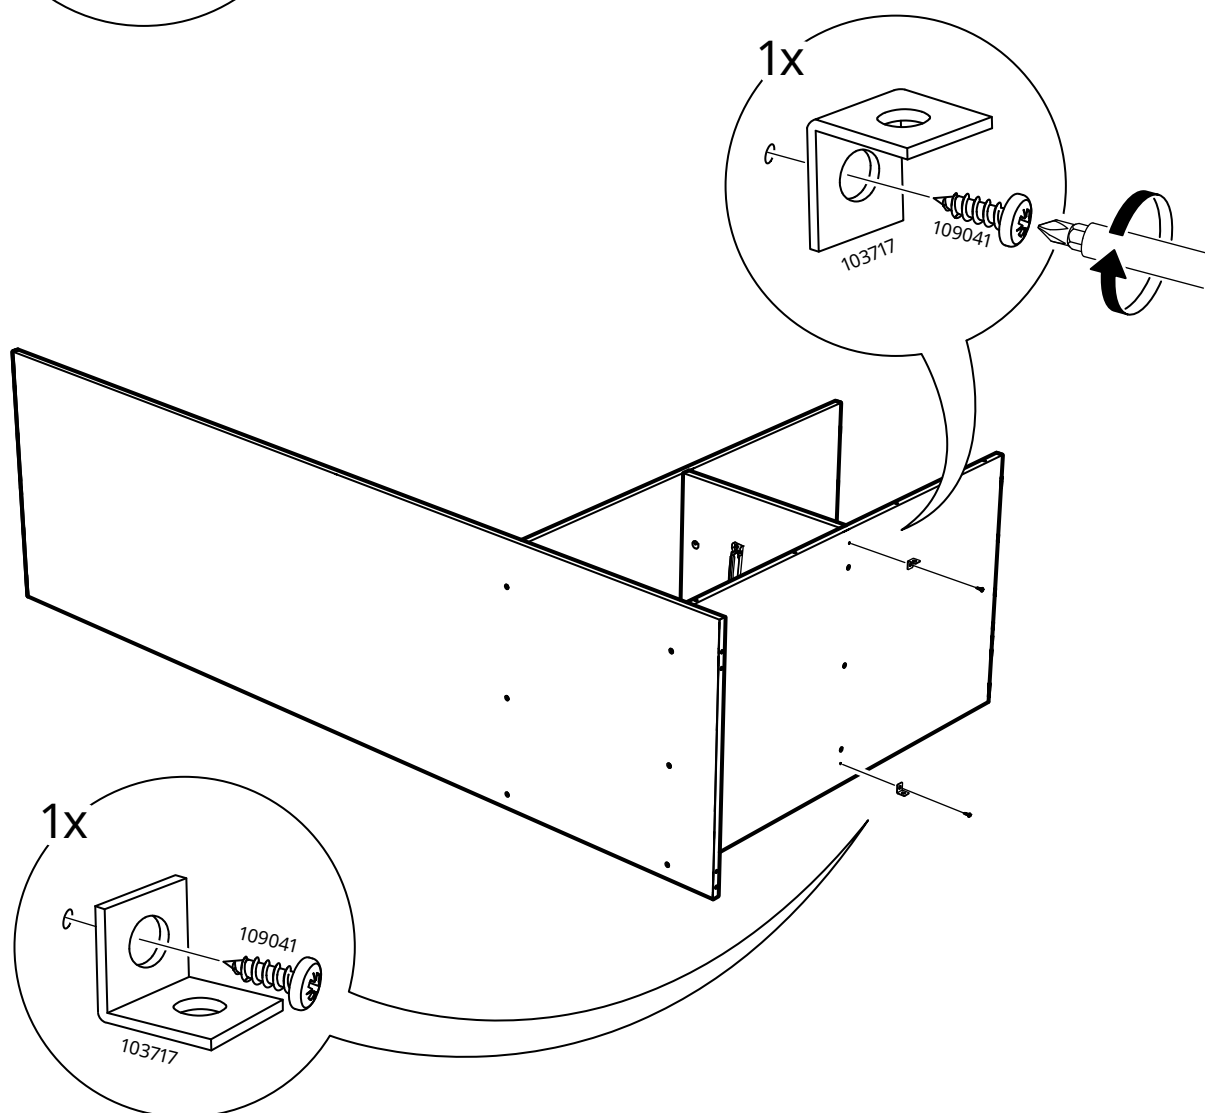 


10

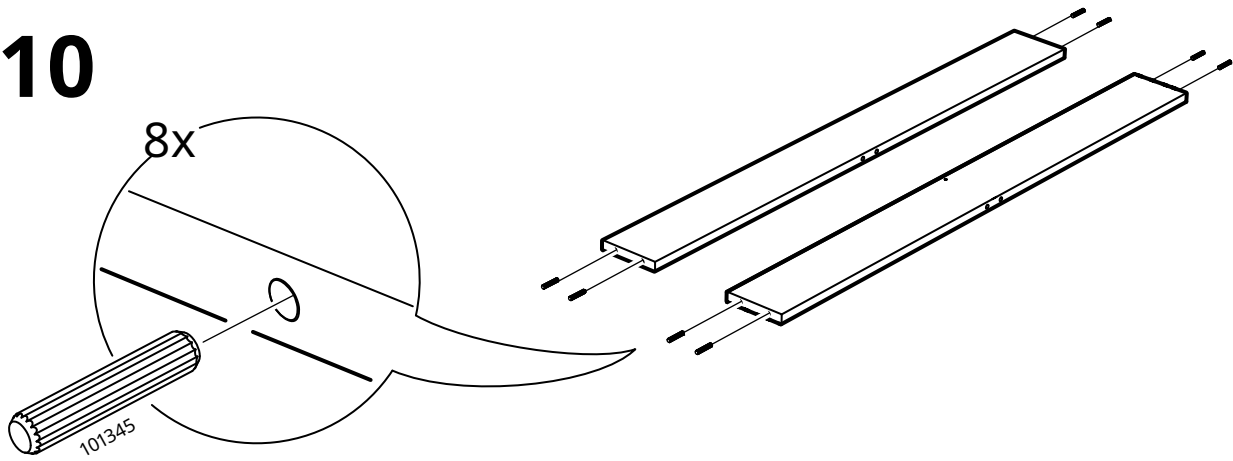 


11

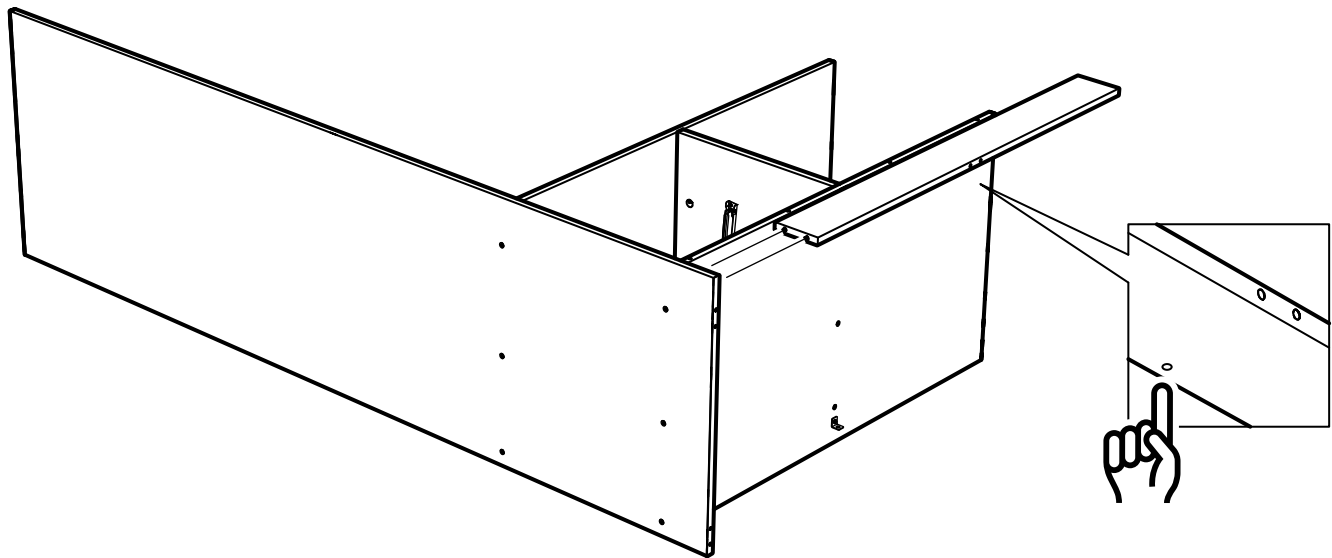 


12

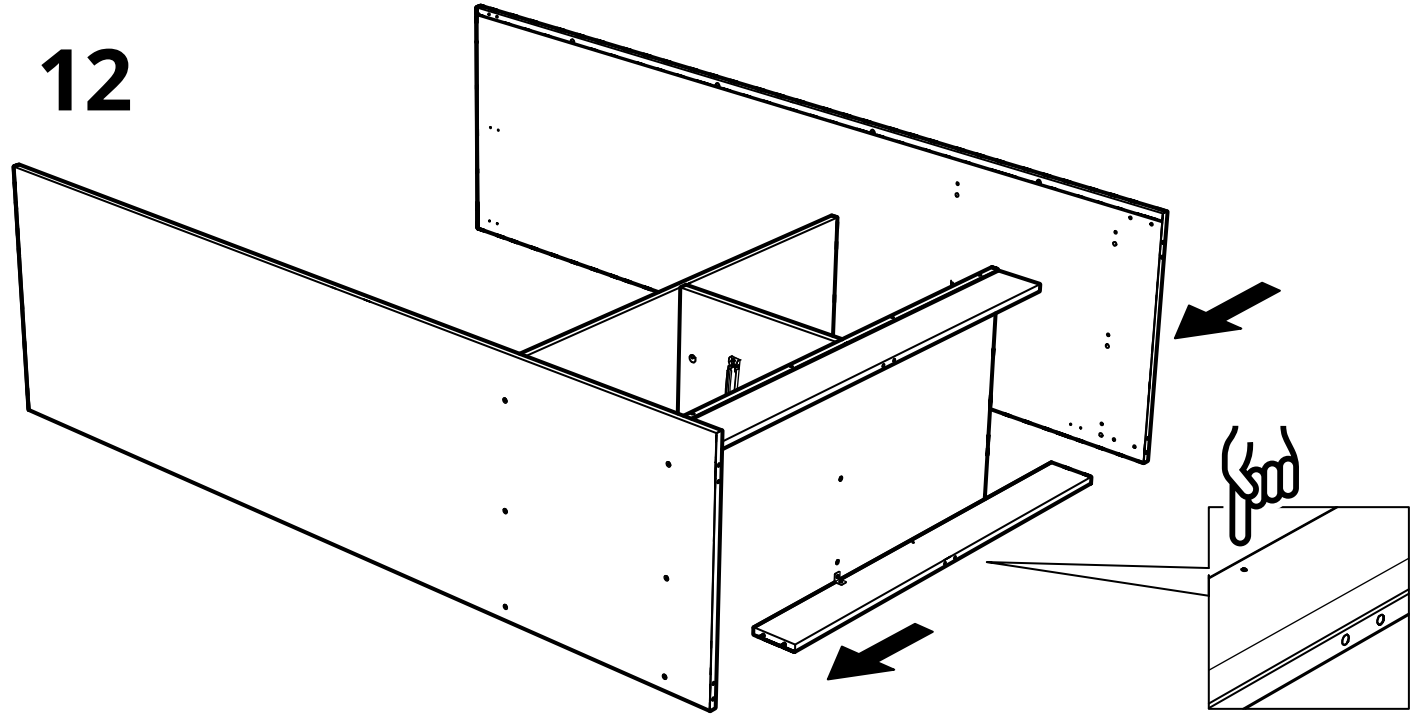 


13

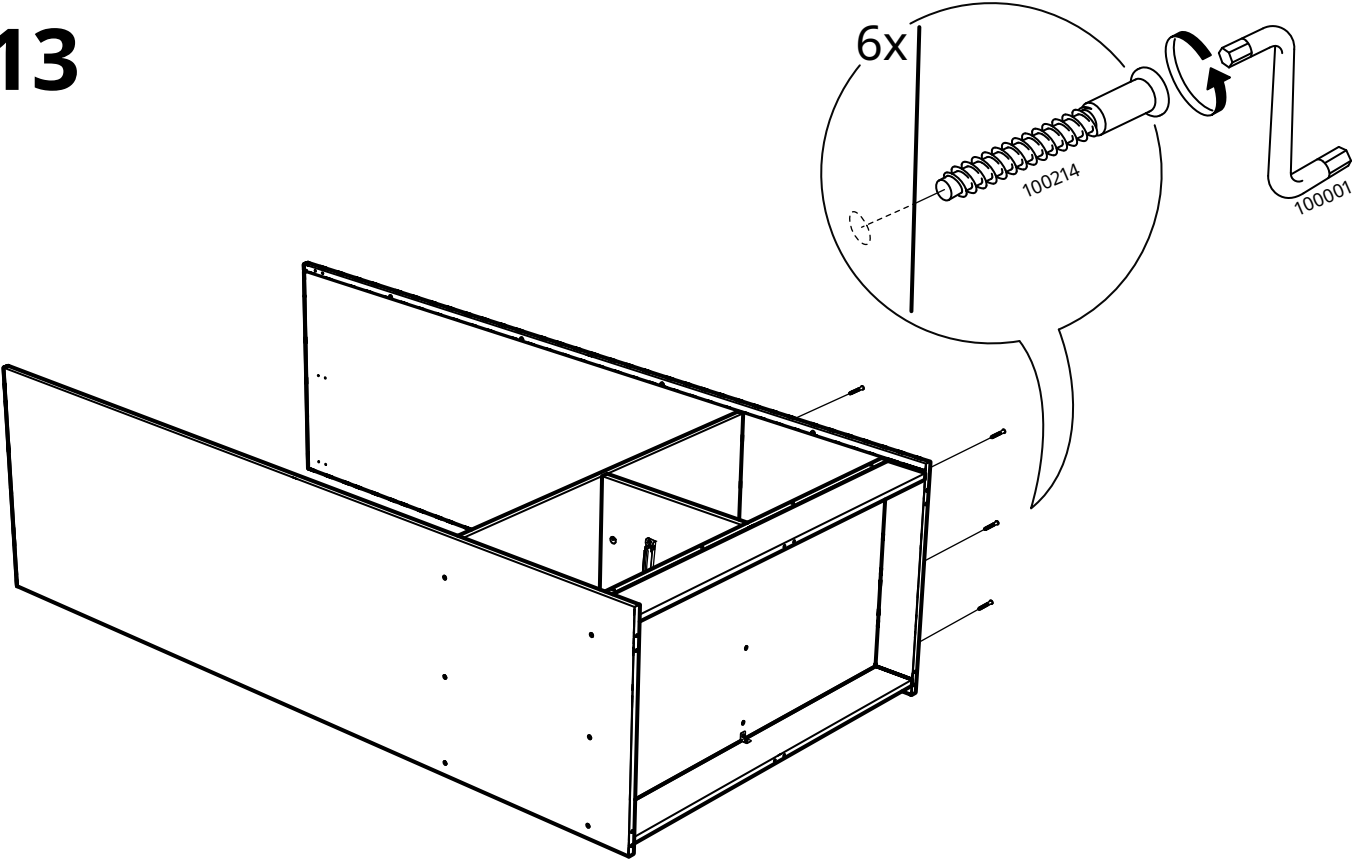 


14

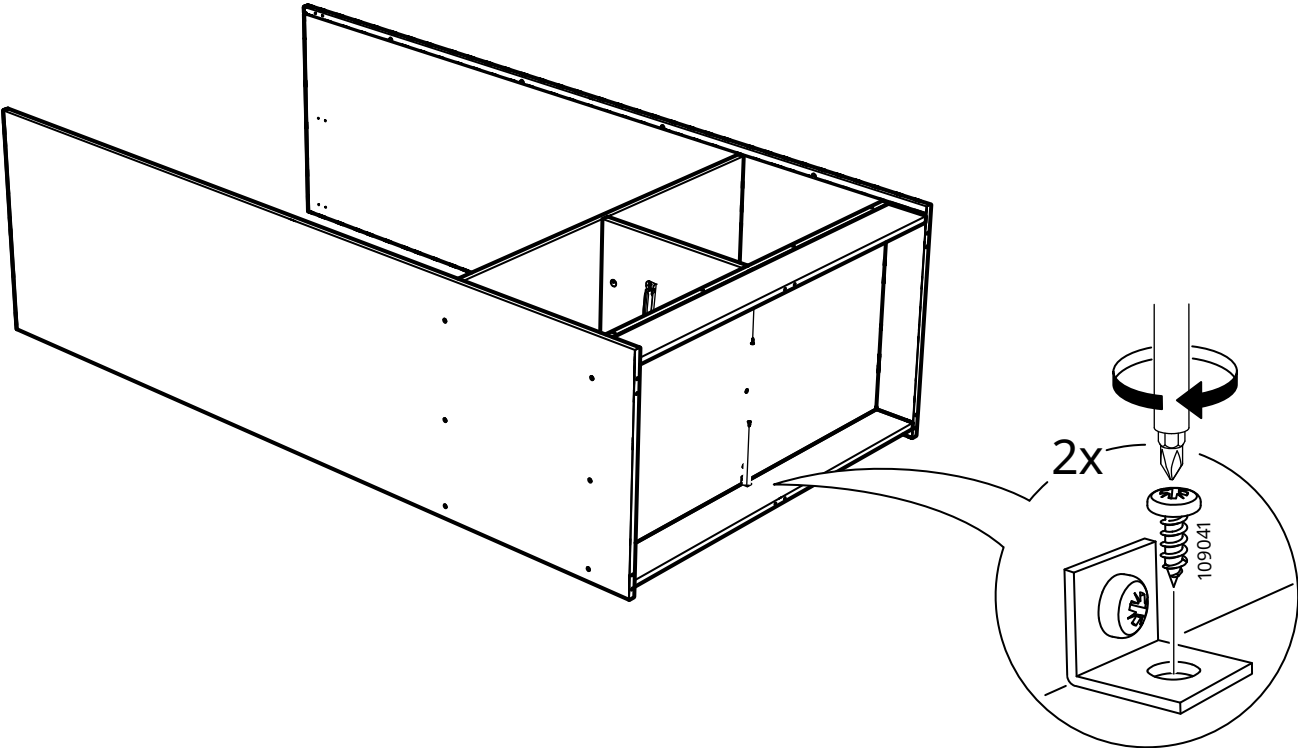 




15

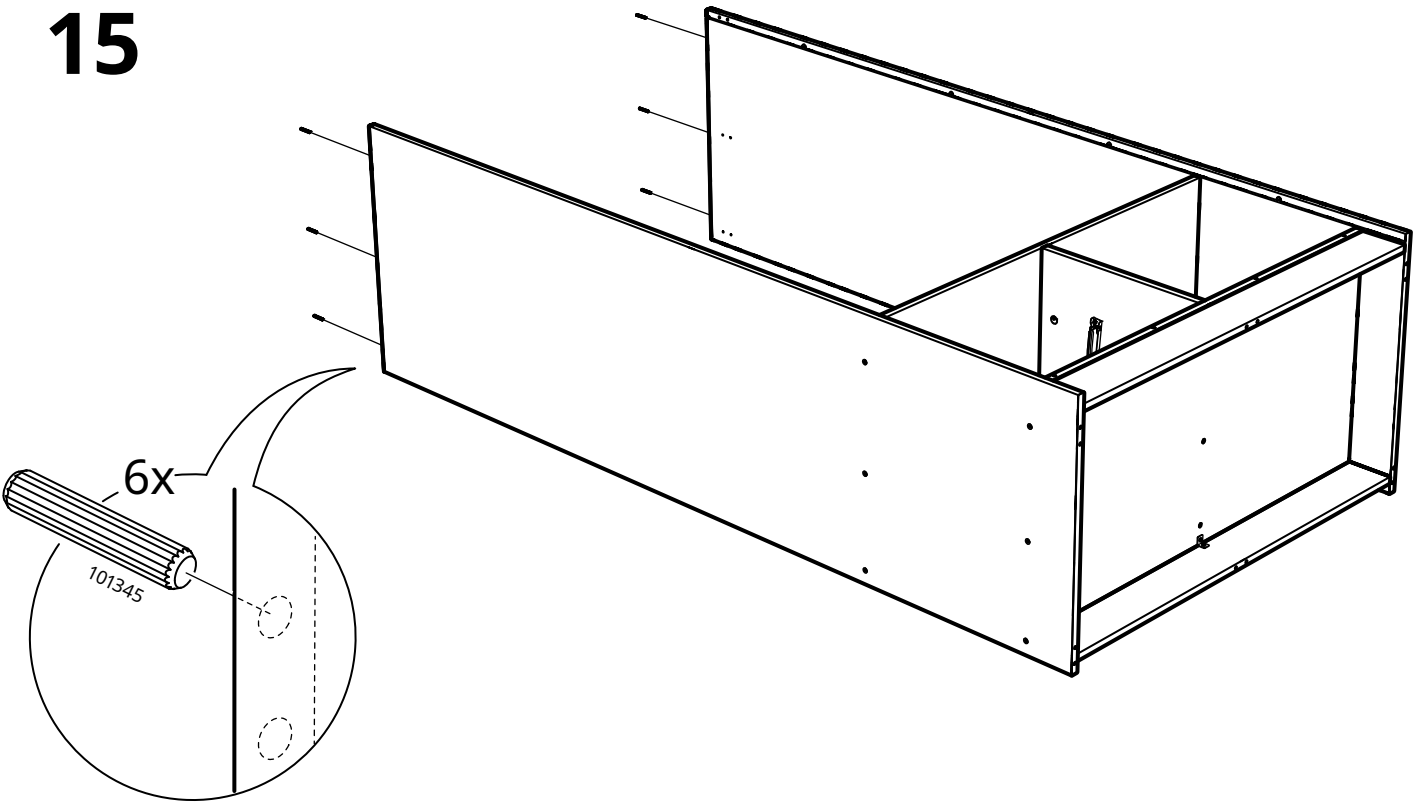 



16

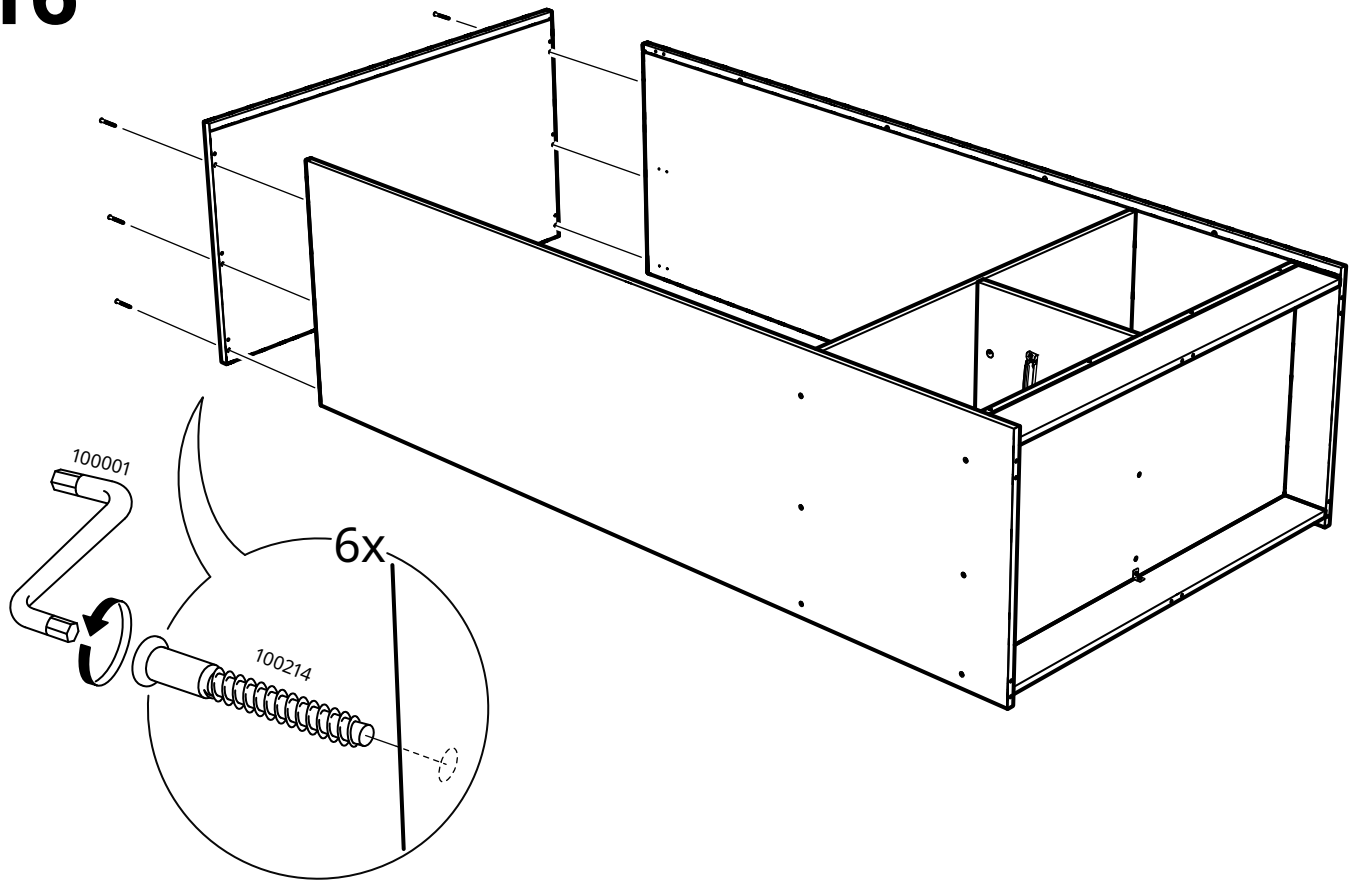 



17

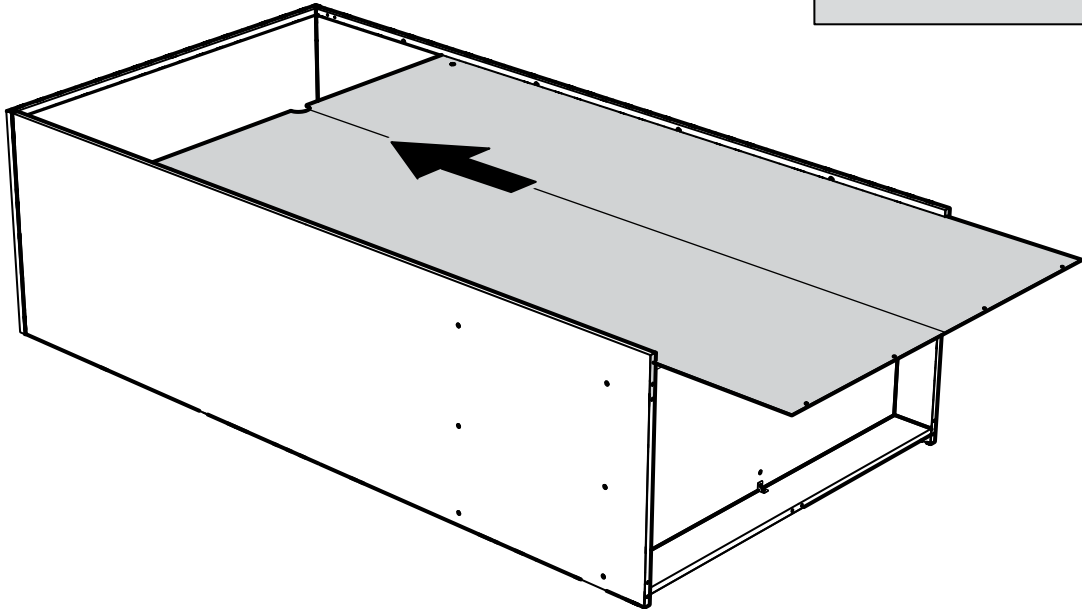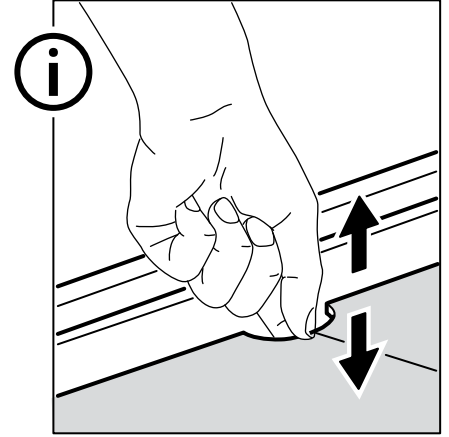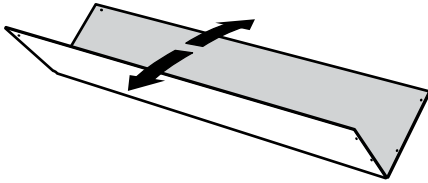   

18

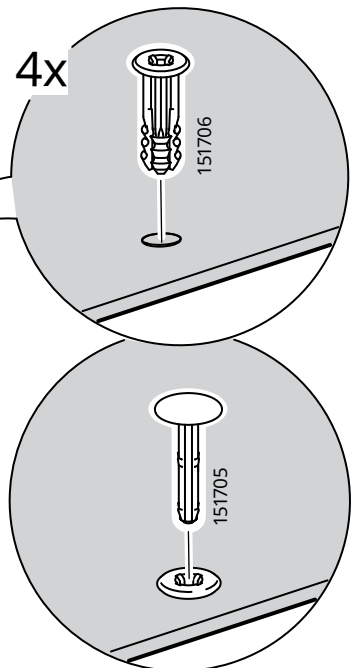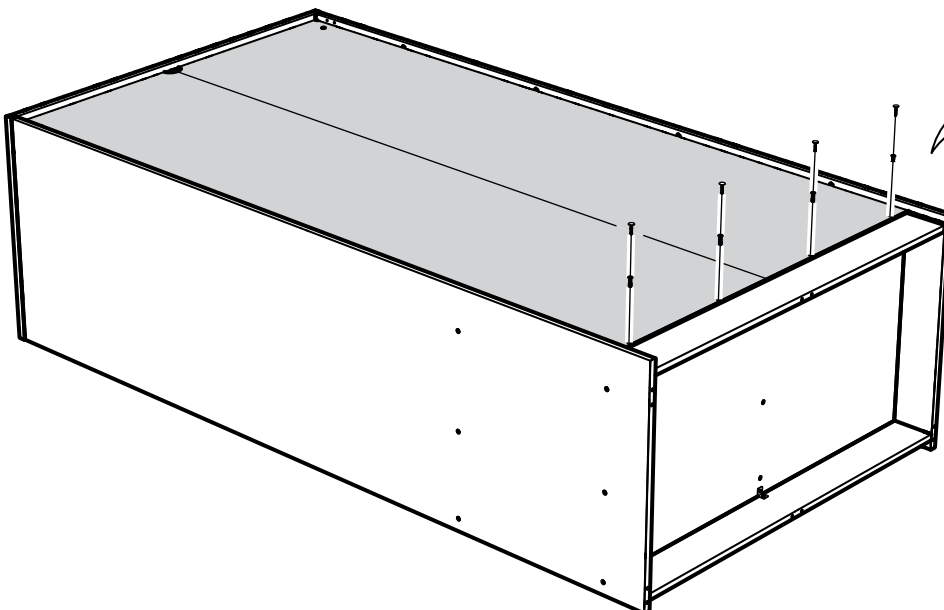  


19

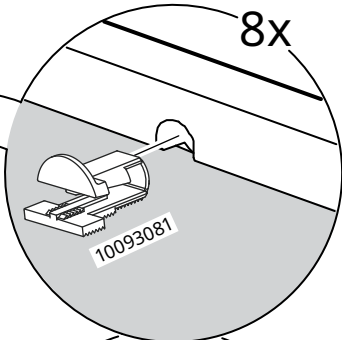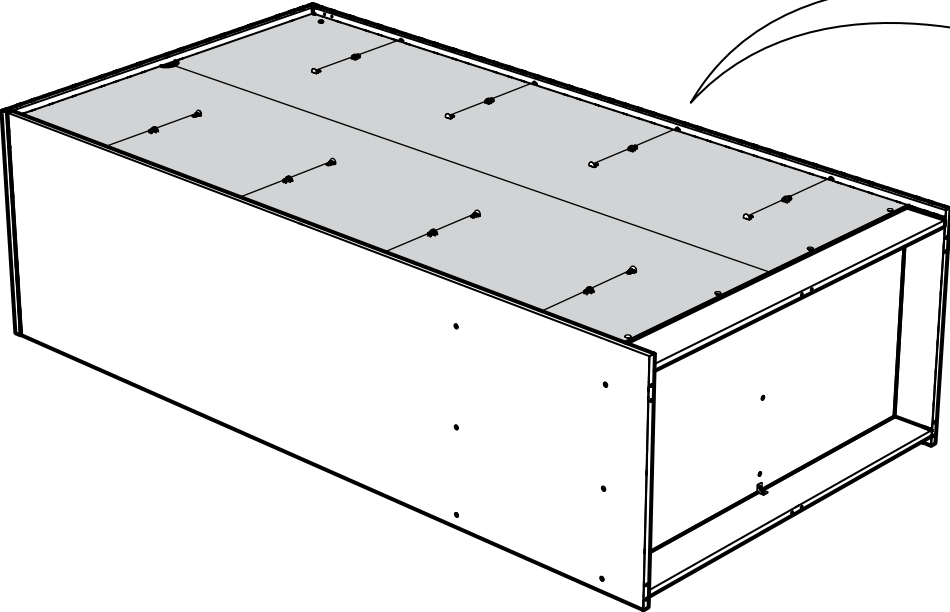  



8x

 10093081

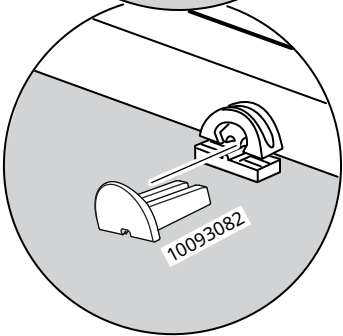

10093082

 
 
20

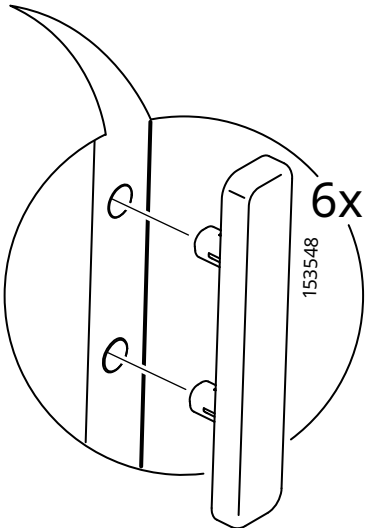
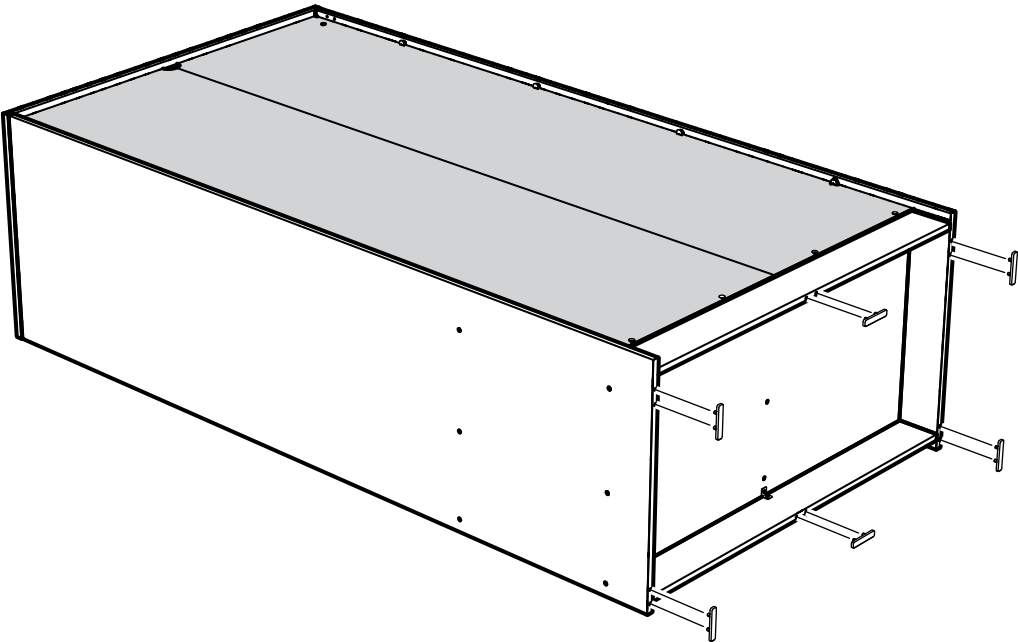


6x



153548

    21

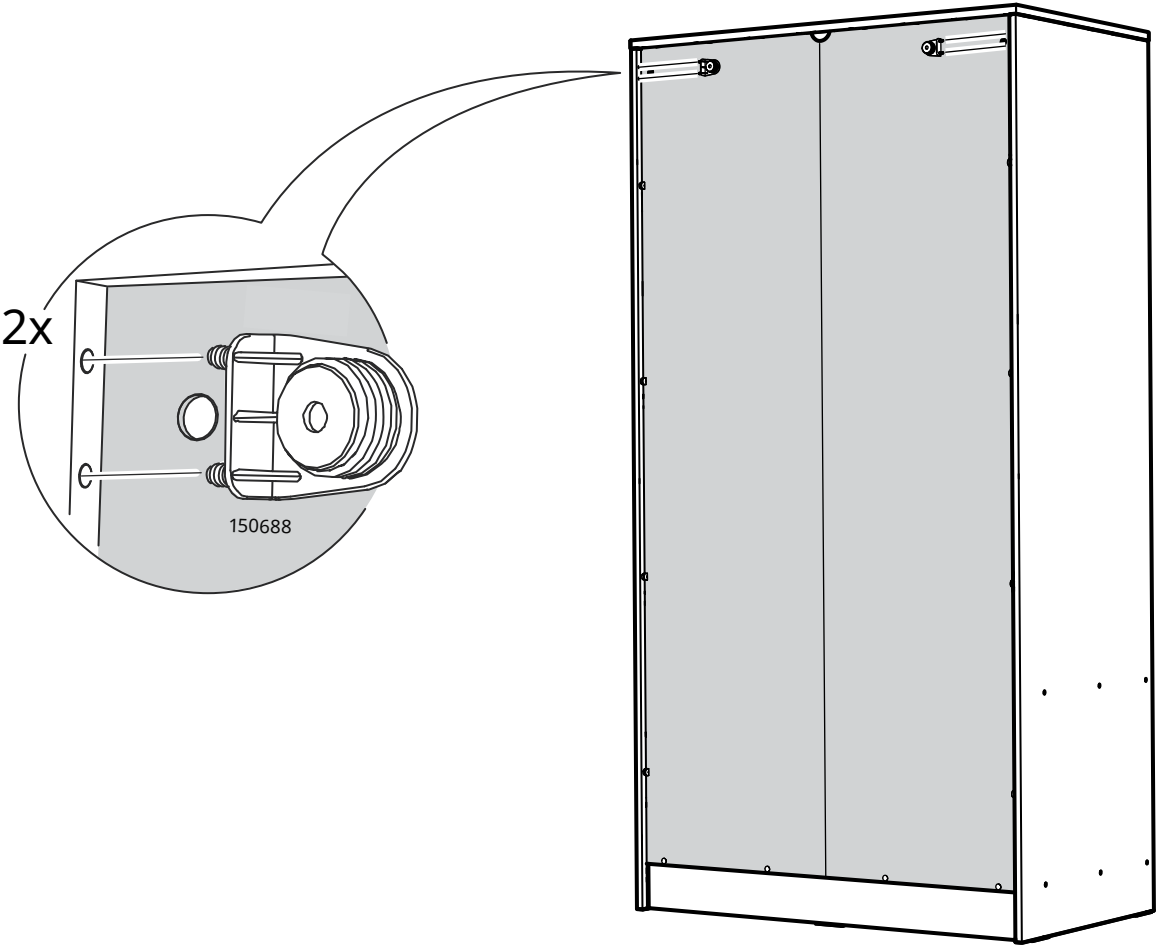
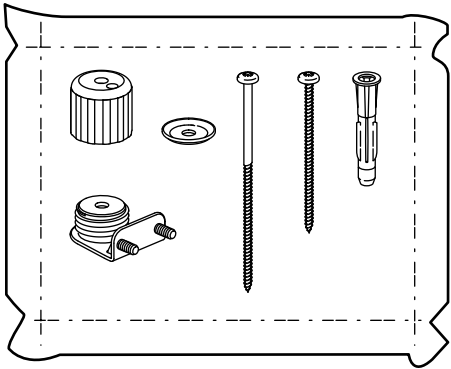


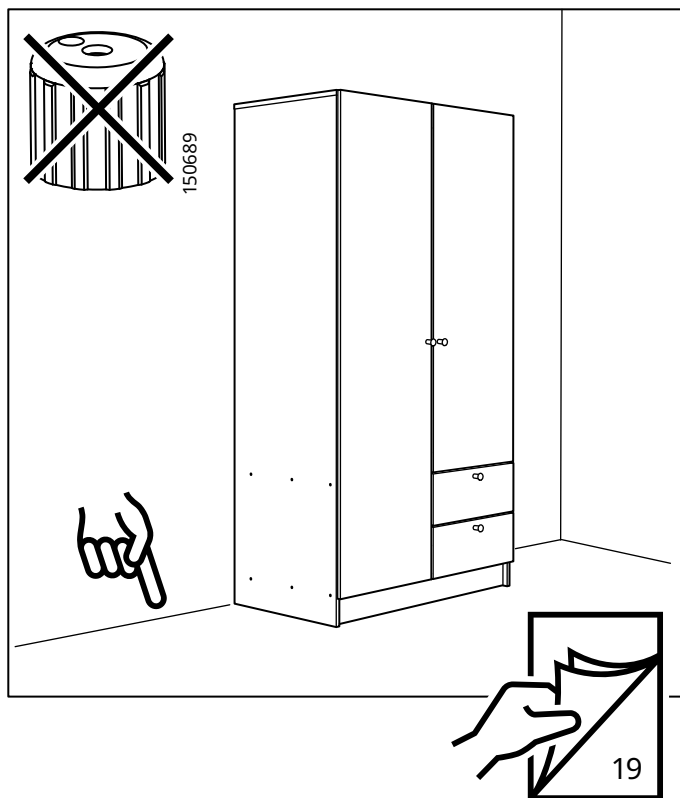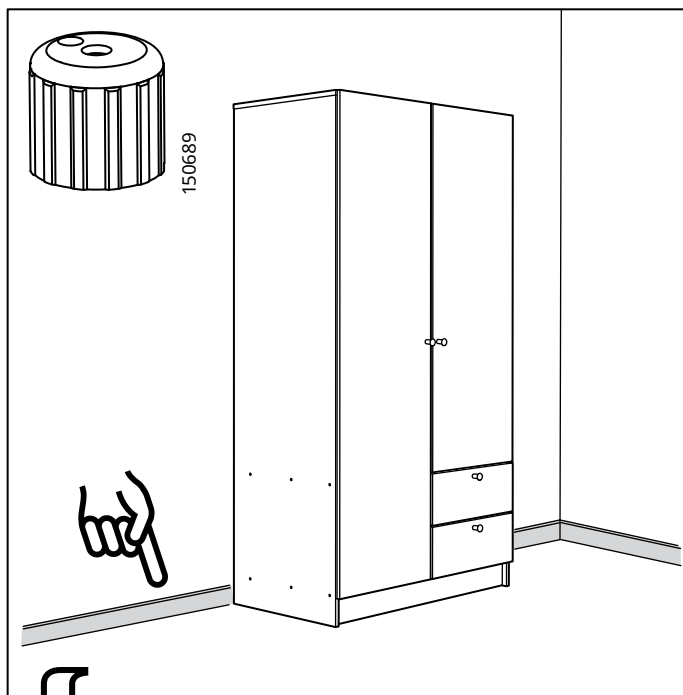



22

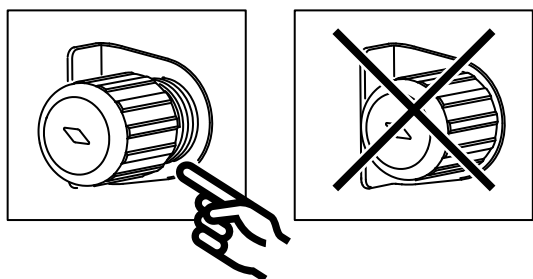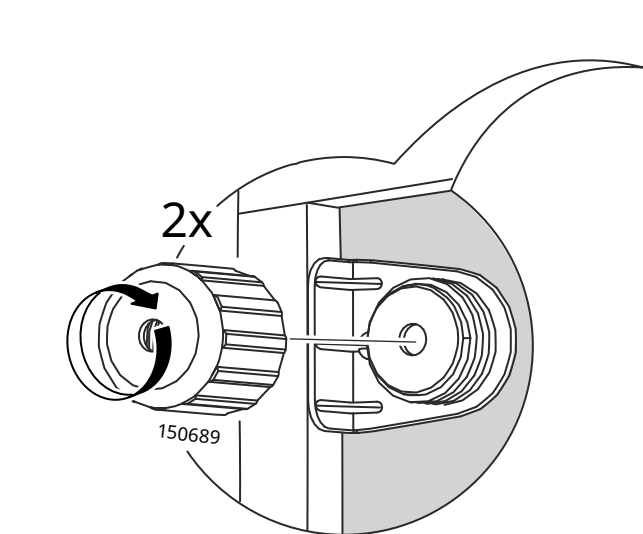  


23

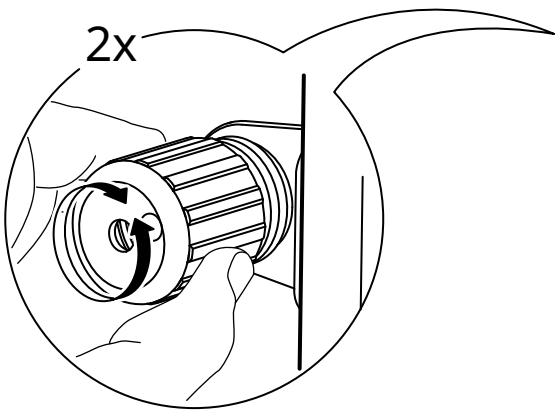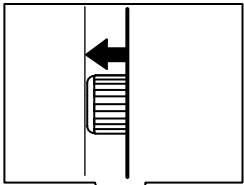  

24

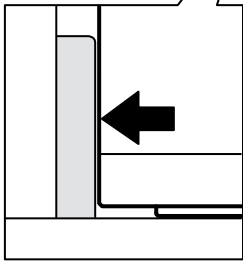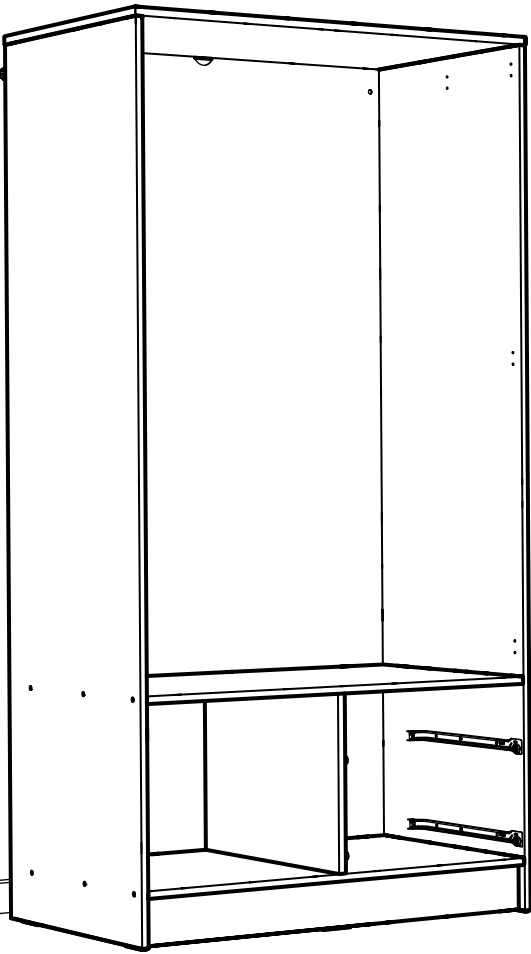  


25

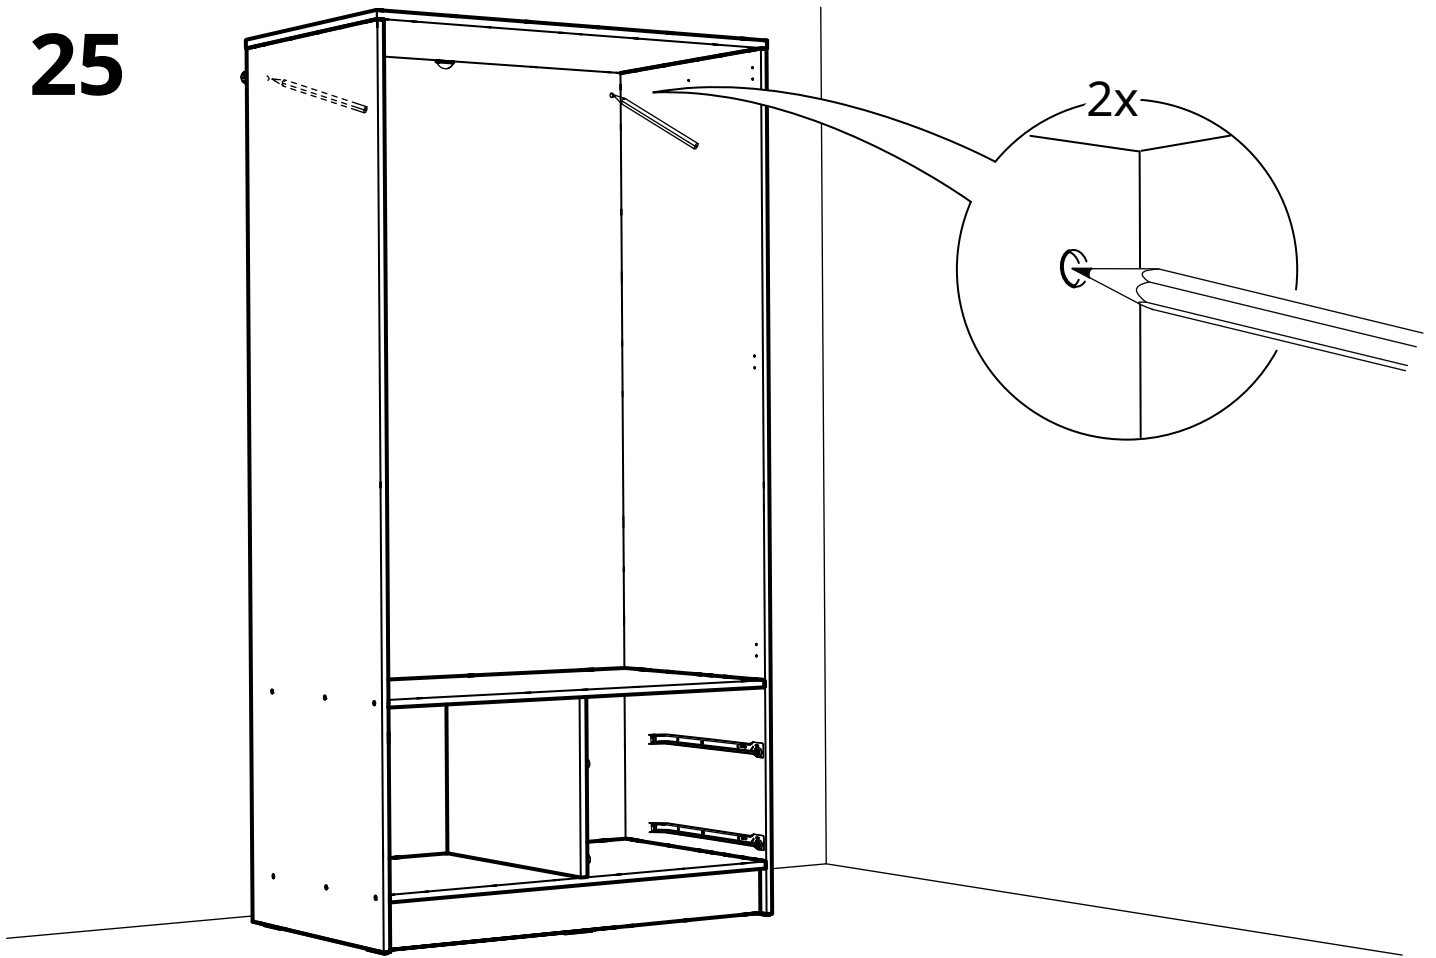 

26

  
x

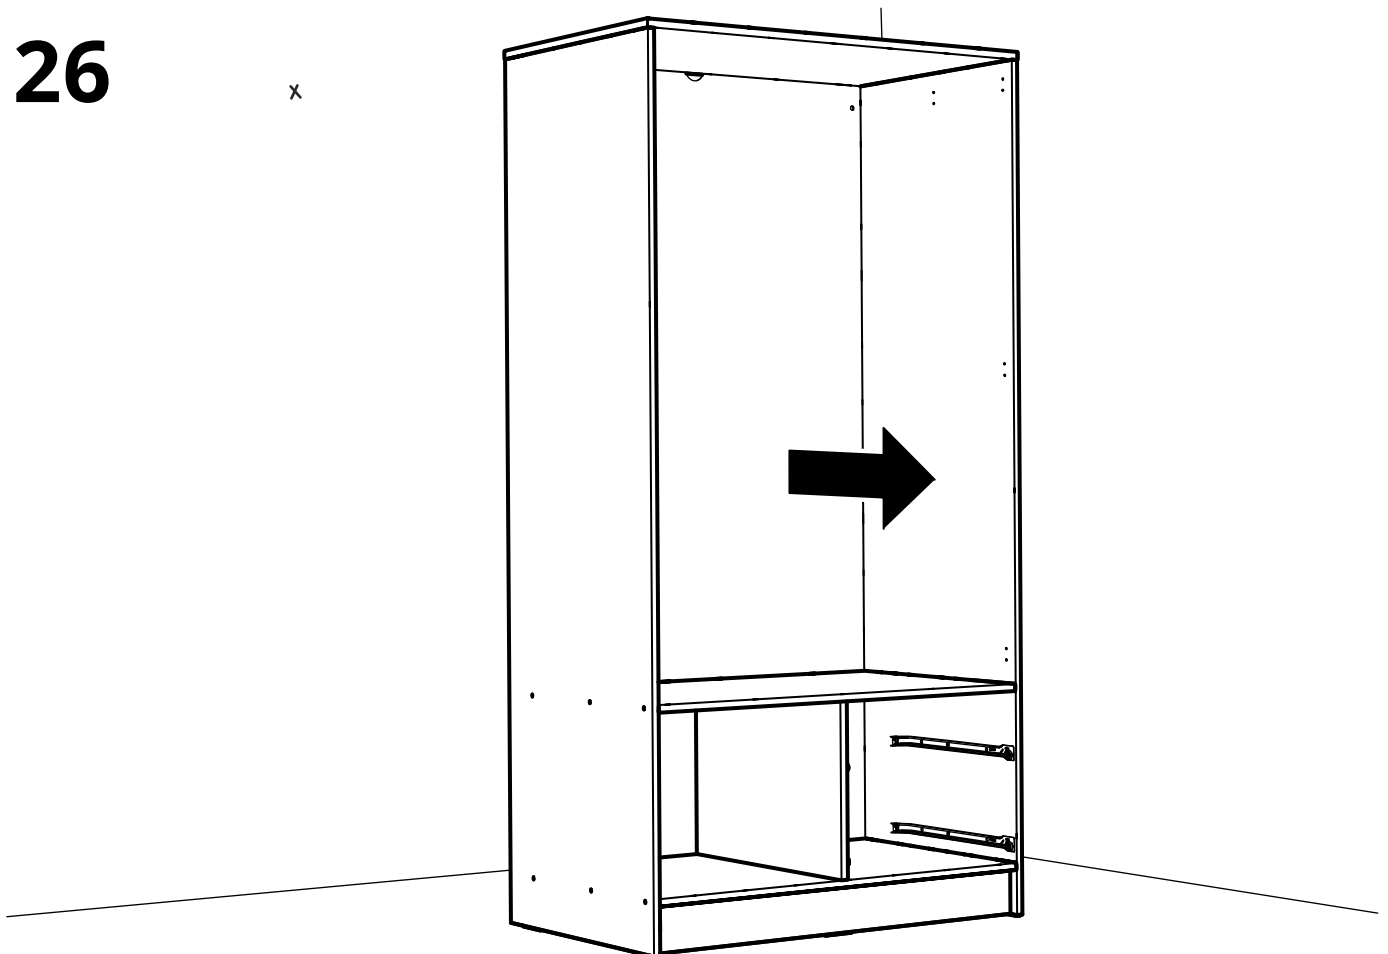



 
 
 



 
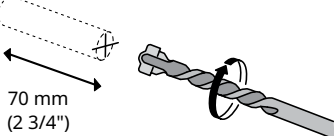 
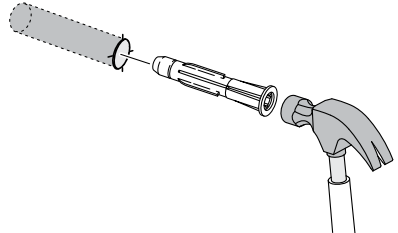 
 
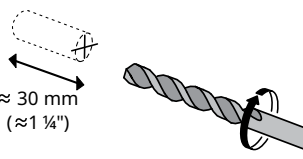 
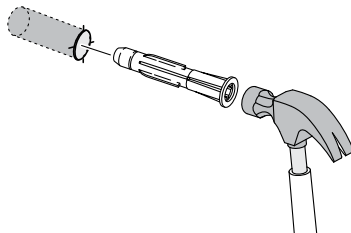 
 
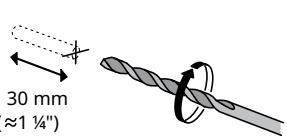 


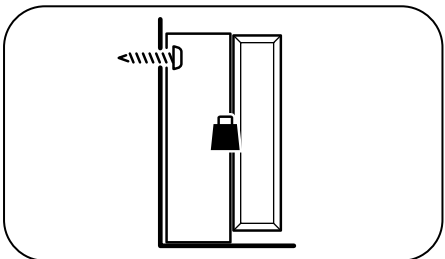
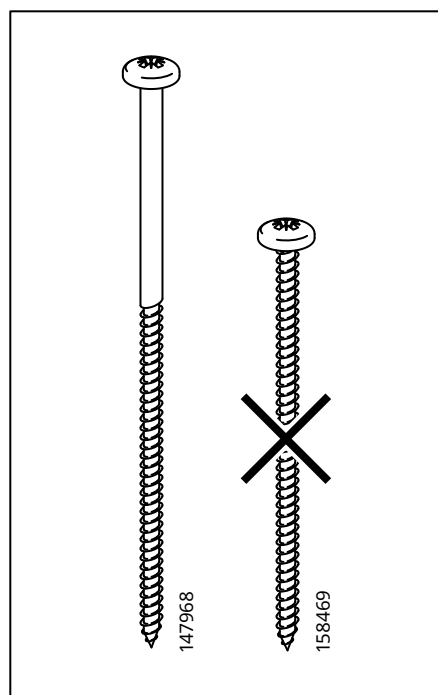 
www.IKEA.com/secure-it
www.IKEA.cn/secure-it




27

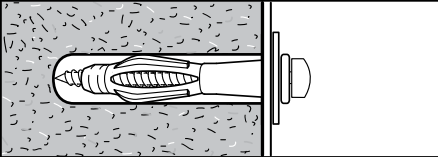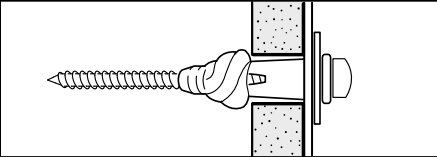
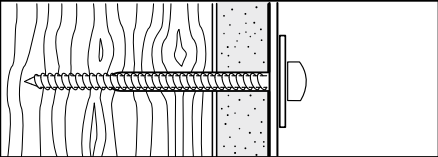
English
The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A	B	C
		
Ø 8 mm (5/16") 	Ø 8 mm (5/16") 	Ø 3 mm (1/8") 
<div>1</div>  <div>2</div>  <div>3</div> 	<div>1</div>  <div>2</div>  <div>3</div> 	<div>1</div>  <div>2</div>  <div>3</div> 




   28

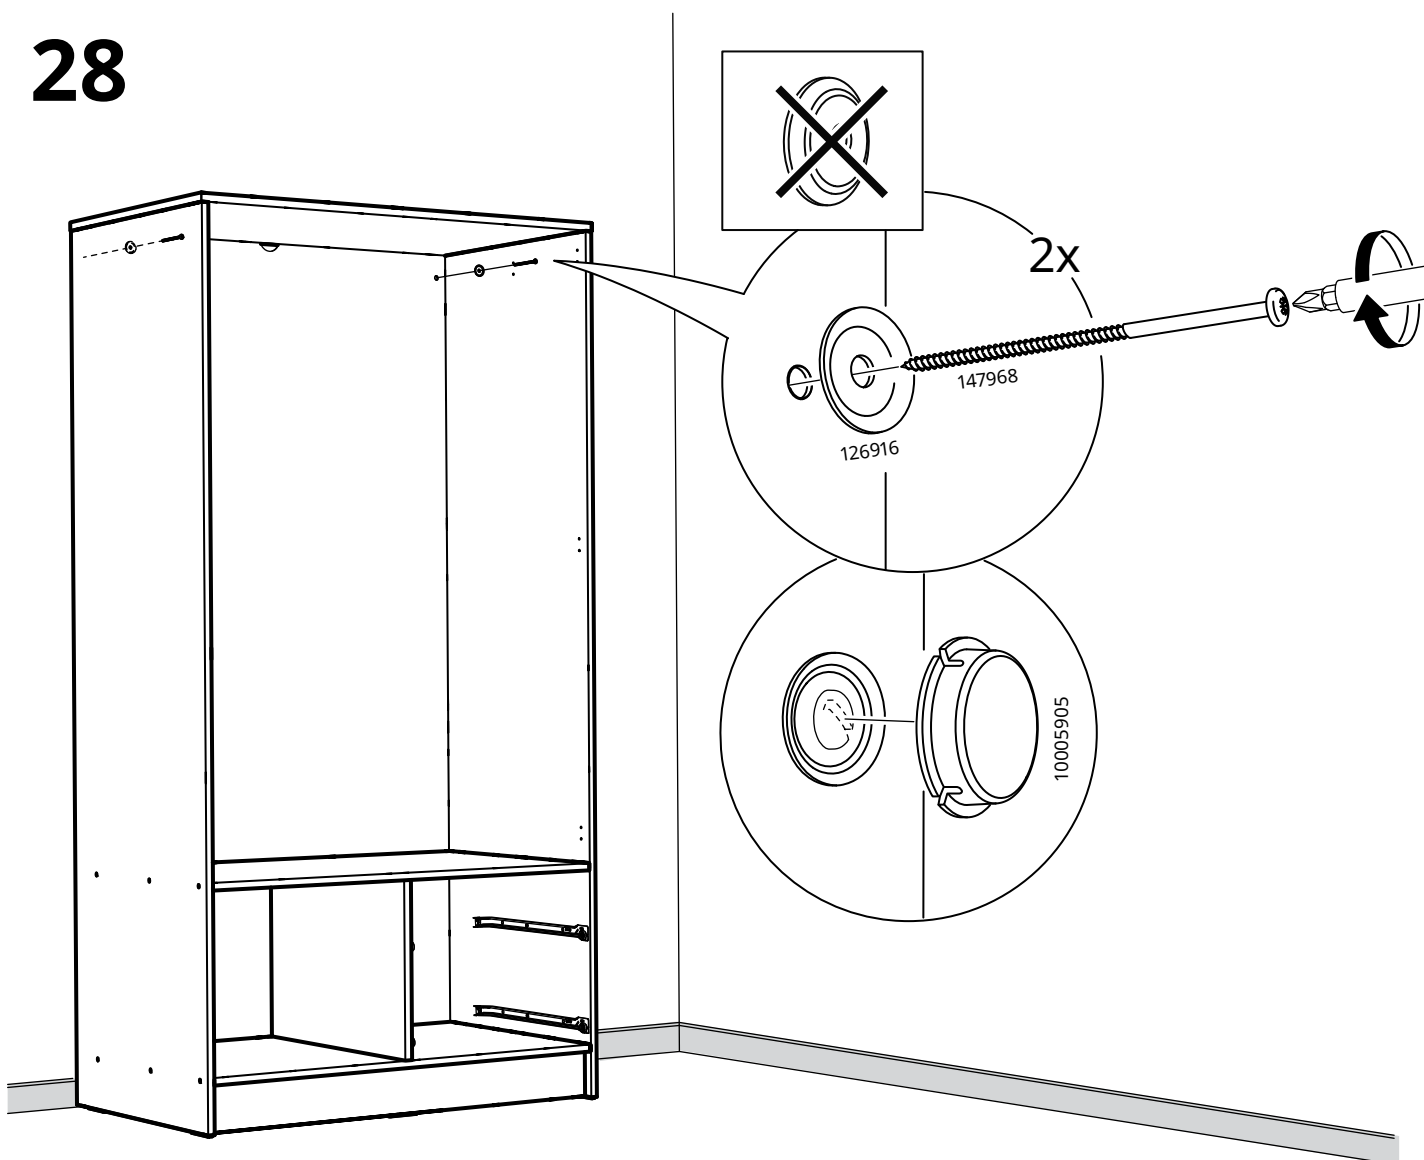


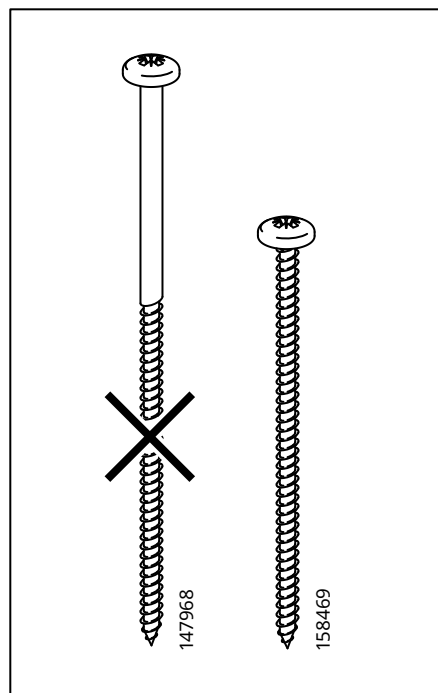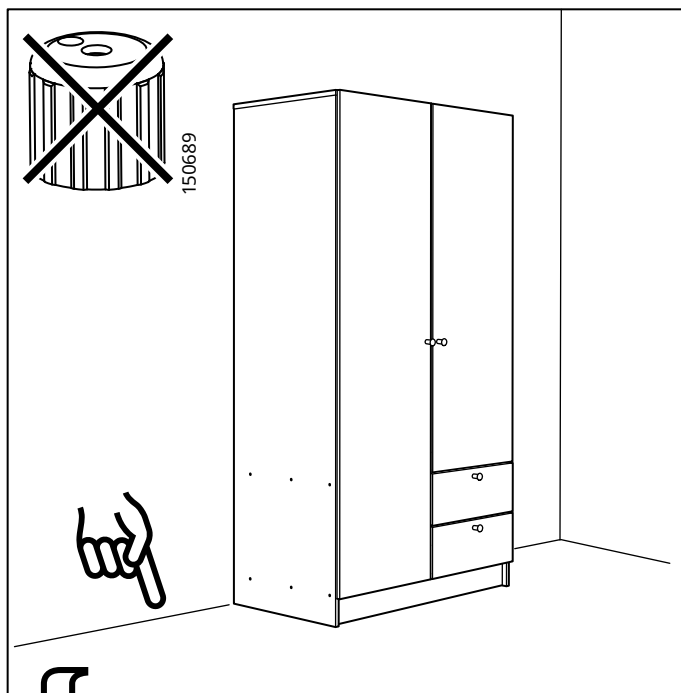


28

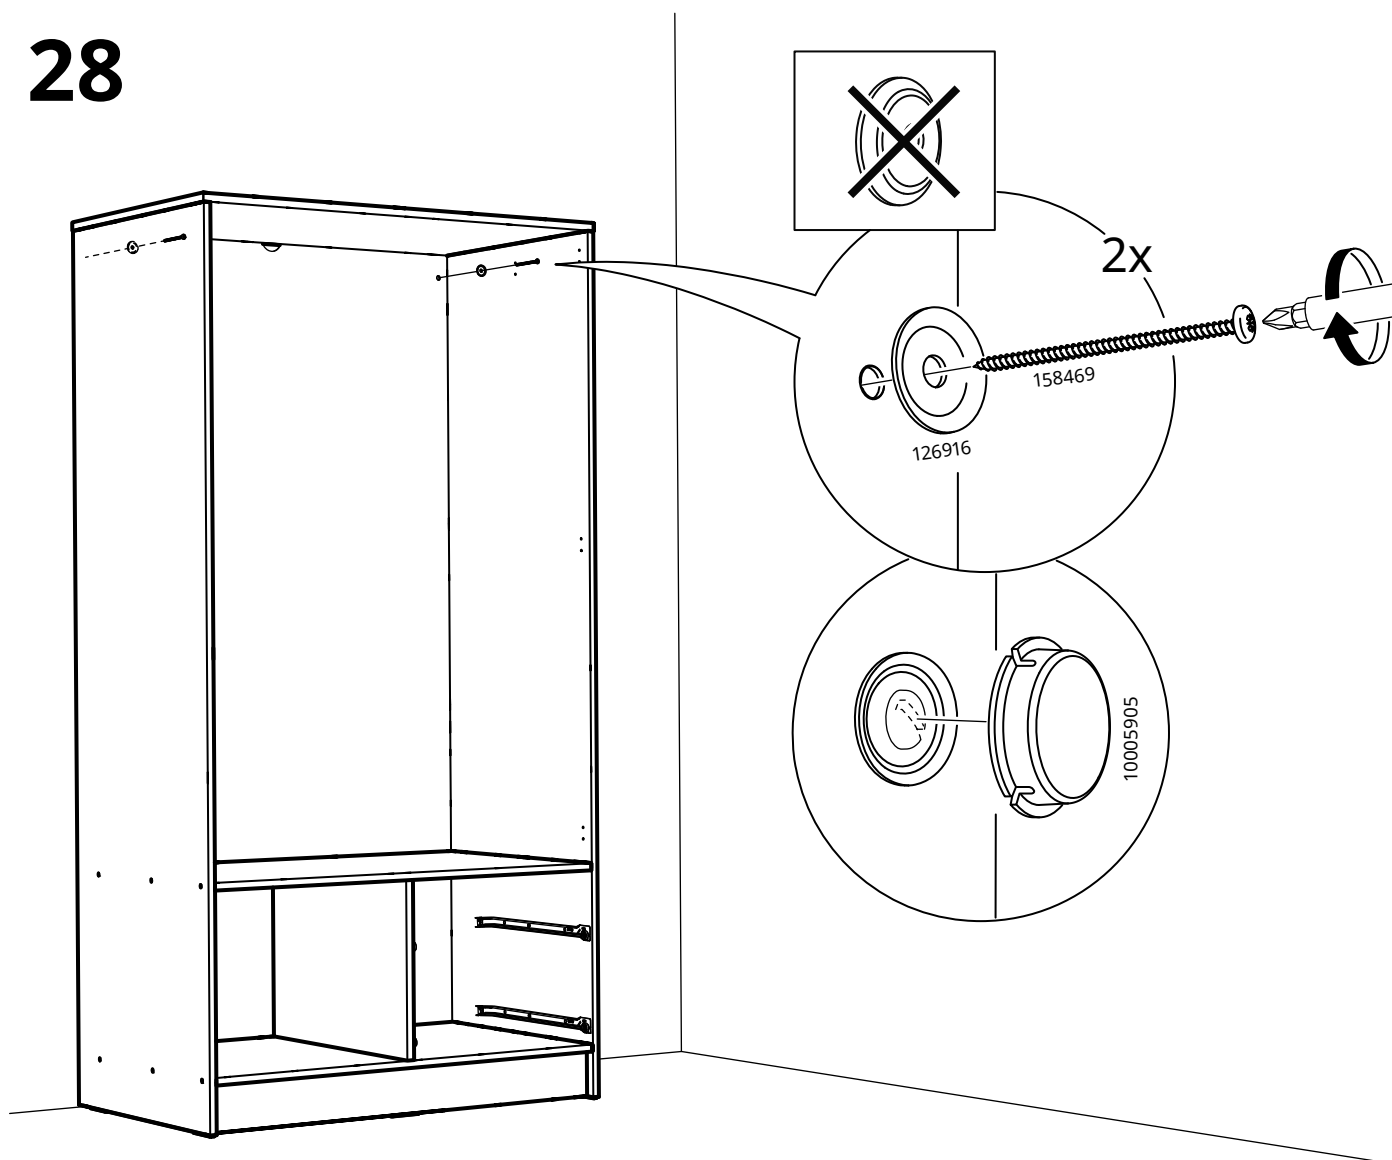 


29

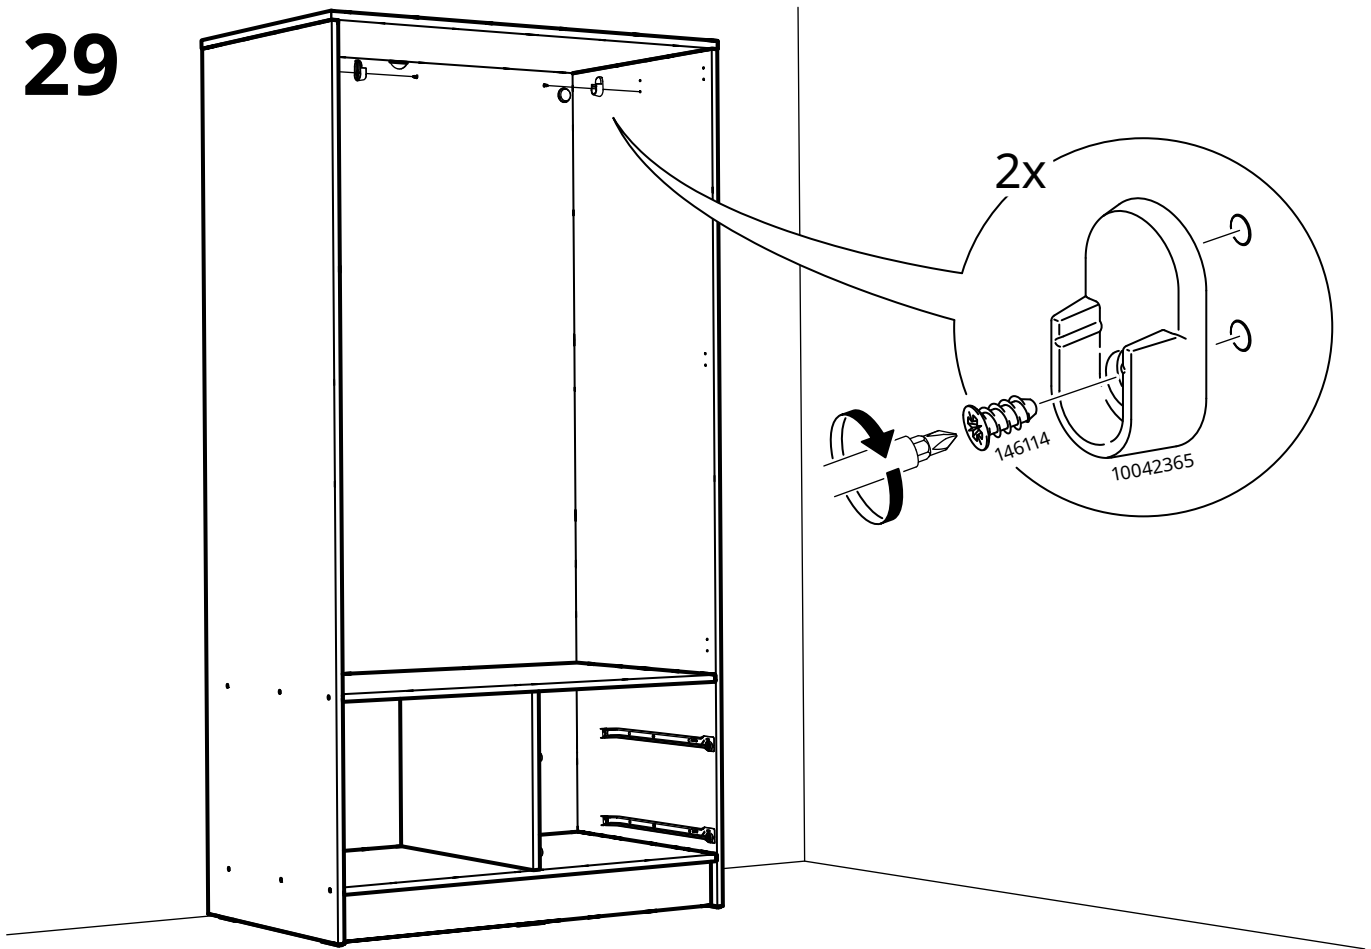 


30

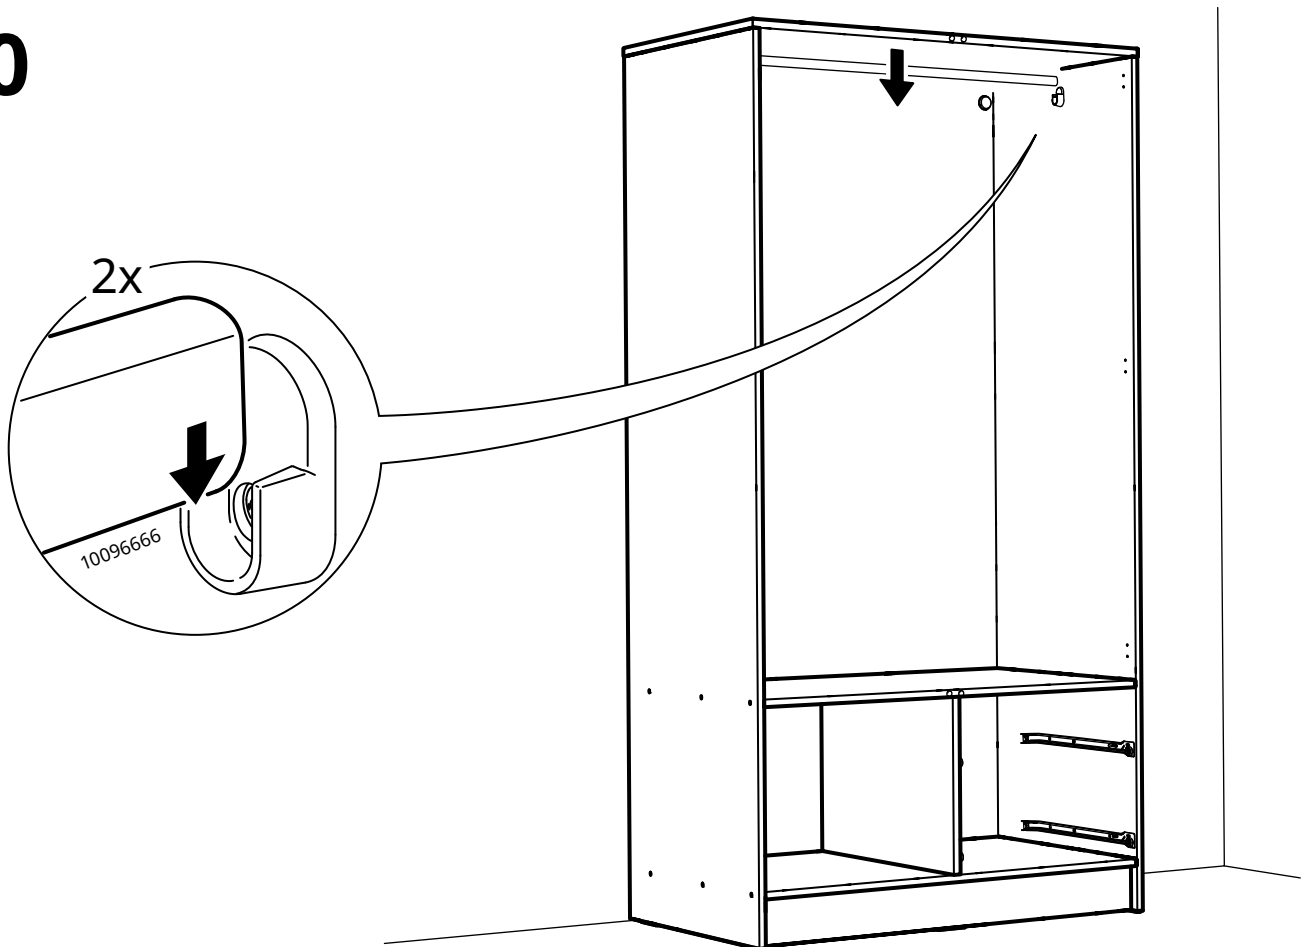 


31

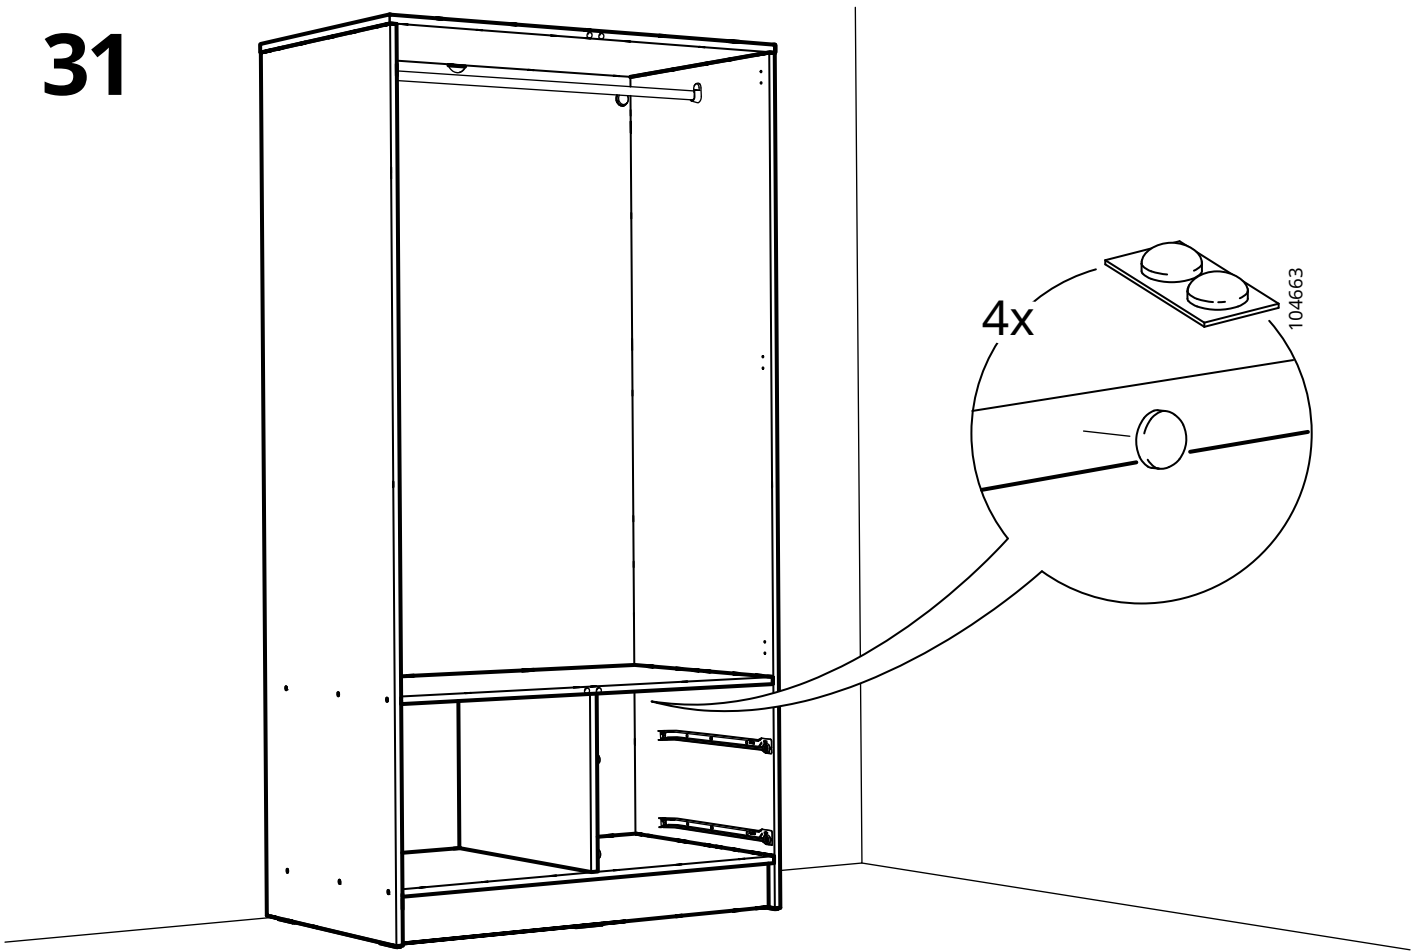 


32

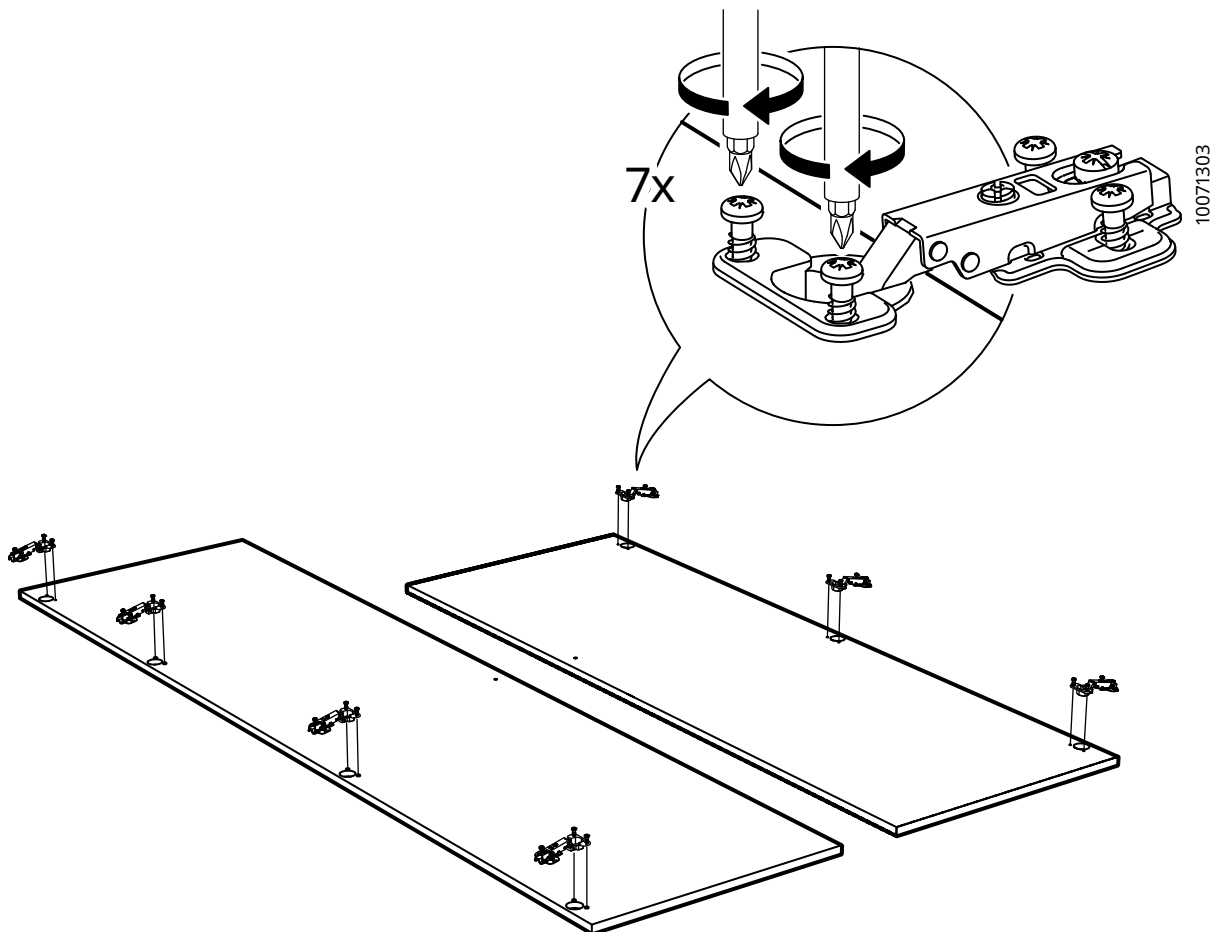 


33

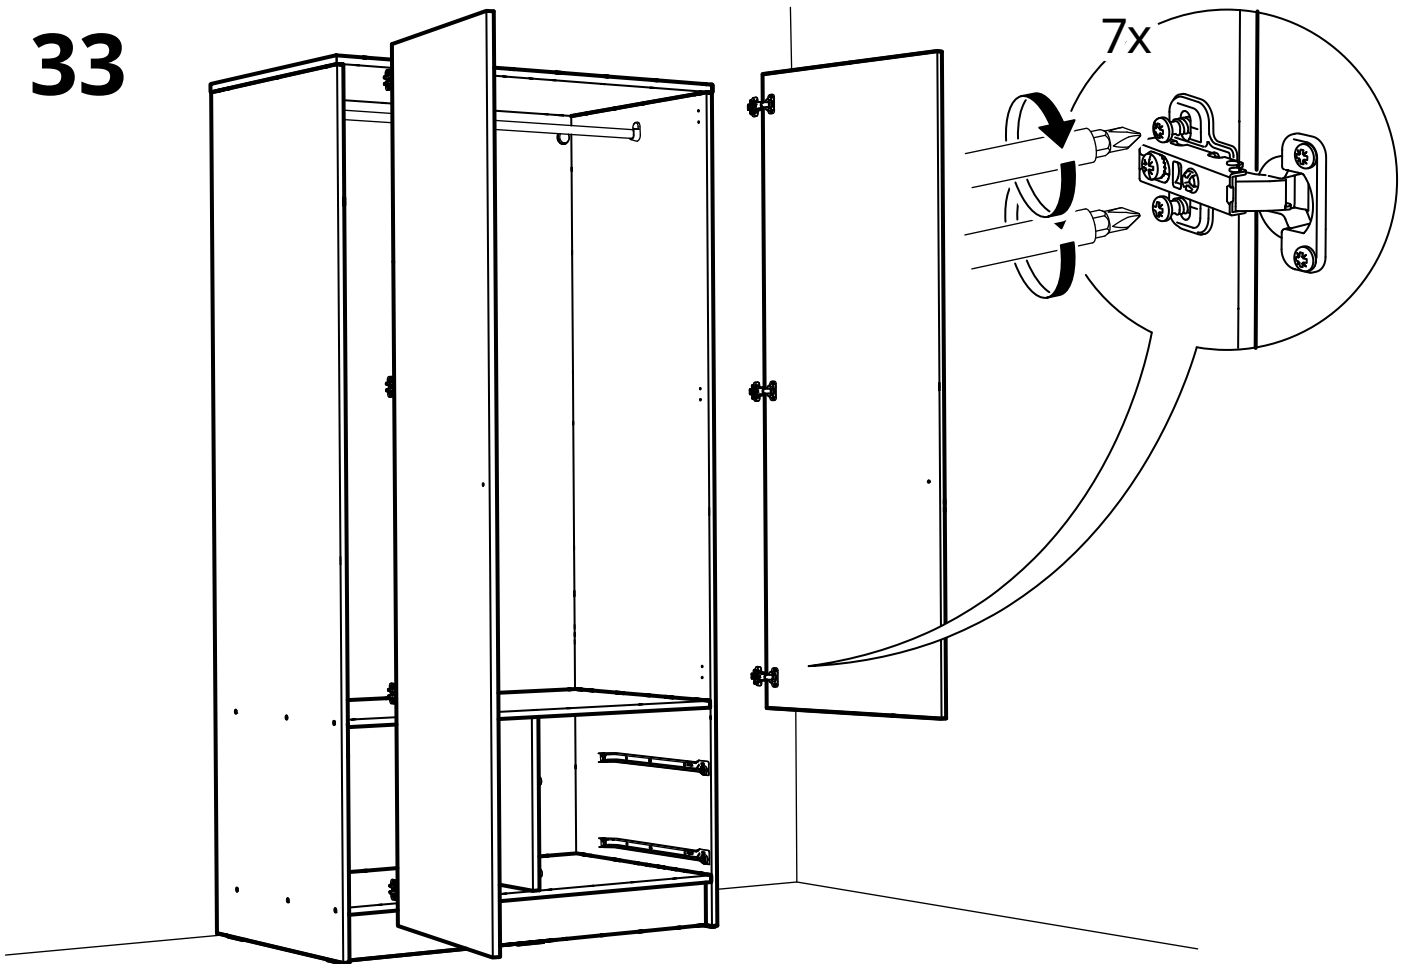 


34

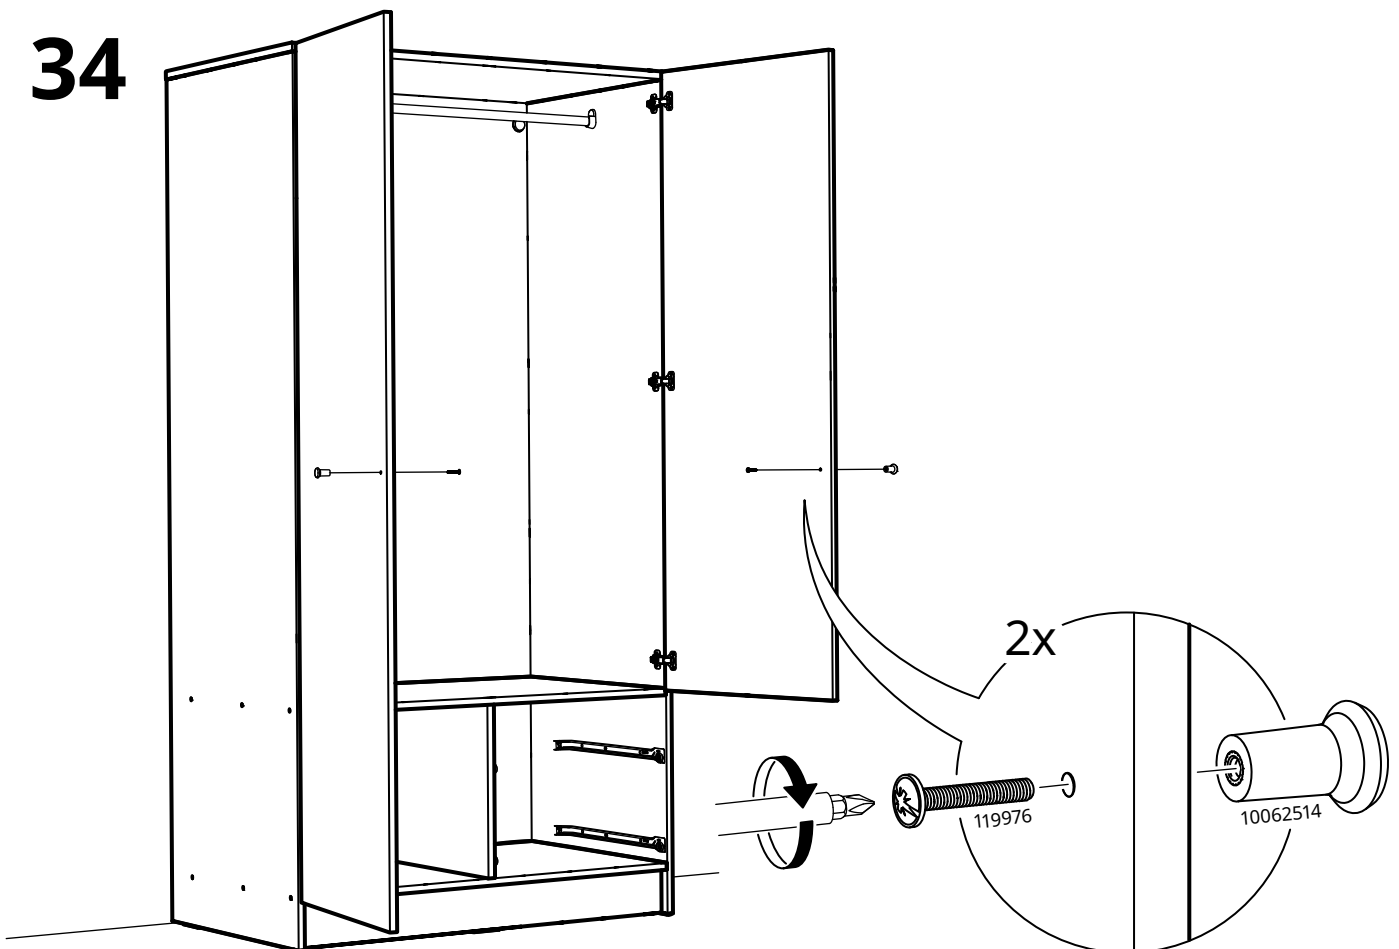 


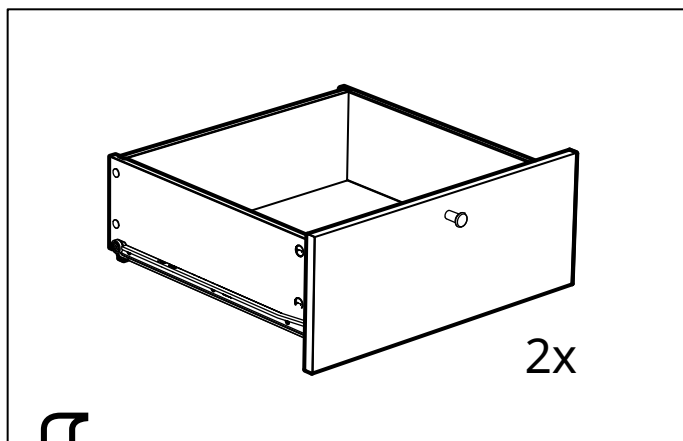 


35

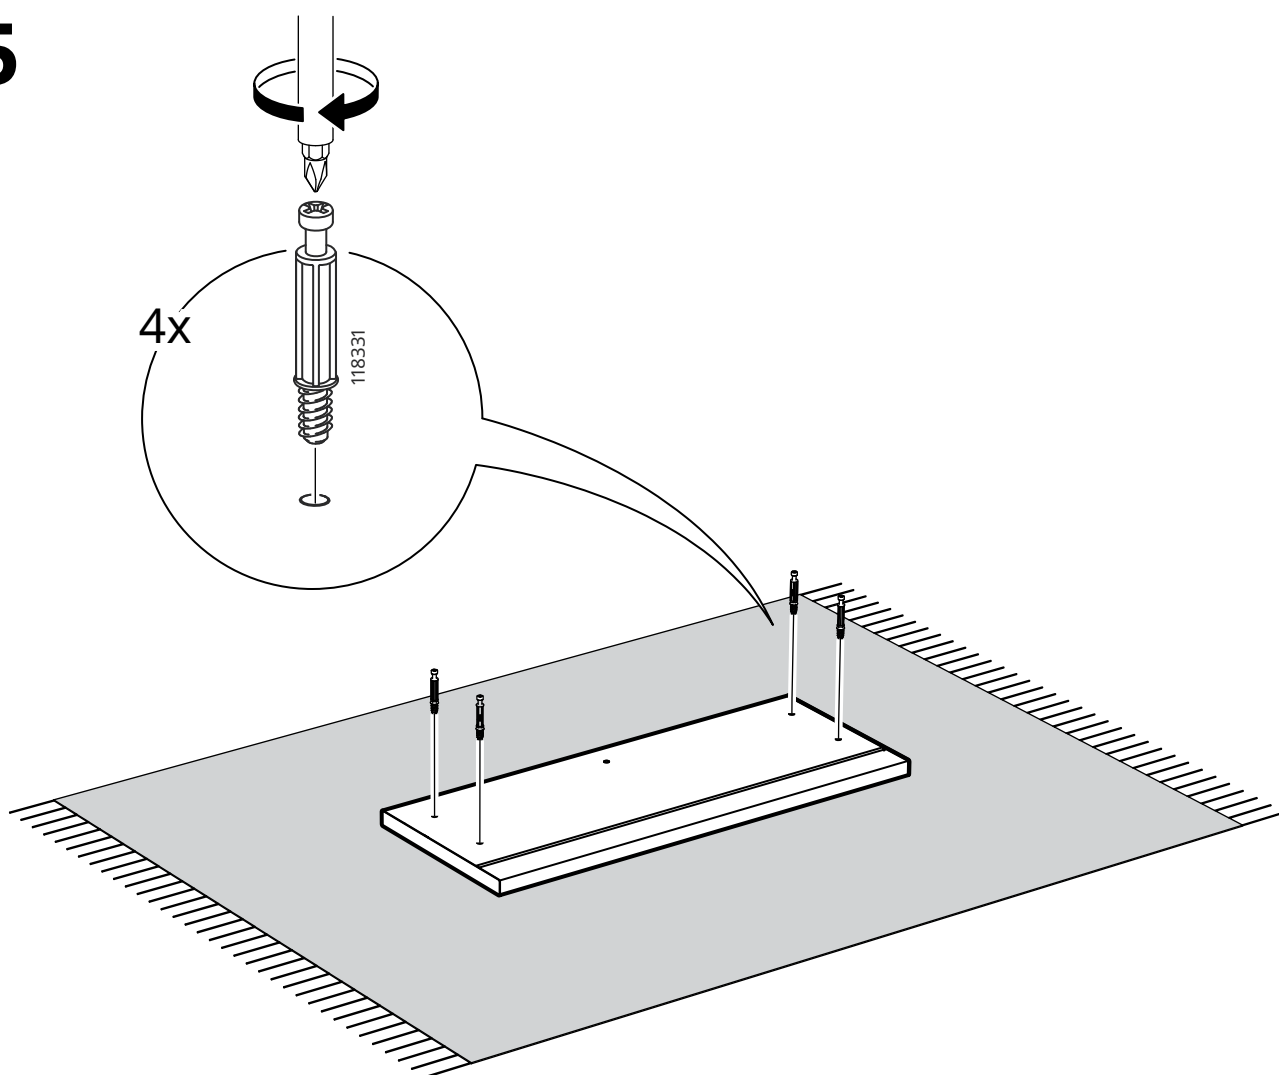 


36

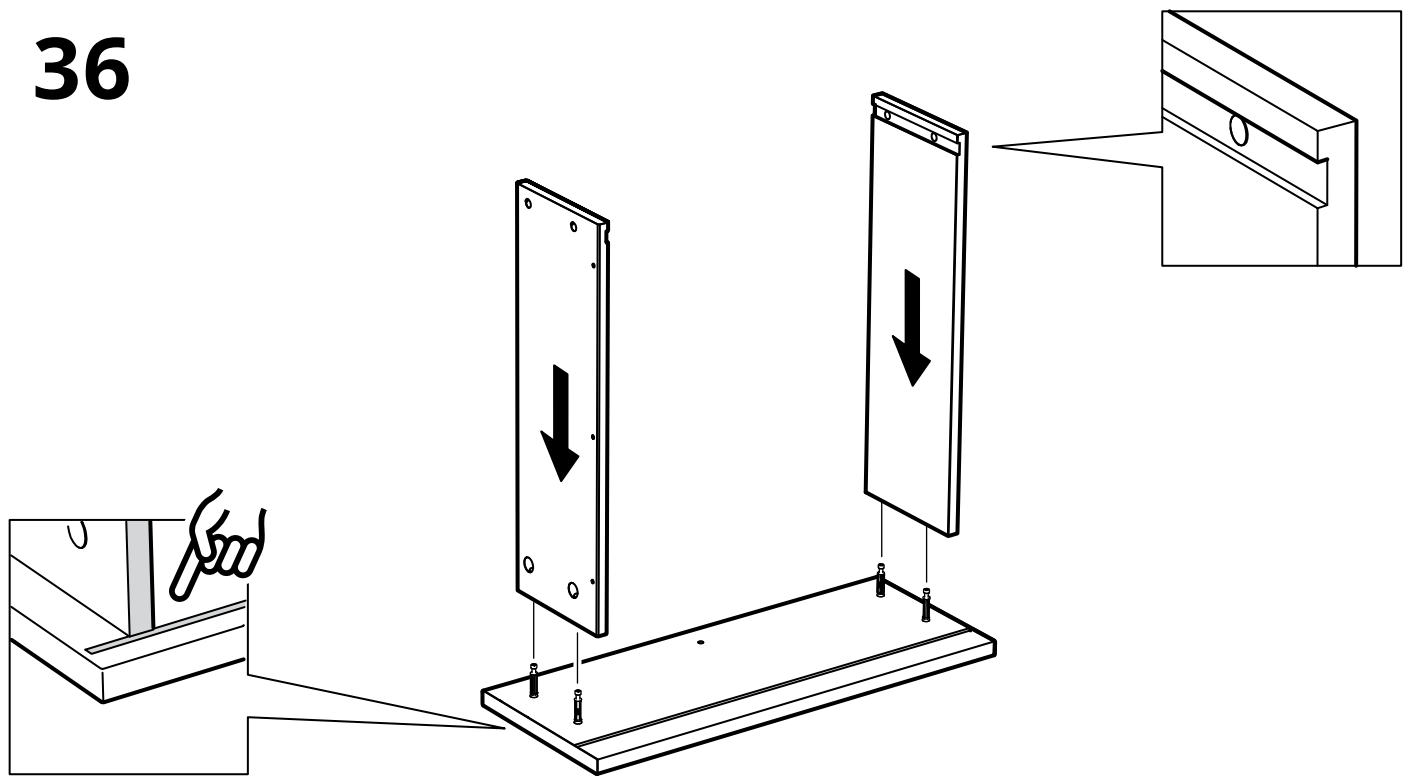 


37

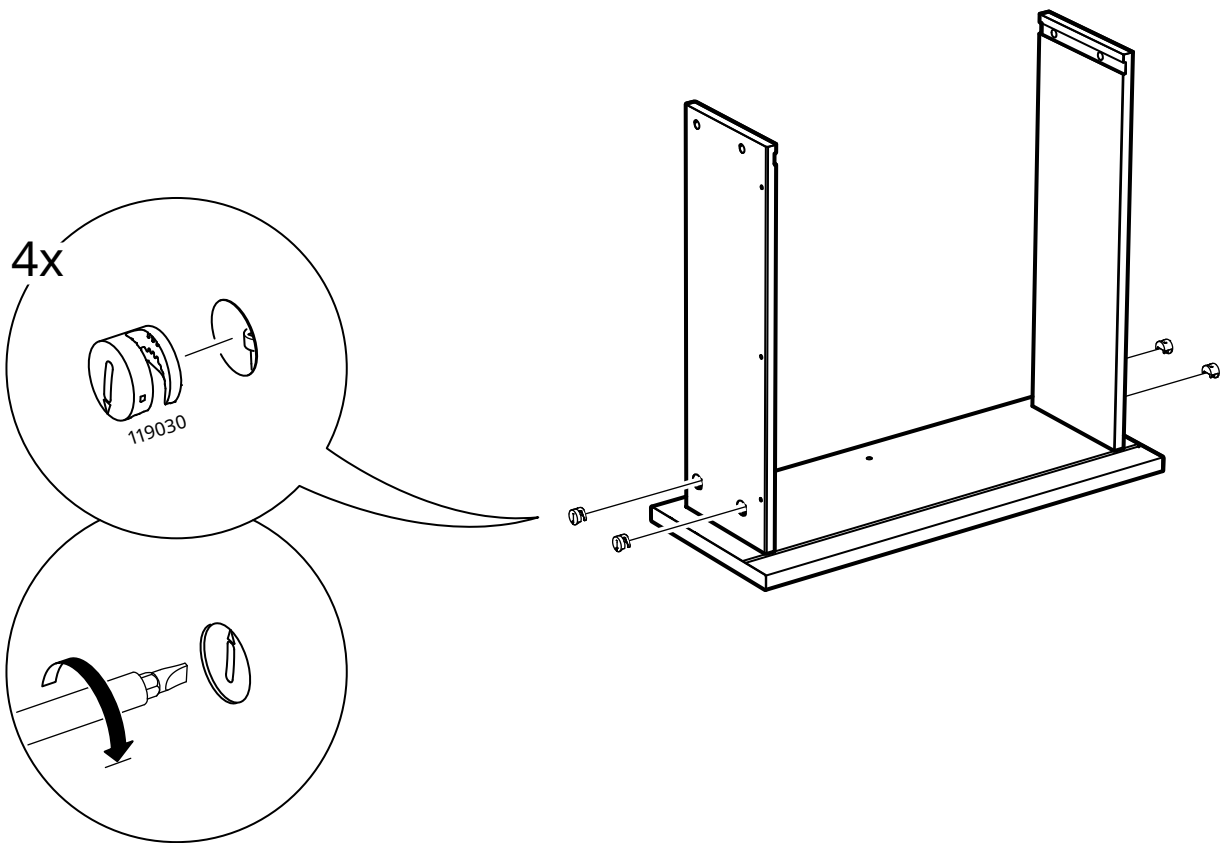 


38

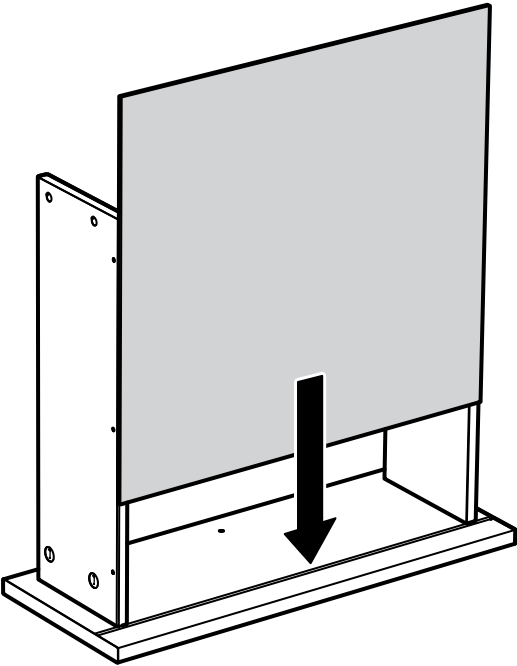 


39

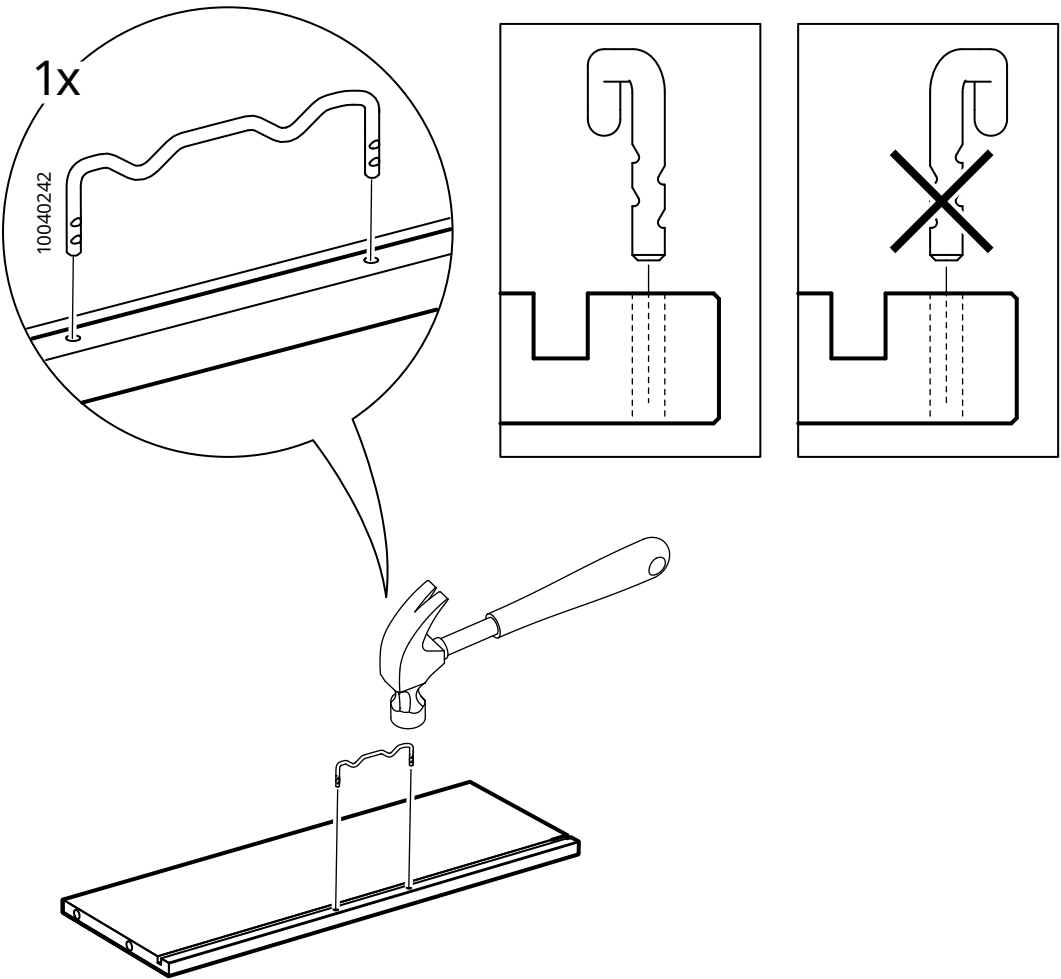 


40

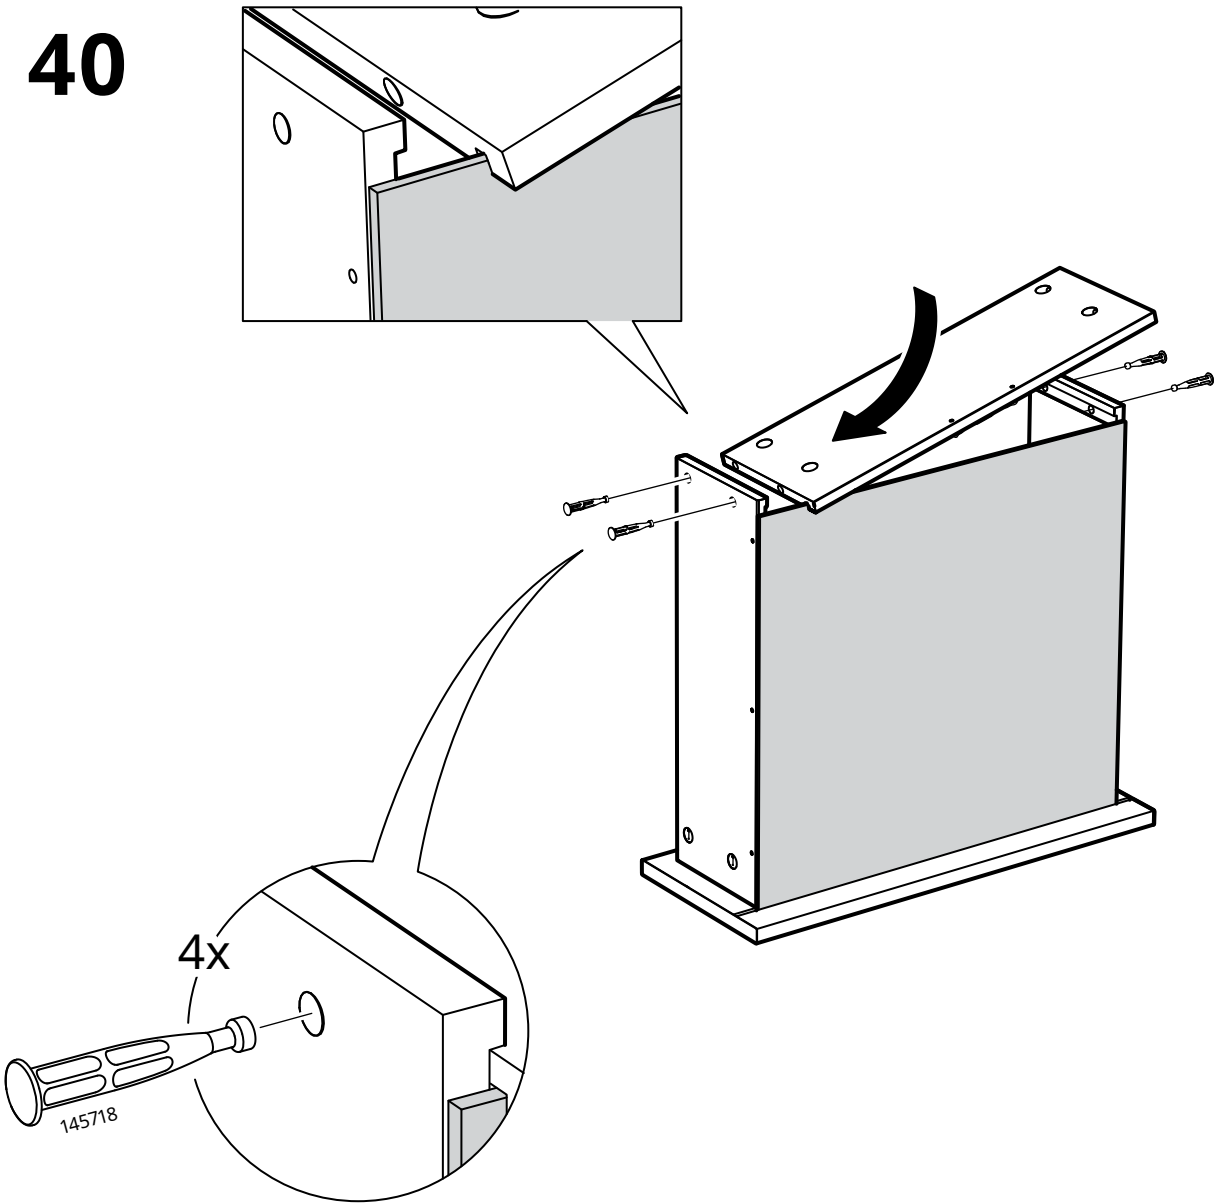 

41

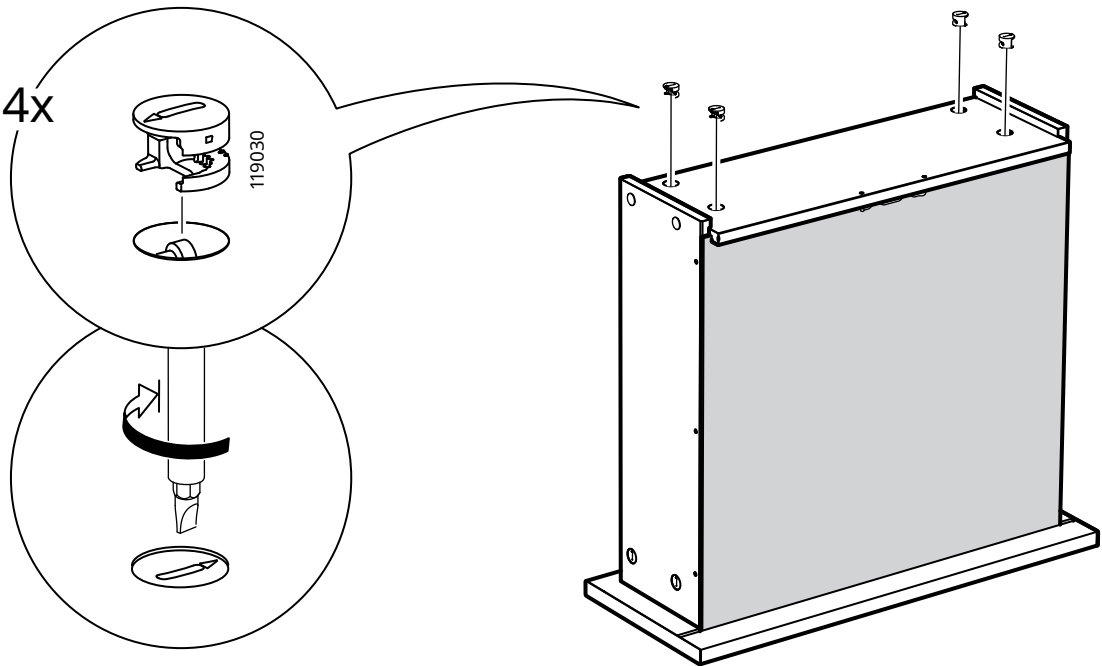 

42

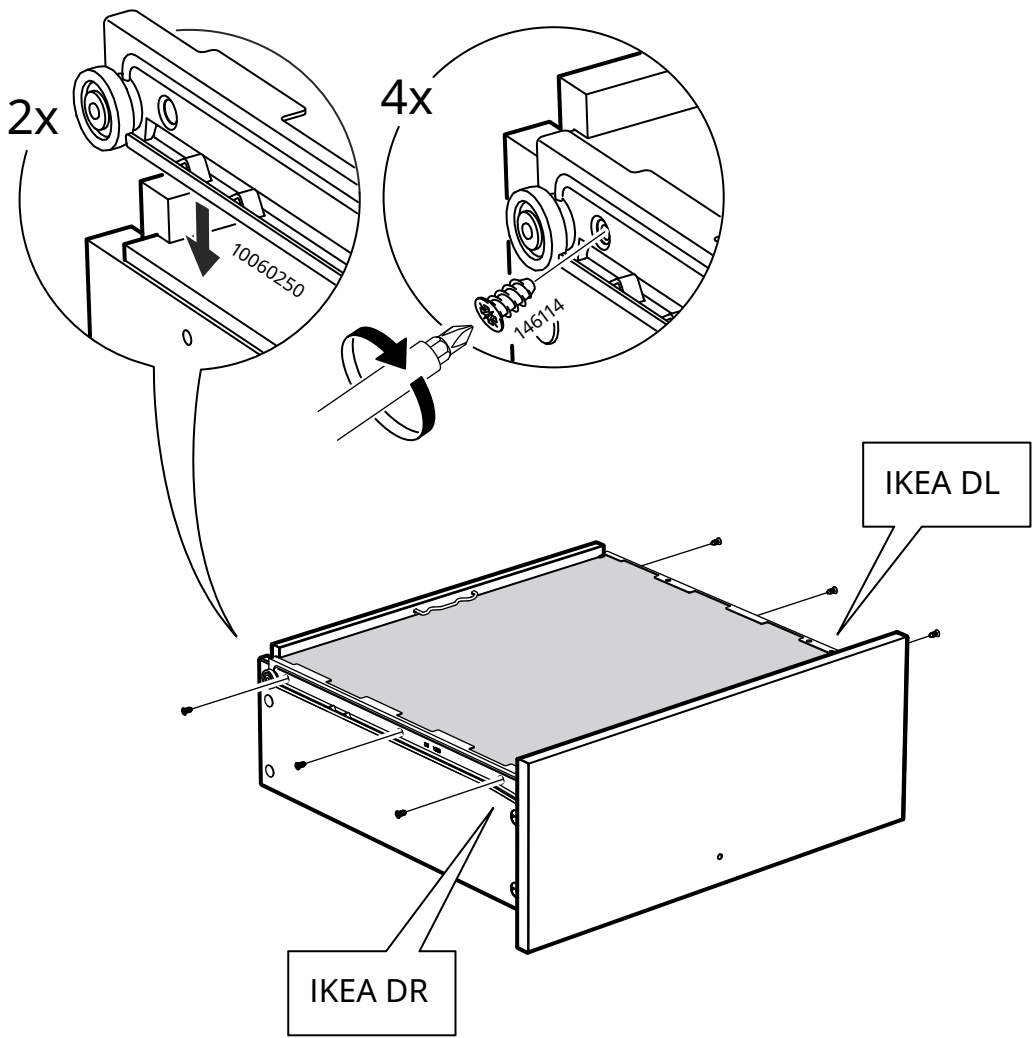 

43

