

## HOW TO CHECK AND TOP OFF YOUR HYDRAULIC FLUID LEVELS:

- 1** Open your dock box, and observe the fluid level in the reservoir, (white tank to the right of the power unit). With your lift in the fully-up (over-center) position, there should be approximately one inch of fluid in the bottom of the reservoir. With the lift in the fully-down position, the reservoir will appear like the diagram to the right with one inch of space between the fluid line and the top.
- 2** Add fluid if needed. Use Basta Boatlifts approved biodegradable hydraulic fluid **ONLY**. This can be purchased online in the Basta Store or in person at the Basta Factory.
- 3** To add fluid, lower your lift into the fully-down position. **IMPORTANT: DO NOT** add fluid when the lift is in any other position! Add fluid until the level is approximately one inch away from the top.
- 4** Cycle your lift by fully raising it. Once Raised, you should see an inch or more of fluid in the bottom of the reservoir.

## IMPORTANT ONLY ADD FLUID WITH LIFT IN DOWN POSITION

**Hydraulic fluid shown with  
lift in the DOWN position**

