

Children of all ages are going to love the Kid-Friendly Collection from Haunted Hill Farm. Halloween isn't just for scaring; it's also about delightfully spooky celebrations and plenty of candy! Our delightful characters will get the whole family in a sweet mood by walking along to the song "I Want Candy." Surprise and delight trick-or-treaters with their fun performance, and you'll be the house remembered for more than just the candy.

Touch-activated walkers with music - each stand over a foot tall

Battery-operated for easy portability and placement (3 AA not included)

Plays the song "I Want Candy" - place near the candy dish

Quick and easy setup for indoor or covered outdoor use

All treat, no tricks 1-year limited warranty



CHARACTERS



GNOMAD

WALKING GNOME PLAYS MUSIC 3"D x 9"W x 18" H



DAVY WALKING SCARECROW PLAYS MUSIC

3"D x 12"W x 18"H



RUCKUS WALKING REAPER PLAYS MUSIC 3.5"D x 12"W x 13"H



BILLY

WALKING GHOST PLAYS MUSIC 3.5"D x 12"W x 15"H







