

PORODO
LIFESTYLE



Porodo Lifestyle **Portable Shoe Dryer**

SKU: PD-LFST057-WH


Table of Contents

Specifications	2
Schematic View	2
Instructions for Use	3
Button Operation	3
Safety Precautions	4
Troubleshooting	4
Precautions	5
Disposal	5
Hazardous Material Contents	6
Warranty	7
Contact Us	7

Specifications

Rated Voltage	220-240V
Rated Power	100W
Air Outlet Temperature	65°C
Fan Speed	4500RPM
Timer Settings	3H / 6H / 9H
Gross Weight	473g
Product Size	58 x 107 x 160mm
Power Cord	UK 3pin Plug

 Schematic View

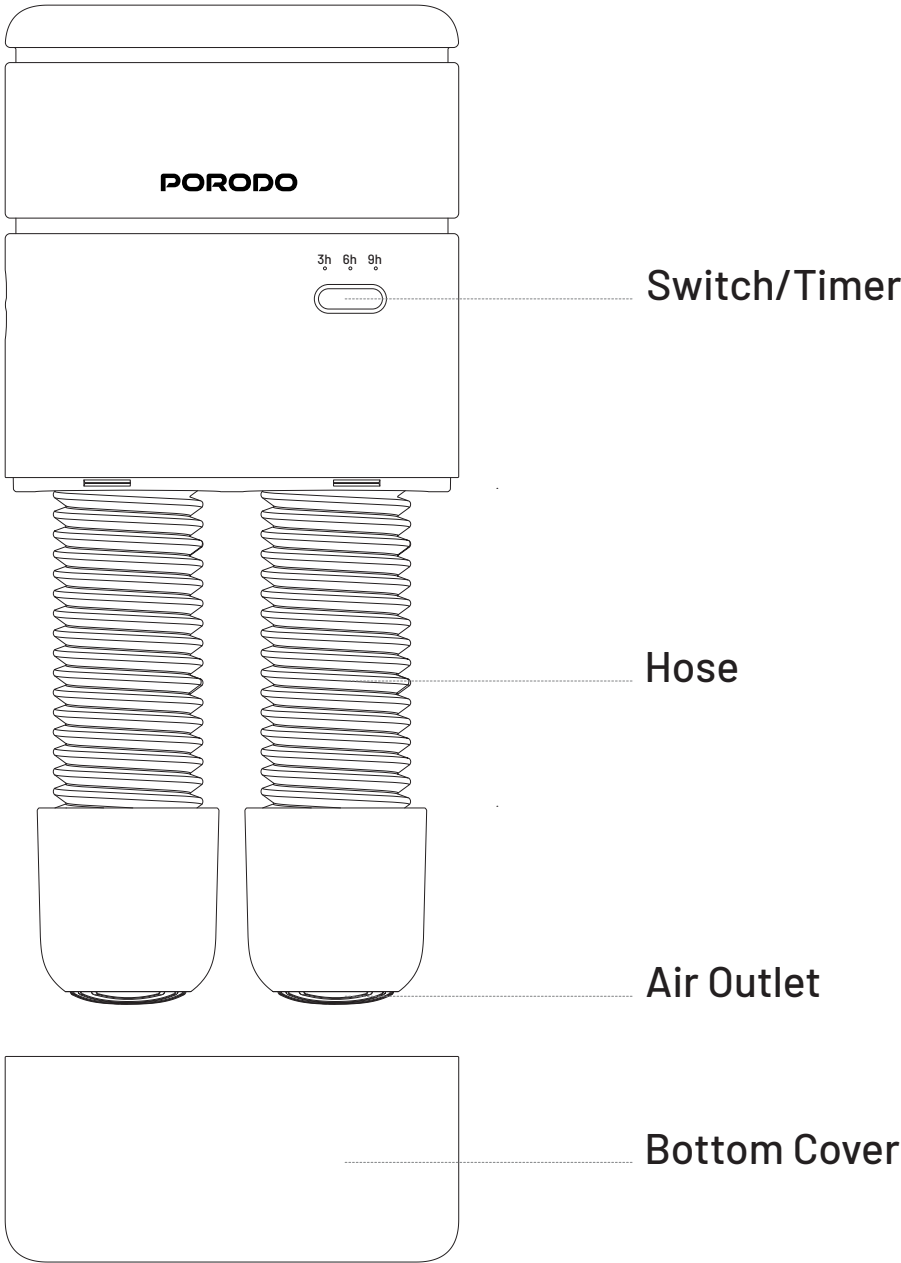

Instructions for Use

Step 1

 
Before first use, please remove the included accessories from the packaging and read the product manual carefully.

Step 2


Before using the product, please pull out the hose.

Step 3

Place the product inside the shoe, press the switch button, and start the operation.

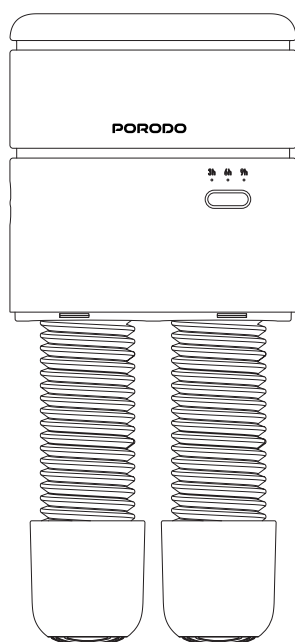

 Step 2

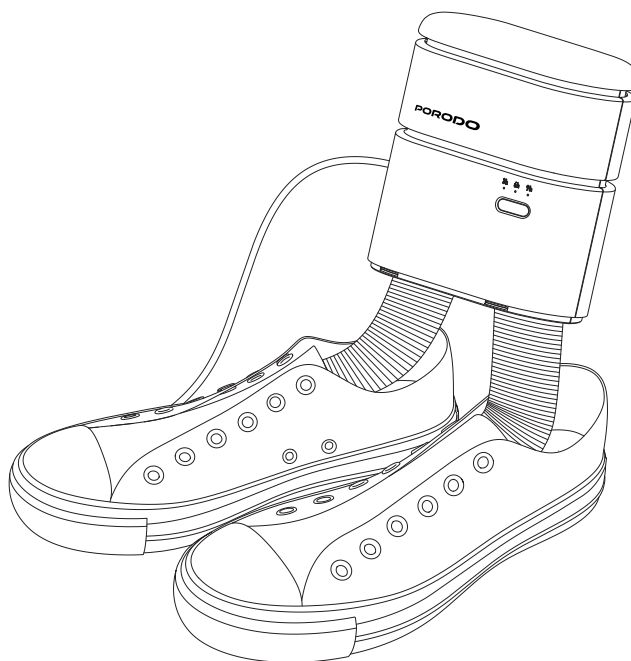

Step 3

Tips:

Recommended usage times for different types of shoes are as follows:

1. Leather shoes / Canvas shoes: 3h
2. Sports shoes / Skate shoes: 6h
3. Cotton-padded shoes / Snow boots: 9h

Button Operation

1. Press the power button once to turn on both the heating wire and the fan simultaneously. The indicator light for 3-hour timed heating will light up by default.
2. Press the power button two times. The indicator light will turn on for 6 hours heating option.
3. Press the power button three times to activate the 9 hours heating option.

The corresponding indicator light will turn on.

4. Press the power button again to turn off the device. The indicator light will turn off. After the heating stops, the fan will continue to work for 5 seconds before stopping.

Note: When the temperature is too high and triggers the thermostat, the product will automatically power off.

Safety Precautions

- 1.** Keep away from children, infants, and pets.
- 2.** Do not place any dangerous objects on the product.
- 3.** Do not immerse the product in water to avoid damage or leakage.
- 4.** When the power is on, the indicator light will illuminate and the body will become slightly warm, which is a normal phenomenon.
- 5.** Do not disassemble any parts yourself, as this may cause product malfunction or damage.
- 6.** During operation, steam may be generated due to the drying process, which is a normal phenomenon.
- 7.** When powered on, maintain a distance of at least 10cm from other objects to ensure proper air circulation and prevent damage to the product.
- 8.** Children and the elderly should use the product under supervision and guidance.
- 9.** If any abnormalities or unusual smells are detected, immediately unplug the product and contact an authorized service center.
- 10.** Do not modify or repair the product yourself to avoid danger. The product must be replaced or repaired by a professional technician or service providers.
- 11.** If the power cord is damaged, it must be replaced by a professional technician or service providers.
- 12.** In use or after use, do not place the product upside down to prevent the product from tipping over.

Troubleshooting

Problem 1: The indicator does not light up when powered on.

Possible Reason: Power is not connected or there is a malfunction.

Solution: Reconnect the power. If the product still doesn't work properly, please

contact a professional service agent for repairs.

Problem 2: The indicator light has turned off, but the shoes were not dried.

Possible Reason: Moisture/humidity has not been fully removed.

Solution: Continue heating for several hours. If the product still doesn't work properly, please contact a professional service agent for repairs.

Precautions

1. Please read and keep this manual before using the product.
2. Please use only the accessories provided or designated by the manufacturer.
3. Due to differences in the usage environment, humidity, and season, the drying speed of the product may vary.
4. When powered on for drying, you can select the drying duration (for wired control version). If there is still moisture left in the shoes after drying, please continue powering the product.
5. Evaporation is a normal phenomenon during the drying process.
6. This product is energy-efficient, and even if it is plugged in beyond the recommended time, it will not cause harm to the product or the environment.
7. This product is suitable for shoes that are damp or slightly wet but not dripping, and for socks that have been spin-dried in a washing machine.
8. Odor may occur during the drying of shoes or socks. Please place the shoes and dryer in a well-ventilated area.
9. To ensure the best drying effect, please try to hang the product while drying socks.
10. Please do not place the powered-on shoe dryer directly on carpets or any fabric.
11. After turning off the product, allow the shoe dryer to cool down naturally for some time before handling.
12. Please do not touch the shoe dryer immediately after drying to avoid burns.

Disposal

This product must not be disposed of as unsorted household waste. It is important to separate such waste for proper treatment and recycling, in compliance with local waste management regulations.

Hazardous Material Contents

Material	Hazardous or Toxic Substances / Elements					
	Lead	Mercury	Cadmium	Hexavalent Chromium	Polybrominated Biphenyls	Polybrominated Diphenyl Ethers
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBBs)	(PBDEs)
PCBA Component	X*	0	0	0	0	0
Series IC	X*	0	0	0	0	0
Wires	X*	0	0	0	0	0
Plastic Parts	0	0	0	0	0	0
Printed Materials	0	0	0	0	0	0
Sticker Labels	0	0	0	0	0	0

0: Indicates that the content of this hazardous substance in all materials of the component is within the limit specified by the SJ/T2014-11364 standard.

X: Indicates that the content of this hazardous substance in a homogeneous material of the component exceeds the limit specified by the SJ/T2014-11364 standard.

* Indicates that the content of lead is within the exemption requirements of the EU RoHS directive.



Warranty

Products that you buy directly from our **Porodo** website or shop come with a 24-month warranty.

When you buy **Porodo** products from any of our approved sellers, you only get a 12-month warranty. If you want to extend this warranty, go to our website at **porodo.net/warranty** and fill out the form with your information. Don't forget to upload a picture of the product too. After we've checked and accepted your request, we'll send you an email to confirm that your product's warranty has been extended.

For more info, please check:

porodo.net/warranty

Contact Us

If you have any questions about this Privacy Policy, please contact us at:

info@porodo.net

Website: **porodo.net**

Service Support: **support@porodo.net**

Instagram: **porodo**