BLUETOOTH

• First Time of Use:

- 1. Take out the two earbuds, tear off the isolation film on the earbuds, and then put the two earbuds back into the charging case. (This step is for new device activation)
- 2. Take out the two earbuds again.
- 3. Refresh the Bluetooth device list on the phone and click to pair "TRUEFREE B1"

.How to reset TRUEFREE B1?

Clear pairing records (this method is used when the connection cannot be done normally)

When the earbuds are not connected to the device, tap the earbud touch panel 5 times within 30 seconds after the earbuds are taken out of the charging case, and the earbud white light flashes 5 times. After the flashing stops, the reset is complete.

"After restoring factory settings, you can use it normally by connecting using the first pairing method.

Why is the Bluetooth connection unstable sometimes?

	Reasons	Workarounds	
	When using the earphones close to personal	Please use the	
	computers, Wi-Fi routers, microwave ovens,	earphones away from	
	refrigerators, etc.	Wi-Fi routers, personal	
Case	Refrigerators, microwave ovens, Wi-Fi routers,	computers, microwave	
1	personal computers, etc. are devices that emit	ovens, refrigerators, etc.	
	radio waves.	in order to avoid radio	
	The earphones may be affected by these radio	wave interference.	
	waves when using them in a location with a		
	mixture of multiple radio waves.		
	When using the Bluetooth device in the pocket of	When put the Bluetooth	
	the chest or pants, or a bag while listening to the	device in a pocket or	
	audio.	bag, move the Bluetooth	
	If the engine ear is diagonal to the Bluetooth	device to a place where	
Case	device, it will affect the Bluetooth signal. As	there are no obstacles	
2	human body is the biggest source of signal	between Bluetooth	
	blocking.	device and earphones	
		(such as the human	
		body) for Bluetooth	
		communication.	
	When using the earphones closes to the other	Turn off the Bluetooth	

	Bluetooth devices.	function of the other
Case	The earphones may be affected by these radio	Bluetooth devices.
3	waves when using them in a location with a	
	mixture of multiple radio waves.	
	When using the device away from the earphones,	Keep the Bluetooth
	such as in a different room.	earphones as close to
	Bluetooth communication gradually becomes	the Bluetooth player as
Case	weaker the further away Bluetooth earphones are	possible.
4	placed from a Bluetooth player.When using	
	Bluetooth earphones and a Bluetooth player in	
	different rooms with the doors closed, Bluetooth	
	communication may be weak.	
	When a lot of applications are running at the	Quit apps which you are
Case	same time when use the Bluetooth function.	not using on the device
5		to reduce the load.

- What can I do if the earphones stopped connecting to my device?
- 1. Clear the pairing record between the earphones and all of the previous devices.
- 2. Try to clear some Bluetooth listings on your device and restart the device.

- 3. Put the earphones into the charging case to reset.
- 1. Activate Bluetooth on the device, and choose "TRUEFREE B1" on Bluetooth list to pair.
- What can I do if the left earphone and the right earphone won't work together?
- 1. Please use a bit of light sandpaper or microfiber cloth with a bit of rubbing alcohol to clean the charging connectors to ensure the earphones charge well.
- 2. Put them into the charging case to reset.
- What can I do if the earphones connect to my phone, but not my Mac-book/computer?
- 1. Unpaired the earphones from the phone, then the earphones will lose Bluetooth connection to the phone.
- 2. Put the earphones into the charging case to reset.
- 3. Then open the Bluetooth of your Mac-book/computer to connect.
- 4. If those do not help, you may need to update your computer's Bluetooth driver. There is no driver for it. Bluetooth drivers must come from the specific manufacturer for your exact computer model. Download and install the appropriate Bluetooth driver from the computer vendor's website, then restart your system before attempting to pair and

connect to your TRUEFREE earphones.

• Why is the signal intermittent when I am outdoors?

In the outdoors, the Bluetooth signal will be interfered, such as subways, high-speed rails, trains, dense traffic lights, car engines and so on. And if the phone is in your pocket, and the engine ear is diagonal to the phone, it will affect the Bluetooth signal. As human body is the biggest source of signal blocking. So when the left earphone is the engine earphone, please put your phone in the left pocket, which will be better.

• Why the earphones cannot connect to my TV or watch?

Please clear the pairing record between the earphones and all of your other devices first, then reset them as the user manual. If it does not help, please contact TRUEFREE for a refund before you are ready to return the item.

SOUND

- Why does the volume of the earphones reduce after using a period of time?
- 1. It may be caused by the sound hole being blocked by foreign objects. Please try to

gently	v clean	it with	a little	alcohol to	avoid a	dust or	secretions	hlocking
genu	y CiCari		a nittic	aiconoi te	, avola i	aust Oi	30010113	DIOCKIIIG.

- 2. Please change other devices to see if the problem still exists.
- 3. Please reset the earphones.
- What can I do if one earphone is quieter than the the other?
- 1. Please change other songs or videos. For some songs and videos, the sound effect is unstable.
- 2. Please change other devices. You can try this way:
- Unpaired and delete from your original device
- Pair to a new device and play music
- Unpaired and delete from this new device
- Pair back with original device
- 3. Please clean the sound hole.
- 4. Try to reset the earphones.
- 5. Please also adjust the "Audio Equalizer" in your phone:
 - 1) For iPhone: [General] [Accessibility] [Hearing]
 - 2) For Android: [Accessibility features] [Accessibility] [Audio balance]
- 6.Do a test of "Adaptive EQ"in the Application.
- Why the other side could not hear me when calling?

- 1. Please choose to pick up phone calls via the earphones.
- 2. Please do not mute the phone calls.
- 3. Please clean the Mic holes to avoid dust or secretions blocking.
- 4. Please wear both the earphones instead of any single one.
- 5. Please adjust the volume through the earphones and devices.
- 6. If you are using the earphones with an Android phone, please check the settings to see if you have allowed both phone audio and media audio to be transmitted through the earphones.
- 7. Please change other devices to have a try.
- Why doesn't the mic work well when the earphones are connected to the PC/laptop?

When you connect our earphones to the PC/laptop, for some devices in old windows version, it may show two lists:

"TRUEFREE B1 Hands- Free AG Audio"

"TRUEFREE B1 Stereo"

Please kindly choose "TRUEFREE B1 Stereo" to play media audio, and if you use call audio, you can manually change to "TRUEFREE B1 Hands- Free AG Audio" to give a try.

If you want use call audio via the earphones on your Mac or Windows, please set the as

TRUEFREE
follows:
A) Input device:
Disable: Realtek(R) Audio as speaker and "TRUEFREE B1 Stereo"
B) Output device:
Disable: Realtek(R) Audio as microphone or stereo mix
C)Please only set "TRUEFREE B1 Hands- Free AG Audio" as the Input device and Output
device. Then you will use earphones to make call audio.
CHARGING
• What does the indicator light of the charging case display?
1.Charging the earbuds
The red light stays on during charging and goes off when fully charged. 2.Charging the
charging case
Charging: the white light flashes.
Fully charged: the white light stays on.
How to charge the charging case?

1. Connect the Type-C charging adapter to charge it (charging current does not exceed

1A).

2. When not in use for a long time, charge it at least once every three months

• .What should I do if the charging case won't charge?

Please try to use another known working charging cable to charge the charging case for more than 10 hours through your computer. (take the earphones out of the charging case when you charge it.)

Compared to other electronics, the earphones are low power products. Hence for charging safety, please do not use fast charger.

- Why are the earphones still connecting to my phone after placing them back
 and close the case lid?
- 1. The charging case has no remaining power. Placing the earphones back into the charging case can't turn them off if the case battery is dead.
- 2. Please make sure the earphones are correctly placed in the charging case, and make sure the charging contacts are clean. Please try to clean the places between the charging case and the earphones with something like a microfiber cloth.
- Does the earphones not use for a long time without charging cause the

earphones not to turn on or the battery to drain quickly?

In fact, the battery of the earphones needs maintenance.

Actually you need to charge your electronics at least every three months, if not, the earphones can cause deep self-discharge by not charging for a long time, damaging the battery. In addition, not using the earphones for a long time, and earphones storage location is not dry, moisture will also cause damage to the earphones. If you haven't used your earphones for several months, the battery is probably dead.

At this point, we suggest that you first check whether the charging case has power (whether the indicator light is on) and whether the charging contact at the bottom of the earphones and charging case is dirty. If there is dirt, please clean the charging contact at the bottom of the charging case with dry cloth or dry paper towel. As for earphones not turn on or the battery drain rapidly when earphones are taken out of the case, we recommend you to repeatedly place the earphones into the charging case for 2 hours and close the cover. Please try it for 1-2 days.

• Why the battery life of the left and right earphone is inconsistent?

Generally speaking, the main earphone consumes more power. The difference may be within 10%.

• Why the battery life of the earphones does not match the product page promotion?

The product promotion page includes the duration of a single charge of the earphones and the total duration of use with the charging case. The battery life of earphones is related to volume and Bluetooth encoding.

 Why the earphones do not charge or the volume decreases after being exposed to rain?

The earphones support waterproof. After encountering water, please dry the earphones with a hair dryer and clean the charging port in a timely manner to ensure a dry environment before putting them into the charging case.

The product promotion page includes the duration of a single charge of the earphones and the total duration of use with the charging case. The battery life of earphones is related to volume and Bluetooth encoding.

TOUCH CONTROL

•	What can	I do if the	touch contro	Is do no	t work always?
---	----------	-------------	--------------	----------	----------------

- 1. Please touch the middle of the control zone. And when your hand is wet, the touch control may not work, please keep your hand dry.
- 2. Please try to skip the songs more times, you will find the best frequency to control the earphones. When you don't find the frequency you may think the earphones don't work, please give it some patient.
- 3. Another way for you to have a try: discharge the earphones, then charge and reset.

APP

• How to register an account?

- 1. Fill in email address; set and confirm password(***use some combinations of letters and numbers, avoid special characters)
- 2. Click "get verification code"
- 3. Type in the code you get from your email
- 4. Finish register

- Fail to receive the verification code?
- 1. Make sure your phone is connected with good network and try to send the code again about 2 minutes later;
- 2.Check your spam folders/junk inbox first
- 3. Try to register with a different email address, uninstall the App and then reinstall it and restart your device to register again
- 4.Please manually type your e-mail into the area instead of auto fill for your email addre ss, and also please pay attention to the format of English letters and the space before and after the email address
- 5. Please try to turn off anti-virus software. If you have data encryption software on your phone, you may have to turn it off momentarily
- What can I do if the earphones won't connect to the APP?
- 1.Please first to check if your TRUEFREE earphones app has updated to the newest version.

You can log in the app and find "about" to check the TRUEFREE version is. Please upgrade to make sure you get the newest version.

2. Please make sure that the earphones Bluetooth name is the default "TRUEFREE B1". If

you changed the default name, please change to its original format. Then restart your phone. Please note that if you change the default Bluetooth name of the model, it may cause connection issue to this app.

- 3. Please make sure the location function of your mobile phone turn on, and authorize our app to obtain all permissions needed from your phone to make the connection easier. Please allow the app to always access the phone information, and do not choose the blank pass of the system.
- 4. Please make sure both earphones pair with each other, then connect to you phone first.

 After the earphones connected to your phone, then please open the app to connect earphones.
- 5. If the earphones could not still connect to app, please follow the steps one by one:-try to turn off earphones app completely (Turn off the background running of the app totally);
- -unpaired the earphones via your phone, then turn off phone Bluetooth;
- -put two earphones into the charging case and do a reset as the manual;
- -reconnect the earphones to your phone first after reset (In this step, please make sure TRUEFREE APP is off);
- -re-open the app to search earphones to connect to app;
- What can I do if the APP could not update?

Please try the following:

- 1. Please try to reset the earphones as the manual;
- 2. Take the earphones out of the charging case and leave some time for the two earphones to pair with each other. Then please turn on the blue tooth of your phone to connect with the earphones;
- 3. Make sure your phone is connected with good network. Turn off the app and reopen it;
- 4. Try to connect the app with your phone and do the upgrade again;

Precautions during the app upgrade process:

- 1. During the upgrade, the distance between the earphones and the mobile phone must be within 0.5 meters;
- 2. Do not put the earphones into the charging case;
- 3. Do not disconnect, play music, or answer the phone calls;
- 4. Don't close or shrink the upgrade page;

Dual Device Connection

- 1. Follow these steps:
- 1) Pair the headsets with Device A first. After successful pairing, turn off the Bluetooth function on Device A

2) Repeat the pairing process to connect the headsets with Device B. Keep the headsets connected to

Device B.

- 3) Turn on the Bluetooth function on Device A.
- 4)*The headset will automatically connect with two devices next time after the first time dual device connection.

CUSTOMER SERVICE TEAM

• What should I do if the problem about the earphones is not mentioned in this FAQ?

If there is no solution for your problem in this FAQ, please feel free to contact our Customer Service Team and we will provide you a solution as soon as possible. If we confirmed that the problem couldn't be solved, we will apply the replacement or refund for you. TRUEFREE provides an 12-month warranty for every product. Your satisfaction is always greatly important to us.