



PROFESSIONAL BATTERY SPEAKER

***Please read this user manual carefully before
system connection**

VERSION 01
MADE IN CHINA

RECHARGEABLE SPEAKER

User's Guide

Thank you for purchasing Rechargeable Speaker.

Please read the manual carefully before operating.

LINE IN JACK

1. Connect an audio cable (not included) to the LINE IN JACK of the speaker and to the audio output socket on the external audio devices such as MP3 player, discman, etc, then select LINE by pressing the MODE button on the front panel .
2. Play from an external audio device.

WIRELESS CONNECTION FUNCTIONS:

Please press MODE button on control panel to select Wireless connection mode.

Simultaneously open the Wireless connection setting on your phone, tablet or any other Wireless connection enabled audio device and select " Speaker. " (no need to match code), the unit and device will then be connected via Wireless connection. Press the "next song" and "previous song" button on the control panel to select the song, press "play/pause" button to control the playing status.

SAFETY MEASURES

To ensure proper use of this product, please take the time to read this instruction manual carefully before use. Please observe all the instructions about safe operation and please keep this instruction manual in a safe place for future reference.

1. Protection of power supply wire: Do not place the cable in the path of foot traffic. Do not place heavy furniture on the cable. Never pull the cable to unplug the unit from the socket, always disconnect the unit from the main power supply by pulling the plug out of the socket.
2. Ventilation: In order to prevent this unit from overheating, place it in a well ventilated area on a stable surface. Never place it on a bed, sofa or carpet where the ventilation will be restricted.
3. Dismantling: In order to avoid the risk of electric shock, do not dismantle the unit. Should your unit be faulty or broken please refer servicing to an authorized service center.
4. Strange Odour: Should your unit emit any strange odour, immediately unplug it from the wall socket. Do not use the unit again until you have had it repaired by a qualified service center.
5. Do not expose this unit to liquid of any kind.

CONTROL PANEL FUNCTION

1. Volume/Power - it is master volume button and has power on/off function
2. This button has 2 function that go to the previous song music volume decrease
3. This button has 2 function that are music play and music pause
4. This button has 2 functions that go to the next song music volume increase
5. Mode - change the line and BT /FM/USB/TF function
6. LED- it is LED on/off function
7. TF - it is TF card slot and read TF card
8. USB - it is a USB slot and read USB data
9. Light - it is a battery charging light
10. DC 5V in - it is a power jack for iram adaptor plug in
11. AUX - it is for line-in jack
12. Micophone jack - it is for wired microphone
13. It is a display to show the function out
14. M.VOL -it is MIC volume button

POWER SOURCE

1. Please charge the unit at least 4 hours before first time using.
2. Spin the POWER button on the panel to switch on or off the speaker.

CHARGE THE BATTERY

When the battery is charging, the CHARGE STATUS lights red. After the battery has fully charged, the light turns to extinguished .

1. Connect the AC adaptor to the DC IN JACK of the speaker firmly, and plug it into a wall outlet.
2. When the battery is fully charged, first disconnect the AC adaptor from the speaker, then from the wall outlet.
3. Do not use speaker when charging.

MODE SELECTION

Press MODE button on the front panel to select the MODE(LINE,USB,WIRELESS).

PREVIOUS/NEXT BUTTON

By pressing PREVIOUS/NEXT button on the front panel ,you can select a specific song from the play list.

PAUSE/PLAY BUTTON

To stop playing the current track,please press PAUSE/PLAY button on the front panel.Press it once again to continue playing.

VOLUME ADJUSTMENT DIAL

Twist the dial anticlockwise to decrease the volume and clockwise to increase the volume.

MIC IN JACK

Plug in microphone directly for playing.

USB JACK

Insert USB card directly for palyng

Support music formats of MP3,WMA and WAV with outstanding quality,giving a Superior and brand-new musci listening experience.

