

 
Safety Precautions



www.elecom.co.jp/m/s907

How to charge your smartphone or tablet

- ① Connect the USB Type-C connector on this product to the USB Type-C port of your device. If charging does not begin automatically, short press the button for around 1 second or less to begin charging.
 - ② After charging is complete, disconnect this product from your device.
- * The battery capacity and the number of charging cycles may differ from what is indicated if your smartphone is turned on or in use during charging.
- * Applying excessive force to the plug of this product may damage it. Please stop using this product if it is damaged.

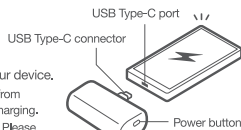


How to charge the portable power bank

Using a charging cable

- ① Connect the charging cable to the USB Type-C port of this product.
- ② Connect the other end of the attached charging cable to an AC charging adapter.
- ③ Insert the power bank when the AC adapter is plugged into a household power outlet.
- ④ Once charged, for your safety, remove the charging cable by following the procedure shown in the illustration in reverse order, as in ③→②→①.

 - * AC adapter of 12 W and above is recommended. Using a PC, you may not be able to charge it or it may take longer to charge.
- * Please ensure that the cable is removed after charging. Leaving the cable attached may cause damage to the connector.
- * When charging, the LED indicators on this product will blink according to the remaining charge in the battery.
- * The device is fully charged when the LED indicators have fully lit up or gone dark.
- * Other than a cable with a USB Type-C to USB Type-C connector, no other charging cable is provided. Please purchase or prepare separately.
- * AC charger and charging cable are not included. Please prepare your own.

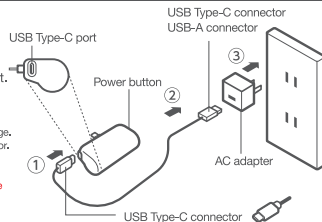

Connecting directly

- ① Insert the USB Type-C connector on this product to an AC adapter.
- ② After charging is complete, disconnect this product from the AC adapter.

- * The device is fully charged when the LED indicators have fully lit up or gone dark.



Charging all at once

- ① Charging priority is given to connected devices such as smartphones.
 - ② When the connected device, such as a smartphone, is fully charged, charging priority goes to this product.
 - ③ When the connected device, such as a smartphone, is fully charged, charging priority to it stops.
- The following indicates the power input and output when charging all at once.
- Maximum input: 5 V / 2.4 A, maximum output: 5 V / 2.4 A

- * If charging does not begin for the connected device when charging all at once, short press the power button (for around 1 second or less).



 
Regarding connecting to batteries and devices that support USB Type-C input and output

Please do not connect the charging cable to a USB Type-C battery or device with input and output function. Charging may not occur in the direction that you intend for it to be.


How to check the remaining charge

Check the remaining charge

Short press the power button (around 1 second or less), then the number of lit up LED indicators (1~4) corresponds to the amount of charge left.

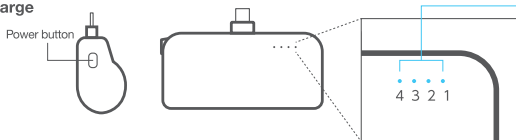

Remaining charge indicator

 

Product Specifications

Compatible models iPhones with USB Type-C ports as well as smartphones, tablets, and other small electronic devices that charge using USB Type-C

Specifications USB Type-C connector output: 5 V / 3 A USB Type-C connector and port input: 5 V / 2.4 A Rechargeable lithium-ion battery: 3.6 V / 5000 mAh \times 1/18 Wh

Dimensions (W \times D \times H): approx. 79 \times 27 \times 51.5 mm / 3.1 \times 1.1 \times 2.0 in.

Full charging time: 3 hours 30 minutes * This is an estimate for when this product is being charged on its own. If a mobile device such as a smartphone is connected, this product is unable to charge within the stated time.

Compliance status

www.elecom.co.jp/global/certification/

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In order to make improvements to this product, the design and specifications are subject to change without prior notice.

Responsible party ELECOM USA, Inc. elecomusa.com
4041 MacArthur Blvd Suite 400, Newport Beach, CA 92660 USA

Global Support



www.elecom.co.jp/r/s536

ELECOM CO., LTD.

Fushimimachi 4-1-1, Chuo-ku, Osaka City, Japan www.elecom.co.jp/global/

A customer who purchases outside Japan should contact the local retailer in the country of purchase for inquiries. In "ELECOM CO., LTD. (Japan)", no customer support is available for inquiries about purchases or usage in/from any countries other than Japan. Also, no foreign language other than Japanese is available. Replacements will be made under stipulation of the Elecom warranty.

Power bank

Manual and Compliance with regulations, 2nd edition, January 23, 2024

©2024 ELECOM CO., Ltd. All Rights Reserved.

MC-EC-C09L_0111_ver.21