

Operating and Maintenance Instructions

LightMaster

Multifunction Keypad



Amico

Contents

Introduction	3
Symbols Used in This Manual	4
Safety Instructions	5
Tools/Materials Required	6
Installing LightMaster Multifunction Keypad	7
Mounting Drawings	10
Wiring Drawings	12
Disinfecting, Cleaning, and Sterilization	13
Technical Data of the LightMaster Multifunction Keypad	13
Warranty Policy	14
Notes	15

Introduction

Thank you for your purchase of the LightMaster Multifunction Keypad. This installation manual gives you instructions on how to install the LightMaster Multifunction Keypad. Please read the following instructions carefully and adhere to the safety guidelines and standards.

If you need information for further instructions on operation, maintenance, and/or descriptions of the product please feel free to contact Amico's Customer Service at: alt-customerservice@amico.com

For technical support please contact: alt-techsupport@amico.com

To learn more about Amico's portfolio of healthcare lighting products, visit <https://www.amico.com/lights>



Symbols Used in This Manual

The warning symbols indicate all instructions that are important for safety. Failure to comply with them can lead to injury, damage to the luminaire or the equipment. In combination with the following signal words the warning symbols means:

 DANGER	Can lead to death or serious injury
 WARNING	Can lead to injury
	UL Listed certification mark

Trademarks: All trade names mentioned in these instructions are the exclusive property of the relevant manufacturers.

Safety Instructions

Intended Use

The Amico LightMaster Multifunction Keypad is designed to improve day-to-day operation of your room lighting. With advancements in room lighting, Amico has made it easy to operate each function of single or multiple light fixtures with one intuitive keypad. Incorporated in a single gang space, the LightMaster keypad can control the Reading, Ambient, Direct Light and Spot Lights that may be in the room. With infection control in mind, Amico uses a Mylar Overlay on each keypad for ease of cleaning. The LightMaster keypad is also designed as a low voltage device to ensure the highest levels of safety are met.

User Profiles

No modifications can be carried out by the end user. Doing so will void warranty, ETL approval, and may cause severe risks. Serviceable parts must be replaced with factory OEM parts. The user must comply with all building safety codes and disinfection requirements.

Warning Levels



DANGER

Indication of hazards that can lead to death or serious injury if measures are disregarded.



WARNING

Indication of hazards that can lead to injury if measures are disregarded.



CAUTION

Indication of hazards that can lead to damage to property if measures are disregarded.



ELECTRIC SHOCK

The above is an electric shock warning symbol. Non-compliance with this symbol may result in damages or injuries due to electric shock.

Tools/Materials Required


1. 1/8" Flat Head Screwdriver
2. Silicone Wire Nuts
3. Single gang electrical box for wall installation (Box provided with headwall)

Note: Before proceeding with the installation, make sure to remove the power to the electrical power supply.




Note: Use 18/2 shielded cable to connect LightMaster with keypad.

Installing LightMaster Multifunction Keypad

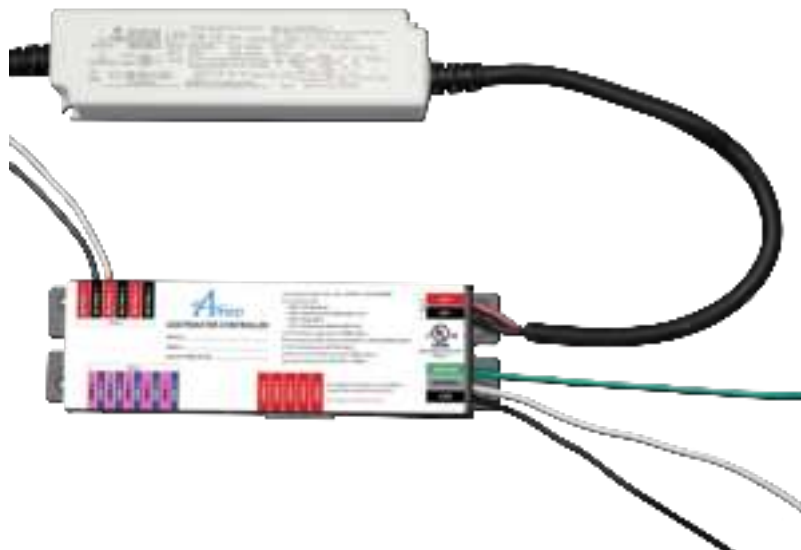1	Connect the Master Controller input wires (Black = Line / White = Neutral) to the line voltage and use wago connectors. NOTE: Do not turn on the power during wiring work.	 A photograph of the Master Controller unit. Two wires, one black and one white, are connected to the top terminals of the unit using orange Wago connectors. The unit has a label with technical specifications and a red emergency stop button.
2	Connect the ground wire from the main line power to the ground wire in the fixture.	 A photograph of the Master Controller unit. A green ground wire is connected to the ground terminal on the right side of the unit using a Wago connector. The black and white line and neutral wires remain connected to the top terminals.
3	Connect low voltage output wires from Master Controller to the keypad using silicone wire nuts. Each keypad will connect to one Red one Blue wire provided and labeled in light fixture. Wiring should be done as per the wiring diagram provided.	 A photograph showing the Master Controller unit and a separate low-voltage transformer. The transformer is connected to the Master Controller's output terminals (red and blue) using silicone wire nuts. The transformer has a label with technical specifications and a red emergency stop button.

NOTE: Correct Polarity must be observed in order for the switch to operate. The Master Controller can be severely damaged by reverse polarity. Ensure that all electrical connections are secured properly and have proper connection.

Installing LightMaster Multifunction Keypad

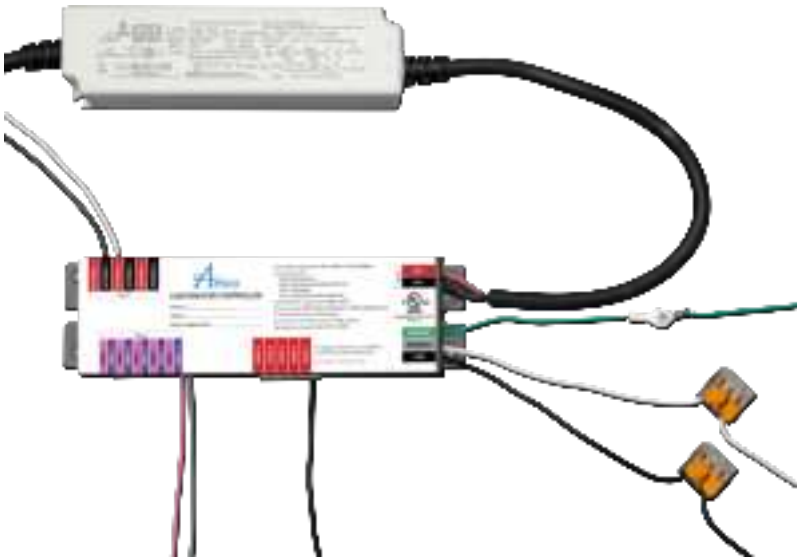4	Connect wires for loads and dimmings as per provided wiring diagram. NOTE: The neutral wires from all the drivers should be connected altogether with the input neutral of the LightMaster.	 A photograph showing the back of a white LightMaster unit. It has multiple terminal blocks on the left and right. A black cable with a connector is plugged into the top right. Several other wires (black, white, green, red) are connected to the terminal blocks. Two orange wire nuts are visible on the right side.
5	Connect two wires from the Master Controller low voltage output to the top terminal block on the keypad. (The bottom terminal block is used for the nurse call pillow speaker connection only).	 A close-up photograph of the keypad's internal terminal block. Two wires, one blue and one red, are inserted into the top two terminals. The keypad is mounted on a wall.
6	Connect two wires from the nurse call to the bottom terminal block in the keypad in order to operate two functions through the pillow speaker. (Optional) NOTE: The nurse call should be connected to only one keypad in the room.	 A close-up photograph of the keypad's internal terminal block. Multiple wires (blue, red, yellow, orange) are inserted into the bottom terminals. The keypad is mounted on a wall.

Installing LightMaster Multifunction Keypad


- 7 Once powered the keypads should communicate with each other as shown below. After installing the keypad, check all functions work properly.




Note: Use 18/2 shielded cable to connect LightMaster with keypad.

Mounting Drawings

6 screws can be used to mount the LightMaster controller and keypad.

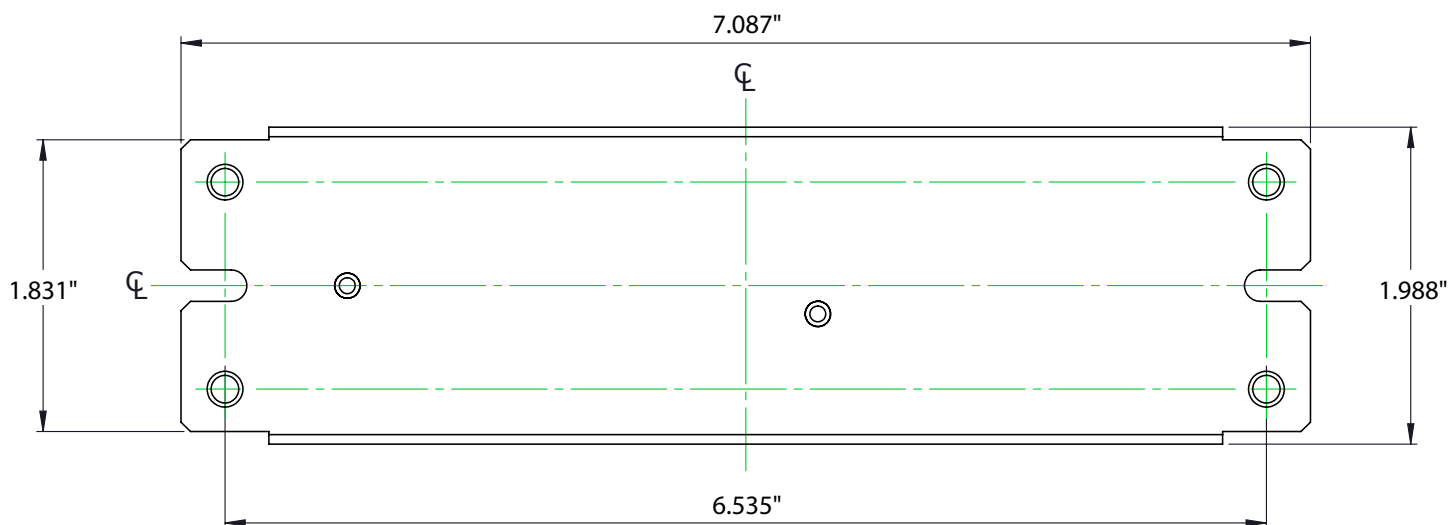


LightMaster Controller

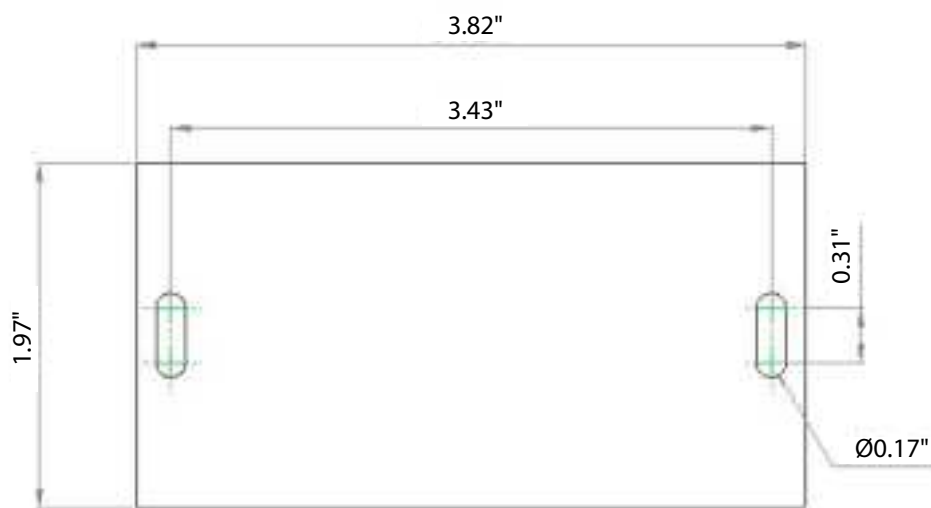


Security Power Unit

Mounting Drawings

6 screws can be used to mount the LightMaster controller and keypad.

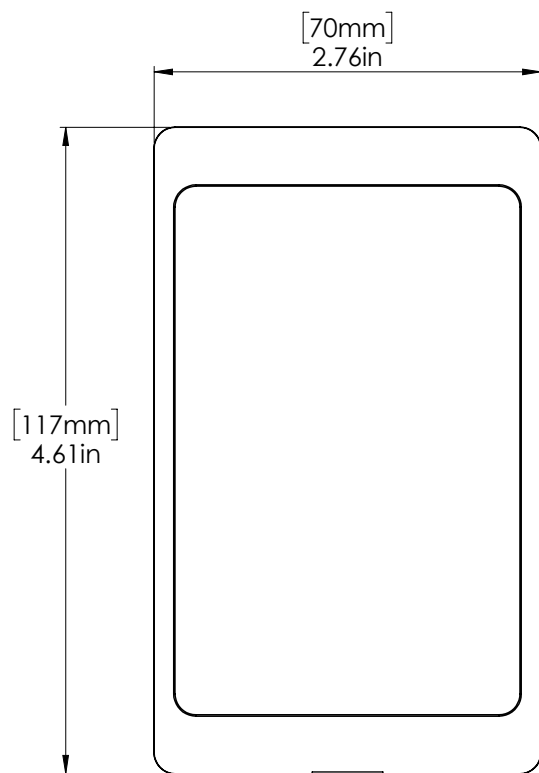


ϕ 0.17 ∇ 0.83
 $\checkmark$ ϕ 0.28 X 82°

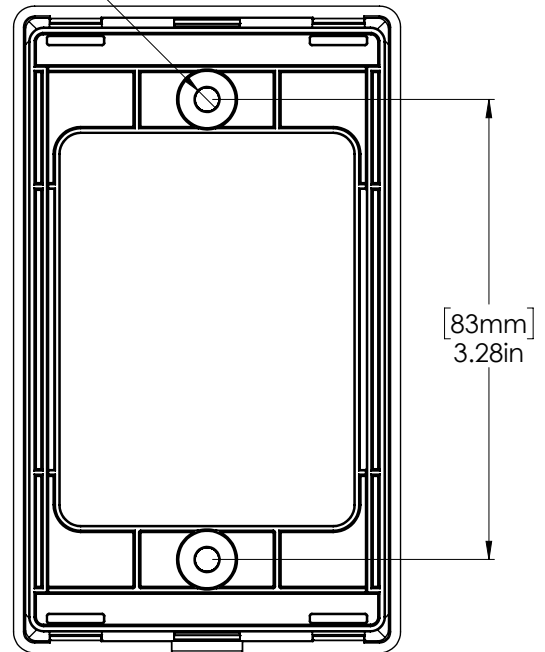


Keypad

Wiring Drawings

NOTE: Standard Wiring Diagram is shown. Contact factory for custom requirement.

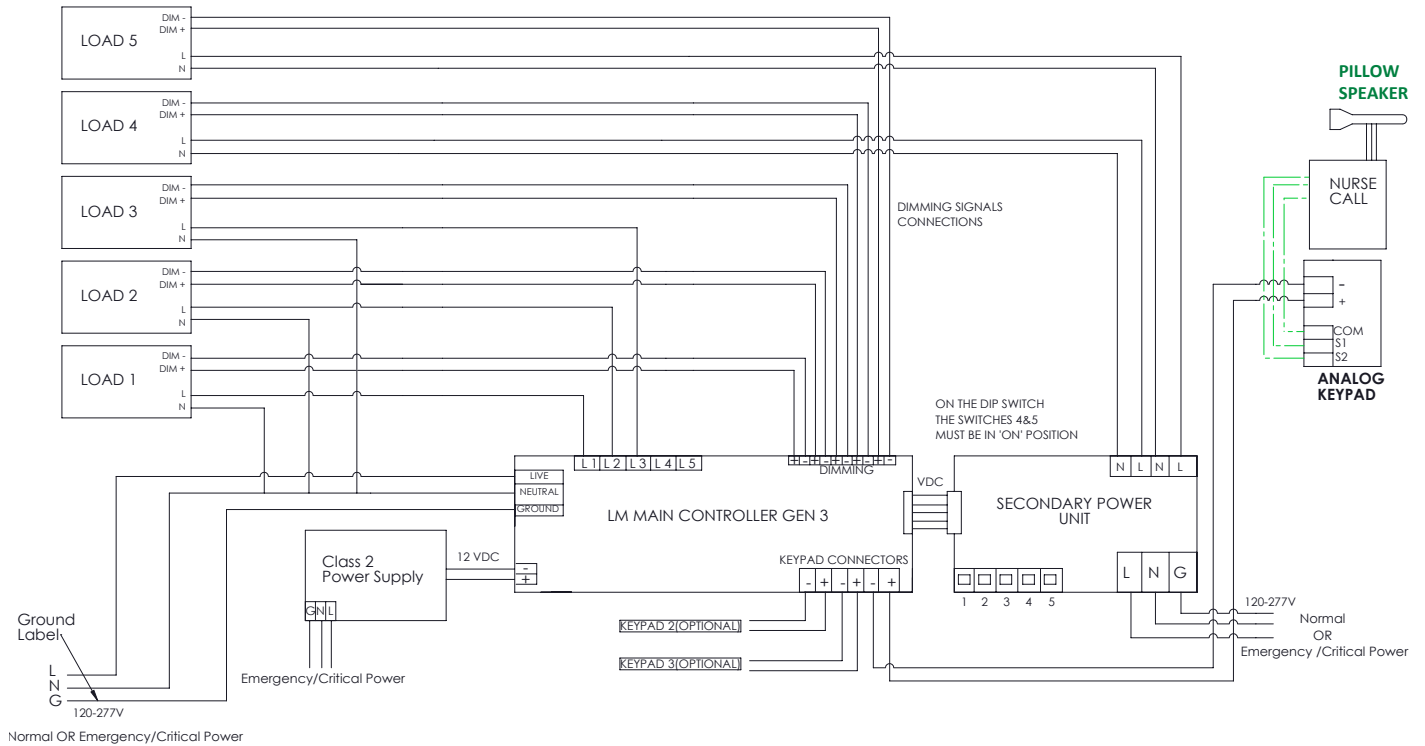

LightMaster System With Secondary Power Unit

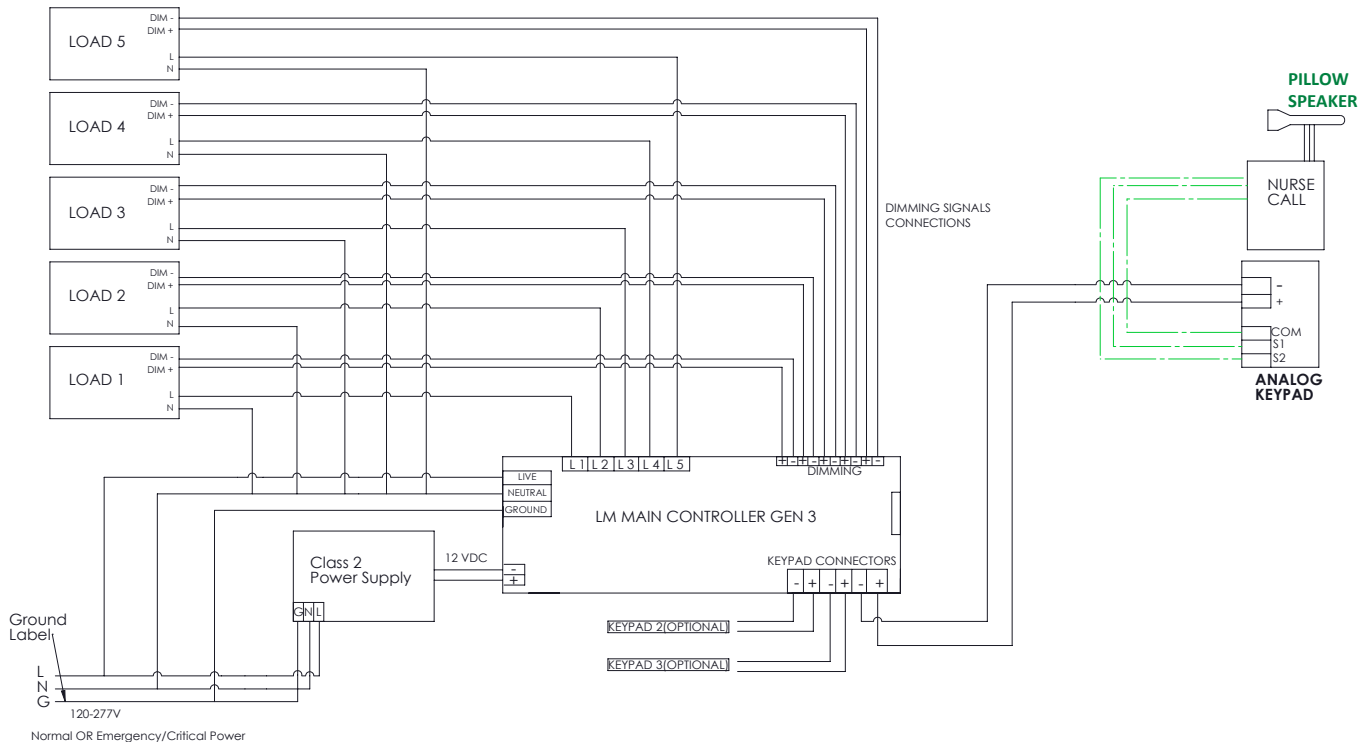

LightMaster System Without Secondary Power Unit

Disinfecting, Cleaning, and Sterilization

NOTICE:

The keypad can only be disinfected with the following diluted products:

- Lysoformin
- Dismozon
- Hexaquart plus
- Sagrotan – fast disinfecting cleaner

NOTICE:

The local government regulations for disinfection must also be observed in addition to these instructions.

Technical Data of the LightMaster Multifunction Keypad

Input Voltage	120-277 Volts, 50/60Hz
Output Voltage	120-277 Volts, 50/60Hz
Maximum Load	2.5 amps Resistive, 1.8 amps Ballast at 120 Volts, 0.975 amps Resistive, 1.0 amp Ballast at 277 Volts
Low Voltage Circuit	5VDC, 200 mA
Operating Temperature	32-176°F (0- 80°C)
Master Control Dimensions	7" (L) x 2" (W) x 1.1" (H)
Power Supply Dimensions	5.6" (L) x 1.6" (W) x 1.3" (H)
Keypad Dimensions	One (1) Gang
Warranty	Limited five (5) year warranty

Warranty Policy

Architectural Lighting Solutions

(LightMaster, Lunar Series, Skyline Series, Solar Series, Solar Eclipse Series, Solar Duo Med Series, Solar Surgical, Leo Series, Behavioral Series)

Amico Lights Corporation warrants its products against defective materials and workmanship for twelve (12) months from the date of shipment. Within this period, Amico Lights Corporation will repair or replace any part on site or at the factory which is proven to be defective at Amico Lights Corporation's cost.

Furthermore, Amico Lights Corporation will warrant its material to be free from defect for an additional period of four (4) years (five [5] years from the date of shipment). Within this period, Amico Lights Corporation will replace any part at no charge, which is proven to be defective. Shipping and installation costs after the first twelve (12) months will be borne by the customer.

The warranty applies to normal usage and does not apply to any product that has been subject to alteration, abuse, negligence, or use (including voltage and/or current) other than that for which the product was designed.

Amico Lights Corporation shall not be liable for incidental or consequential damages resulting from the use of the equipment.

All claims for warranty must first be approved by Amico Lights Corporation. A valid Return Goods Authorization (RGA) number must be obtained from Amico Lights Corporation prior to commencement of any service work. Warranty work which has not been pre-authorized by Amico Lights Corporation will not be reimbursed.

Notes

www.amico.com

Amico Lights Corporation | 122-B East Beaver Creek Road, Richmond Hill, ON L4B 1G6, Canada
Toll Free Phone: 1.877.462.6426 | Toll Free Fax: 1.866.440.4986 | Tel: 905.764.0800 | Fax: 905.764.0862
Email: alt-sales@amico.com | www.amico.com