




PRODUCT STRUCTURE

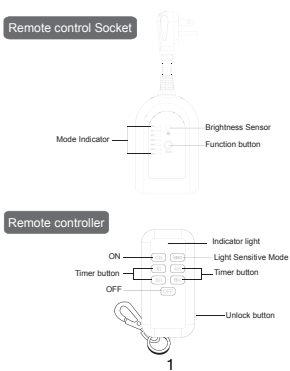

BATTERY INSTALLATION

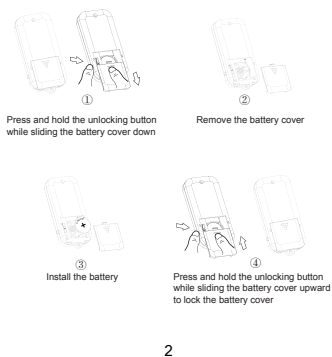


PAIRING SETTING

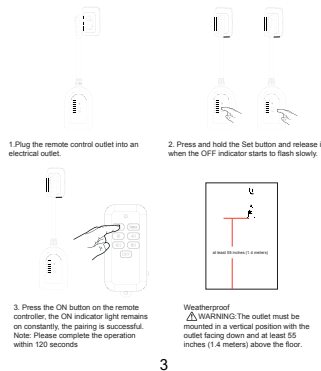


INSTRUCTIONS

Remote control operation method

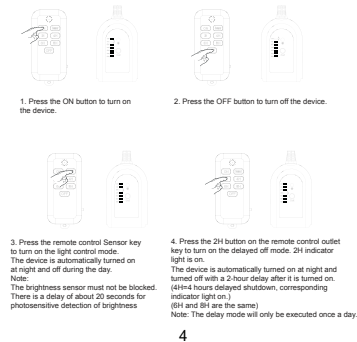

INSTRUCTIONS

The socket function key operation method

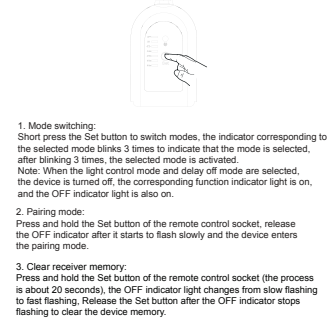

PRODUCT SPECIFICATION

