# **Pyro S Firmware Update Manual**

### Pyro S release note

Release date	Firmware version	Updates	Firmware download
20240419	Pyro_S_H100_V1.0.1.6	Initial version	Download
20240712	Pyro_S-V1.0.1.6_Interim  Version	Interim Version  If the verion is below 1.0.2.0, please update this version first	<u>Download</u>
20240712	Pyro_S_H100_allversion_V1. 0.3.2	Fixed known issues  If the version is above 1.0.2.0, then you could upgarde directly, else you need upgrade Interim version firstly	<u>Download</u>
20241015	Pyro_S_H100_V1.0.3.9	Fixed known issues  Release for version above  V1.0.3.2,if the version is below 1.0.3.9,please update  1.0.3.2 first.	<u>Download</u>

#### **Attentions**


- Make sure the device have enough power when updating, pls don't unplug the USB disk before the update process is completed and successful.
- The device will change to default settings automatically after updated.
- The firmware updating takes the risks to cause unknown error, pls do not upgrade the device when you using it on-site.

#### How to check the device's firmware version

Long press the middle button to enter the menu page, select the system---version info to check the firmware version

## Operations to update the Pyro H firmware version

1. Prepare a USB flash disk with Type-C connector and storage less than 32GB, format the USB disk to FAT32.

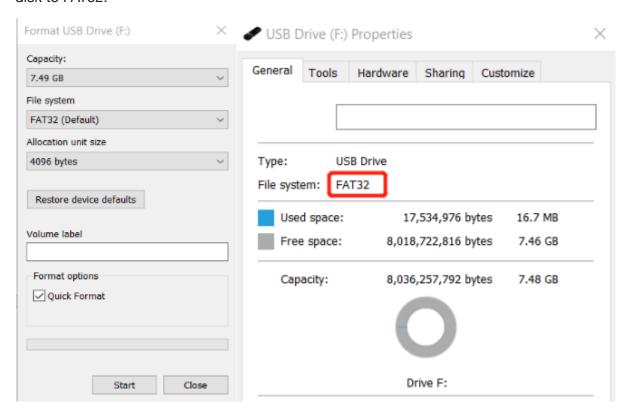

- 2. Download the firmware to USB flash disk and make sure it is under the root directory, pls don't put it inside of any folder.
- 3. Connect the USB disk to Pyro S via type-C port, it will recognize the USB disk automatically and start to updating

If update failed after tried several times, you can contact our technical support team from Hollyland for help: support@hollyland.com