 




R2

User Manual and Warranty

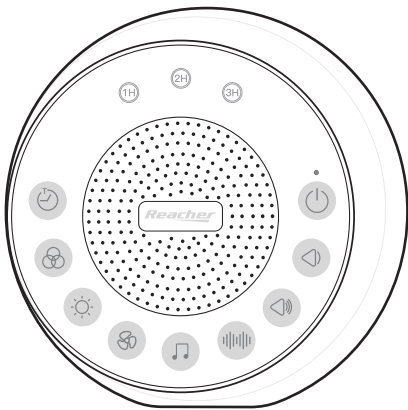

Get support at customer@reachershop.com

For our valued customers :

We would like to thank you very much for your purchase from Reacher. The utmost care has gone into the design and manufacture of your R2. Please read all of these instructions carefully and keep these in a safe place for future reference.

The R2 helps create your baby's perfect sleep environment. It can soothe your baby with any one of its 31 soothing sounds, 8-colors and multiple modes of night light. It is also suitable for children, adults, and senior citizens as it is easy to use and helpful for getting a good night's sleep.



Technical Information

Power Requirements	5 Volts, DC, 5W
Frequency Response	60HZ-20KHZ
Product Dimensions	D 117*H 85mm

Features


- 31 Soothing Sounds
- 8 Colors Night Light
- 15 Level Adjustable Volume
- Fully Controllable Brightness Adjustment for Nightlight
- Breathing Light
- Sleep Timer
- Earphone/Headphone Jack
- Memory Function

  
Button Explanation

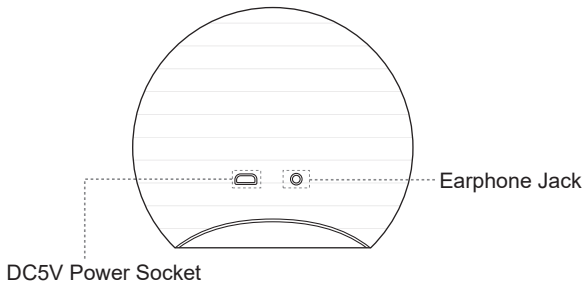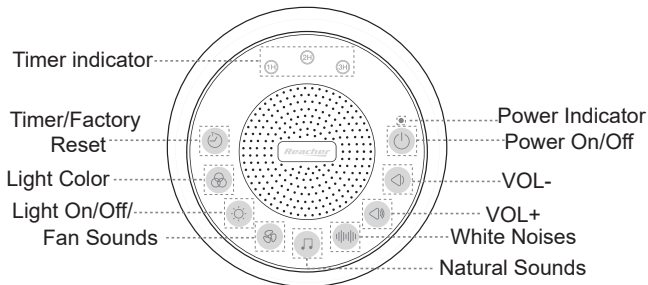






Setting It Up

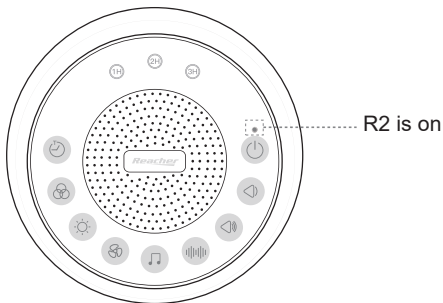 Step One: Plug the adapter into a power source. You can use a household outlet or a USB port (like on a PC, laptop, a USB wall outlet or a car USB outlet).

Step Two: Turn your R2 on by pressing the “  ” button. The orange LED will light up, indicating your R2 is on.



Picking Your Sounds

- Pressing the “  ” button will play white noise. Press the button once more to cycle to the next white noise. There are 7 white noises.
- Pressing the “  ” button will play nature sound. Press the button once more to cycle to the next nature sound. There are 17 nature sounds.
- Pressing the “  ” button will play fan sound. Press the button once more to cycle to the next fan sound. There are 7 fan sounds.
- Press the “  ” button to decrease the volume. Press the “  ” button to increase the volume. There are 15 levels volume, from mute to the maximum volume.






Here is the list of tracks :

Track List							
 White Noises		 Nature Sounds				 Fan sounds	
1	Lowest Pitch White Noise	1	Gentle Waves	10	Thunderstorm	1	Micro Fan
2		2	Lullaby	11	Wind	2	Industrial Fan
3		3	Music Box	12	Campfire	3	Vintage Fan
4		4	Shush	13	Drip-drop	4	Wall Mount Fan
5		5	Fetal Tone	14	Pendulum	5	Exhaust Fan
6		6	Heart Beat	15	Ocean Waves	6	Desktop Fan
7	Highest Pitch White Noise	7	Forest	16	Brook	7	Cooling fan
/	/	8	Summer Night	17	Train	/	/
/	/	9	Rain	/	/	/	/

Note:

- To signal a return to the first White Noise, Fan Sound, or Nature Sound, the machine will play a short ringtone.
- When you increase the volume to the maximum level, you will hear a short jingle.

Picking Your Night Light



- Press the “  ” button to turn on the night light. Press the button again to enter the breathing light mode, and then again to turn off the night light. In the breathing light mode, the light will gradually change from brightest to darkest, then from darkest to brightest.
- Press and **hold** the “  ” button to select the brightness of night light. This will start a cycle between brightest and darkest. When you’ve reached the desired brightness, just release the button.
- Press the “  ” button to select the specific color desired. Press the button again to cycle to the next color. There are 8 colors: red, yellow, orange, green, cyan, blue, purple and warm white.
- Press and **hold** the “  ” button for **1** second to turn on the 8 colorful lights. In this mode, the colors automatically cycle from one to the other.
- You can still turn on the night light by pressing the “  ” button even when your R2 is power off. This is to help you use the night light only without sounds.


Note:

- You can **not** adjust the brightness of the light when using the breathing light mode.

Timer and Factory Reset


Using the Timer

- Press repeatedly the “  ”button to select a sleep timer ranging from 1H, 2H, 3H to enter sleep mode. The LED light of the selected timer will light up accordingly. If you want to leave your R2 on all night, please press the “  ”button until there is no LED light on.

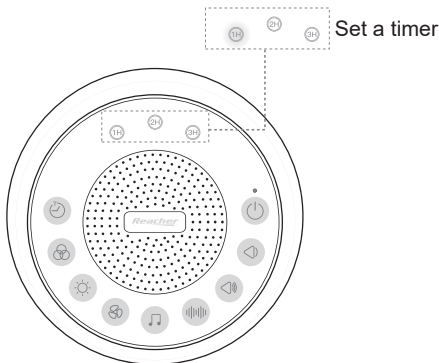

- When you use the timer, the sound will gradually fade once the preset sleep time comes.

Performing a Factory Reset

- Press and **hold** the “  ” button for **5** seconds, your sound, volume and timer settings will go back to the default.

Here are the factory default settings:

The default sound: Gentle Waves

The default volume of sound: Level 10

The default timer: Off

Memory Function

The memory function will save your last sound, light color, light mode, timer, volume, brightness settings when you turn Glows off. Your last settings remain saved when you turn it on next time.

Warning: Please ensure to **TURN OFF** the machine before unplugging the power adapter, otherwise the machine will not save your last settings.

Using the Earphone/Headphone Jack

The earphone/headphone jack is on the back of the machine, compatible with the 3.5mm headset device.

Customer Support

Your R2 comes with a one year warranty. Your satisfaction is our top priority. If you have any issue with your R2, please contact us at **customer@reachershop.com**. We will do our best to address your issue within 24 hours. Thank you again for purchasing R2 from Reacher. Sweet dreams!