
TECKNET

Doorbell

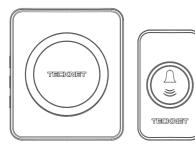

User Manual

HWD01878 HWD01888

Package Contents

HWD01888





HWD01878







Product Layout





- ① Setup Button ② Music Button
- ③ Volume Adjustment



- ① Setup-Taste 2 Musik-Taste
- ③ Lautstärke Regelung

FR

② Bouton de musique

③ Réglage du volume

ES



② Botón de música

③ Ajuste de volumen

- IT
- ① Botón de configuración ① Pulsante Setup
 - ② Pulsante Musica ③ Regolazione Volume

Product Specification

① Bouton de configuration

1. Receiver

AC100-240V 50/60Hz Receiver working voltage: 1W Power consumption:

2. Transmitter

Transmission Power:

Battery: DC 3V (CR2032 x1) Working Current:

Transmitter installation

1. Remove the battery isolation strip on the back of the transmitter before use.

10dBm

2. Use the enclosed double-sided tape to stick the transmitter to the wall or door.





ΕN



Instructions

- 1. Press button "(6)" to choose from working modes: Flashing only, Ringing only, Flashing & Ringing
- 2. " (n)" To select, press the music button once for each chime to select your music, total 38 chimes.
- 3. "(11)" Press the button once each time to adjust the 4 volume levels. (Low High)
- 4. Pairing Method
- a. Choose your favourite melody.
- b. Long press the music button " (at least 3 seconds) on the receiver until a 'dingdong' tone is heard.
- c. Press the transmitter button once, the receiver will play the chosen melody.
- 5. Press and hold the Volume Adjustment "(1) " for at least 5 seconds until a 'dingdong, dingdong' tone is heard. (This will clear the pairing)
- 6. There is a 'dingdong' tone when the receiver is plugged in for the first time. This indicates the power is on.
- 7. Indicator light: the light will flash while the chime is playing on the receiver. The transmitter indicator light will be lit up when pressing the bellpush.

ΕN


IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.



- 1. SAVE THESE INSTRUCTIONS This sheet contains important safety and operating instructions.
- 2. Before using the product, read all instructions and caution markings on the product, accessories and device using our product. 3. This appliance is not intended for use by persons (including children)



with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for

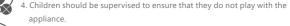



- 5. Keep the product away from fire or explosion may occur.
- 5. For proper insertion, please observe polarity indicators (+/-).
 - 7. Remove the batteries if the product is not going to be used for a long period of time.



- hazardous object. 9. Do not place in or near water, rain, excess moisture or extreme heat.
- 10. Do not operate the product with damaged cord or plug.



11. Do not operate the product if it has been damaged in any way.

- 12. Do not disassemble the product. Disassembly may result in a risk of safety hazards.
- 13. Do not throw or shake the product.
- 14. To reduce the risk of electric shock, unplug the product from the power supply when not in use or switch off the power supply.

Limited 12-Month Warranty

What this warranty covers.

Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TECKNET product that the product shall be free of defects in design, assembly, material, or workmanship.

What the period of coverage is.

Unichain warrants the TECKNET product for 12 Months.

What will we do to correct problems?

Unichain will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product).

What is not covered by this warranty?

All above warranties are null and void if the TECKNET product is not provided to Unichain for inspection upon Unichain's request at the sole expense of the purchaser, or if Unichain determines that the TECKNET product has been improperly installed, altered in any way, or tampered with. The TECKNET Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to

low voltage disturbances (e.g. brownouts or sags), non-authorized program, or system equipment modification or alteration.

How to claim the warranty

Please contact retailers or visit TECKNET website or email support@tecknetonline.com for more information. To extend the warranty period, please visit TECKNET website and register your TECKNET products within 90 days of purchase.

Disclaimer

Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.

FCC Statement

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications

However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ~ Reorient or relocate the receiving antenna.
- ~ Increase the separation between the equipment and receiver.
- ~ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ~ Consult the dealer or an experienced radio/TV technician for help

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Correct Disposal of This Product

(Waste Electrical & Electronic Equipment)

This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be mixed with other commercial wastes for disposal.

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Shenzhen Unichain Technology Co., Ltd. declares that the product type HWD01878 / HWD01888 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: https://eu.tecknetonline.com/