



Technical Support and E-Warranty Certificate www.vevor.com/support

SEWAGE PUMP

INSTALLATION INSTRUCTIONS

MODEL:FLO700

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

SEWAGE PUMP

MODEL:FLO700



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:



CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Kindly Reminder



TheFLO700 has been developed with the utmost care, and it is tested in the factory. Therefore, it is possible that the test water remains in the appliance.



GENERAL DESCRIPTION

The equipment should be avoided for commercial use; the FLO700 is exclusively reserved for indoor use. The macerator pump system of the appliance is integrated in a special way, which is only suitable for toilets with a horizontal outlet (P-trap toilet). The macerating pump starts automatically when a certain water level is reached. For the proper operation of the grinder, it is necessary important to follow the installation and maintenance instructions in this manual.

When properly installed and maintained according to the instructions in this user manual, the appliance is very powerful, safe, and reliable.

FLO700 is specially used to connect with:

- WC
- Shower cabin
- Wash basin
- Washing machine
- Bidet
- Urinal



SPECIFICATIONS

Input Power Rating:	700W	Max Vertical Lift:	10M
Input Voltage:	220-240V, 50HZ	Max Temperature:	90°C
Flow Rated:	160L/MIN	Noise Level:	45 dBA
Max Horizontal Lift:	100M	Degree of Protection:	IPX4

INSTALLATION (DIAGRAM)



ACCESSORY LIST

A-B 	C X4  32-50mm	D 	E X3 
F 	G  90-110mm	H  110-120mm	J 
K 	The accessory "K" is mounted on the pump		

S/N	Name	Number
A-B	Check valve with plastic elbow	1
C	Hose Clamp (32-50mm)	4
D	Rubber ring to connected the Intelflo toilet and Intelflo pump	1
E	Plastic hose	3
F	Activated Carbon	1
G	Hose Clamp (90-110mm)	1
H	Hose Clamp (110-120mm)	1
J	Lid	1
K	Plug(It Mounted On The Pump)	3

INSTALLATION INSTRUCTIONS

(5-1), Install the rubber sleeve (D) onto the sewage pump and lock it with a 90- 110mm hose clamp(G). Be careful not to install the rubber backwards.



(5-2), The customer can select accessory A-B and check that the hose clamp of the accessory is locked before installation. Then the customer chooses the size of the drain pipe, which is available in 1" (28mm), 1- 1/4" (32mm), or 40mm (1- 1/4") sizes. The dimensions are marked on the

accessories, and the customer is free to choose. In this installation example, we choose the 1-1/4"(32mm) drain pipe size. Then use a knife to cut the extra.

Note: The smaller the pipe diameter, the higher the lift.



(5-3), In addition, at the corner of the PVC water pipe, be sure to use a large elbow composed of two 45-degree elbows, not a right-angle elbow; otherwise, it will affect the vertical lifting height.





(5-4), Please install a ball valve (not provided) near the water outlet to prevent sewage leakage when the pump is disassembled.

(5-5), When connecting to the main pipe, the drain pipe must flow in from above the main pipe to prevent back-flow. As shown below:




(5-6), For best performance, please drain upward first and then drain the drain pipe to the main pipe at a 2%-3% incline: otherwise, the sewage will flow back.



INSTALLATION OF CONNECTING PIPE IN THE SHOWER ROOM

(6-1), Install the plastic hose fitting (E) and lock it with the hose clamp (C). There are two inlet holes on the left and right sides of the sewage pump. They are used to connect the shower room and the sink. If the water inlet is not used, it can be plugged in with accessory K.

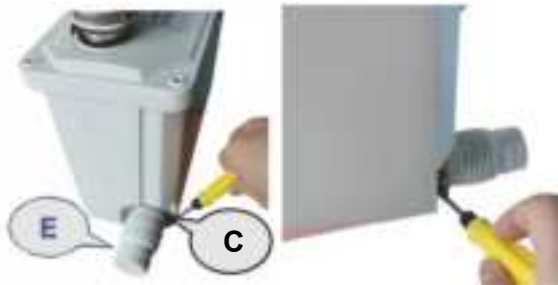


(6-2), When installing the shower room, first, you can install a wooden or iron shower base or build a cement platform. For wastewater from the shower and bath, ensure that the slope of the siphon is at least 3% (0.4 inches per 40 inches) so that the wastewater flows through the natural gravity to the unit position. If other sanitary units are connected to the disposal line along the disposal circuit, install check valves in the appropriate waste pipes to prevent backflow.

Note: Please make sure that the shower room chassis is raised to a minimum height of 6 inches (15 cm). It also depends on the distance between the shower room and the pump.



(6-3), If you need to connect more equipment and use the top water inlet, please open it with a saw and connect it with a hose.

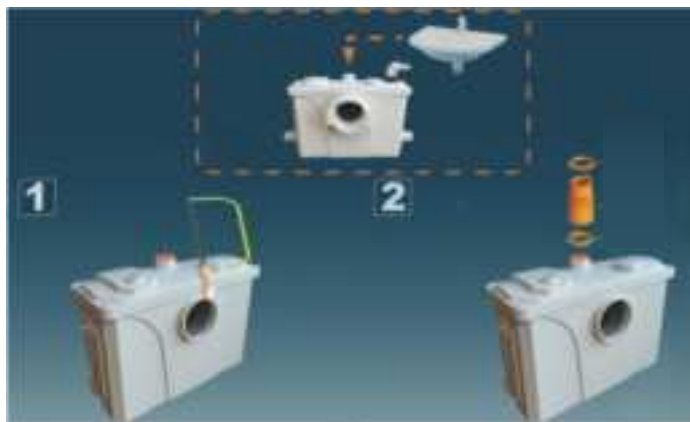

(6-4), If the toilet is not connected, you can use the lid (J) to block the toilet water inlet and then use the clamp (G) to fix the toilet. Then only connect the sink, shower room, and washing machine.



DOUBLE DEODORANT FUNCTION

One is activated carbon to deodorize, put a bag of activated carbon into the vent, and then cover it tightly.

And the other is deodorization with ventilation ducts. See the picture on the right. The size of the vent pipe is 1 -1 /2" (40mm).

It is also possible to not install ventilation ducts, which will save a lot of trouble and cost. But activated carbon must be replaced once a year.



8-1 , Finally connect the toilet and lock it with a 110-120mm hose clamp (H). The installation Position of the macerating pump should be parallel to the toilet.



8-2, Do not discharge any acids, alkaloids, solvents painting, paint strippers, food waste, plastic bags, metal such as nails, hairpins, wood building materials, kitty litter, or anything that could halt or damage or corrode the unit. Disregarding the above might damage the macerating unit and shall void your warranty.



WARNINGS

(1) Electrical installation:

- The connection shall be carried out by a qualified technician and the rules for electrical installations (NEN I010) shall be met.
- If the power cord of the appliance is damaged, it shall be replaced by the manufacturer or supplier of the appliance. This will avoid creating dangers.
- The connection of your appliance is Class I.
Connect the appliance to a socket with a protective conductor connection.

(2) Thermal protection:

- This appliance is equipped with thermal protection, which switches off the power supply of the appliance after overheating for safety reasons. When the device returns to normal temperature, it will start automatically.
- Power on the electrical connection only when the appliance is fully installed.
- In case of prolonged absence (e.g., vacation), the water supply to the appliance shall be closed.
- Do not expose the appliance to temperatures below 0°C or above 50°C.

(3) If the indications are not followed, it could cause personal security risks.

(4) Wrong Use

Use only for human excrement+soluble toilet paper. Equipment damage due to Improper use is not covered by the warranty. Some examples of damage caused by improper use include grinding cotton wool, tampons, sanitary napkins, panty liners, food, condoms, towels hair and rinsing liquids and solvents or oils.

TROUBLE SHOOTINGS

Some malfunctions of the grinder are not practically serious. You can correct it by yourself. To diagnose and find a solution to the Trouble, refer to the diagram below. For other malfunctions, contact the supplier or a qualified professional.

MALFUNCTIONS	POSSIBLE CAUSES	SOLUTIONS
The appliance occasionally starts to work	The connected pipelines are leaking	Check the installation in front of the appliance
	The check valve is leaking	Clean or replace the check valve
The motor is running properly, but the water runs slowly away.	The aerator in the lid is blocked	Clean the aerator
The engine is running properly but non-stop or runs for a long time	The height or length of the drain is too large, or too many bends are used (power failure)	Check the installation
	The pump is blocked	Turn off the power, disassemble the pump and unblock
The motor is not switched on	The power supply is not switched on	Switch the on power supply (repeat)
	The plug is defective	Repair the plug
	The trouble with the motor or sensor	Remove the lid, flush clean, and dry the sensor up (hair dryer)
The motor rattles with a noise	There's a strange object in the motor	Remove the lid, clean it and remove the object
The motor is buzzing and does not rotate	The condensator is broken or has trouble with the motor	Get in contact with a qualified specialist or the supplier
	There's a strange object in the Remove the lid, clean it and motor	Remove the lid, clean it and remove the object

Importer: WAITCHX

Address: 250 bis boulevard Saint-Germain 75007 Paris

Importer: FREE MOOD LTD

Address: 2 Holywell Lane, London, England, EC2A 3ET

Manufacturer: Ningbo YUNSUN Electromechanical Co., Ltd

Address Building 3 No.7 Hongshen Road Hongtang Industrial Zone A,
Jiangbei District 315033 Zhejiang P.R. China

Made In China



EUREP UK LTD

UNIT 2264, 100 OCK STREET, ABINGDON
OXFORDSHIRE ENGLAND OX14 5DH



EUREP GmbH

Unterlettenweg 1a, 85051
Ingolstadt, Germany



Technical Support and E-Warranty Certificate
www.vevor.com/support