

## Things to note

1. Please try to use high-quality alkaline batteries and avoid using ordinary batteries with short battery life and leakage of electrolyte.
2. Non-professionals should not open and repair without authorization to avoid damaging precision electronic components.
3. During the process of installing the battery on the transmitter, do not try to press the button without closing the cover to avoid using excessive force and damaging the button shell.
4. It is recommended not to install the button on metal objects (such as iron doors, Stainless steel door, etc.), it is recommended that the ringer be kept away from routers and large electrical appliances to avoid signal interference.

## Long distance wireless doorbell

### Instructions for use

## Product overview

Thank you for choosing this wireless doorbell. It is easy to install and requires no wiring. You only need to plug the receiver into the power socket and install the doorbell transmitter where needed to easily realize the doorbell function. 38 pieces of music (depending on different models), multi-level volume can be adjusted independently, and the transmitter and receiver can be freely added to meet different needs.

## Technical parameters

Receiver operating voltage: AC100-240V50HZ/60HZ

Operating frequency: 433MHz

Receiver power consumption: 0.5W

Transmitter power consumption: <10mw (spectrum analyzer antenna combined test, CE limit)

Transmitter battery: 12V23A alkaline battery

Battery life: Estimated 20 times a day, about 1-2 years

Volume adjustable range: 25-95dB (tested at 0.5 meters with decibel meter)

Wireless distance: about 280 meters in the open, about 20-50 meters indoors with obstacles

## Installation method



1. Plug the host into the socket first, take out the buttons and test whether it rings.
2. Place the doorbell button at a suitable position at the door. Please choose a clean surface. If you encounter a metal door, it is recommended to install it on the wall, then close the door and press it to test, can be installed after normal use.
3. Take out the double-sided tape delivered with the product and stick it on the back of the doorbell button. After peeling off the double-sided tape, stick the doorbell button to the previously tested position (note that the installation position should be cleaned first). After pasting, please press and hold for 30 seconds before loosening. Open and stick more firmly.

## Pairing method

1. Button pairing: Press and hold the [Music Button] on the host for 5 seconds, then the indicator light lights up, then release it, then press the doorbell button. If the host music sounds, the pairing is successful.
2. Clear pairing: Press and hold the [Volume Button] on the host for 5 seconds and the indicator light will light up, indicating that the clearing is successful.

## Battery disassembly and assembly



## Troubleshooting

1. The doorbell doesn't ring:
  - a. Please check whether the receiver is plugged in properly and whether the socket is powered on.
  - b. To confirm whether the pairing is successful, you can try clearing the code and re-pairing.
  - c. Check whether the button battery is sufficient and replace the battery for testing.
2. Short transmission distance:
  - a. Metal objects such as iron doors, iron frames, and other radio signals will affect the distance. Avoid installing the transmitter and receiver directly near metal, routers, etc.