



## Fusion Beats Party Speaker - User Guide



**Important:** pTron 'Fusion Beats' speaker is set at 50% default volume. You can increase the volume through the Speaker or speaker remote or through the connected device.

### Getting Started & Charging:

- i. Unbox the Party Speakers and remove all packaging materials.
- ii. Place the speakers on a flat surface.
- iii. Connect the USB type C cable to the charging port on the speaker's Top side, and connect the USB end of the Charging cable to a Power Source such as a USB Charger or other Charging Devices with a 5 volt(DC) output.
- iv. Charge the speakers fully before initial use for the best battery performance.

### Bluetooth Pairing:

- i. Turn on the Party Speakers by slide the power key.
- ii. The speaker will enter pairing mode automatically. The Bluetooth indicator light will start blinking.
- iii. On your smartphone or tablet, enable Bluetooth and search for nearby devices.
- iv. When you see "pTron party Speaker" in the list of available devices, select it to pair.
- v. Once the speaker is connected with the BT device it will respond with a voice prompt, "Connected"

**Note:** *If no device is connected within 5 minutes after turning on the speaker, the Speaker will automatically turn off.*

### Basic Operation:

- i. **Power on/off:** Turn on/off the Party Speakers by slide the power key
- ii. **Volume control:** Long press V+ to increase, and long press V- to decrease the volume
- iii. **Play/Pause:** Press the play/pause(▶||) button to start or pause audio playback.
- iv. **Next/Previous track:** Press one time V+ or V- buttons to move to the next or previous track when playing music.
- v. **Mode Button :** Press once the "M" button to change the speaker mode (Bluetooth and FM mode), and Long press for LED light changes & LED off.

### **Note:**

- i. *The speaker will automatically detect the TF card and USB drive after inserting these devices.*
- ii. *The charging cable works as an FM antenna in FM mode, so it is mandatory to connect the charging cable in FM mode.*

### LED Light Show:

- i. This speaker comes with built-in LED lights that add excitement to your party atmosphere.
- ii. Long press the "M" button to activate the LED lights. You can cycle through different lighting modes by long pressing the "M" button multiple times.
- iii. To turn off the LED lights, long press four times the light show button.

### **TWS function:**

- i. This speaker comes with TWS Function, so when two speakers turn on within proximal range and press TWS button twice, they will automatically connect to each other.

### **Mic Function:**

- i. Plug the included microphone into the microphone input on the speaker.
- ii. Power on the microphone using its own power button.
- iii. Adjust the volume using the v+ and v- on the speaker.
- iv. Use the microphone for karaoke or public speaking.

### **Troubleshooting:**

- i. If the speakers do not pair with your Bluetooth device, make sure the speakers are in pairing mode and try again.
- ii. Check the volume level on both your audio source and the speakers to ensure they are not set too low.
- iii. If the LED lights do not work correctly, try turning them off and on again.

***Important: Please use this speaker within a 10 metre wireless range from the connected device***

### **Safety Precautions**

- Please keep this device away from extreme heat, liquids, humidity or corrosive environment.
- Please don't over-charge the product as it will decrease the service life of battery.
- Using incompatible USB cable or high voltage chargers can damage the product & void the product warranty. We strongly recommend using a good quality DC5V-1A chargers & the USB cable included in the package.
- This product or the Bluetooth function should not be used during charging.
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect your hearing.
- Please don't open/temper the product or product's battery.
- Please keep the product out of children's reach.
- Dispose the product responsibly and adhere to your local authority guidelines.

### **Packing Box Content**

1 Speaker, 1 Mic & Cable , 1 Aux cable, 1 USB type C charging cable, 1 User Manual/Warranty QR Card

### **What is Covered in Warranty?**

- ✓ Manufacturing defects in materials and workmanship of the product ONLY. This warranty applies when the product is used under normal conditions and the purpose for which the product was designed.
- ✓ No warranty on product accessories..
- ✓ To avail warranty, Product Registration is Mandatory at <https://ptron.in/apps/product-registration>
- ✓ Please read through the complete warranty details at <https://ptron.in/pages/repair-service-warranty>

### **Customer Care Details:**

**Mail:** support@ptron.in

**Tel:** 040 - 67138888

**Service Centers List:** <https://ptron.in/pages/ptron-service-centers>

**Disclaimer:** The colour and specifications shown in or mentioned in the user manual may differ from the actual product. Images shown are for representation purposes only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.