

 


Instruction Manual

Handy Cordless Vacuum
Cleaner Manual

Model Number: VC2206

Make Your Daily Cleaning Easy

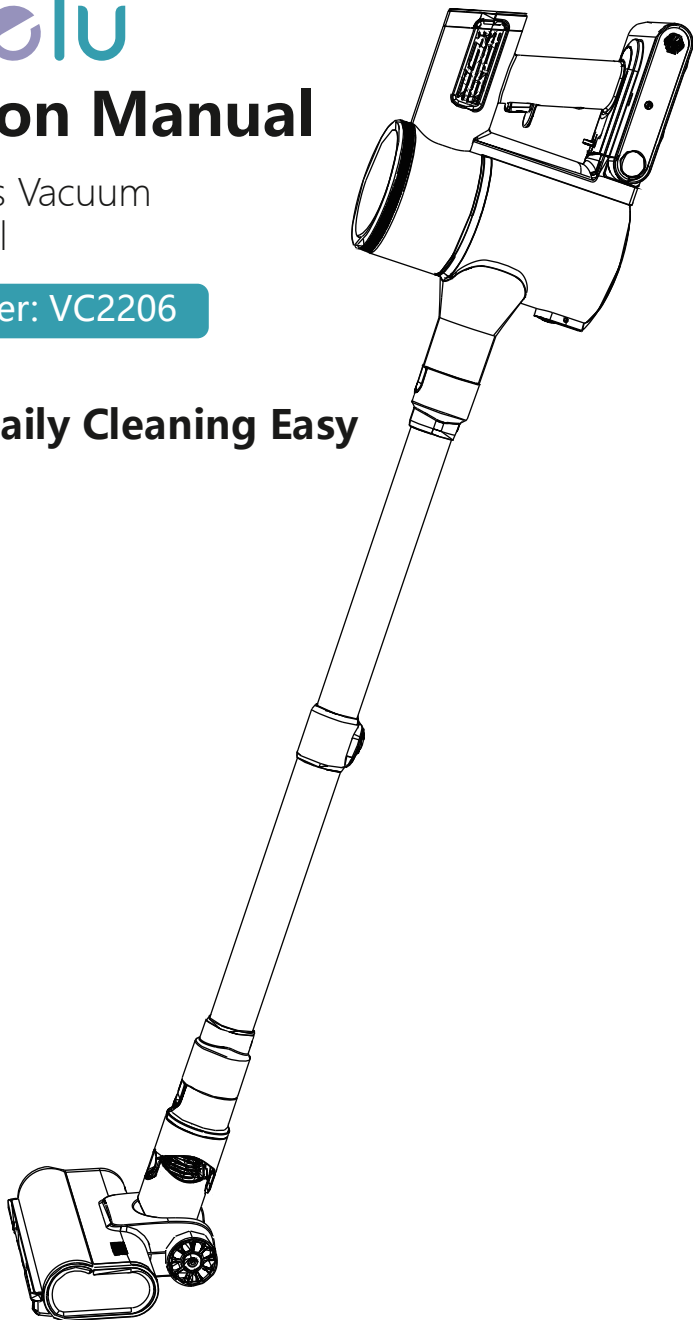

Contents

Important Safety Instructions-----	01
Product Instructions-----	05
Accessory Instructions-----	06
On-Screen Display-----	07
Assembly-----	08
Product Operation-----	10
Maintenance-----	12

Important Safety Instructions

IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE.
RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.

Do not use the device or leave it outdoors when it's raining.

WARNING: Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock, or injury.

Personal Safety:

1. Store indoors in a dry place out reach of children;
2. The device CANNOT be used by children, physically and mentally fragile people and people lack of related experience and knowledge, unless they are supervised by others and they fully understand the possible potential hazards.
3. Keep children away from the device. Otherwise, children must be supervised when using or maintaining the appliance.
4. Use the manufacturer's recommended attachments and accessories only. Using other accessories may have a risk of safety hazard.
5. Take extra care when cleaning stairs;
6. Keep the appliance and accessories away from hot surface;
7. Do not block the outlet of the appliance or hinder the airflow. Keep dust, lint, clothing or fingers away from the outlet.
8. Do not block the outlet and attachments of the device.

Electrical Safety:

1. Only use batteries and chargers supplied by the manufacturer;
2. Never modify the charger in any way;
3. The charger has been designed at a specific voltage. Always make sure the main voltage is the same as the specific voltage.
4. There is a risk of fire when a charger that is designed for a specific battery type is used with another type of batteries.
5. Check if there is damage or tear and wear on the charging cable.
A damaged or entangled charging cable may increase the risk of fire and electric shock.
6. Do not abuse the charger;
7. Never carry the charger by the cord;
8. Do not pull the charging cable when the charge is plugged into an outlet.
9. Do not wrap the charger with the charging cable when you store the charger.
10. Keep the charger away from hot surfaces and sharp edges;
11. The included charging cable is not replaceable. If the charging cable is damaged, please change another charger directly.
12. Do not operate the charger or the appliance with wet hands;
13. Do not store or charge the appliance outdoors;
14. The charger must be removed from the socket before removing the battery, cleaning or maintaining the appliance.

Battery Safety:

1. This appliance included Li-ion batteries. Please do not expose the appliance to high-temperature environments as the batteries may explode.
2. Liquid from the battery may cause irritation or burns;

3. For any emergency, please contact professional staff for help immediately.
4. Li-ion batteries may leak corrosive fluid under extreme conditions. Do not touch the liquid. If the liquid splashes on your skin, wash your skin immediately with soap and water. If the liquid splashes in the eye, flush your eye with clean water for at least 10 minutes and seek medical attention. Wear gloves to handle and dispose of the battery based on local regulations.
5. A short circuit may cause a fire.
6. When the battery is not in use, keep it away from clips, coins, keys, nails, screws or other small metal objects;
7. When you dispose of the appliance, remove the battery and dispose of the battery safely in accordance with local regulations.

Attention:

1. If the appliance hits an object, please check if there is any damage.
2. Do not use the appliance if any part is damaged or defective;
3. Repairs should be carried out by a service agent or a suitably qualified person in accordance with relevant safety regulations; Repairs by unqualified persons may have a risk of damaging the appliance;
4. Never modify the appliance in any way as this may increase the risk of personal injury;
5. Only use replacement parts or accessories provided or recommended by the manufacturer.

Intended Use:

 
1. The appliance is designed for use in dry environments for vacuum cleaning only;
2. Do not use the appliance on any wet surface or to clean any liquid;
3. Do not use the appliance to clean flammable or burning objects;
4. Use the appliance properly based on this user manual;
5. Don't use the appliance on concrete, tarmacadam or other rough surfaces.

WARNING:

1. Do not use water, solvents, or polishes to clean the outside of the appliance; Clean it with a dry cloth;
2. Never immerse the unit in water and do not clean it in a dish washer.

PRODUCT INSTRUCTIONS

Product Introduction:

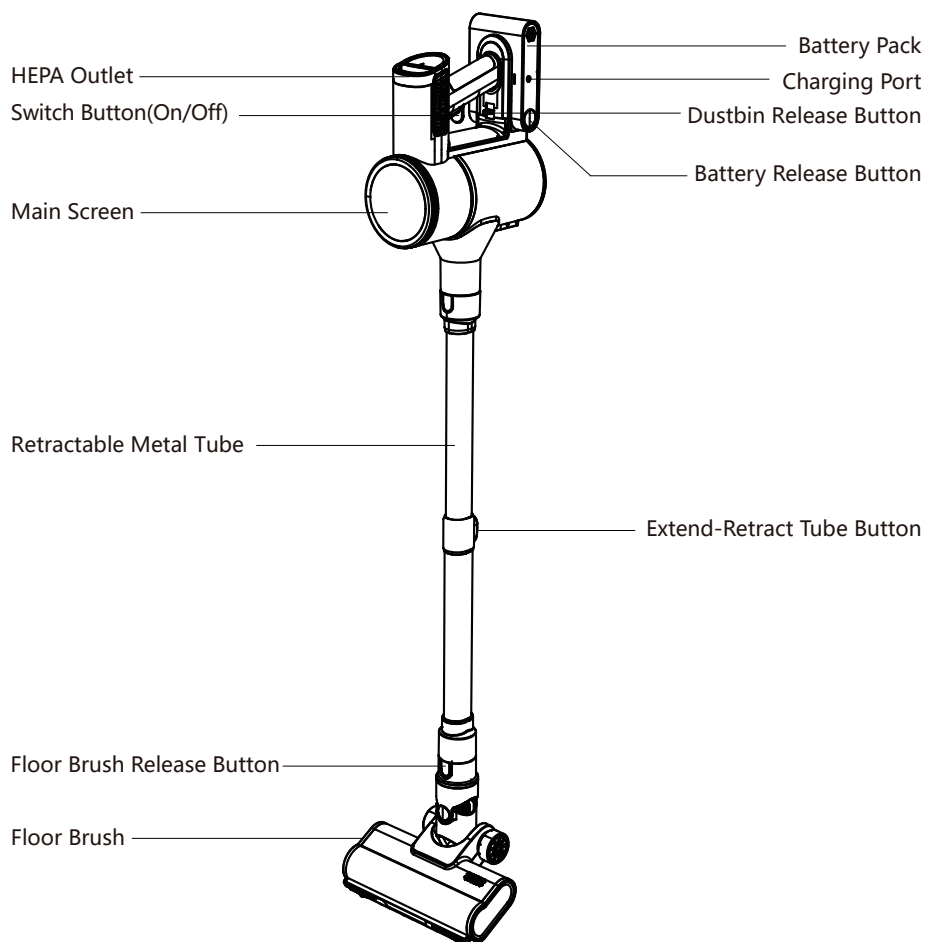

Long Suction Nozzle



Soft Dusting Brush



Wall Bracket



Power Adapter



Cleaning Tool



HEPA Filter

Accessory Instructions

Multi-Task Roller Brush with LED

The roller brush increases the cleaning efficiency, ideal for removing stubborn dirt in the carpets, dust and debris on hard floors.

Long Suction Nozzle

The crevice tool is used for corners, niches and other hard-to-reach places, such as car seat and mat, picture frame, etc.

Soft Dusting Brush

Angled bristles on slender and the oval shape provide anti-static cushioned contact, suitable for cleaning dust on sofa, curtain or other fabric furniture or delicate surfaces, electronics and more.

Cleaning Tool

Use the end with small blade to remove the hair and debris wrapped around the roller brush. Use the end with little brush to clean the the dustbin and the HEPA filter.

 
Power Adapter

Charge the battery of the vacuum cleaner with the power adapter.

HEPA Filter

The HEPA filter increases the cleaning efficiency and removes up to 99.8% of ultrafine dust particles down to 0.3 microns.

On Screen Display

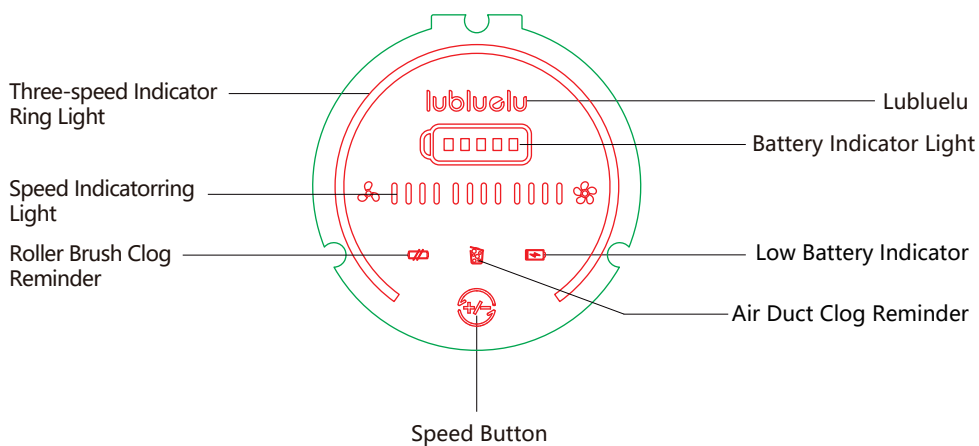

Note:

1. Speed adjustment:

click the Speed button to change the suction power.

 
- The machine defaults to mid-mode suction in the power-on state, and the blue suction indicator ring light on;
- Click the Speed button machine to switch to max-mode suction, and the red suction indicator ring light on,
- Click the Speed button machine again machine switch to min-mode suction, and the green suction indicator ring light on.

2. Fault indication:


- When the roller brush is clogged, the red light of the roller brush clog indicator will flash, and then the floor brush will stop working. After cleaning the dust or dirt, restart the machine, and it will work normally.
- When the machine is clogged, the red light of the dust blocking indicator light will flash. After clean the dust or dirt, restart the machine, and it will work normally.

Assembly

Assemble and Disassemble the Retractable Metal Tube

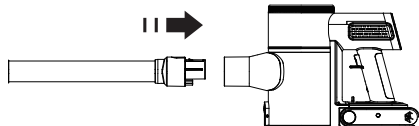


 Insert the retractable metal tube into the main motor.

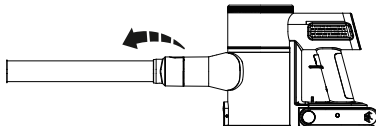


Press the release button and then remove the retractable metal tube.

 Assemble and Disassemble the Motorized Floor Brush




 Insert the motorized floor brush to the retractable metal tube.




Press the release button and then remove the motorized floor brush.

 Assemble and Disassemble the Roller Brush


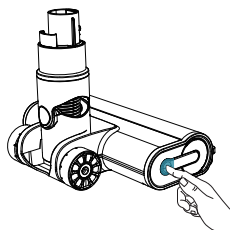


 Press the roller brush release button according to the diagram.


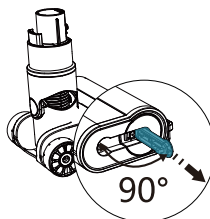


Open it to 90°, and then pull it out to remove the roller brush.

  
Disassemble the Dustbin

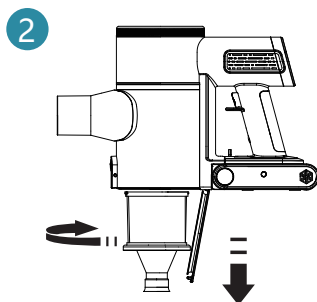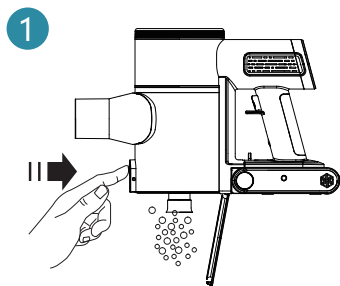

  1. Press the dustbin release button to clean it
2. Clockwise rotate the filter case and remove it

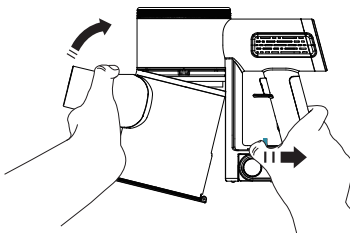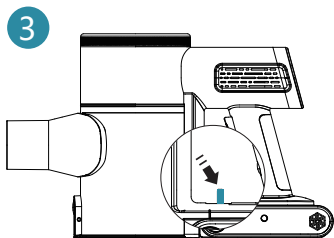


 3. Toggle the dustbin release button to the right, and then as the diagram showed, pull it apart with diagonal upward force to separate the dustbin from the machine head

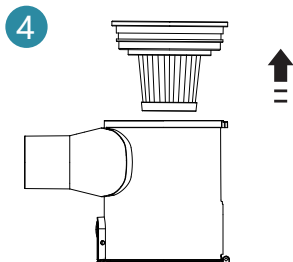


4. Remove the filter case and HEPA according to the diagram

 Assemble and Disassemble the Battery

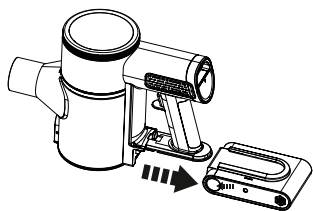

 Press the battery release button and remove the battery.

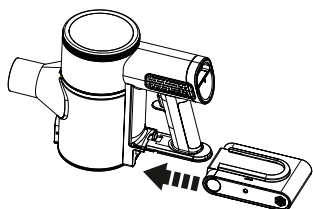


Slide the battery into place.


PRODUCT OPERATION

How to Operate the Vacuum

 1

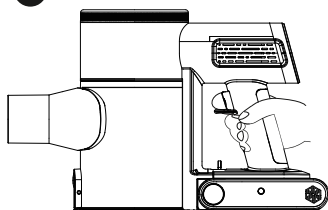


 Press the switch button and then the vacuum will start to work.

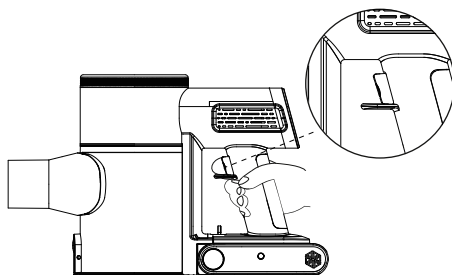


Press the switch button again and then the vacuum will stop working.

 2



Press the extend-retract tube button with one hand, extending or retracting to choose the suitable vacuum cleaner height for more comfortable cleaning with the other hand;

 3

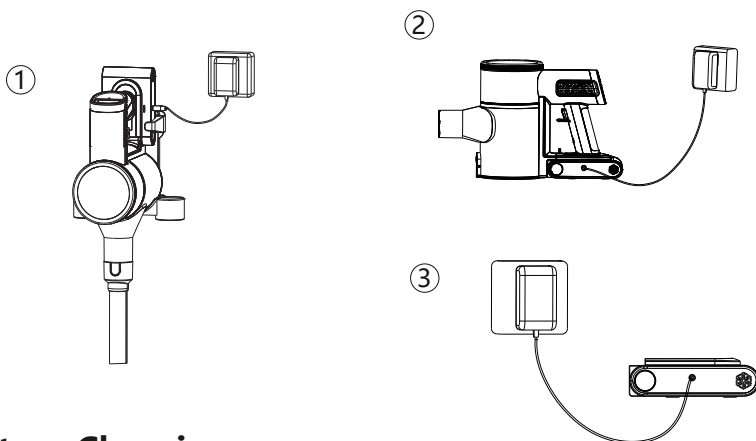

Battery Charging:

Three Ways to charge the Vacuum cleaner:

1. Charge the vacuum cleaner head by power adapter;
2. Remove the battery from the vacuum cleaner and charge it separately by power adapter;
3. Charge the whole vacuum cleaner by power adapter.

Charging mode : directly insert into the charging socket of the battery to charge.

Battery Indicator Light:

 
1. When the battery power is low to one bar, the low battery indicator flashes, indicating that the machine's battery power is low;
2. When the battery is in the charging state, the blue battery indicator light flashing;
3. When the battery is fully charged, the battery indicator lights on constantly and shows five bars on the screen.

How to Empty the Dustbin

Press the Dustbin Release Button

Note:

1. Please clean the dustbin when the dust reaches the MAX level;
2. We suggest to clean the Dustbin each week even the dust doesn't reach its MAX level.

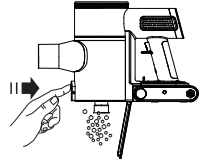

Maintenance

 
 
 
Clean the Filter Components

Disassemble the filter system as above, then clean it.

1. Cleaning the dustbin: wipe with a brush or dry cloth.
2. Cleaning the stainless steel filter: wipe with a brush or dry cloth.
If it is too dirty, wash it and dry it in the sun.
3. HEPA cleaning: clean the HEPA once a week, if it is too dirty, please replace the HEPA in time.




Note:

It is recommended to clean the HEPA filter once a week for better cleaning efficiency. Please make sure dry the filter completely before use. Otherwise, it will affect the life of the machine.

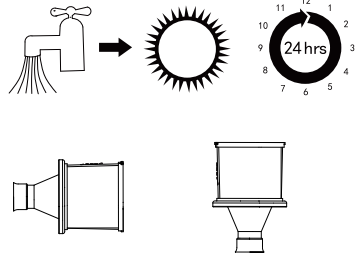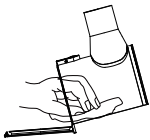



Clean the Roller Brush

   Remove the roller brush and clean the hair and other dirt tangled on the roller brush with the cleaning tool. If the roller brush is too dirty, please wash it and dry it completely in a well-ventilated place under the sun.

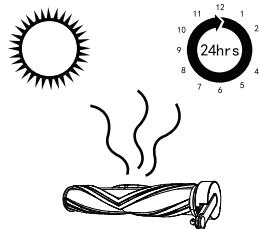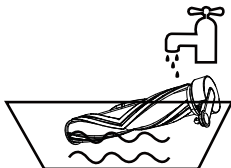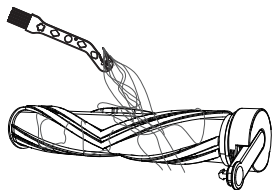

Product Storage

  Assemble the rack against the wall and place the machine on the rack. Place the accessories in the charging station slot.

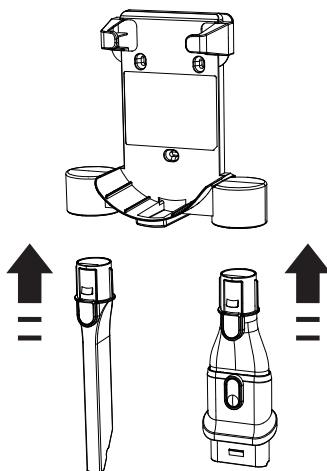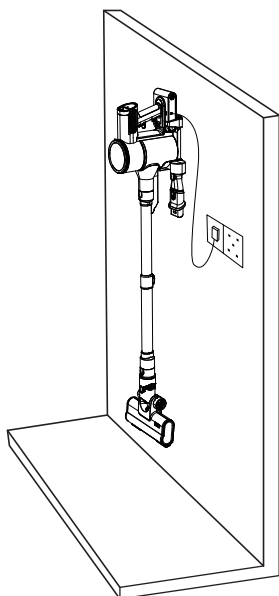

Maintenance

- Do not carry out any maintenance or repair work beyond this user manual.
- Store the machine indoors. Do not use or store it below 37.4°F (3°C). Ensure the machine is at room temperature before operating.
- Clean the machine only with a dry cloth. Do not use any lubricants, cleaning agents, polishes or air fresheners on any part of the machine.

WARNING:

When using the Lubluelu vacuum cleaner, basic precautions should always be followed. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

1. Please use the original parts for the machine. Do not use non-original parts without the permission of the manufacturer. If there is any malfunction due to using non-original parts, the warranty will be automatically ended. The manufacturer is not responsible for any loss of life or property.
2. Please check if the product is damaged or the accessories are completely received after you have received the package.
3. Do not use the vacuum with any damaged cord or plug. If the appliance has been dropped, damaged, left outdoors, dropped into water, or is not working, return it to the manufacturer.
4. Children below 15 years old and incapacitated persons should use this machine under the supervision of their guardians.
5. When a fault occurs, the power adapter should be pulled out immediately and the defective product should not be in working status.
6. Please do not disassemble and repair all the electric parts including but not limited to motors, battery and power adapter, which is easy to damage the machine and cause other insecurity.



Prohibited sign

Any content with the logo means being prohibited. Otherwise, it may cause damage to the product or endanger the personal safety of the user.

 


Warning sign

All contents with the logo mean it must be handled in strict accordance with the requirements. Otherwise, it may cause damage to the product or endanger personal safety of the user.




This product is for household use only. Do not use this product outdoors.

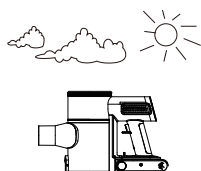

Children below 15 years old are not allowed to use the device alone to avoid dangers like electric shock.



 Please do not let the vacuum cleaner too close to the heat source and other high temperature objects, lest plastic deformation. It will affect the use of the vacuum cleaner.

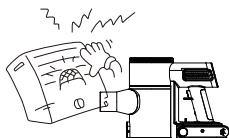

When using the vacuum cleaner, please pay attention to the installation of various filter parts. Do not use the vacuum cleaner when there are no filter accessories.



When cleaning the vacuum cleaner, please use the wet cloth with water or neutral detergent. Do not use gasoline, banana oil, etc., or it will cause shell crack and fade.



Please don't use the vacuum cleaner to suck up burning cigarette butts, so as to avoid danger. Please do not suck up detergent, kerosene, gasoline, paint, sewage and other liquids, in case the liquid enters the motor and causes motor failure.





Please do not suck up hair group, paper group and other objects that are easy to block the suction port and air duct.





Please do not place heavy objects on the machine or tread on the machine.



Please do not use the vacuum cleaner to suck up cement, gypsum powder, wall powder, starch and other small particles. Otherwise, it will cause vacuum cleaner filter part blockage, motor burnout and other faults. If the vacuum cleaner sucks up the above small particles, please clean all filter parts in time.



  After 5-6 hours of charging time, please unplug the power adapter from the socket and keep it properly. Keep the power adapter out of reach of children.



Troubleshooting

Problem	Possible Cause	Solution
Product stops working	1. Low battery 2. Pipe is blocked	1. Use the device after it is fully charged 2. Clean the pipe and restart the device
Working time is too short	1. Low battery 2. Run with MAX mode all the time	1. Use the device after it is fully charged 2. Select the appropriate suction speed according to different floor conditions

Problem	Possible cause	Solution
The suction power of the product is reduced	<ol style="list-style-type: none"> 1. The dust fills the dustbin up to the MAX line 2. The roller brush is blocked by objects such as hair 3. HEPA is dirty or missing 	<ol style="list-style-type: none"> 1. Clean the dustbin on time 2. Clean the roller brush on time 3. Clean HEPA in time or use it after HEPA installation
Battery is not charging	<ol style="list-style-type: none"> 1. The power outlet is damaged 2. The power adapter/charging port is not properly inserted into the charging port of the socket/rack 3. The original power adapter is not used 4. Overheating protection 	<ol style="list-style-type: none"> 1. Replace the power outlet 2. Insert the power adapter/charging port into the charging port of the socket/rack correctly 3. Use the original power adapter to charge the appliance 4. Wait for a few minutes until the appliance cools down before charging.
Abnormal motor noise	Pipe is blocked	Clean the pipe in time
Roller brush does not turn/floor brush light does not turn on/roller brush blockage light is on	Roller brush is blocked by objects such as hair	Clean roller brush in time and restart the machine
Battery indicator is flashing	Insufficient battery power	Charge the appliance in time
Automatic mode does not work	Dust detection sensor is clogged/dirty	Clean the trash/dirt from the dustbin port in time

Note:

If the above solutions cannot solve the problems, please contact us via support @lubluelu.com or visit our website lubluelu.com for further support.

Warranty

The 2-Year Limited Warranty

Applies to purchases made from authorized retailers of Lubluelu. According to the requirements outlined in this instruction manual, subject to the following conditions and exclusions.

WHAT IS COVERED?

Your Lubluelu machine has a 2-year warranty against original defects in material and workmanship.

when used for private household purposes in accordance with the Lubluelu Instruction Manual.

This warranty provides, at no extra cost to you, all labor and parts necessarily to ensure your machine is in proper operating condition during the warranty period.

This warranty will only be valid if the machine is used in the country in which it was sold.

WHAT IS NOT COVERED?

Lubluelu shall not be liable for costs, damages or repairs incurred as a result of:

- Machines purchased from an unauthorized dealer.
- Careless operation or handling, misuse, abuse and/or lack of maintenance or use not in accordance with the Lubluelu Instruction Manual.
- Use of the machine other than for normal domestic purposes, e.g. for commercial or rental purposes.
- Use of parts not in accordance with the Lubluelu Instruction Manual.
- Use of parts and accessories other than those produced or recommended by Lubluelu.
- External factors unrelated to product quality and use, like accidental water damage.
- Repairs or alterations carried out by unauthorized parties or agents.
- Failing to clear blockage and other hazardous material from the machine.
- Normal wear and tear, including normal wearing parts, such as dustbin, filter, HEPA, and power adapter (or where external damage or abuse is diagnosed), carpet or floor damage due to use not in accordance with manufacturer's instructions or failure to turn the brush bar off when necessary.
- Reduction in battery discharge time due to battery age or use.

WARRANTY SERVICE

We highly recommend you register your machine on Lubluelu official website and enjoy exclusive benefits.

Failure to register your product won't diminish your warranty rights.

How to Claim: Please keep your proof of purchase. To make a claim under our limited warranty, you need to provide your original purchase receipt with the purchase date and order number on it.

All work will be carried out by Lubluelu or its authorized agency.

Any replaced defective parts will become the property of Lubluelu.

Service under this warranty will not extend the period of this warranty.

If your machine is not functioning properly, please email us: support@lubluelu.com

Customer Service

Please contact us if you need any help as following:

- Technical Support
- Package is NOT in perfect condition
- Parts missing
- Any other quality issues

Email: support@lubluelu.com

Website: lubluelu.com



Made in China

