

Setting your soundbar for LG TVs

(TV Interface may vary depending on models)

Part 1: Go to the TV Sound Out setting

- (1) Use the remote control setting button
- (2) Select "All Settings" button on the TV screen
- (3) Select the "Sound" button on the TV screen
- (4) Select the "Sound Out" button on the TV screen

The diagram illustrates the steps to access the TV Sound Out setting. On the left, a remote control is shown with a line from the 'Settings' button (gear icon) labeled (1). On the right, the TV screen shows the 'SOUND' menu. A line from the 'All Settings' button (gear icon) on the TV screen is labeled (2). A line from the 'SOUND' button on the TV screen is labeled (3). A line from the 'Sound Out' button on the TV screen is labeled (4). The TV screen shows the 'SOUND' menu with options: Adaptive Sound Control, Sound Mode Settings, Standard (User), Sound Out (highlighted), Optical, AI Acoustic Tuning, Off, Sound Test, and Additional Settings.

- ## Part 2: Setting Optical PCM
- (1) Select the "Sound Out" button on the TV screen
 - (2) Select the "Optical" button on the TV screen
 - (3) Change the "Digital Sound Out" to "PCM"
 - (4) Change the "LG Sound Sync" to "Off"
 - (5) The Soundbar Optical connection is now set.
-
- SOUND** ▾
- Adaptive Sound Control ▾
 Sound Mode Settings
 Standard (User)
- Sound Out**
Optical
- AI Acoustic Tuning
 Off
 Sound Test
 Additional Settings ▾
- SOUND OUT** ▾
- Internal TV Speaker ▾
- Optical**
- Digital Sound Out ... < PCM >
 LG Sound Sync < Off >
 HDMI ARC
 Bluetooth
- DEVICE SELECTION
- Simultaneous Sound Out With Internal TV Speaker
 • Internal TV Speaker + Optical ▾
- SOUND OUT** ▾
- Internal TV Speaker ▾
 - Optical
 - Digital Sound Out ... < PCM >
 - **LG Sound Sync < Off >**
 - HDMI ARC
 - Bluetooth
- DEVICE SELECTION
- Simultaneous Sound Out With Internal TV Speaker
 • Internal TV Speaker + Optical ▾
- SOUND OUT** ▾
- Internal TV Speaker ▾
 - Optical
 - Digital Sound Out ... < PCM >
 - **LG Sound Sync < Off >**
 - HDMI ARC
 - Bluetooth
- DEVICE SELECTION
- Simultaneous Sound Out With Internal TV Speaker
 • Internal TV Speaker + Optical ▾

- ### Part 3: Setting HDMI ARC Mode
- (1) Select the "Sound Out" button on the TV screen
 - (2) Select the "HDMI ARC" button on the TV screen
 - (3) Change the "Digital Sound Out" to "PCM"
 - (4) And then Soundbar ARC mode can be used
-
- The diagram illustrates the steps to set HDMI ARC mode on a TV. It consists of three screenshots of the TV's sound settings menu, connected by arrows and numbered steps (1), (2), and (3).
- Step 1:** The first screenshot shows the "SOUND" menu. The "Sound Out" option is highlighted, and a cursor is pointing at it. The menu also includes "Adaptive Sound Control", "Sound Mode Settings", "Standard (User)", "AI Acoustic Tuning", "Off", "Sound Test", and "Additional Settings".
- Step 2:** The second screenshot shows the "SOUND OUT" menu. The "HDMI ARC" option is highlighted. The menu also includes "Internal TV Speaker", "Optical", "Digital Sound Out ... < PCM >", "LG Sound Sync", "Bluetooth", and "DEVICE SELECTION".
- Step 3:** The third screenshot shows the "SOUND OUT" menu. The "Digital Sound Out ... < PCM >" option is highlighted. The menu also includes "Internal TV Speaker", "Optical", "HDMI ARC", "Bluetooth", "DEVICE SELECTION", and "Simultaneous Sound Out With Internal TV Speaker".

- #### Part 4: Setting Bluetooth
- (1) Select the "Sound Out" button on the TV screen
 - (2) Select the "Bluetooth" button on the TV screen
 - (3) Select the "DEVICE SELECTION" button on the TV screen
 - (4) Select the "SEARCH" button on the TV screen
 - (5) Select the Soundbar's Bluetooth name on the TV screen
 - (6) TV will show that Bluetooth connection is successful,
Bluetooth function is ready
-
- The diagram illustrates the steps to access the Bluetooth settings on a TV. It shows two menu screens. The first screen, titled 'SOUND', has a right-pointing arrow icon in the top right corner. It lists 'Adaptive Sound Control' (with a right-pointing arrow), 'Sound Mode Settings' (with a right-pointing arrow), and 'Standard (User)'. Below these is a greyed-out 'Sound Out' option with 'Optical' listed underneath it. The second screen, titled 'SOUND OUT', has a right-pointing arrow icon in the top right corner. It lists 'Internal TV Speaker', 'Optical', 'HDMI ARC', and 'Digital Sound Out'. Below these is a greyed-out 'Bluetooth' option. An arrow labeled '(1)' points from the 'Sound Out' option in the first screen to the 'Bluetooth' option in the second screen. Below the 'Bluetooth' option is a 'DEVICE SELECTION' button with a right-pointing arrow. Below that button, it says 'Simultaneous Sound Out With Internal TV Speaker' and 'Internal TV Speaker + Optical' with a right-pointing arrow.
- | SOUND | → |
|------------------------|---|
| Adaptive Sound Control | → |
| Sound Mode Settings | → |
| Standard (User) | |
| Sound Out | |
| Optical | |
| AI Acoustic Tuning | |
| Off | |
| Sound Test | |
| Additional Settings | ↓ |
- (1) →
- | SOUND OUT | → |
|---|---|
| Internal TV Speaker | ↑ |
| Optical | |
| HDMI ARC | |
| Digital Sound Out | |
| Bluetooth | |
| DEVICE SELECTION → | |
| Simultaneous Sound Out With Internal TV Speaker | |
| Internal TV Speaker + Optical | |

-
- The diagram illustrates the connection between a TV's audio output settings and a Bluetooth device. On the left, the 'SOUND OUT' menu is shown with options: 'Internal TV Speaker', 'Optical', 'HDMI ARC', 'Digital Sound Out ... < PCM >', and 'Bluetooth'. A line labeled (3) connects the 'Digital Sound Out ... < PCM >' option to the 'Bluetooth' menu on the right. The 'Bluetooth' menu shows a list of devices: 'DGSB200WOD' and 'DGSB200WOD'. A line labeled (4) connects the 'Bluetooth' menu to the 'DGSB200WOD' device. The 'DGSB200WOD' device is shown with a 'SEARCH' button and 'Auto Detect' option.

Setting your soundbar for Samsung TVs

Part 1: Setting HDMI ARC

- Use the remote control setting button
- Select the "Settings" button on the TV screen
- Select the "General" button on the TV screen

The diagram illustrates the steps to set HDMI ARC on a Samsung TV. It begins with a Samsung remote control. Step (1) shows the remote with the 'Settings' button highlighted. Step (2) shows the TV screen with the 'Settings' button highlighted in the 'Quick Settings' menu. Step (3) shows the TV screen with the 'General' button highlighted in the 'Quick Settings' menu. Step (4) shows the TV screen with the 'External Device Manager' button highlighted in the 'General' menu. Step (5) shows the TV screen with the 'Anynet+(HDMI-CEC)' button highlighted in the 'External Device Manager' menu.

- ## Part 2: Setting PCM
- (1) Use the remote control setting button
 - (2) Select the "Settings" button on the TV screen
 - (3) Select the "Sound" button on the TV screen
 - (4) Select the "Expert Setting" button on the TV screen
 - (5) Change Audio Format to "PCM"
-
- The diagram illustrates the steps to set the audio format to PCM on a Samsung TV. It shows a remote control with a 'Settings' button (gear icon) labeled (1). The TV screen displays the 'Quick Settings' menu with 'Settings' (gear icon) labeled (2). The 'Settings' menu is expanded, showing 'Sound' labeled (3). The 'Sound' menu is expanded, showing 'Expert Settings' labeled (4). The 'Expert Settings' menu is expanded, showing 'Digital Output Audio Format' set to 'PCM' labeled (5).
- Remote Control: (1) Settings button
- Quick Settings: (2) Settings button
- Sound Settings: (3) Sound button
- Expert Settings: (4) Expert Settings button
- Expert Settings: (5) Digital Output Audio Format: PCM

-
- The diagram illustrates the steps to set the audio format to PCM:
- (1)** Press the "Settings" button on the remote control.
 - (2)** Select the "Quick Settings" menu.
 - (3)** Select the "Sound" option from the Quick Settings menu.
 - (4)** Select the "Expert Settings" menu.
- The final screen shows the "Expert Settings" menu with the following options:
- Balance
 - Equaliser
 - Digital Output Audio Format: **PCM**
 - Digital Output Audio Delay: 66
 - Dolby Atmos Compatibility
 - Auto Volume
 - Sound Feedback: Low

- Part 3: Setting Bluetooth**
- (7) Select the "Sound Output" button on the TV screen
- (8) Select the "Bluetooth Speaker List" button on the TV screen
- (9) Select the soundbar's Bluetooth name on the TV screen
- (10) Select the "Pair and connect" button on the TV screen
- (11) TV shows that Bluetooth connection is successful, Bluetooth function can be used
-
- The diagram illustrates the process of setting Bluetooth on a TV. It begins with a 'Sound' menu where 'Sound Output' is selected (6). This leads to a 'Sound Output' screen where 'Bluetooth Speaker List' is selected (7).

-
- The diagram illustrates the Bluetooth pairing process between a TV and a speaker. It consists of two rectangular screens connected by a line.
- The top screen, labeled (8) on the left, represents the TV's interface. It has a title "Bluetooth Speaker List" and a subtitle "Select the Bluetooth audio device that you want to pair with your TV." Below the text is a list item for "DGSB1008LK" with a small speaker icon to its left. The word "Paired" is displayed to the right of the device name.
- The bottom screen, labeled (9) on the right, represents the speaker's interface. It also has a title "Bluetooth Speaker List" and a subtitle "Select the Bluetooth audio device that you want to pair with your TV." Below the text is a list item for "DGSB1008LK" with a small speaker icon to its left. The word "Connect" is displayed to the right of the device name.
- A line connects the two screens, starting from the bottom of screen (8) and ending at the bottom of screen (9), indicating the pairing process.

Setting your soundbar for Sony TVs

Part 1: Setting TV CEC Function

- (1) Use the remote control "Main Menu" button
- (2) Select the "Setting" button on the TV screen
- (3) Select the "Watching TV" button on the TV screen
- (4) Select the "External Inputs" button on the TV screen

The diagram illustrates the steps to set up TV CEC function on a Sony TV. It shows a sequence of four screens: 1. The Sony Remote Control (Main Menu) with the 'Main Menu' button highlighted. 2. The TV's 'Settings' menu with the 'Watching TV' option highlighted. 3. The TV's 'Watching TV' menu with the 'External Inputs' option highlighted. 4. The TV's 'External Inputs' menu with the 'Watching TV' option highlighted. The steps are numbered 1 through 4, corresponding to the list of instructions.

Step 1: Remote Control

The remote control shows the 'Main Menu' button highlighted. The 'Main Menu' button is located in the center of the remote, below the 'Power' button and above the 'Mute' button.

Step 2: TV Settings

The TV screen shows the 'Settings' menu. The 'Watching TV' option is highlighted. The 'Watching TV' option is located in the center of the screen, below the 'Settings' button and above the 'External Inputs' button.

Step 3: Watching TV

The TV screen shows the 'Watching TV' menu. The 'External Inputs' option is highlighted. The 'External Inputs' option is located in the center of the screen, below the 'Watching TV' button and above the 'External Inputs' button.

Step 4: External Inputs

The TV screen shows the 'External Inputs' menu. The 'Watching TV' option is highlighted. The 'Watching TV' option is located in the center of the screen, below the 'Watching TV' button and above the 'External Inputs' button.

- (5) Select the “BRAVIA Sync settings” button on the TV screen

(6) Open “BRAVIA Sync control”

(7) Open “Auto devices off”

(8) Open “Auto TV on”

External inputs

 - Manage inputs
 - Show/hide and label inputs.
 - Cable/Satellite box setup
 - BRAVIA Sync settings**
 - HDMI signal format
 - Enhance 4K HDMI signal format.
 - Advanced settings

BRAVIA Sync settings

 - BRAVIA Sync control** (6)
 - AI devices off (7)
 - Auto TV on (8)

Part 2: Setting Optical/HDMI ARC PCM

 - (1) use the remote control “Main Menu” button
 - (2) Select the “Setting” button on the TV screen
 - (3) Select the “Display & Sound” button on the TV screen
 - (4) Select the “Audio Output” button on the TV screen

- ### Part 2: Setting Optical/HDMI ARC PCM
- (1) use the remote control "Main Menu" button
 - (2) Select the "Setting" button on the TV screen
 - (3) Select the "Display & Sound" button on the TV screen
 - (4) Select the "Audio Output" button on the TV screen

-
- (1) Remote control
- (2) Settings menu
- (3) Settings menu
- (4) Audio output Speakers menu
- (5) Audio output Speakers menu
- (6) Home theatre control
- (7) AVC sync
- (8) eARC mode
- (9) Digital audio out
- (10) Digital audio out volume

- ### Part 3: Setting Bluetooth Mode
- (1) use the remote control “Main menu” button
 - (2) Select the “Setting” button on the TV screen
 - (3) Select the “Remotes & Accessories” button on the TV screen
 - (4) Select the “Bluetooth settings” button on the TV screen
 - (5) Open the “Bluetooth” on the TV screen
-
- The diagram illustrates the steps to set Bluetooth mode on a TV. It shows a remote control and a sequence of TV screens. Step 1: Remote control with the 'Main menu' button highlighted. Step 2: TV screen showing the 'Settings' icon. Step 3: TV screen showing the 'Settings' menu with 'Remotes & Accessories' selected. Step 4: TV screen showing the 'Remotes & Accessories' menu with 'Bluetooth settings' selected. Step 5: TV screen showing the 'Bluetooth settings' menu with the 'Bluetooth' toggle switch turned on.

- (6) Wait TV search the Bluetooth ID

(7) Find the correct Bluetooth name

(8) Select the confirm button on the remote control

(9) Select the "Pair" button on the TV screen

(10) TV will show "Bluetooth AZDP audio device connected" and the soundbar can be used with Bluetooth connection.

折叠后尺寸：85X110mm