



GameStop Universal System Selector Button Replacement

Written By: Jared




TOOLS:

Phillips #00 Screwdriver (1)

Step 1 — Button



 Disconnect the DC 6V IN power cable from the device.

- Remove the three front panel screws on the bottom of the device.

Step 2



- Carefully pry off the front panel of the device to reveal the button in need of replacement.

Step 3



- Pull firmly on the button in need of replacement to free it from its housing.

Step 4



- Push the replacement button into its new housing.

Step 5



- Snap the front panel back into place and re-insert the 3 front panel screws, completing the replacement.

The system selector button should now be working properly.